
EM6E

AB

Service
Service
Service

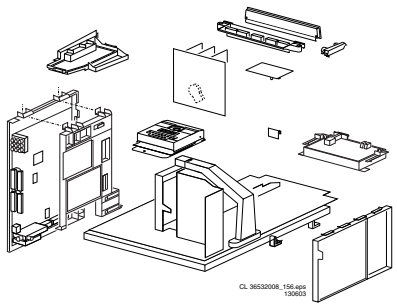

For DVD module use Service Manual DVD SD5.31SL (3122 785 13710)

Service Manual

Contents			Page	
1.	Technical Specifications and Chassis overview		2	
2.	Safety & Maintenance Instr., Warn., and Notes		5	
3.	Directions for Use		7	
4.	Mechanical Instructions		20	
5.	Service Modes, Error Codes and Faultfinding		23	
6.	*Block Diagram, Testpoints, and Overviews*			
	Wiring Diagram		41	
	Block Diagram Supply and Deflection		42	
	Testpoint Overv. LSP, Auto SCAVEM, and CRT		43	
	Block Diagram Video		44	
	Testpoint Overview Small Signal Board		45	
	Block Diagram Audio		46	
	Block Diagram Controls		47	
	I2C IC's overview		48	
	Supply Lines Overview		49	
	Block Diagram Wireless Kit		50	
7.	*Electrical Diagrams and PWB's*		*Diagram*	*PWB*
	LSP: Main Supply	(Diagram A1)	51	59-64
	LSP: Stand-by Supply	(Diagram A2)	52	59-64
	LSP: Line Deflection	(Diagram A3)	53	59-64
	LSP: Frame Deflection E/W Drive	(Diagr. A4)	54	59-64
	LSP: Rotation Circuitry	(Diagram A5)	55	59-64
	LSP: Audio Amplifier	(Diagram A6)	56	59-64
	LSP: Small Signal Part	(Diagram A8)	57	59-64
	LSP: Front	(Diagram A9)	58	59-64
	SSB: Connector	(Diagram B1)	65	86-99
	SSB: IF, I/O Video Processing	(Diagram B2)	66	86-99
	SSB: PICNIC (Feature Box)	(Diagram B3A)	67	86-99
	SSB: Falconic	(Diagram B3B)	69	86-99
	SSB: Eagle	(Diagram B3C)	70	86-99
	SSB: HOP	(Diagram B4)	71	86-99
	SSB: OTC Flash	(Diagram B5A)	72	86-99
	SSB: Anti-moiré	(Diagram B5B)	73	86-99
	SSB: OTC Flash	(Diagram B5C)	73	86-99

Contents			Page	
	SSB: Audio Demodulator	(Diagram B6A)	74	86-99
	SSB: Dolby Digital Decoder	(Diagram B6B)	75	86-99
	SSB: Dolby Prologic Processor	(Diagram B6C)	76	86-99
	SSB: DC/DC-Convertor	(Diagram B12)	77	86-99
	SSB: Tun1/Tun2	(Diagram B13)	78	86-99
	SSB: I/O Eur	(Diagram B14A)	79	86-99
	SSB: I/O Eur	(Diagram B14B)	80	86-99
	SSB: 2FH I/O	(Diagram B14C)	81	86-99
	SSB: Audio I/O	(Diagram B14D)	82	86-99
	SSB: PIP-HIP	(Diagram B15A)	83	86-99
	SSB: PIP-I/O	(Diagram B15B)	84	86-99
	SSB: PIP (Muppet)	(Diagram B15C)	85	86-99
	Mains Switch Panel	(Diagram E)	100	101
	CRT Panel	(Diagram F1)	102	104-105
	CRT/ Auto SCAVEM Panel	(Diagram F2)	103	104-105
	DC Shift Panel	(Diagram G)	106	106
	VDAF Panel + 2nd Orders	(Diagram I)	107	108
	Eject Button	(Diagram K	109	109
	LCD Board	(Diagram L	110	111
	Side I/O Panel	(Diagram O)	112	113
	Top Control Panel	(Diagram P)	114	114
	Wireless Transmitter	(Diagram R)	115	116-117
	Top Control Panel	(Diagram P)	114	114
	Radio ECO6 3 Band Cenelec	(Diagram RAD)	118	119
	Wireless Receiver/Front-end	(Diagram S1)	120	122
	Wireless Receiver/Back-end	(Diagram S2)	121	123
	Auto SCAVEM Panel	(Diagram SC1)	124	125
	Interface Board	(Diagram T1-T4)	126-129	130
	Audio Output Amplifier	(Diagram W)	131	132-133
8.	Alignments		135	
9.	Circuit Description		148	
10	Spare Parts List		179	
11	Revision List		194	

©Copyright 2003 Philips Consumer Electronics B.V. Eindhoven, The Netherlands.
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Published by WO 0365 Service PaCE Printed in the Netherlands Subject to modification EN 3122 785 13100

PHILIPS

1. Technical Specifications, Connections, and Chassis Overview

Index of this chapter:
1. Technical Specifications
2. Connections
3. Chassis Overview

Note: Figures below can deviate slightly from the actual situation, due to the different set executions.

1.1 Technical Specifications

1.1.1 Vision

Display type	:	CRT, Real Flat WS
Screen size	:	28 inch (70 cm)
	:	32 inch (82 cm)
	:	36 inch (92 cm)
Tuning system	:	PLL
Colour systems	:	PAL: B/G, D/K, I
	:	SECAM: B/G, D/K, L/ L'
	:	NTSC: playback only
Channel selections	:	100 presets
	:	UVSH
Aerial input	:	75 ohm, IEC-type

1.1.2 Sound

Sound systems	:	FM-mono, AM-mono
	:	FM-stereo: B/G, Czech
	:	NICAM: B/G, D/K, I, L
Maximum power	:	4 x 15 Wrms (int.)

1.1.3 Miscellaneous

Mains voltage	:	220 - 240 Vac
Mains frequency	:	50 / 60 Hz
Ambient temperature	:	+5 to +45 deg. C
Maximum humidity	:	90 % R.H.
Power consumption	:	
- Normal operation	:	≈ 130 W
- Standby	:	< 1 W

1.2 Connections

1.2.1 Front, top control and Side I/O Connections

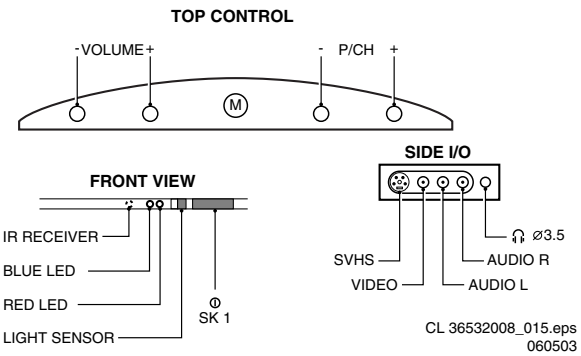


Figure 1-1 Front, top control and Side I/O

Hosiden: SVHS - In

1 - Y	Ground	
2 - C	Ground	
3 - Y	1 Vpp / 75 ohm	
4 - C	0.3 Vpp / 75 ohm	

Cinch: In

- CVBS	1 Vpp / 75 ohm	
- Audio - L	0.5 Vrms / 10 kohm	
- Audio - R	0.5 Vrms / 10 kohm	

Mini Jack: Headphone - Out

- Headphone	32 - 600 ohm / 10 mW	

1.2.2 Rear Connections

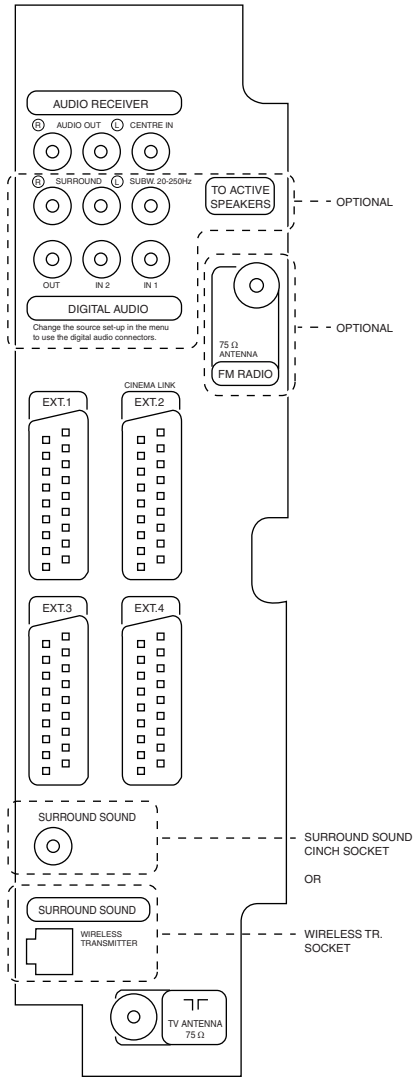


Figure 1-2 Rear View

Audio receiver

Audio - Out (Cinch)

R - Audio - R	0.5 Vrms / 1 kohm	
L - Audio - L	0.5 Vrms / 1 kohm	

Audio - In (Cinch)

C - Audio - Centre		

Sets equipped with Surround output for active speakers and Digital Audio:

R - Surround - R	0.5 Vrms / 1 kohm	
L - Surround - L	0.5 Vrms / 1 kohm	
- Subwoofer	20 - 250 Hz	

Digital Audio (if present)

- Dig. audio out
- Dig. audio in 2
- Dig. audio in 1

Audio - Out (Cinch)

R - Audio - R 0.5 Vrms / 1 kohm
L - Audio - L 0.5 Vrms / 1 kohm

FM Radio (Optional)

- IEC-type Coax, 75 ohm

External 1: RGB/YUV and CVBS - In/Out

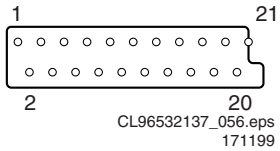


Figure 1-3 SCART connector

1 - Audio - R	0.5 Vrms / 1 kohm	
2 - Audio - R	0.5 Vrms / 10 kohm	
3 - Audio - L	0.5 Vrms / 1 kohm	
4 - Audio	Ground	
5 - Audio	Ground	
6 - Audio - L	0.5 Vrms / 10 kohm	
7 - Blue / U	0.7 Vpp / 75 ohm	
8 - CVBS-status	0 - 1.3 V: INT 4.5 - 7 V: EXT 16:9 9.5 - 12 V: EXT 4:3	
9 - Video	Ground	
10 - N.C.		
11 - Green / Y	0.7 Vpp / 75 ohm	
12 - N.C.		
13 - Video	Ground	
14 - Video	Ground	
15 - Red / V	0.7 Vpp / 75 ohm	
16 - Status / FBL	0 - 0.4 V: INT 1 - 3 V: EXT / 75 ohm	
17 - Video	Ground	
18 - Video	Ground	
19 - CVBS	1 Vpp / 75 ohm	
20 - CVBS	1 Vpp / 75 ohm	
21 - Shielding	Ground	

External 2: CVBS and SVHS - In/Out (for VCR)

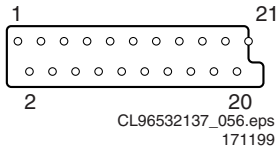


Figure 1-4 SCART connector

1 - Audio - R	0.5 Vrms / 1 kohm	
2 - Audio - R	0.5 Vrms / 10 kohm	
3 - Audio - L	0.5 Vrms / 1 kohm	
4 - Audio	Ground	
5 - Audio	Ground	
6 - Audio - L	0.5 Vrms / 10 kohm	
7 - C	0.7 Vpp / 75 ohm	
8 - CVBS-status	0 - 1.3 V: INT 4.5 - 7 V: EXT 16:9 9.5 - 12 V: EXT 4:3	
9 - Video	Ground	
10 - Easylink	(P50)	
11 - Green	0.7 Vpp / 75 ohm	
12 - N.C.		
13 - Video	Ground	
14 - Video	Ground	
15 - C	0.7 Vpp / 75 ohm	
16 - Status / FBL	0 - 0.4 V: INT 1 - 3 V: EXT / 75 ohm	
17 - Video	Ground	
18 - Video	Ground	
19 - CVBS	1 Vpp / 75 ohm	
20 - CVBS	1 Vpp / 75 ohm	
21 - Shielding	Ground	

External 3: CVBS - In

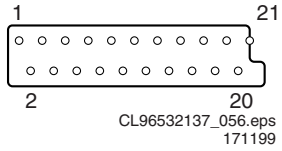


Figure 1-5 SCART connector

1 -	Ground	
2 - Audio - R	0.5 Vrms / 10 kohm	
3 -	Ground	
4 - Audio	Ground	
5 -	Ground	
6 - Audio - L	0.5 Vrms / 10 kohm	
7 - N.C.		
8 - CVBS-status	0 - 1.3 V: INT 4.5 - 7 V: EXT 16:9 9.5 - 12 V: EXT 4:3	
9 - Video	Ground	
10 - N.C.		
11 - N.C.		
12 - N.C.		
13 - Video	Ground	
14 - Video	Ground	
15 - N.C.		
16 - N.C.		
17 - Video	Ground	
18 - Video	Ground	
19 - N.C.		
20 - CVBS	1 Vpp / 75 ohm	
21 - Shielding	Ground	

External 4: CVBS - In

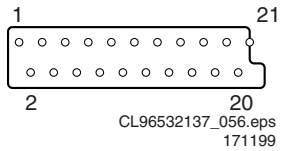


Figure 1-6 SCART connector

1 -	Ground	
2 - Audio - R	0.5 Vrms / 10 kohm	
3 -	Ground	
4 - Audio	Ground	
5 -	Ground	
6 - Audio - L	0.5 Vrms / 10 kohm	
7 - N.C.		
8 - CVBS-status	0 - 1.3 V: INT 4.5 - 7 V: EXT 16:9 9.5 - 12 V: EXT 4:3	
9 - Video	Ground	
10 - N.C.		
11 - N.C.		
12 - N.C.		
13 - Video	Ground	
14 - Video	Ground	
15 - N.C.		

16 - N.C.
17 - Video Ground
18 - Video Ground
19 - N.C.
20 - CVBS 1 Vpp / 75 ohm
21 - Shielding Ground

Surround - Sound

Sets equipped with Surround-Out jack plug 3,5 mm
- Surround
Audio 0.2 - 2 Vrms / 10 kohm

Sets equipped with Wireless Transmitter: RJ45
1 - SDA_TM Signal
2 - SCL_TM Signal
3 - GND Ground
4 - GND Ground
5 - 11V_S Supply
6 - AUDIO_SL 2.8 Vrms
7 - GND AUDIO Ground
8 - AUDIO_SR 2.8 Vrms

Aerial - In
- IEC-type Coax, 75 ohm

1.3 Chassis Overview

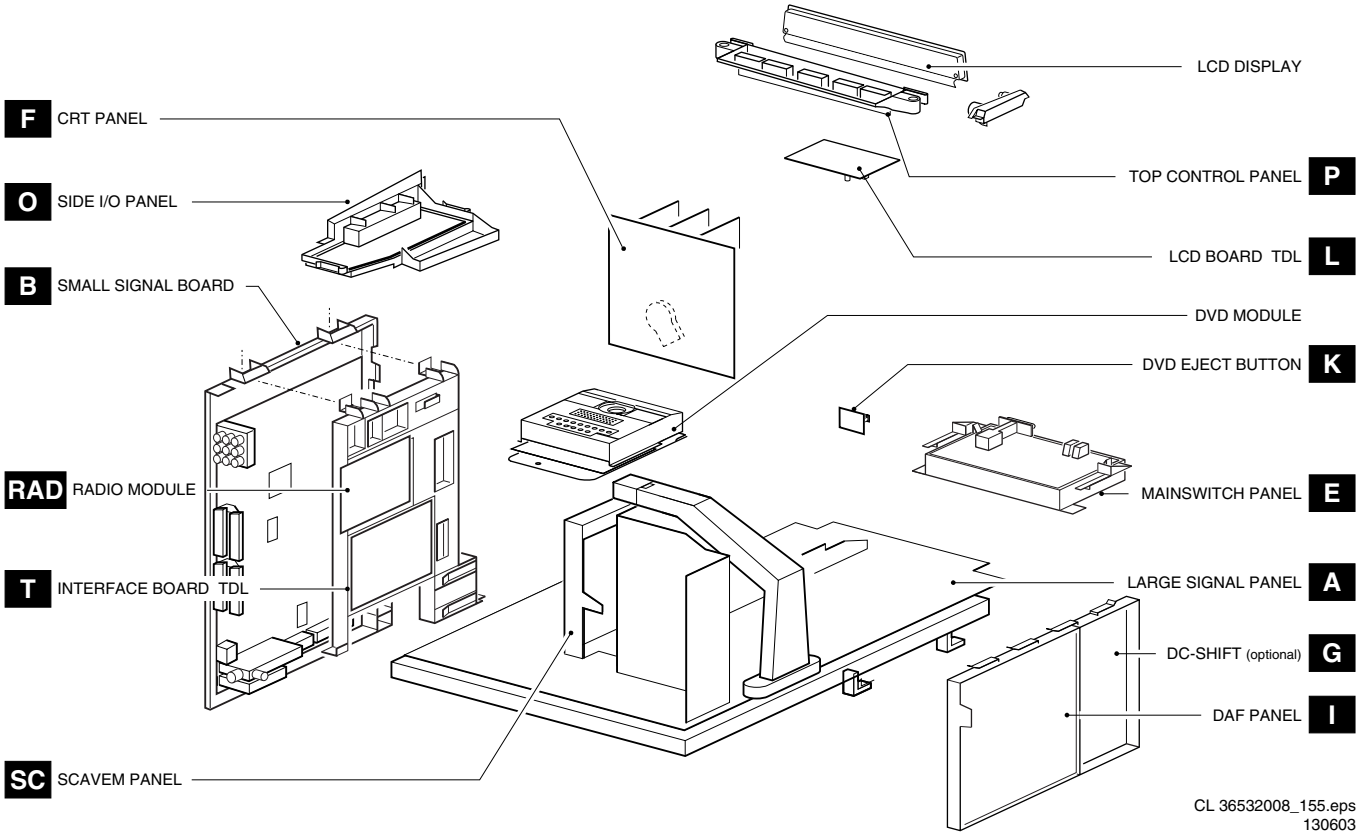


Figure 1-7 PWB location

2. Safety and Maintenance Instructions, Warnings, and Notes

2.1 Safety Instructions

Safety regulations require that **during** a repair:

- Due to the chassis concept, a very large part of the circuitry (incl. deflection) is 'hot'. Therefore, connect the set to the mains via an isolation transformer.
- Replace safety components, indicated by the symbol h, only by components identical to the original ones. Any other component substitution (other than original type) may increase risk of fire or electrical shock hazard.
- Wear safety goggles when you replace the CRT.

Safety regulations require that **after** a repair, you must return the set in its original condition. Pay, in particular, attention to the following points:

- General repair instruction: as a strict precaution, we advise you to re-solder the solder connections through which the horizontal deflection current is flowing. In particular this is valid for the:
  1. Pins of the line output transformer (LOT).
  2. Fly-back capacitor(s).
  3. S-correction capacitor(s).
  4. Line output transistor.
  5. Pins of the connector with wires to the deflection coil.
  6. Other components through which the deflection current flows.

Note: This re-soldering is advised to prevent bad connections due to metal fatigue in solder connections, and is therefore only necessary for television sets more than two years old.

- Route the wire trees and EHT cable correctly and secure them with the mounted cable clamps.
- Check the insulation of the mains cord for external damage.
- Check the strain relief of the mains cord for proper function, to prevent the cord from touching the CRT, hot components, or heat sinks.
- Check the electrical DC resistance between the mains plug and the secondary side (only for sets that have an isolated power supply). Do this as follows:
  1. Unplug the mains cord and connect a wire between the two pins of the mains plug.
  2. Turn on the main power switch (keep the mains cord unplugged!).
  3. Measure the resistance value between the pins of the mains plug and the metal shielding of the tuner or the aerial connection of the set. The reading should be between 4.5 MΩ and 12 MΩ.
  4. Switch the TV 'off' and remove the wire between the two pins of the mains plug.
- Check the cabinet for defects, to prevent the possibility of the customer touching any internal parts.

2.2 Maintenance Instructions

We recommend a maintenance inspection carried out by qualified service personnel. The interval depends on the usage conditions:

- When a customer uses the set under normal circumstances, for example in a living room, the recommended interval is three to five years.
- When a customer uses the set in an environment with higher dust, grease, or moisture levels, for example in a kitchen, the recommended interval is one year.
- The maintenance inspection includes the following actions:
  1. Perform the 'general repair instruction' noted above.
  2. Clean the power supply and deflection circuitry on the chassis.
  3. Clean the picture tube panel and the neck of the picture tube.

  These values are indicated by means of the appropriate

2.3 Warnings

- In order to prevent damage to ICs and transistors, avoid all high voltage flashovers. In order to prevent damage to the picture tube, use the method shown in Fig. 2-1, to discharge the picture tube. Use a high voltage probe and a multi-meter (position V_{DC}). Discharge until the meter reading is 0 V (after approx. 30 s).

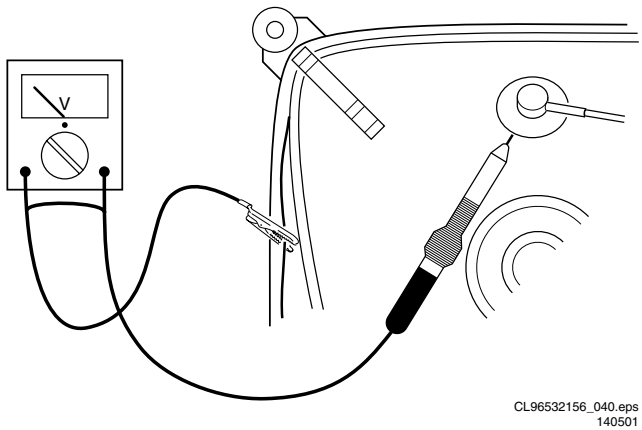


Figure 2-1 Discharge picture tube

- All ICs and many other semiconductors are susceptible to electrostatic discharges (ESD, symbol w). Careless handling during repair can reduce life drastically. Make sure that, during repair, you are connected with the same potential as the mass of the set by a wristband with resistance. Keep components and tools also at this potential. Available ESD protection equipment:
  – Complete kit ESD3 (small tablemat, wristband, connection box, extension cable and ground cable) 4822 310 10671.
  – Wristband tester 4822 344 13999.
- Together with the deflection unit and any multi-pole unit, flat square picture tubes form an integrated unit. The deflection and the multi-pole units are set optimally at the factory. We do not recommend adjusting this unit during repair.
- Be careful during measurements in the high voltage section and on the picture tube.
- Never replace modules or other components while the unit is 'on'.
- When you align the set, use plastic rather than metal tools. This will prevent any short circuits and the danger of a circuit becoming unstable.

2.4 Notes

2.4.1 General

- Measure the voltages and waveforms with regard to the chassis (= tuner) ground (symbol ⏚), or hot ground (symbol ⏚), depending on the tested area of circuitry.
- The voltages and waveforms shown in the diagrams are indicative. Measure them in the Service Default Mode (see chapter 5) with a colour bar signal and stereo sound (L: 3 kHz, R: 1 kHz unless stated otherwise) and picture carrier at 475.25 MHz (PAL) or 61.25 MHz (NTSC, channel 3).
- Where necessary, measure the waveforms and voltages with (symbol ⊓) and without (symbol ⊼) aerial signal. Measure the voltages in the power supply section both in normal operation (symbol ◑) and in standby (symbol ⏻). symbols.

- The picture tube panel has printed spark gaps. Each spark gap is connected between an electrode of the picture tube and the Aquadag coating.
- The semiconductors indicated in the circuit diagram and in the parts lists, are interchangeable per position with the semiconductors in the unit, irrespective of the type indication on these semiconductors.
- Manufactured under license from Dolby Laboratories. 'Dolby', 'Pro Logic' and the 'double-D symbol', are trademarks of Dolby Laboratories.



Figure 2-2 Dolby PL Symbol

2.4.2 Schematic Notes

- All resistor values are in ohms and the value multiplier is often used to indicate the decimal point location (e.g. 2K2 indicates 2.2 kOhm).
- Resistor values with no multiplier may be indicated with either an 'E' or an 'R' (e.g. 220E or 220R indicates 220 Ohm).
- All Capacitor values are expressed in Micro-Farads (μ= $x10^{-6}$), Nano-Farads (n= $x10^{-9}$), or Pico-Farads (p= $x10^{-12}$).
- Capacitor values may also use the value multiplier as the decimal point indication (e.g. 2p2 indicates 2.2 pF).
- An 'asterisk' (*) indicates component usage varies. Refer to the diversity tables for the correct values.
- The correct component values are listed in the Electrical Replacement Parts List. Therefore, always check this list when there is any doubt.

2.4.3 Rework on BGA ICs (Ball Grid Array)

General

Although (LF)BGA assembly yields are very high, there may still be a requirement for component rework. By rework, we mean the process of removing the component from the PWB and replacing it with a new component. If an (LF)BGA is removed from a PWB, the solder balls of the component are deformed drastically so the removed (LF)BGA has to be discarded.

Device removal

As is the case with any component, it is essential when removing an (LF)BGA that the board, tracks, solder lands, or surrounding components are not damaged. To remove an (LF)BGA, the board must be uniformly heated to a temperature close to the reflow soldering temperature. A uniform temperature reduces the chance of warping the PWB.
To do this, we recommend that the board is heated until it is certain that all the joints are molten. Then carefully pull the component off the board with a vacuum nozzle. For the appropriate temperature profiles, see the IC data sheet.

Area preparation

When the component has been removed, the vacant IC area must be cleaned before replacing the (LF)BGA.
Removing an IC often leaves varying amounts of solder on the mounting lands. This excessive solder can be removed with either a solder sucker or solder wick. The remaining flux can be removed with a brush and cleaning agent.
After the board is properly cleaned and inspected, apply flux on the solder lands and on the connection balls of the (LF)BGA.
Note: Do not apply solder paste, as this has shown to result in problems during re-soldering.

Device replacement

The last step in the repair process is to solder the new component on the board. Ideally, the (LF)BGA should be aligned under a microscope or magnifying glass. If this is not possible, try to align the (LF)BGA with any board markers.
To reflow the solder, apply a temperature profile according to the IC data sheet. So as not to damage neighbouring components, it may be necessary to reduce some temperatures and times.

Laser Safety

This unit employs a laser. Due to possible eye injury, only a qualified service person should remove the cover or attempt to service this device.

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

LASER	
Type	Semiconductor laser GaAlAs
Wave length	650 nm (DVD) 790 nm (VCD/CD)
Output Power	7 mW (DVD) 5 mW (VCD/CD)
Beam divergence	DVD: Parallel: 8 degree Perpendicular: 28 degree CD: Parallel: 11 degree Perpendicular: 35 degree

CLASS 1
LASER PRODUCT

CAUTION
VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN AVOID EXPOSURE TO BEAM
ADVARSEL
SYNLIG OG USYNLIG LASERSTRÅLING VED ÅBNING UNDGÅ UDSÆTTELSE FOR STRÅLING
VARNING
SYNLIG OCH OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD BETRAKTA EJ STRÅLEN
VARO!
AVATTAESSA OLET ALTTIINA NÄKYVÄLLE JA NÄKYMÄTTÖMÄLLE LASER SÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN
VORSICHT
SICHTBARE UND UNSICHTBARE LASERSTRAHLUNG WENN ABDECKUNG GEÖFFNET NICHT DEM STRAHL AUSSETSEN
ATTENTION
RAYONNEMENT LASER VISIBLE ET INVISIBLE EN CAS D'OUVERTURE EXPOSITION DANGEREUSE AU FAISCEAU

Help?

If this instruction manual does not give an answer or if 'Tips' do not solve your TV problem, you can call your Local Philips Customer or Service Centre. See the supplied World-wide guarantee booklet.
Please, have the Model and Product number which you can find at the back of your television set or on the packaging, ready, before calling the Philips helpline.

Model: 32PW9788
Product No: AG .....

End of life directives

Philips is paying a lot of attention to producing environmentally-friendly in green focal areas. Your new TV contains materials which can be recycled and reused. At the end of its life specialised companies can dismantle the discarded TV to concentrate the reusable materials and to minimise the amount of materials to be disposed of.
Please ensure you dispose of your old TV according to local regulations.

easyLINK

Contents

Installation

Preparation 2
Keys on top of the TV 2
Wireless surround speaker system 3
Your remote control 4-5
Contents of the LCD display 6
To use the menus 6
Select the menu language and country 7
Store TV channels 7
- Automatic installation 7
- Manual installation 8
- Give name 8
- Reshuffle the programme list 8
- Select favourite TV channels 8

Install TV setup 9
- Speakers 9
- General 10-11
- Source 11
- Decoder 11

Demo 12

Operation

TV menu
- Picture menu 12-13
- Sound menu 13-14
- Features menu 15

Dual screen / PIP / Multipip 16
NEXTVIEW/Teletext guide 17-18
Teletext 19-20
RDS Radio 21-22
DVD 23-26

Connect peripheral equipment


Connecting and selecting equipment 27-29
Audio and Video equipment keys 30

Tips 31-32

EasyLink features are based on the "one touch operation" approach. This means that a sequence of actions are executed at the same time in both the television and the video cassette recorder, provided both are fitted with the EasyLink function and connected with the eurocable supplied with your video recorder.

Preparation


❶ Place the TV on a solid surface.
! 32PW9788: 60 kg !

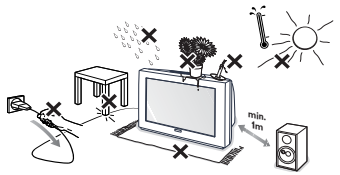

For ventilation, leave at least 5 cm free all around the TV. Do not place the TV on a carpet. To prevent any unsafe situations, do not place any objects on top of the TV. Avoid heat, direct sunlight and exposure to rain or water. Keep mobile telephones at a safe distance to avoid disturbances in picutre and sound.

❷ Insert the aerial plug firmly into the aerial socket at the back of the TV. For best picture quality use the suppressor-aerial cable supplied.

❸ **Remote control**: Insert the 2 batteries supplied (Type R6-1,5V).

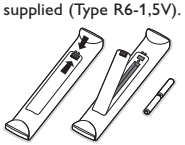

The batteries supplied do not contain the heavy metals mercury and cadmium. Please check on how to dispose of exhausted batteries according to local regulations.


❹ Insert the mains plug of the TV in the wall socket having a mains voltage of 220V-240V.

❺ **Switch the TV on** : Press the power switch ⏻ on the front of your TV.
A blue indicator on the front of the TV lights up, the screen comes on and the LCD display smoothly and automatically pops up. If the indicator is red, press the **-P+** keys on the remote control.

❻ **LCD display**: When popped up, the LCD display will show the mode the TV is in (**TV**, **DVD** or **Radio**) together with information about the selected mode.
When the TV is switched off to standby the display will go down again. When the TV is switched off with the power switch the display will remain in the position it was. If needed, you can manually push the display down.
Note:
- to switch off the automatic display movement, see Setup, General menu, Auto LCD movement, p. 10.
- you can change the position of the display, up or down, with the LCD key on the remote control. See use of the remote control, p. 4.

More details about the content of the display, see p. 6.

Keys on top of the TV

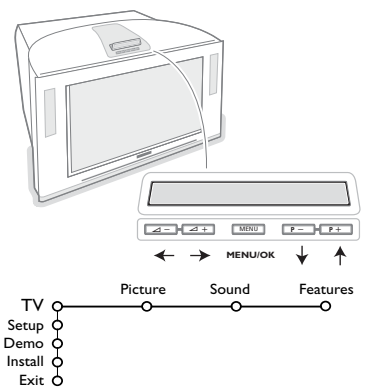

Should your remote be lost or broken you can still change some of the basic settings with the keys on top of your TV.


Press:
• the ◿ - or + key to adjust the volume;
• the **-P+** keys to select the TV channels or sources.


The **MENU** key can be used to summon the main menu without the remote control.


Use:
• the ◿ - and + keys and the **P-** and **P+** keys to select menu items in the directions as shown;
• the **MENU** key to confirm your selection.

Note:
*When activated via the **MENU** key on top of the TV, only **Exit** lets you dismiss the menu.*
*Navigate to **Exit** and press the **MENU** key.*

Wireless Surround speaker system

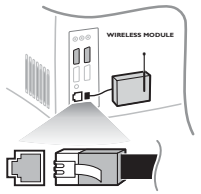

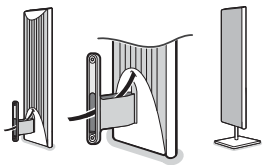

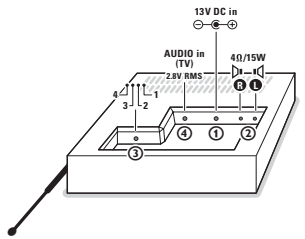

Wireless transmitter module

- Switch the TV off with the power switch.
- Attach the wireless module to the back of the TV as shown.
- Connect the attached cable to the wireless module connector.
- Switch the TV on.

Surround loudspeakers


- There are two NXT SurfaceSound® * surround loudspeakers which have to be connected to the wireless receiver box ② **R** and **L**.
If one of the connection cables is too short the 4 m extension cable supplied can be used. Table stands as well as wall supports are supplied.
- The Surround sound loudspeakers can be located behind or to either side of the listener. The front of the loudspeakers do not have to face the listener. The distance between the TV and the surround speakers should not exceed 15 m.

Wireless receiver box

Connect the **13V DC** adaptor supplied to the **13V DC IN** ① input at the bottom of the receiver box. Connect the adaptor to the mains.
The slide channel switch ③ has been set default to channel 1 in the factory.
The indicator on the receiver box shows that the speakers are in standby. During sound transmission the indicator turns to green. 10-15 min. after the sound transmission of the TV has stopped, the indicator turns back to red to indicate the low power standby.

The system has already been configured in the factory to work properly. In rare circumstances, interference from external RF (wireless) equipments such as RF headphones, mobile phones or remote controls for lights, may occur. Then it may be necessary to shift to another wireless channel.
Important: Always be sure that the Wireless receiver box and the Wireless Surround settings (see p. 9) are switched to the same transmitting channel.

In rare cases, when no RF surround sound is possible, or when there is too much interference, use the wired back up solution. See Wired rear loudspeakers, p. 28.

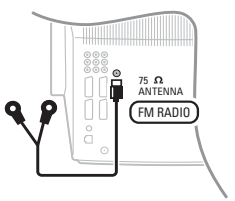

FM Wire Antenna connection

Connect the supplied FM wire antenna to the **FM RADIO ANTENNA 75** Ω connector at the back of the TV. Adjust the position of the FM antenna for the best reception.

*Note: for better FM stereo reception, connect an outdoor FM antenna or cable antenna to the **FM RADIO ANTENNA 75** Ω connector using a 75 Ω coaxial wire.*

* NXT® is a trademark of New Transducers Limited

Use of the remote control RC 4361

*Note: For most keys pressing a key once will activate the function. Pressing a second time will de-activate it. When a key enables multiple options, a small list will be shown. Press repeatedly to select the next item in the list. The list will be removed automatically after 4 seconds or press **OK** to remove immediately.*

VCR DVD SAT AMP CD
Audio- and Video equipment keys (p. 30)

Select peripherals
(p. 29)

● ◀◀ ■ ▶ ▶▶
Audio- and Video equipment keys (p. 30)
RDS radio function, see p. 21
DVD see p. 23

Cinema Go
See separate Cinema Link booklet supplied.

Instant record
See Record with your recorder with EasyLink, p. 30

NEXTVIEW on/off p. 17
Press the 12 key to show NEXTVIEW/Teletext Guide on the right half of the screen.

Freeze/Replay/Photo finish
To freeze the picture.
See also p. 10.


DVD mode function p. 23

Time display
The time is displayed on the screen.

Surround mode
Press this key repeatedly to select another available surround mode.

DVD/RADIO
TV, DVD, Radio mode selection

DISC/MENU
To select DVD menu, see p. 23.

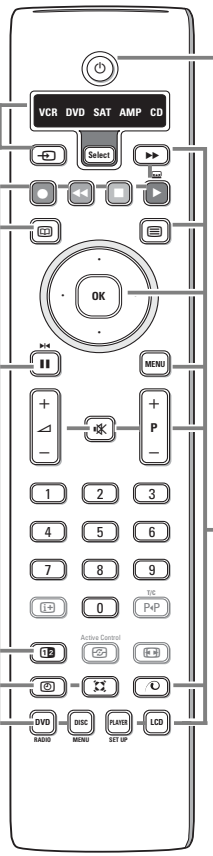

Standby
Press to switch the TV on or off. When switched off, a red indicator on the TV lights up.

Teletext on/off p. 19
RDS radio function, see p. 21.
Press the 12 key to show teletext on the right half of the screen.

OK Press this key
- to activate your choice, when in the menus.
- to display the programme list.

MENU Main menu on/off p. 6
RDS radio function, see p. 21.

To adjust the volume.

Interrupt the sound or restore it.

P Programme selection
To browse through the TV channels and sources stored in the favourite list.
RDS radio function, see p. 21

0/9 Digit keys
To select a TV channel.
For a two digit programme number, enter the second digit before the dash disappears. To switch immediately to a selected one digit TV channel, keep the digit key pressed a bit longer.

Pixel Plus demo on/off
In the right part Pixel Plus and Digital Natural Motion are switched on.

PLAYER/SETUP
To select DVD player Setup menu, p. 23.

LCD LCD tilt up/down



On Screen information
Press to display information about the selected TV channel and programme.
RDS radio function, see p. 21


Menu/Remote control info
When a menu is on screen, press to display info on the selected menu item. For information on the remote control functions, while the menu info is displayed, press any key on the remote control.
The normal function of the key is not executed.

Smart surf / nexTView themes
With this key you can easily switch between 2 up to 9 different TV channels or sources or quickly select TV programmes if NEXTVIEW with defined themes is broadcast. See General, Smart surf, p. 10.
Press the **OK** key or wait for the time out to dismiss the Smart surf display.

Dual screen / PIP / Multipip see p. 10 and p. 16.

Active control see p. 13

Picture format
Press this key repeatedly or press the cursor up/down to select another picture format: Auto format, Super zoom, 4:3, Movie Expand 14:9, Movie Expand 16:9, Subtitle zoom or Wide screen.

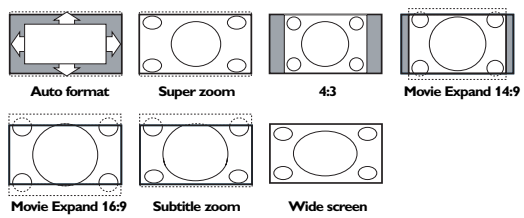


Auto format makes the picture fill the screen as much as possible.
In case of subtitles in the bottom black bar, Auto format makes the subtitles visible. If subtitles are only partly visible, press cursor up.
In case of a broadcaster logo in the corner of the top black bar, the logo disappears from the screen.

Super zoom removes the black bars on the sides of 4:3 programs with minimal distortion.

When in Movie Expand 14:9, 16:9, Super zoom or Subtitle zoom picture format, you can make subtitles visible with the cursor up/down.

P↔P RDS Radio function, see p. 21
DVD mode function, see p. 23

Contents of the LCD display

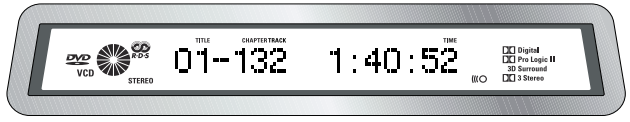

((o starts blinking when the TV is receiving a command from the remote control.
Dependent on the selected mode, the following information may be displayed:

In TV mode:

- channel number or name or the selected external
- a volume bar
- feed back messages
- the surround signal the TV is processing


In DVD mode:

- the type of disc that is in the slot (DVD, VCD, CD...)
- the track, title, chapter and time indication
- the surround signal the TV is processing

In Radio mode:


- the name of the selected station, the type of programme, the frequency
- a volume bar
- the RDS icon when playing a radio station with RDS signal
- the sound signal (stereo)
- the surround signal the TV is processing

To use the menus

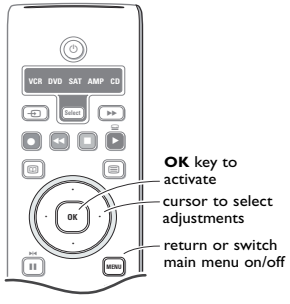

Press the [i+] key to get information about the selected menu item.

❶ Press the **MENU** key on the remote control to summon the main menu. At any moment you can exit the menu by pressing the **MENU** key again.
Note: If you have connected equipment with Cinema Link, more menu items are present.

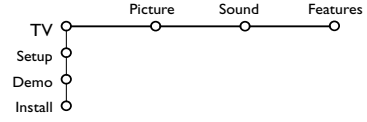

❷ Use the cursor in the up/down direction to select the **TV**, **Setup**, **Demo** or **Install** menu.
Use the cursor left/right to select **Picture**, **Sound** or **Features**.
Note: Sometimes not all the menu items are visible on the screen (indicated by a cluster of blue balls). Use the cursor down or right to reveal all items.


❸ Use the cursor in the left/right direction to select the menu item.

❹ Use the cursor up/down again to select the control you want to select or to adjust.

Note: Items temporary not available or not relevant are displayed in a light grey colour and cannot be selected.

Installation


The installation menu contains the following items:



EasyLink

If your video recorder has an EasyLink function, during installation, the language, country and available channels are automatically transmitted to the video recorder.

Select the menu language and country

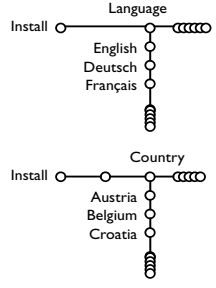

❶ Press the **MENU** key on the remote control.

❷ Use the cursor down to select **Install**.

❸ Use the cursor right to select **Language**.
Follow the instructions on screen.

❹ Use the cursor up/down to select your preferred language and press the **OK** key to confirm your selection.

❺ Use the cursor right to select **Country**.


❻ Select the country where you are now located and press the **OK** key.
Select **Other** when none of the countries applies.

❼ Proceed with the Install menu.

Store TV channels

After language and country are set correctly, you can now search for and store the TV channels in two different ways: using Automatic Installation or Manual Installation (tuning-in channel by channel).
Select your choice with the cursor right.

Automatic installation



❶ Select **Automatic install** in the Install menu.
Note: All channels must be unlocked in order to autoprogram. If requested, enter your code to unlock all channels. (See TV, Features menu, Childlock, p. 15.)

❷ Press the cursor down.
The autoprogramming option label **Start** appears.


❸ Press the cursor right.

❹ The message **Searching** appears and the progress of autoprogramming is displayed.

If a cable system or a TV channel which broadcasts ACI (Automatic Channel Installation) is detected, a programme list appears. Without ACI broadcast, the channels are numbered according your language and country selection. You can use Reshuffle to renumber them. See p. 8.

It is possible that the cable company or the TV channel displays a broadcast selection menu. Layout and items are defined by the cable company or the TV channel. Make your choice with the cursor and press the ***OK*** *key.*

Manual installation

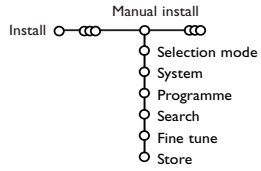


Searching for and storing TV channels is done channel by channel. You must go through every step of the Manual Installation menu.

1. Select **Manual install** in the Install menu.
2. Press the cursor down.
   Follow the instructions on screen.

   Note: Search or direct selection of a TV channel.
   If you know the frequency, the C- or S-channel number, enter the 3 or 2 digits of the frequency or the channel number directly with the digit keys 0 to 9 (e.g. 048). Press the cursor down to proceed.

   Repeat to search for another TV channel.

Give name

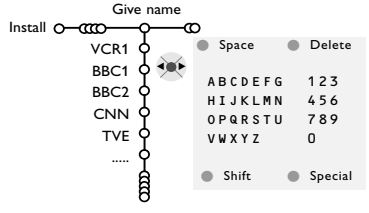

It is possible to change the name stored in the memory or to assign a name to a TV channel for which a name has not yet been entered. A name with up to 5 letters or numbers can be given to the programme numbers 0 to 99.

1. Select **Give Name** in the Install menu and press the cursor down.
2. Select the programme number.
   Note: keep the cursor up/down pressed to scroll through the programme list quickly.
3. Press the cursor right.
   A keyboard appears on the screen.
   Press the cursor right to enter the keyboard.
   Press the cursor up/down, left/right to select the first character and press **OK**. Repeat for every character you want to enter.
   Select **Space** to enter a space; **Delete** to erase the highlighted character in the name entered; **Shift** to display upper- or lowercase characters on the keyboard; **Special** to display special characters on the keyboard. Press **OK** to confirm.
4. Press the cursor left repeatedly when you have finished the name giving.
5. Select another programme number and repeat steps 3 to 4.

Reshuffle the programme list


You can change the order of the stored TV channels.

1. Select **Reshuffle** in the Installation menu.
2. Follow the instructions on screen.

Select Favourite TV channels

1. Select **Favourite programmes** in the Install menu.
2. Select your programme number with the cursor up/down.
3. Select **Yes** or **No** with the cursor right.
4. Repeat 2 and 3 for every TV channel or external you want to make a favourite or a non-favourite TV channel or external.

TV Setup

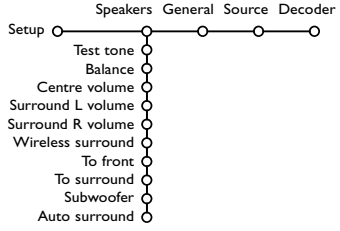

The Setup menu contains items that control the settings of the TV's functions, features, services and peripherals you may have connected.

The **Speakers** menu reflects the speaker-related controls.
The **General** menu allows you to change settings that will typically be accessed only occasionally.
The **Source** menu allows you to select a source.
The **Decoder** menu allows you to define one or more programme numbers as decoder programme numbers.

Speakers

Your TV is equipped with integrated front left, right and centre loudspeakers, capable of reproducing Stereo and Dolby 3 stereo modes.
For Hall, full Dolby Pro Logic II and Dolby Digital surround sound you should use the two amplified rear surround speakers.

Depending on the output and Surround mode (see Main menu, TV, Sound, Surround mode, p. 13) selected, some menu items may be greyed out and are not selectable.

Test tone controls

The menu item **Test tone** enables you to balance the volume levels of the speakers.

1. Select **Test tone** and press the cursor right.
2. Once turned on, the Test Tone will circulate through the left, centre, right speakers and both rear surround speakers (if present).
3. Press the cursor up/down to select the desired speaker for individual volume level adjustment.
4. Press the cursor left/right to adjust the volume level.

Wireless Surround

The system has already been configured in the factory to work properly.
In rare circumstances, interference from external RF (wireless) equipment such as RF headphones, mobile phones or remote controls for lights, may occur.
Then it may be necessary to shift to another wireless channel.
Use the cursor left/right, up/down to select another channel.

Important: Always be sure that the wireless receiver box and the Wireless Surround setting are switched to the same transmitting channel. Otherwise no sound or only a distorted sound will be heard on the surround speakers.

To avoid interfered picture the wireless transmitter might be automatically switched off.

In rare cases, when no RF surround sound is possible or when there is too much interference, use the wired back up solution with a 3.5 mm stereo jack. In this case select **Off** in the Wireless surround menu item. See Connect Peripheral equipment, Wired rear loudspeakers, p. 28.

To front / To surround

Select **To front** or **To surround** and then select the distance between the TV or the rear surround speakers and the place you sit to watch TV.


Subwoofer

Select if you want to use the internal subwoofer or if you installed an external one. See Connect Peripheral Equipment, Connect extra subwoofer, p. 28.

Auto Surround

Sometimes the broadcaster transmits special signals for Surround Sound encoded programmes.
The TV automatically switches to the best surround sound mode when **Auto Surround** is switched **On**. However it is possible to overwrite this setting.

General

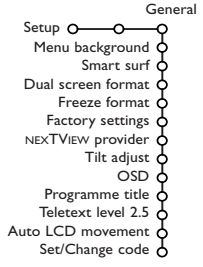

This menu allows you to change various settings that are presumably adjusted less frequently than most other settings.

Press the i+ key on the remote control to get information about the selected menu item.

Smart surf

1. Select **Smart surf**.
2. With the cursor left/right, select
   - **2 programmes** if you want the P↕P key to toggle between the current and the previously selected channel,
   - **9 programmes** if you want the P↕P key to summon a list of up to 9 channels which can be selected,
   - **Themes** if you want the P↕P key to quickly select TV programmes if NEXTVIEW with defined themes is broadcast.

To add/remove a channel or source:

Tune to the channel or source you wish to add or remove. Press the P↕P key and press the cursor right to add or remove.

Note: If there are already 9 channels/sources in the list, the one at the bottom of the list will be removed.

Freeze format

Freeze format allows you to select among three options: **Freeze**, **Replay** or **Photo** finish, to be activated when you press the ⏭⏮ key on the remote control. See p. 4.

Note: Continuing to hold the ⏭⏮ key down will also cycle the TV through the various formats. Changing the format this way does not store the selected format.

Factory settings

This resets the picture and sound settings to their predefined factory values, but maintains the channel installation settings.

Dual screen format

This menu allows you to select the preferred format which can then be displayed toggling the 1 2 key on and off.
For Dual screen/PIP/ Multipip and restrictions when in DVD mode, see p. 16.

1. Select **Dual screen format** with the cursor down.
2. Press the cursor right.
3. Select **Dual screen**, **PIP**, **PIP 3** or **PIP 12** with the cursor down.
   When Dual screen mode is activated with the remote control 1 2 key, and when
   - **Dual screen** is selected, the TV splits the screen into two equally sized screens.
   - **PIP** is selected, the TV shows a full screen of video with a pip window of video on top if it;
   - **PIP3** or **PIP12** is selected, the TV will display the main screen together with 3 or 12 pip screens.

NEXTVIEW provider

Select a TV broadcaster that provides NEXTVIEW data. How to make use of NEXTVIEW, see p. 17.

OSD (On Screen Display)

See Use of the remote control, p. 5, i+ On screen information.

1. Select **OSD**.
2. Select **Normal** to activate the continuous display of the programme number. Also TV channel and programme information are extended. **Minimum** will display reduced channel information.

Note: When subtitles is switched on, see Features, p.15, continuous display of the programme number is not possible.

Teletext level 2.5

Some broadcasters offer the opportunity to see more colours, other background colours and nicer pictures in the teletext pages.

1. Select **Teletext level 2.5**.
2. Press the cursor right to select **Teletext level 2.5 On** to take advantage of this feature.
3. Press the cursor right again to select **Teletext level 2.5 Off** if you like the more neutral teletext layout.
   The selection made is valid for all channels which broadcast teletext level 2.5.

Note: It may take a few seconds before teletext broadcast switches over to Teletext level 2.5.

Set/Change code


The Child lock feature (see TV, Features, p. 15) allows you to lock channels to prevent others from watching certain programmes. To watch locked channels, a 4-digit code must be entered. The Set/Change code menu item allows you to create or change a Personal Identification Number (PIN).

1. Select **Set/Change code**.
2. If no code exists yet, the menu item is set to Set code. If a code has previously been entered, the menu item is set to **Change code**. Follow the instructions on screen.

Important: You have forgotten your code !

1. Select **Change code** in the General menu and press **OK**.
2. Press the cursor right and enter the overriding code 8-8-8-8.
3. Press the cursor again and enter a new personal 4-digit code. The previous code is erased and the new code is stored.

Source

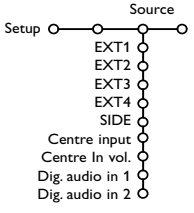

This menu allows you to indicate the peripheral you connected to one of the external inputs.

1. Press the cursor right to enter the list of types of peripherals attached to the selected input.
2. Select the peripheral device with the cursor up/down.

   Once you have selected the source type, e.g. DVD, this source will automatically be selected when your remote control is in DVD mode, see p. 4, and when you press the -⊡ key on the remote control.


Centre input - Centre in volume

When you have connected a surround receiver to the TV, the loudspeakers of the TV can act as centre speaker, making a separate centre speaker unnecessary.
Select **Centre input On** or **Cinema Link**.
Select **On** in case you have connected an external audio receiver without Cinema Link.
Select **Cinema Link** in case you have connected a Cinema Link surround receiver.
When having selected **On** you can adjust the **Centre in volume** with the cursor left/right to correct volume level differences of the external audio receiver and speakers.

Digital audio in 1 or 2

1. Select **Dig audio in 1** or **2**.
2. Select one of the corresponding connections in the list when you connected your digital device together with the additional audio cable you connected to one of the digital audio in sockets of your TV. See Connect Peripheral equipment, Digital equipment, p. 27.

Decoder




If a decoder or a descrambler is connected, see p. 27, you can define one or more programme numbers as decoder programme numbers.

1. Select **Decoder** with the cursor right.
2. Select **Programme**.
3. Select the programme number under which you have stored the programme coming from your decoder.
4. Select **Status**.
   - Select the input used to connect your decoder: **None**, **EXT1** or **EXT2**.
   - Select **None** if you do not want the selected programme number being activated as a decoder programme number.

*Note: Select **EXT2** when the decoder is connected to your EasyLink video recorder.*

Demo

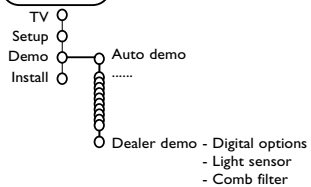

The Demo menu allows to demonstrate the TV features separately or in a continuous loop.

If **Auto demo** has been selected the demo will automatically present the features sequentially in a loop. Press one of the cursor keys to stop the Auto demo.
If one of the features has been selected, this particular feature demo will run only once, and the Demo menu will reappear.


Note: The Dealer demo is not part of the automatic sequence and can only be activated separately.

TV menu

Press the **MENU** key on the remote control to summon the main menu.

Press the i+ key on the remote control to get information about the selected menu item.

Picture menu

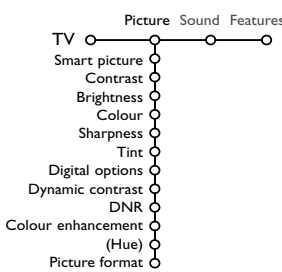

1. Press the cursor right to select **Picture**.
2. Select the menu items in the Picture menu with the cursor up/down.
3. Adjust the settings with the cursor left/right or enter the list of submenu items with the cursor right. Select a submenu item with the cursor up/down.
   Note: To remove the menu background before adjusting the picture settings, see Select TV setup, General, p. 10.

Smart picture

Select **Smart picture** to display a list of predefined picture settings, each corresponding with specific factory settings.
Personal refers to the personal preference settings of picture in the picture menu.

Digital options

Pixel Plus is the most ideal setting, doubles the horizontal resolution and increases the number of lines with 33%. You may consider to select Movie Plus in case a halo effect should disturb you. Dependent on your own preference, select Double lines, or 100 Hz Digital Scan.


Note: When 60 Hz NTSC material is used, the options are changed to Pixel Plus, Movie Plus or Progressive, progressive scan without motion compensation.

Active Control

The TV continuously measures and corrects all incoming signals in order to provide the best picture possible.

1. Press the key on the remote control.
2. The Active Control menu appears.
3. Press the cursor up/down to select the Active Control values **Off**, **Minimum**, **Medium** (recommended) or **Maximum**.
   The picture settings are being optimised continuously and automatically which is displayed by bars. The menu items can not be selected.
4. Press the cursor right to select **Smart Picture**.
5. Press the cursor up/down to select one of the predefined picture settings.
6. Press the cursor right to select **Active Display**.
7. Press the cursor up/down to select **Bars**, one of the Dual screen demos or **Off**.
   When you select Dynamic contrast, Pixel Plus, Digital Noise Reduction or Digital Natural Motion, the TV screen is divided into two parts: in the left part the selected picture quality setting is switched off; in the right part it is switched on.
8. Press the key again to switch off the Active Control menu.

Sound menu

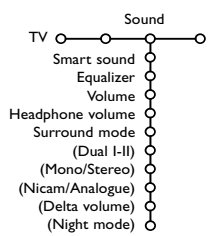

1. Press the cursor right to select **Sound**.
2. Select the menu items in the Sound menu with the cursor up/down and adjust the settings with the cursor left/right. Remember, control settings are at normal mid-range levels when the bar scale is centred.

Smart sound

Select **Smart sound** to display a list of predefined sound settings, each corresponding with specific factory settings of treble and bass.
Personal refers to the personal preference settings of sound in the sound menu.

Notes:
- *Some menu items are only available in case of a Cinema Link configuration and when the Cinema Link is activated. Others are steered by the audio receiver instead of by the TV. See the separate Cinema Link booklet supplied.*
- *Dual I-II is only available with dual sound transmission.*
- *Mono/Stereo is only selectable in case of analogue stereo transmission.*
- *Nicam/Analogue is only selectable in case of Nicam transmission.*

Surround Modes

Dependent on your personal preference and the sound signal broadcasted, select one of the Surround modes.

Stereo



This mode reproduces only the left and right front sound signals.


Dolby 3 Stereo

(optimal with Dolby Surround broadcasting)




The Dolby Pro Logic* sounds are distributed over the front left, the front right and the centre TV loudspeakers.

Hall



The sound signal is distributed over the rear loudspeakers which creates a hall effect from the rear.
The centre loudspeaker does not reproduce any signal.


Dolby Pro Logic II



(optimal with Dolby Surround broadcasting)
All front and rear loudspeakers reproduce the Dolby Surround Pro Logic II sounds.
This sound is always present in the movie or programme marked with DD Dolby Surround.

Note:
- *Normal stereo broadcast is not always encoded to produce a rear surround sound effect.*
- *In case of a Cinema Link receiver configuration connected, only the surround modes of the external receiver can be selected.*

Dolby Digital



When you have connected a DVD player or a Laser Disc player (see Connect Peripheral equipment, Digital equipment, p. 27), you can enjoy Multi Channel Surround Sound in your home when playing discs recorded in Dolby Digital.
In addition to the centre, the left and right internal speakers, the left and right rear surround loudspeakers reproduce the Dolby Digital Surround sounds.


Dolby Digital sound reception info via the i+ key

Press the i+ key.
When Dolby Digital sound is reproduced, the sound info on screen displays the number of loudspeaker signals which are transmitted.
This is indicated by 2 numbers: the first one indicates the number of front loudspeaker signals, the second one the number of rear loudspeaker signals.
E.g. 'Dolby Digital 3/2' means that 3 front signals are transmitted: left, right and centre, and 2 rear signals: left and right surround.
'Dolby Digital 1/0' means that a mono signal is transmitted.
'Dolby Digital 2/0' means that the transmission contains a stereo signal which can be Dolby Surround encoded. In this case the surround mode will display Dolby Pro Logic II.

DOLBY DIGITAL PRO LOGIC II

* Dolby' 'Pro Logic' and the double-D symbol DD are trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories Licensing Corporation.

Features menu

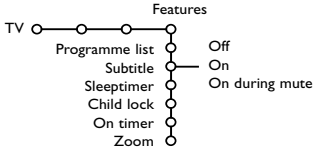

Press the cursor right to select **Features**.
Select the menu items with the cursor up/down and adjust the settings with the cursor left/right.

Press the i+ key on the remote control to get information about the selected menu item.

Programme list


Press the **OK** key to switch over to the selected TV channel or external.

Select subtitles

The subtitle page must be stored for each TV channel:
Switch on teletext and select the proper subtitle page from the index. Switch off teletext.
Subtitle On will automatically display them on the selected TV channels if subtitles are in the transmission. A symbol will indicate that the mode is on.
Select **On during mute** when you want to have the subtitles automatically displayed only when the sound has been muted with the 🔇 key on the remote control.

On timer


1. Select **On timer** with the cursor down.



2. Select **On** with the cursor right.
3. Press the cursor right again to enter the programme list.
4. Select the TV channel or external you want your TV to switch to on a selected time and day.
5. Press the cursor right again to select a day of the week or to select **Daily**.
6. Press the cursor right once again to enter the time with the digit keys or with the cursor up/down and press the **OK** key to activate.
7. Press the **MENU** key to turn off the menu.
Note: To check your timer settings, press the i+ key.

Child lock

1. Select **Child lock**.



2. Press the cursor right to enter the Child lock menu. You're summoned to enter your code.
Note: You have to re-enter your code each time you enter the child lock menu.

Important: You have forgotten your code! See p. 11.

3. Select one of the menu items of the child lock menu:
   - **Lock** if you want to lock all channels and externals.
   - **Custom lock** and press the cursor right.
   The items Age lock and Category lock are only available when NEXTVIEW broadcast is available.
   Select:
   - **Age lock** if you want to lock programmes related to a certain age: off, 2, 4 ... 18;
   - **Lock after** if you want to lock all programmes from a certain time onwards. Press the cursor right and enter the time with the cursor up/down and right. Press the **OK** key to validate.
   - **Programme lock** if you want to lock a certain TV channel or external;
   - **Category lock** if you want to lock programmes related to a certain theme: Movies, Sports, Shows.... See NEXTVIEW, p. 17.
   - Select **Unlock** to disable all locks you have set.

Note:
- *The Radio mode can not be locked separately.*
- *DVD mode - Disc Lock, see p. 26.*

Zoom

1. Select **Zoom** with the cursor down and press the **OK** key.
2. Press the **OK** key to select one of the zoom magnifications (x1, x4, x9, x16).
3. Additionally you can shift the selected zoom window over the screen with the cursor keys up/down, left/right.
4. Press the **MENU** key to switch off the zoom function.


Dual screen / PIP / Multipip



Press the 12 key to switch on **Dual screen**, **PIP** or one of the PIP modes.
Press the 12 key again. The screen that has a yellow border will become the full main screen picture.

Notes:
- *Continuing to hold the 12 key down will cycle the TV through the various formats launching a new format after each second the key is held down. After standby of the TV, the preference as set in the Setup, General menu is used.*
- *When Dual screen mode is selected, two picture formats are supported: Full screen or 4:3 letterbox picture format (vertical squeeze).*
- *Audio from the right screen or the PIP plays to the headphones.*
- *Dual screen/PIP/Multipip is not possible in Radio and DVD mode.*

Display options



- Press the cursor right to highlight the right screen.
- Press the cursor down to highlight the single PIP screen.
- Press the cursor right to enter the Multipip screen and then use the cursor keys to navigate through the PIP screens and to hightlight a PIP screen.


Changing TV channels or external sources in left, right, PIP or Multipip screen

- Press the **-P+** keys or the P•P key or the digit keys in order to change the TV channels or external sources in the highlighted screen.

Scan PIP3 or PIP 12

Navigate to the lowest PIP and press the cursor down to display a following series of PIP screens.

Define the position and the size of the single PIP screen



1. Select a Dual screen mode with a single PIP screen.
2. Press the cursor down to highlight the PIP screen. A PIP menu appears with which you can define the position and the size of the PIP screen.
   Note: When the PIP menu times out, press the OK key to make it reappear.
3. Press the cursor down again to select **Position** or **Size**.
4. Press the **OK** key or the cursor right to activate.
5. Use the cursor keys to define the position of the PIP screen.
   Use the cursor left/right to define the size of the PIP screen.
6. Press the **OK** key. The PIP menu reappears.
7. Press the cursor up to the top of the menu to highlight the main screen again.
8. Press the **OK** key to switch off the menu or wait until it is timed out.

On-Screen information

The highlighted On-Screen information,which appears when changing channels, always refers to the active screen.

NEXTVIEW / Teletext guide

NEXTVIEW is an electronic guide that allows you to look up programmes as you would in a newspaper or a TV magazine. You can sort the programmes by subject (films, sport...), obtain detailed information and programme your video recorder if it comes with the NEXTVIEWLink function.

*Important note: **The NEXTVIEW service is only available on certain programmes and in certain countries**. When no NEXTVIEW information is broadcast, the teletext programme guide appears in its place. This is based on teletext programme information (if available) and offers most functions of NEXTVIEW.*
Note: The broadcaster is responsible for the content of the information.

Call NEXTVIEW / Teletext guide

Press the key on the remote control to call the NEXTVIEW/Teletext guide.
A menu appears with the message **One moment please**. After a while you obtain:
- a NEXTVIEW page, if the selected channel broadcasts this service (the NEXTVIEW logo is displayed),
- a teletext page, if the selected channel does not broadcast NEXTVIEW,
- **No information available** is displayed if neither NEXTVIEW nor teletext are transmitted. In this case, select another channel.

Select TV channels by theme

If NEXTVIEW with defined theme is broadcast, it is possible to quickly select TV programmes with the P•P key. See Setup, General menu, Smart surf, p. 10.

Display of a NEXTVIEW page

The information is set by the channel that transmits the NEXTVIEW service. See also Setup menu, General, NEXTVIEW provider, p. 10.



Picture/NEXTVIEW - Teletext Guide


1. Press the key. Press the 12 key to show NEXTVIEW-Teletext Guide on the right of the screen.
2. Use the cursor keys to select a TV channel.
3. Press the 12 key to switch off dual screen.

NEXTVIEW guides

1. Use the cursor key left/right to select **Time**, **Channel**, **Theme**, the **Date** guide.
   The **Time guide** provides an overview of all programme titles active in the selected time block. The **Channel guide** provides an overview of all programmes that are broadcast by a single channel during one day. With the **Date guide** you can choose a specific date. The **Theme guide** displays a list of all programmes at the selected date, that matches with the selected category.
   Going through the menu guide, the TV is collecting the sorting criteria to finally display a list of programme events.
2. Press the **OK** key to select the guide type.
3. Move the puck down and to the right to select the programmes.
   If available a summary or commentary on the programme is displayed at the bottom of the screen.
4. Use the cursor up/down to scroll through the programmes.

Teletext Guide

1. Enter with the digit keys, the teletext page number that contains the programme information for the current channel.
2. Press the cursor right to move the puck over the selection ball.
3. Use the cursor up/down to scroll through the different programmes.

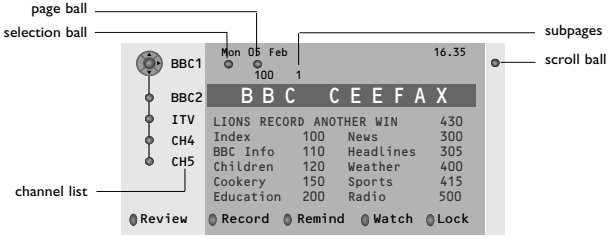

- If the selected programme contains a page number with an optional subcode referring to a page with more info about the programme, press the **OK** key to display the information. Press the **OK** key again to return to the programme guide page.
- If the selected programme guide page satisfies the VPT requirements,
  - it will be possible to record, remind, watch or lock programmes:
  - the TV will remember the last selected teletext page number of that channel that contains programme guide information and indicates which programme starts at what time. Every time you press the key, the teletext programme guide page of the selected TV channel will be available.
- When necessary you can select the subpage number by moving the cursor to the pageball and pressing right.

Note: You must enter the teletext pagenumber for each channel. You can change the channels also by moving the cursor up/down in the list in the left of the page.

Basic functions

Press one of the grey ▶▶, red ●, green ◀◀, yellow ■ or blue ▶ keys to activate a NEXTVIEW or Teletext Guide function. The keys appear in grey if the function is not available.

Review: this menu provides a list of programmes that are marked as reminders, those that have to be recorded and those that are locked. This menu can be used to change or remove marked programmes.

Record: to programme the recording of the video recorder (if it has a NEXTVIEWLink function and is connected to **EXT. 2**).

Remind: automatically switch on the TV if it is in standby or by displaying a message if the TV is on.

Lock: to lock certain programmes to prevent recording or watching.
For the functions Record, Remind or Lock, a small menu pops up in which you can choose the interval: once, daily or weekly, or clear an earlier made record, remind or lock setting. The default interval is set to **Once**. To confirm the frequency, press the **OK** key.

Watch: to watch the selected and currently broadcast programme.

Acquisition and updating of NEXTVIEW information


Acquisition and updating of NEXTVIEW is done when you are watching the TV channel of the selected NEXTVIEW provider, see Setup menu, p. 10, or when the TV is switched to standby.
Acquisition of fresh data will happen once during the night.
Note: it may be necessary to put the TV in standby mode when all NEXTVIEW information is outdated, e.g. when returning from holiday.

Teletext

Most TV channels broadcast information via teletext. This TV has a 1200 pages memory that will store most broadcasted pages and subpages to reduce waiting time. After each programme change, the memory is refreshed.

Switch Teletext on and off

Press to switch the teletext on.

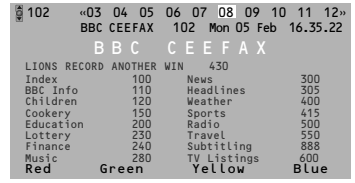

Select a Teletext page

- Enter the desired page number with the digit keys, the cursor keys up/down, left/right or with the **-P+** key.
- Select the options at the bottom of the screen with the colour keys.

Previously selected teletext page

(Only possible in case there is no list of favourite teletext pages available. See p. 20.)
Press the P↤P key.

Select the index teletext page

Press the grey colour key ▶▶ to display the main index (usually p.100).

Only for T.O.P teletext broadcasts :

Press . A T.O.P. overview of the teletext subjects available is displayed.
Select with the cursor up/down, left/right the desired subject and press the **OK** key.
Not all TV channels broadcast T.O.P. teletext.

Select subpages

When a selected teletext page consists of different subpages, a list of available subpages appears on the screen.
Press the cursor left or right to select the next or previous subpage.

Enlarge a Teletext page

Press repeatedly to display the upper teletext part, the lower teletext part and then to return to the normal teletext page size.
When the teletext page is enlarged, you can scroll the text, line by line using the cursor up/down.

Picture/Teletext-Active screen selection

When in dual screen picture/teletext (key), enter the desired page number with the **-P+** key, then press the **MENU** key, then select the left screen (with the blue ball at the top).
You can now select a compressed or full screen view of picture/teletext with the key.

Hypertext

With hypertext you can quickly jump to a pagenumber or search for a specific word shown on the current teletext page.

1. Press the **OK** key to highlight the first word or a number on the page.
2. Use the cursor up/down, left/right to select any other word or number you want to search for.
3. Press the **OK** key to confirm. The search starts. A message appears at the bottom of the screen to indicate the searching, or that the word or page is not found.
4. Use the cursor up to exit hypertext.

Teletext menu

(only available in full screen teletext mode)

1. Press the **MENU** key to activate the menu.
2. Press the cursor up/down to select the menu items.
3. Press the cursor right to activate.

Reveal

Reveals/conceals hidden information on a page, such as solutions to riddles and puzzles.
Press the cursor right to activate.

Favourite

This list contains up to eight favourite teletext pages. Only the pages of the current channel can be selected.

1. Press the cursor right to enter the list.
2. Press the cursor right again to add the current page or to select one of the favourite pages to the list.
3. Press the **MENU** key to watch the page.
4. Use the P⇤P key to browse through the list of favourite pages.

Search

Selecting a word

On the keyboard on screen you can type in a random word you want to search for in the teletext pages. Whether upper- or lowercase is used has no influence.



1. Press the cursor right to enter the keyboard.
2. Press the cursor left/right, up/down to select the characters, words or functions.
3. Press the **OK** key to confirm each character selected.
4. Select **Cancel** to cancel the word; **Space** to enter a space; **Delete** to delete the last character selected; **Shift** to switch between lowercase or capital characters; **Special** to display special characters on the keyboard and press the **OK** key.
5. Press the cursor left repeatedly to return to the Teletext menu again.

Searching a word

1. Type in the word on screen or select a word from the history list on the right and press **OK**.
2. Select **Accept** and press **OK** again. The message Searching appears.
3. To cancel the searching or to search for a new word, select **Keyboard** and press **OK**.
4. When a word is not found, a message appears. When the word is found, it is highlighted in the teletext page. To continue the search, press the **OK** key.

Cycle subpages *(if available)*

Makes the subpages cycle automatically.
Press the cursor right to activate and to de-activate again.

Timed page

To display a specific page from a selected TV channel at a certain time.

1. Press the cursor right and select **Yes** or **No**.
2. Enter the time and pagenumber with the cursor keys or the digit keys.
   Note: Teletext does not have to remain switched on, but you should watch the TV channel you have selected the specific page from.
3. Press the cursor left to return to the TV menu again.

Language


If the displayed characters on screen do not correspond with the characters used by the teletext broadcaster, you can change the language group here.
Select **Group 1** or **Group 2** with the cursor right.

Press the **MENU** key to leave the Teletext menu.

RDS radio function keys

When in RDS radio mode

Note: Remote control info is not available.

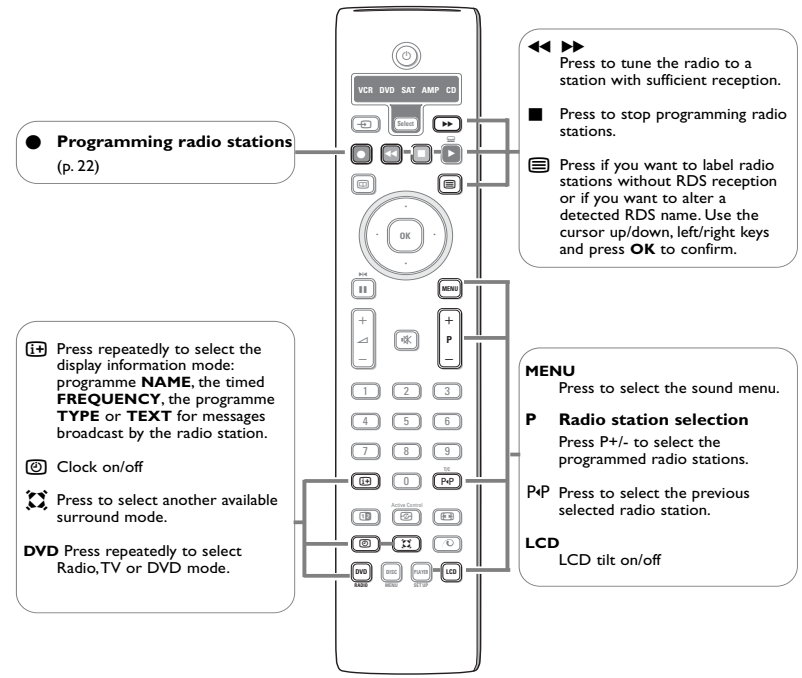

Switch to the RDS Radio mode

Press the **DVD/RADIO** key on the remote control repeatedly until the RDS Radio mode is selected. The screen is blanked and, if the received radio station transmits RDS data*, the RDS indicator on the display lights together with the available information about the radio station tuned.

** RDS, Radio Data Systems, is a service that allows FM stations to show additional information. If you are receiving a RDS station, the RDS icon and the station name are displayed.*

Tuning to radio stations

To find a new frequency hold down the ◀◀ or ▶▶ key on the remote control until the frequency starts to change. The radio automatically tunes to a station with sufficient reception.

If a FM station is received in stereo, stereo is displayed. To tune to a weak station, briefly and repeatedly press the ◀◀ or ▶▶ key until you have found optimal reception.

Programming radio stations

You can store up to a total of 50 radio stations.

Automatic programming

Press the ● key on the remote control for about 3 seconds. **SEARCH** is displayed and all the available stations are programmed (overriding all former programmed radio stations). The system will store first the RDS stations with a strong enough signal, then the RDS stations with a weaker signal and finally the non RDS stations.

Note:

- *to stop the automatic installation, press the ■ key. All stations before the stop, are stored into the memory.*

Manual programming

1. Briefly press the ● key on the remote control. The current station number starts flashing and the station name, in case of a RDS station, or the tuned frequency is displayed.
2. Hold down the ◀◀ or ▶▶ key to start the search for a new radio station. The search will stop on the next radio station and display the tuned frequency which will eventually be replaced by the detected RDS name.
   Note: briefly and repeatedly press the ◀◀ or ▶▶ key to fine tune the frequency if necessary.
3. Use the P- or + key or the digit keys to select the station number where you want to store the new radio station.
4. Press the ● key to store the new radio station on the selected station number.
5. Repeat 1 to 4 to store another radio station.

   Note: To stop the manually installation, press the ■ key. Nothing is stored and everything is restored to the radio status just before entering the manual installation mode.

Give name

1. Select the station number of the radio station you want to assign a name (for stations without RDS reception) or to change the name.
2. Press and hold the ☰ key on the remote control for about 3 seconds. The cursor flashes on the first of 8 characters.
3. Press the cursor up/down to change the character.
4. Press the **OK** key to confirm the new name.

Note: To erase a station name:


- *Select the station number you want to erase the name of.*
- *Press and hold the ☰ key for about 3 seconds.*
- *Press and hold the ■ key for about 3 seconds.*
- *The message **DELETED** appears and the RDS name or the frequency is displayed.*

DVD/Audio CD function keys

When in DVD mode

Note: Remote control info is not available

To reduce energy consumption, it may take some time for the DVD player to become active.

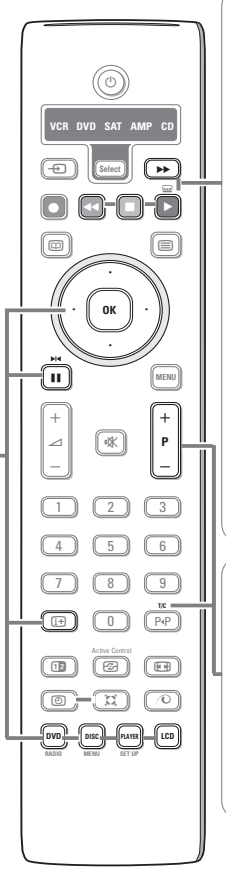

Cursor keys

- Press cursor up to freeze the picture. Press again to move to the next frame.
- Press cursor down repeatedly to slow play down to 1/2, 1/4 or 1/8 speed.
- Press cursor left/right repeatedly to fast rewind/forward at x4 or x32 speed.

❚❚/⏭ Freeze - Frame

Press ❚❚ or the cursor up to freeze the picture. Press again to move to the next frame. Pause playback in case of an audio CD.

i+ Press to display information about the current disc.

DVD

Press repeatedly to switch to dvd mode.

DISC

Press to summon the menu of the DVD disc. Its contents are entirely dependent on the DVD disc. It allows access to different sections such as choice of language, direct access to scenes, bonus materials, etc. Use the cursor keys to navigate through the menu and press the **OK** key to confirm.

In case of a picture CD, 4 pictures are displayed at once. Press the **-P+** keys to display a previous/next series of pictures. Select a picture with the cursor keys and press the **OK** key to display a picture full screen.

PLAYER/SETUP

DVD setup menu, p. 25

LCD

Automatic LCD tilt on/off.

▶ Play

Once a disc is loaded, playback starts automatically. Certain discs may ask you to make a selection from a menu.
Press ▶ to resume play after freezing the picture, stopping playback, switching to standby or ejecting the disc.
Press ▶ to start playback of an audio CD or picture CD. Press again to start a slide show in case of a picture CD.
Note: When temporarily switching to TV mode, and switching back to DVD mode within 10 minutes, the DVD will automatically resume.

■ Stop playback

The default screen appears and gives information on the player status.

◀◀ ▶▶ Fast forward and rewind


Press (or the cursor left/right) to fast forward or rewind at x4 or x32 speed or x8 speed in case of an audio CD. Press ▶ to return to normal speed.

P Press to go to the previous or next chapter in case of a DVD, the previous or next track in case of an audio CD, the previous or next picture in case of a picture CD.

T/C Title/Chapter

DVD discs are divided into different chapters to allow certain scenes to be accessed directly. Press the **T/C** key to access the Title or Chapter menu directly.

Introduction to DVD Video

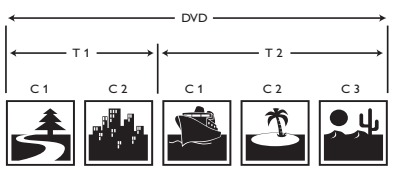

The Universal DVD Video Standard offers some unique features, such as selection of different sound tracks for different languages, different subtitle languages and even multiple camera angles (disc dependent).
Depending on the material on the disc (a movie, video clips, drama series, etc.) the disc may have one or more titles which can consist of multiple chapters (also called scenes).

Supported disc formats

The built-in DVD player allows you to play DVD Video discs (including DVD+R and DVD+RW) as well as Video-, Super Video-, Audio-, MP3- and JPEG picture CDs (including CD-R and CD-RW CDs). The discs can be recognised by their logo on the packaging.


Note: DVD discs and players are designed with regional restrictions. Before playing a disc, make sure the disc is the same zone as your player. The region code of this DVD player is 2.

MP3 disc properties

Your built-in DVD player supports the following MP3-CD format (ISO9660)
- Max. 30 character filenames
- Max. levels of nested directories: 8
- Max. ALB number: 32
- VBR bit-rate support
- Supported MP3 sampling frequencies: 32 kHz, 44.1 kHz, 48 kHz
- Supported MP3 bit-rates: 32, 64, 96, 128, 192, 256 kbps
- Following formats are not supported: .WMA, .AAC, .DLF, .M3U, .PLS

Additional notes:
- Chinese filenames are not supported.
- The CD-session must be closed.
- Only the first session of a multi-session CD is supported.
- CDs in UDF format are not supported.
- In compliance with the SDMI, digital audio out is muted while playing MP3-CDs.
- The disc reading time may exceed 10 seconds due to a large number of songs on the disc.

Loading / removing a disc

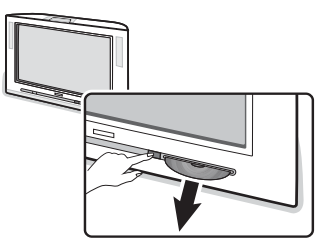

Loading a disc

Insert your disc in the slot with the label side facing up. The player will pull the disc in automatically.
Note: it may take a few seconds before the disc is read. Please wait until the reading is finished.

Warning: Do not insert 8 cm (3 inch) discs or a malfunction may occur.

Removing a disc

Press the DVD button located on the front of the TV.
The player ejects the disc.
Remove the disc.

The DVD Player Menu

This menu allows you to access all the special functions of the DVD player.

1. Press the **PLAYER SETUP** key on the remote control.
2. Use the cursor left/right up/down to go through the options in the menu and confirm your selection with the **OK** key.
3. Press the **PLAYER SETUP** key again to switch off the menu.

Toolbar

Toolbar: Disc option — Slide show — View — Search — Program

Note: Dependent on the kind of disc played, the availability of menu options may differ.

Disc option
- **Disc Navigation**: to access the different chapters, tracks or pictures available on the disc.
- **Subtitle and Audio**: to choose the subtitling language and audio language.
  The key on the remote control allows you to change the subtitling language directly.

Slide show *(Available only with a picture CD (only JPEG-pictures supported).*

In this menu you can select the following slide show options:
- **Picture time**: to set the duration that the picture will be shown on screen;
- **Transition time**: to set the duration that the transition effect will be shown on screen.
- **Transition effect**: to select the transition effect between the pictures.

View
- **Angle**: some DVDs include sequences recorded from several camera angles. Generally a special icon will appear. Use the cursor up/down to select the angle.
- **Scan**: scanning plays the first 10 seconds of each track on the disc. To continue playback at your chosen track, press ▶.
- **Rotate** (only with a picture CD): the picture can be rotated either clockwise or counterclockwise by 90 or 180 degrees.

Search
- **Time search**: use the digit keys to enter a precise time to go to. Press **OK** or the ▶ key to resume at the indicated time.
- **Fast motion and Slow motion**: use the cursor left/right to select the desired speed. To resume normal speed, press ▶.
- **Frame by frame**: the image freezes. Use the cursor left/right to move backwards or forwards frame by frame. Press ▶ to resume normal play.

Program

See 'Programming favourite tracks' on p. 26.

Preferences

Preferences: Picture — Sound — Features

Picture
- **Video shift**: to move the image horizontally.

Sound
- **Night mode**: optimises the sound dynamics for low volume listening

Features
- **Help-line**: when set to on, a navigation help-line appears.

Setup

Setup: Language — Features — Access control

Language
- **Default audio**: to define the preferred language for the soundtracks of DVD films.
- **Default subtitle**: to define the preferred language for subtitles on DVD films.
  Note: If the preferred language is available on the disc, it will be selected by default. If not, the first language on the disc will be activated.


Features
- **PBC (Playback Control)**: to activate or deactivate the possibility to directly select a title on certain Video- or Super Video-CDs.

Access control
- **Disc lock**: see p. 26.

Programming favourite tracks

This function allows you to programme a selection of your favourite audio tracks from an Audio CD or your favourite chapters from a DVD into the memory.
When the Program function is active only the programmed audio tracks or DVD chapters will be played.

1. Press the **PLAYER SETUP** key on the remote control.

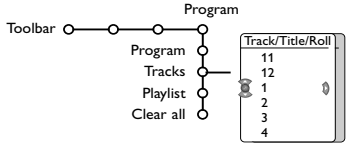

2. In the Toolbar, Program menu select **Tracks** using the cursor left/right up/down.
3. Move the cursor right to open the list of tracks, titles or rolls.
   Move the cursor up/down to select a track, a title or a roll.
   Press the cursor right to open an overview of chapters or pictures.
   Move the cursor up/down to select a chapter or picture.
4. Press the **OK** key to confirm.
5. Repeat steps 3 and 4 for each favourite track, chapter or picture you wish to program. If you wish you can repeat the same track, chapter or picture several times. You have a maximum of 20 favourites per disc.
6. Press the **PLAYER SETUP** key to exit the menu. The favourite tracks will begin playing automatically.

Access Control / Disc Lock

This function allows you to lock/unlock the DVD player.

1. Press the **PLAYER SETUP** key.
2. In the Setup menu, select **Access Control**.
3. Press the cursor down and enter your secret code.
4. Press the cursor down to select **Disc Lock** and switch the Lock **On** or **Off** with the cursor right.
5. Press the **PLAYER SETUP** key to exit the menu.

Play authorisation

When the Disc Lock function is switched on in the Setup, Access Control menu, you will be asked to enter your code to authorise the playing of the DVD or Video-CD.

1. Insert a disc.
2. Enter your secret code.
3. Select **Play once** or **Play always**.
   - **Play once**: the disc can be played as long as it is in the player and the television remains on and in DVD mode.
   - **Play always**: the disc will become child safe (authorised) and can always be played, even if the Child lock is set to on.
     Note: When a disc has been labelled Play always you will not be asked to enter your code any longer.

The player can memorise a list of 120 child safe discs. When the list is full and a new disc is added, the last disc in the list is removed. Double sided DVDs and Video-CDs with multiple volumes may include a different identification for each side or volume. In this case you will have to authorise each side or volume separately.

Removing play authorisation

1. Insert a disc. Playback starts automatically.
2. When the ☺ symbol appears on screen, press the ■ key. The ☹ symbol appears and the disc is now deauthorised.

Forgotten your secret code ?


See TV Setup, General, p. 11.

Connect Peripheral Equipment

There is a wide range of audio and video equipment that can be connected to your TV.
The following connection diagrams show you how to connect them.

*Note: **EXT. 1** can handle CVBS and RGB, **EXT. 2** CVBS, RGB and Y/C, **EXT. 3** and **EXT. 4** CVBS.*
*It is preferred to connect peripherals with RGB output to **EXT. 1** or **EXT. 2** as RGB provides a better picture quality.*
*If your recorder is provided with the EasyLink function, it should be connected to **EXT. 2** to benefit from the EasyLink functionality.*

Recorder (VCR+DVD+RW)

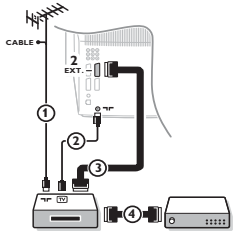


Connect the aerial cables 1, 2 and, to obtain the optimum picture quality, eurocable 3 as shown.
If your recorder does not have a euroconnector, the only possible connection is via the aerial cable. You will therefore need to tune in your recorder's test signal and assign it programme number 0 or store the test signal under a programme number between 90 and 99, see Manual installation, p. 8.
See the handbook of your recorder.

Decoder and Recorder


Connect a eurocable 4 to your decoder and to the special euroconnector of your recorder. See also the recorder handbook.
See Decoder, p. 11. You can also connect your decoder directly to **EXT. 1** or **2** with a eurocable.

Other equipment (except digital sources)

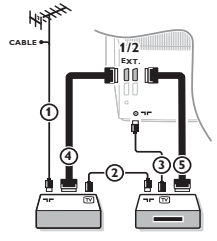


1. Connect the aerial cables 1, 2 and 3 as shown (only if your peripheral has TV aerial in-/output).
   Better picture quality can be obtained if you also connect eurocable 5 to **EXT. 2** and a eurocable 4 to **EXT. 1**, **3** or **4**.
2. Look for the test signal of your peripheral in the same way as you do for a recorder.
   *When a recorder is connected to **EXT. 1** you can only record a programme from your TV. Only when a recorder is connected to **EXT. 2** it is possible to record a programme from your TV as well as from other connected equipment.*

Digital equipment (DVD, Digital Set Top Box, ...)

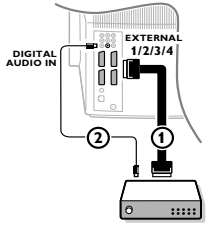

1. Connect your digital equipment with a eurocable 1 to one of the euroconnectors **(EXT 1**, **2**, **3** or **4)**, or with a cinch cable to the video input at the right side of the TV.
2. To enjoy Multichannel surround sound from digital sources with a Dolby Digital audio output also connect an audio cable 2 to one of the two digital audio in sockets of your TV. Make a selection in the Setup, Source menu, p. 11.
3. According to the connected digital equipment, select **DVD**, **SAT**, **Game** or **Digital STB** in the Setup/Source menu. See p. 11.

Side connections

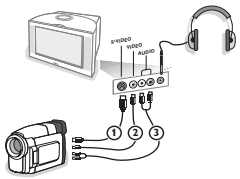

Camera or Camcorder


1. Connect your camera or camcorder as shown.
2. Connect to **VIDEO** (2) and **AUDIO L** (3) for mono equipment. For stereo equipment also connect **AUDIO R** (3). S-VHS quality with an S-VHS camcorder is obtained by connecting the S-VHS cables with the S-video input (1) and audio inputs (3).
   Do not connect cable (1) and (2) at the same time. This may cause picture distortion !

Headphone

1. Insert the plug into the headphone socket as shown.
2. Press on the remote control to switch off the internal loudspeakers of the TV.
   The headphone impedance must be between 8 and 4000 Ohm. The headphone socket has a 3.5 mm jack.
   In the Sound menu select **Headphone volume** to adjust the headphone volume.

   Note:
   When Dual screen/PIP is activated (see p. 16):
   - if the main screen displays a TV channel picture, you hear the sound from the Dual screen/PIP picture through your headphone.


Wired rear loudspeakers

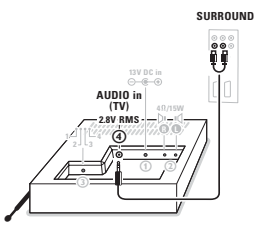

When no wireless RF surround sound is possible or when there is too much interference you can still enjoy Dolby Pro Logic II and Dolby Digital surround sound by connecting the wireless receiver box to the TV with a stereo cinch to stereo 3.5 mm jack cable.

1. Connect the (not supplied) cable to the **AUDIO IN (TV)** connector (4) at the wireless receiver box and the **R** and **L** surround outputs at the back of the TV.
2. Select **Off** in the Wireless surround menu item of the Setup, Speakers menu, p. 9.

Connect extra subwoofer

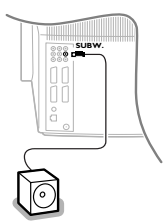

To enhance the sound reproduction of your TV you can connect an externally powered subwoofer (between 20 and 250 Hz).


1. Connect the audio cable of the external subwoofer to the **SUBW.** socket at the back of your TV.
2. Select **External** in the Setup, Speakers menu, Subwoofer, p. 9.

For details, please refer to the subwoofer's manual.

Connect audio receiver

Although your TV is already equipped with a Digital MultiChannel decoder you might want to connect your own MultiChannel surround receiver.

MultiChannel surround receiver with or without digital input connectors

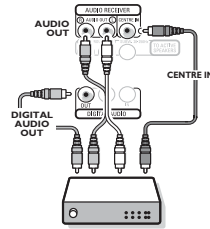

1. Connect a MultiChannel surround receiver to the **AUDIO OUT R** and **L** connectors at the back of your TV.
2. If you want the loudspeakers of your TV to act as centre speaker, also connect an audiocable to the MultiChannel surround receiver **CENTRE OUT** connector and to the **CENTRE IN** connector at the back of your TV.
3. Select **Centre input On** in the Source menu; See p. 11. The loudspeakers of the TV will now only produce centre sound.
4. If necessary, adjust the volume level of the centre sound in the **Centre in volume** menu item of the Source menu. The overall volume has to be controlled via the MultiChannel surround receiver.
5. In case of a Digital MultiChannel surround receiver, also connect the receiver to the **DIGITAL AUDIO OUT** connector.
   *In this case the loudspeakers of your TV can not act as centre speaker. Select **Centre input Off** in the Source menu, see p. 11. Also see the instructions manual of your Digital MultiChannel surround receiver.*

To select connected equipment

Press the key on the remote control repeatedly to select **EXT1**, **EXT2**, **EXT3**, **EXT4** or **SIDE** according to where you connected your equipment at the back or the right side of your TV.

Remark : Most equipment (decoder, recorder) carries out the switching itself, when it is switched on.


Cinema Link Surround receiver

See the separate supplied Cinema Link instruction manual

Attention: the sound info on screen will not correspond with the actual sound reproduction.

Recorder or DVD with EasyLink

The recorder (VCR or DVD+ RW) or DVD can be operated with the remote control via the Recorder or DVD menu on screen.

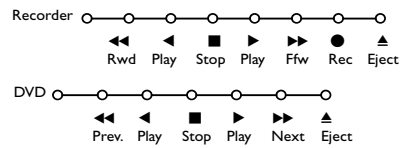

1. Press the **MENU** key on the remote control.
2. Select the **Recorder** or **DVD** menu with the cursor up/down.
3. Press the cursor left/right, up/down to select one of the recorder or DVD functions.

   The key ● for recording can be operated in the TV mode.
   If your EasyLink recorder has the system standby function, when you press the key for 3 seconds, both TV and the recorder are switched to standby.

Audio- and video equipment keys



This system remote control operates the following Philips equipment: TV, VCR, DVD, SAT (RC5), AMP (+TUNER), CD;

Press the **Select** key to operate any of the equipment indicated in the display. Another device can be selected by pressing Select repeatedly within 2 seconds. The led will blink slowly to indicate the device.
Press one of the keys on the remote control to operate the peripheral equipment.
To return to TV mode press **Select** while the led is blinking.
When no action is taken within 60 seconds, the remote goes back to TV mode.

*Note: When the **Select** key is pressed and hold for more than 2 seconds, the RC5/RC6 system select command is transmitted.*

- ⏻ to switch to standby
- ● for record,
- ◀◀ for rewind (**VCR**, **CD**); search down (**DVD**, **AMP**)
- ■ for stop
- ▶ for play
- ▶▶ for fast forward (**VCR**, **CD**); search up (**DVD/AMP**)
- to select your choice of subtitle language (**DVD**); RDS news/TA (**AMP**); to shuffle play (**CD**)
- to select a **DVD** title; RDS display (**AMP**); info on screen (**CD**)
- display information

MENU to switch the menu on or off
- P + for chapter, channel, track selection
0 to 9 digit entry
P↤P tape index (**VCR**), select a DVD chapter, select a frequency (**AMP**)
VCR timer
surround on/off (**AMP**, **CD**)
cursor up/down to select the next or the previous disc (**CD**)
cursor left/right to select the previous or following track (**CD**) search up/down (**AMP**)

Additionally the DVD, SAT and CD indicator can be programmed to operate the DVD-R, SAT (RC6), CD-R instead.

1. Press the **Select** key repeatedly until no LED is lit.
2. To program **DVD-R**, press the **OK** key + digit 2.
   To program **SAT (RC6)**, press the **OK** key + digit 4.
   To program **CD-R**, press the **OK** key + digit 6.
   From now on, when the corresponding (**DVD**, **SAT**, **CD**) indicator is selected, the remote control will operate your DVD-R, SAT (RC6) or CD-R.

*Note: To return to the modes programmed in the factory, either remove the batteries for a few minutes, or press the **OK** key + digit 1 (DVD mode); or + digit 3 (SAT-RC5) or + digit 5 (CD mode).*

Record with your recorder with EasyLink

In TV mode, it is possible to start a direct recording of the programme which is being displayed on the TV screen.
Continue to press the ● record key on the remote control for more than 2 seconds.

Note:
Switching programme numbers on your TV does not disturb recording !
*When recording a programme from a peripheral connected to **EXT. 1**, **3**, **4** or **SIDE**, you can not select another TV programme on the screen.*

Tips

Care of the screen	Clean the TV with a slightly damp soft cloth. Do not use abrasive solvent as it can damage the TV screen.
Poor Picture	• Have you selected the correct TV system in the manual installation menu ? • Is your TV or house aerial located too close to loudspeakers, non-earthed audio equipment or neon lights, etc.? • Mountains or high buildings can cause double pictures or ghost images. Sometimes you can improve the picture quality by changing the direction of the aerial. • Is the picture or teletext unrecognisable? Check if you have entered the correct frequency. See Installation, p. 8. • Are brightness, sharpness and contrast out of adjustment? Select Factory settings in the Setup, General menu, p. 10. • Sometimes poor picture quality is possible when having activated an S-VHS camera or camcorder connected to the right side of your TV and another peripheral is connected to one of the externals at the same time. In this case switch off one of the other peripherals.
No picture	• Is the aerial connected properly? • Are the plugs tightly connected in the aerial socket? • Is the aerial cable in good condition and does it have suitable plugs? • Press the **DVD** key on the remote control to switch to TV mode.
Digital distortion	The low quality of some digital picture material may be the cause of digital image distortion. In this case select the Soft setting using the Picture menu, Smart Picture, without changing the picture settings manually.
Moistured lense problem	The lense may cloud over when the DVD player is suddenly moved from cold to warm surroundings. Playing a CD/DVD is not possible then. Leave the TV in a warm environment for two hours before use, so the moisture can evaporate.
Cleaning DVD/ Audio disc	Some problems may occur because the disc inside the recorder is dirty. To avoid these problems clean your discs regularly with a cleaning cloth. Wipe the disc from the centre out. **Caution**: do not use solvents such as benzine, thinner, commercially available cleaners, or antistatic spray intended for analogue discs. Do not use commercially available cleaning disc to clean the lens, as these discs may damage the optical unit.
No sound	• No sound on any channel? Check the volume isn't at minimum. • Is the sound interrupted with the mute key 🔇? Check if your speaker configuration corresponds with the selections made in the Setup menu, Speakers, p. 9. • No sound from the connected audio receiver? Select Centre input Off in the Source menu, see p. 11.
No Surround sound	• Perhaps the channel is not broadcasting good quality surround sound. • To avoid interfered picture the wireless transmitter might be automatically switched off. Use the wired back up solution, p. 28. • No sound from the rear speakers or the centre speakers? Select an appropriate surround mode, according to the broadcasted sound signal or adjust the volume or check if the wireless transmitter is properly connected. See Surround Modes, p. 14.
No solution found for your picture or sound problem ?	Switch your TV off and then on again once. Never attempt to repair a defective TV yourself. Check with your dealer or call a TV technician.

Remote control	• If your TV no longer responds to the remote control, the batteries may be dead. • Check if the remote control is in the correct mode. • You can still use the **MENU** key and the -/+ keys at the top of your TV.
Menu	Have you selected the wrong menu? Press the **MENU** key again to exit from the menu.
NEXTVIEW	**No NEXTVIEW info:** See Acquisition and updating of NEXTVIEW information, p. 18. **Displayed time is wrong:** The broadcaster on programme number one does not transmit the correct local date and time. Use Reshuffle in the installation menu to place another broadcaster on programme number one.
Wireless Surround menu speaker system	• Are the wireless receiver box and the Surround Sound setting in the Setup switched to the same transmitting channel? • Put the wireless receiver box at least 15 cm above ground level. • The distance between the TV and the wireless receiver box should be > 2 m. • External RF equipment, mobile telephones or people moving around close to the TV may disturb the sound transmission. • When no RF surround sound is possible, or when there is too much interference, try to switch to another wireless channel or use the wired back up solution. See Wired rear loudspeakers, p. 28. • For wireless transmitter modules with a built in antenna: you must place the antenna in a vertical position.
Standby	Your TV consumes energy in the standby mode. Energy consumption contributes to air and water pollution. Power consumption: 1 W.

4. Mechanical Instructions

Index of this chapter:
1. Set Disassembly.
2. Service Positions.
3. Assy / PWB Removal.
4. Set Re-assembly.

Notes:
- Figures below can deviate slightly from the actual situation, due to the different set executions.
- Follow the disassemble instructions in described order.

4.1 Set Disassembly

4.1.1 Wireless Surround Transmitter Removal (if attached)

1. Remove the cable of the Wireless Surround Transmitter box (at the right side of this RJ45 plug you can find the release-hook of the lock-mechanism).
2. Pull the Wireless Surround Transmitter box backwards. It is clicked to the rear cover via three clamps.

4.1.2 Rear Cover Removal

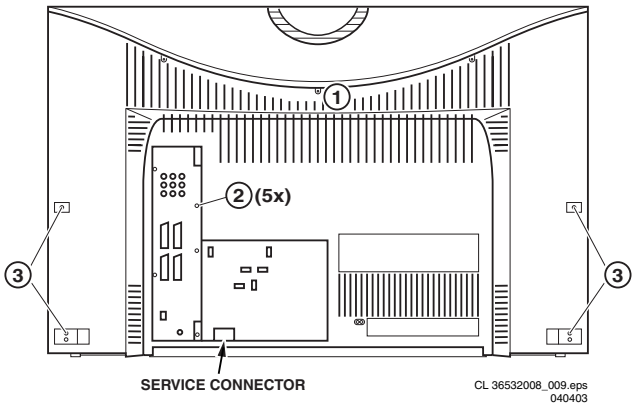


Figure 4-1 Removal of the rear cover.

Warning: Disconnect the mains power cord before you remove the rear cover.

First, unscrew the top cover plate:
1. Remove the fixation screw(s) [1] that secure the cover plate.
2. Leave the top cover plate in its original position.

To be able to access the electronics of the set, you must remove the rear cover:
1. Disconnect all communication cables.
2. Remove the fixation screws [2] of the rear I/O cover plate.
3. Remove the remaining fixation screws [3] of the rear cover.
4. Lift the top cover plate and remove the rear cover screws, hided by this top cover plate.
5. Unlock the securing clips at bottom side and remove the rear cover. Make sure not to damage any cable during this cover removal.

4.1.3 Sub-woofer Removal

Caution: Do not disconnect the loudspeaker cable from the subwoofer box when the set is operative, because the class-D amplifier cannot handle a change in load during operation. It is no problem when the subwoofer is disconnected **before operation**, but a change from connected to disconnected **during operation** can damage the amplifier.

1. Disconnect the loudspeaker cable connectors at the top of the sub-woofer box.
2. Unlock he subwoofer bracket and at the same time pull the unit backwards.
3. Take out the sub-woofer unit including the bracket.

4.2 Service positions

4.2.1 DAF Module

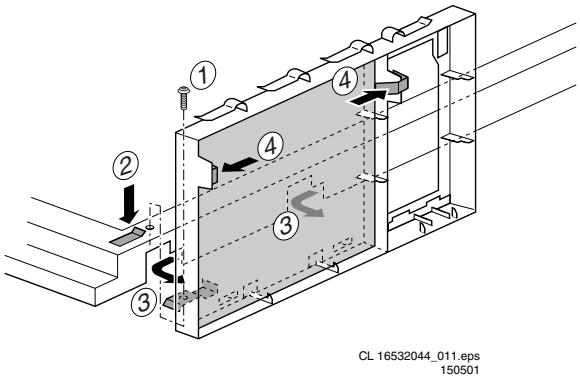


Figure 4-2 DAF module.

1. Remove the fixation screw (if present) as described in section: ‘Assy/PWB removal’.
2. Push down the fixation clamp, and pull the complete bracket at the same time loose from the LSP bracket. The module is now unlocked from the chassis and can be handled in several positions.

4.2.2 Small Signal Board (SSB)

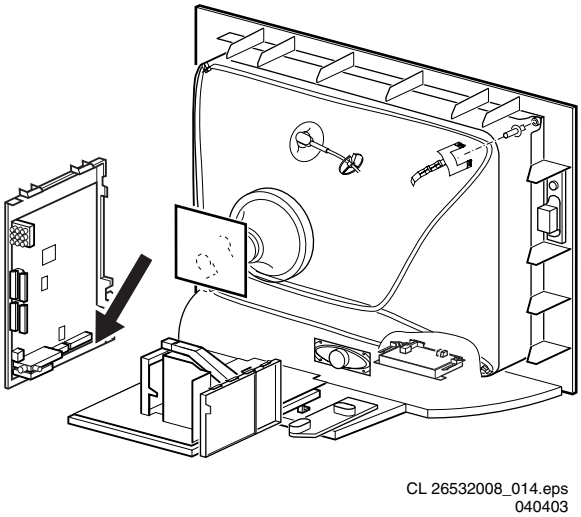


Figure 4-3 Small Signal Board removal.

1. Unlock the SSB bracket at the position as shown in the figure and place the board flat on the table.

Note: For good access to both sides it is possible to use two ‘IDE extended flat cables’, 48 cm, 40 fold (ordering code for one cable: 3104 311 05501). Or use the cables from service set 9965 000 14526.

4.2.3 LSP Component side

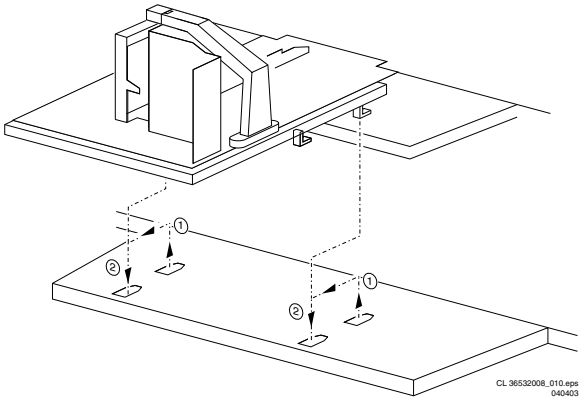


Figure 4-4 LSP unlock action.

1. Make sure the SSB bracket is unlocked and placed on the table.
2. Release the LSP bracket locking clips and pull it out of the mounting holes.

4.2.4 Solder Side LSP

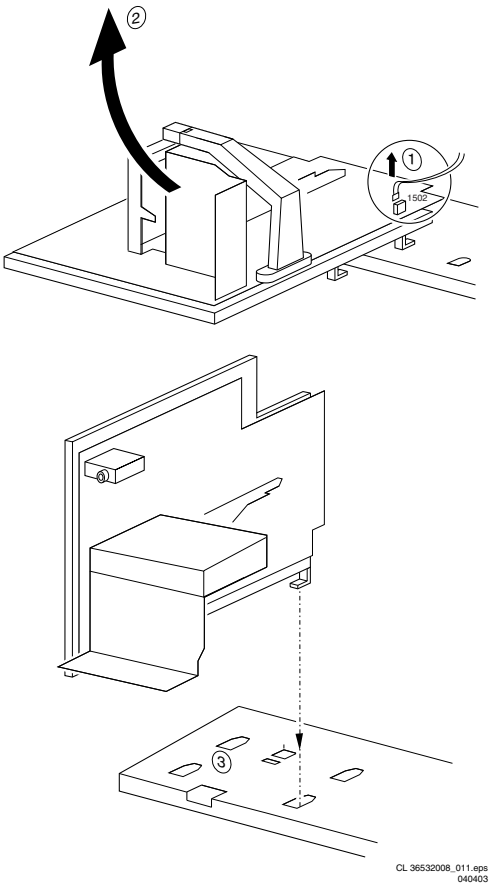


Figure 4-5 Place LSP in Service position.

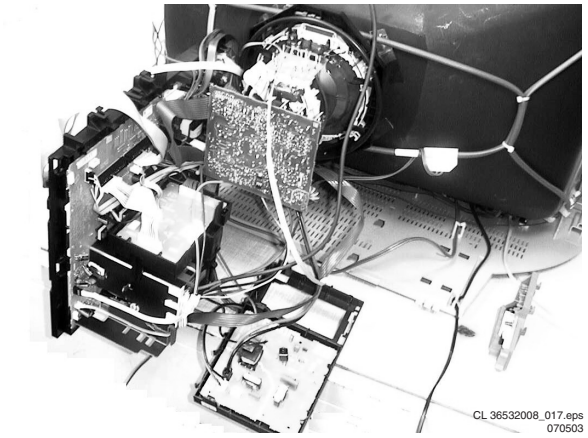


Figure 4-6 Service position LSP.

For better accessibility of the LSP, do the following (see also figure above):

1. Make sure the DAF module is uncoupled from the LSP bracket.
2. Unlock both LSP fixation clamps and pull it backwards to release it out of the mounting holes.
3. To disconnect the degaussing coil from the LSP, remove the cable from connector 1502 [1].
4. Release the wiring from their fixation clamps, in order to get room for repositioning the LSP.
5. Replace the two IDE flat cables by the IDE extended flat cable service set, (48 cm, 40 fold), no: 3104 311 05501.
6. Rotate the LSP 90 degrees clockwise [2], and place it in one of the bottom fixation holes as shown in the figure.
7. Hook the bracket in the first row of fixation holes of the bottom tray, see figure.

4.3 Assy / PWB Removal

Sometimes, it can be necessary to swap a complete assy or Printed Wiring Board (PWB). How that can be done is explained below.

4.3.1 Top Control Panel assy, Display Motor Mechanism, and LCD Display Removal

Remove the Top Panel assy:

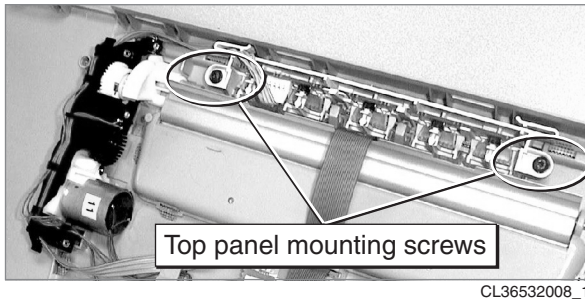


Figure 4-7 Top Panel mounting screws.


1. Disconnect both cables, which connect the Top Cover assy to the chassis and remove this Top Cover assy.
2. Unscrew both Top Panel assy mounting screws.
3. Grip the assy at both sides and lift it.

4.Disconnect the cable and take out the panel assy.

Remove the motor mechanism:


Note: To prevent micro switch damage, it is recommended to remove both micro switch mounting screws before removing the motor mechanism assy. Take extra care during micro

switch mounting later on. Each micro switch has a small protuberance that should fit in a positioning hole.

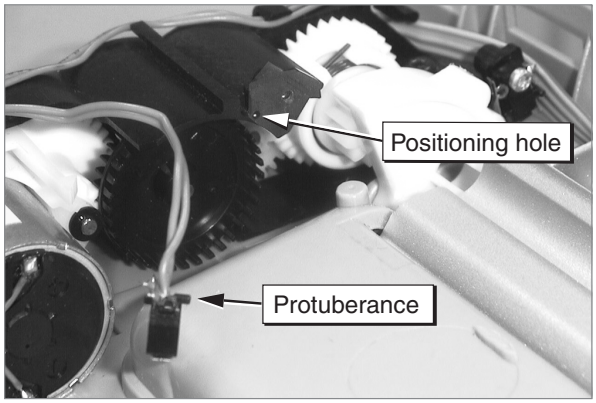

CL36532008_134.eps
130503

Figure 4-8 Micro switch mounting.

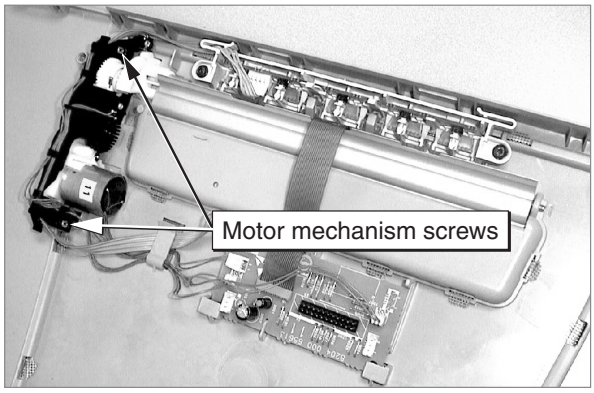


CL36532008_132.eps
120503

Figure 4-9 Motor mechanism screws.

1. Unscrew both motor mechanism mounting screws.
2. Remove the cable connector [1207], motor cable connector [1201] and both micro-switch connector cables [1204 and 1203] and next, remove the mechanism.

Remove the Top LCD panel assy

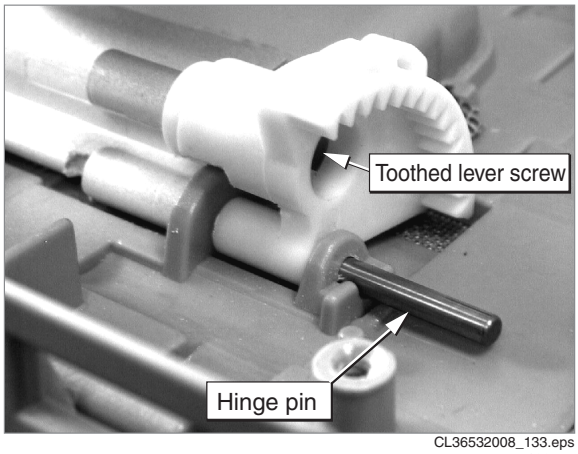


CL36532008_133.eps
120503

Figure 4-10 Toothed lever and hinge pins.

1. Fold out the LCD panel to gain access to the hinge pins.
2. Shift at both sides the hinge pins away to release the LCD panel hinges.
3. Remove the screw that secures the toothed lever to the LCD panel, see figure.
4. Remove the flat cable and next, remove the LCD panel assy.

4.4 Side-I/O Assy / Panel

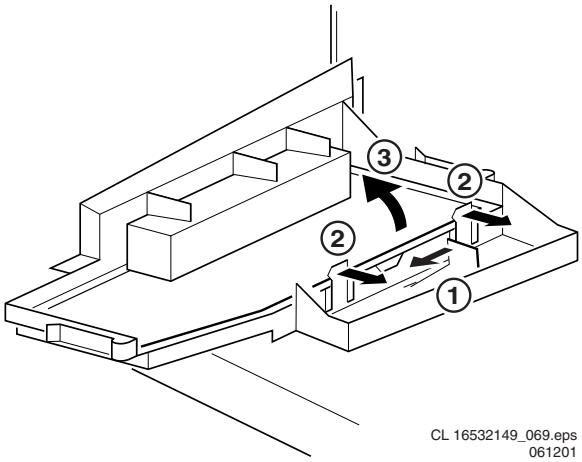


CL 16532149_069.eps
061201

Figure 4-11 Side I/O assy.

1. Release the snap-hook [1] with your finger.
2. At the same time, pull the assy backwards [2].
3. Release the two fixation clamps on the right side of the bracket (the board hinges at the left side).
4. Remove the board from the bracket.

4.4.1 Mains Switch Assy / Panel

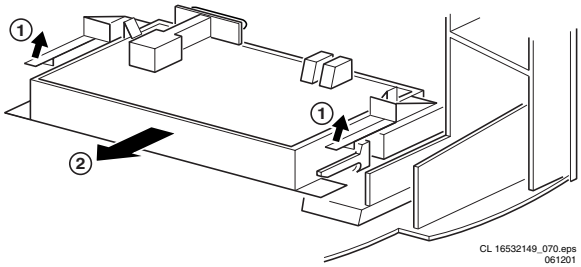

CL 16532149_070.eps
061201

Figure 4-12 Mains Switch Assy.

1. Release the two fixation clamps by pushing them upwards [1]. At the same time, pull the complete assy backwards [2]. **Note:** be aware that the degaussing coil/cable can hamper this.
1. Release the two fixation clamps on the two sides of the bracket (the board hinges at the connector side).
2. Remove the board from the bracket.
3. When the light guide (sitting in the cabinet, in front of the LEDs) is defective, you can replace it by pushing it forwards at the left side (it hinges at the right side, seen from the rear).

4.4.2 DAF Assy / Panel

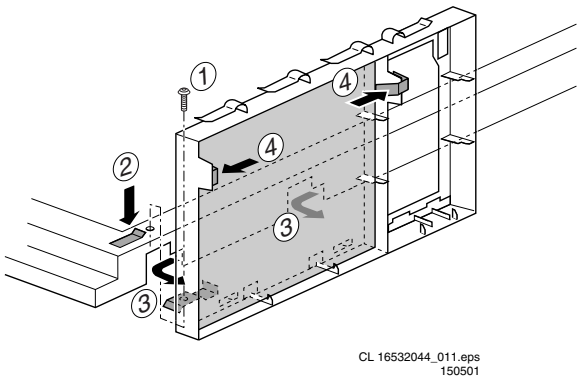


Figure 4-13 DAF-module.

1. Remove the fixation screw [1] (if the screw is present).
2. Disconnect the cables.
3. Push down the fixation clamp [2], and pull the complete bracket at the same time backwards. The module is now unlocked from the LSP bracket and can be removed.
4. To remove the PWB, release the PWB fixation clamps [4], in order to remove the print from the DAF bracket.

4.4.3 Auto-Scavem Assy / Panel

This panel is mounted in a bracket on the left side of the LSP. It is not necessary to remove the bracket. This is rather difficult.

1. Release the two PWB fixation clamps at top as well as at bottom side of the PWB.
2. Remove the cables.
3. Take out the Auto-Scavem PWB.

4.4.4 Small Signal Board (SSB)

1. Unlock the bracket and at the same time pull the bracket out of the locking holes.
2. Place the SSB bracket on the table.
3. To remove the PWB disconnect the cables, unscrew the mounting screw and take the PWB out of its bracket.

4.4.5 Large Signal Panel (LSP)

1. Unlock the LSP bracket as described in section "Service positions".
2. Disconnect the necessary cables.
3. Remove the PWB mounting screws and release the fixation clamps on the left of the LSP-bracket (the board hinges at the right side).
4. Remove the board from the bracket.

4.5 Set Reassembly

To reassemble the whole set, do all processes in reverse order.

Be sure that, before the rear cover is mounted:

- The mains cord is mounted correctly in its guiding brackets.
- All wires/cables are returned in their original positions. This is very important due to the large "hot" area of the set

5. Service Modes, Error Codes, and Fault Finding

Index of this chapter:
1. Test points
2. Service Modes
3. Problems and solving tips (related to CSM)
4. ComPair
5. Error Codes
6. The blinking LED procedure
7. Protections
8. Repair tips
9. Software downloading

5.1 Test Points

The chassis is equipped with test points printed on the circuit board assemblies. They refer to the diagram letters.

Perform measurements under the following conditions:
- Service Default Mode.
- Video: colour bar signal.
- Audio: 3 kHz left, 1 kHz right.

5.2 Service Modes

Service Default Mode (SDM) and Service Alignment Mode (SAM) offer several features for the service technician, while the Customer Service Mode (CSM) is used for communication between a Philips Customer Care Centre (P3C) and a customer.

There is also the option of using ComPair, a hardware interface between a computer (see requirements below) and the TV chassis. It offers the ability of structured troubleshooting, test pattern generation, error code reading, software version readout, and software upgrading.
Minimum requirements: a Pentium processor, Windows 95/ 98, and a CD-ROM drive (see also paragraph “ComPair”).

Note: In this chassis, the bi-coloured LED (red/green) is replaced by two separate LEDs, a blue and a red one. The blue LED is controlled by software (via ON_OFF_LED). The red LED will light in anti-phase to the blue, but with a time delay. This means that if the blue LED is blinking fast, the red LED will stay off, but after the blue LED is “OFF” long enough, the red LED will go “ON”.
So take care: In certain service modes (e.g. blinking LED, stepwise start-up, etc.) you must observe the blue LED and ignore the red LED.

5.2.1 Service Default Mode (SDM)

Purpose
- To create a pre-defined setting, to get the same measurement results as given in this manual.
- To override SW protections.
- To start the blinking LED procedure.

Specifications
- Tuning frequency: 475.25 MHz for PAL/SECAM.
- Colour system: SECAM L for France or PAL B/G for the rest of Europe.
- All picture settings at 50 % (brightness, colour, contrast).
- All sound settings at 50 %, except volume at 25 %.
- All service-unfriendly modes (if present) are disabled, like:
  - (Sleep) timer.
  - Child/parental lock.
  - Blue mute.
  - Automatic volume limiter (AVL).
  - Auto switch-off (when no video signal was received for 10 minutes).
  - Skip/blank of non-favourite pre-sets.
  - Smart modes.
  - Auto store of personal presets.
  - Auto user menu time-out.

How to enter SDM
Use one of the following methods:
- Use the standard RC-transmitter and key in the code **“062596”**, directly followed by the “MENU” button.
  Note: It is possible that, together with the SDM, the main menu will appear. To switch it off, push the “MENU” button again.
- Short for a moment the two solder pads on SSP print, with the indication “SDM”. These solder pads are present at both sides of the print. Activation can be performed in all modes, except when the set has a problem with the main-processor.
  Caution: If the SDM is entered via the pins, all the software-controlled protections are de-activated.
- Use the DST-emulation feature of ComPair.
- Use the “DEFAULT” button on the Dealer Service Tool (RC7150).

After entering this mode, “SDM” will appear in the upper right corner of the screen.

How to navigate
When you press the “MENU” button on the RC transmitter, the set will toggle between the SDM and the normal user menu (with the SDM mode still active in the background).

How to exit SDM
Use one of the following methods:
- Switch the set to STANDBY via the RC-transmitter.
- Press the “EXIT” button on the DST.
- Via a standard customer RC-transmitter: key in “00”-sequence.

5.2.2 Service Alignment Mode (SAM)

Purpose
- To perform (software) alignments.
- To change option settings.
- To easily identify the used software version.
- To view operation hours.
- To display (or clear) the error code buffer.

Specifications
- Operation hours counter.
- Software version.
- Option settings.
- Error buffer reading and erasing.
- Software alignments.

How to enter SAM
Use one of the following methods:
- Via a standard RC transmitter: key in the code **“062596”** directly followed by the **“OSD [i+]”** button. After entering SAM with this method a service warning will appear on the screen, you can continue by pressing any digit key on the RC.
- Short for a moment the two solder pads on SSP print, with the indication SAM. These solder pads are present at both sides of the print. Depending on the software version it is possible that the service warning will appear, you can continue by pressing any digit key on the RC.
- Use the DST-emulation feature of ComPair.
- Press the ALIGN button on the DST while the set is in the normal operation

After entering this mode, “SAM” will appear in the upper right corner of the screen.

Contents of SAM:

- **OPERATION HOURS.** Displays the accumulated total of operation hours (not the standby hours).
- **HARDWARE INFO**
  - **ROM VERSION.** Displays the date of the software and the software version of the ROM. (**example:** EM6EU1-1.0_01234 = AAABBC-X.Y_NNNNN).
    - **AAA**= the chassis name.
    - **BB**= the region: EU= Europe, AP= Asia Pacific PAL/Multi, AN= Asia Pacific NTSC, US= USA, LT= LATAM.
    - **C**= the language cluster number.
    - **X.Y**= the software version, where X is the main version number (different numbers are not compatible with one another) and Y is the sub version number (a higher number is always compatible with a lower number).
    - **NNNNN**= last five digits of 12nc code software.
  - **SW VERSION RDS RADIO**. Displays the software version of the RDS radio (if RDS radio is present).
- **ERRORS** (followed by maximal 10 errors). The most recent error is displayed at the upper left (for an error explanation see paragraph “Error Codes”).
- **DEFECTIVE MODULE.** Here the module that generates the error is displayed. If there are multiple errors in the buffer, which are not all generated by a single module, there is probably another defect. It will then display the message “UNKNOWN” here.
- **RESET ERROR BUFFER.** When you press the “OK” button, the error buffer is reset.
- **ALIGNMENTS.** This will activate the “ALIGNMENTS” sub-menu.
- **DEALER OPTIONS.** Extra features for the dealers.
- **SERVICE OPTIONS.** Extra features for Service.
- **INITIALISE NVM.** When an NVM was corrupted (or replaced) in the former EM3 chassis, the microprocessor replaces the content with default data (to assure that the set can operate). However, all pre-sets and alignment values are gone now, and option numbers are not correct. Therefore, this was a very drastic way. In this chassis, the procedure is implemented in another way: The moment the processor recognises a corrupted NVM, the “initialise NVM” line will be highlighted. Now, you can do two things (dependent of the service instructions at that moment):
  - Save the content of the NVM via ComPair for development analysis, **before** initialising. This will give the Philips Service department an extra possibility for diagnosis (e.g. when Development asks for this).
  - Initialise the NVM (same as in the past, however now it happens conscious).
- **STORE.** All options and alignments are stored when pressing the “OK”-button
- **FUNCTIONAL TEST.** All devices are tested via the “OK” button. Eventual errors are displayed in the error buffer. The error buffer is not erased, the content returns when this test is terminated.
- **DAILY MENUS.** With the “OK” button, you can go to the normal user menu. SAM is still active in the background. With the “MENU” button, you return from the user menu to SAM menu. This feature can be helpful to quickly change some settings in the user menu.
- **SW MAINTENANCE**
  - **UPGRADE.** More info see paragraph Software downloading.
  - **EVENTS.** Not useful for service purposes. In case of specific software problems, the development department can ask for this info.
  - **BDM INFO.** Broadcast Debug Menu info. The purpose of this menu is to debug the broadcast, **not** the TV. The menu gives an overview of what is received on the current preset. Following items are displayed:

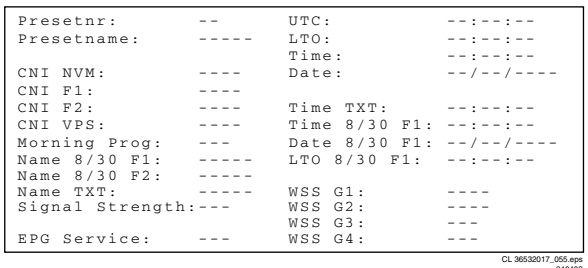


Figure 5-1 Broadcast debug menu overview

Table 5-1 Broadcast debug menu explanation

Item	Source	Description
Presetnr	Set	Presetnumber of the current selected preset.
Presetname	Set	Presetname of the current selected preset.
CNI NVM	Broadcaster	CNI number stored in NVM for the current preset.
CNI F1	Broadcaster	CNI number from transmitted Packet 8/30 Format 1.
CNI F2	Broadcaster	CNI number from transmitted Packet 8/30 Format 2.
CNI VPS	Broadcaster	CNI number from transmitted VPS line.
Morning Prog	Broadcaster	"ARD" or "ZDF" according to dedicated bit in 8/30 Format 1.
Name 8/30 F1	Broadcaster	Name extracted from status message of 8/30 Format 1.
Name 8/30 F2	Broadcaster	Name extracted from status message of 8/30 Format 2.
Name TXT	Broadcaster	Name extracted from TXT header.
Signal Strength	FBX	Noise figure measured for selected preset.
EPG Service	Set	EPG Service stored in NVM for current preset displayed as "TXT", "MCP", "SCP", "OCP".
UTC	Set	UTC (Universal Time Code formerly known as Greenwich Mean Time) used in the set.
LTO	Set	LTO (Local Time Offset) used in the set. Used by EPG for all Nextview displays. (= Time TXT header - Time 8/30 F1)
Time	Set	Current time running in the set. Was extracted at startup, then maintained by software.
Date	Set	Current date running in the set. Was extracted at startup, then maintained by software.
Time TXT	Broadcaster	TXT header time from the selected preset.
Time 8/30 F1	Broadcaster	UTC time from 8/30 Format 1.
Date 8/30 F1	Broadcaster	Date from 8/30 Format 1.
LTO 8/30 F1	Broadcaster	LTO from 8/30 Format 1.
WSS G1	Broadcaster	WSS Group 1 (Aspect Ratio) bits 0 1 2 3
WSS G2	Broadcaster	WSS Group 2 (Enhanced Services) bits 4 5 6 7
WSS G3	Broadcaster	WSS Group 3 (Subtitles) bits 8 9 10
WSS G4	Broadcaster	WSS Group 4 (Reserved) bits 11 12 13

How to navigate

- In SAM, you can select the menu items with the “CURSOR UP/DOWN” key on the RC-transmitter. The selected item will be highlighted. When not all menu items fit on the screen, move the “CURSOR UP/DOWN” key to display the next/previous menu items.
- With the “CURSOR LEFT/RIGHT” keys, it is possible to:
  – (De) activate the selected menu item.
  – Change the value of the selected menu item.
  – Activate the selected submenu.

How to exit SAM

Use one of the following methods:

- Press the “MENU” button on the RC-transmitter, or
- Switch the set to STANDBY via the RC-transmitter, or
- Press the “EXIT” button on the DST.

5.2.3 Customer Service Mode (CSM)

Purpose

When a customer is having problems with his TV-set, he can call his dealer. The service technician can than ask the customer to activate the CSM, in order to identify the status of the set. Now, the service technician can judge the severity of the complaint. In many cases, he can advise the customer how to solve the problem, or he can decide if it is necessary to visit the customer.
The CSM is a read only mode; therefore, modifications in this mode are not possible.

How to enter CSM

Use one of the following methods:

- Press the “MUTE” button on the RC-transmitter **simultaneously** with the “MENU” button on the TV (top control) for at least 4 seconds.
- Key in the code “123654” via the standard RC transmitter.

Note: Activation of the CSM is only possible if there is no (user) menu on the screen!

How to navigate

By means of the “CURSOR-DOWN/UP” knob on the RC-transmitter, you can navigate through the menus.

Contents of CSM

Customer Service Menu 1

- **SOFTWARE VERSION (example: EM6EU1-1.0_01234).** Displays the built-in software version. In case of field problems related to software, software can be upgraded (for more details, see paragraph Software downloading). You will find details of the software versions in the chapter “Software Survey” of the “Product Survey - Colour Television” publication. This publication is generated four times a year.
- **FEATURE BOX.** The 12NC-number of the built-in Feature Box software
- **SET TYPE.** This information is very helpful for a helpdesk/ workshop as reference for further diagnosis. In this way, it is not necessary for the customer to look at the rear of the TV-set.
- **CODE 1.** Gives the latest 5 errors of the error buffer. As soon as the built-in diagnose software has detected an error the buffer is adapted. The last occurred error is displayed on the leftmost position. Each error code is displayed as a 3-digit number. When less than 10 errors occur, the rest of the buffer is empty (000). See also paragraph Error Codes for a description.
- **CODE 2.** Gives the first 5 errors of the error buffer. See also paragraph Error Codes for a description.
- VOLUME. Gives the last status of the volume as set by the customer. The value can vary from 0 (volume is minimum) to 100 (volume is maximum). Volume values can be changed via the volume key on the RC-transmitter.
- **BRIGHTNESS.** Gives the last status of the brightness as set by the customer. The value can vary from 0 (brightness is minimum) to 100 (brightness is maximum). Brightness values can be changed via the “CURSOR LEFT” and “CURSOR RIGHT” keys on the RC-transmitter after pressing the “MENU” button and selecting “PICTURE” and “BRIGHTNESS”.
- **CONTRAST.** Gives the last status of the contrast as set by the customer. The value can vary from 0 (contrast is minimum) to 100 (contrast is maximum). Contrast values can be changed via “CURSOR LEFT” and “CURSOR RIGHT” keys on the RC-transmitter after pressing the “MENU” button and selecting “PICTURE” and “CONTRAST”.
- **COLOUR.** Gives the last status of the colour saturation, as set by the customer. The value can vary from 0 (colour is minimum) to 100 (colour is maximum). Colour values can be changed via “CURSOR LEFT” and “CURSOR RIGHT” keys on the RC-transmitter after pressing the “MENU” button and selecting “PICTURE” and “COLOUR”.
- **HUE.** Only relevant for NTSC-signals (e.g. some NTSC-DVD-discs).

Customer Service Menu 2

- **SHARPNESS.** Gives the sharpness value. The value can vary from 0 (sharpness is minimum) to 7 (sharpness is maximum). In case of bad antenna signals, a too high value of the sharpness can result in a noisy picture. Sharpness values can be changed via the “CURSOR LEFT” and “CURSOR RIGHT” keys on the RC-transmitter after pressing the “MENU” button and selecting “PICTURE” and “SHARPNESS”.
- **HEADPHONE VOLUME.** Gives the last status of the headphone volume, as set by the customer. The value can vary from 0 (volume is minimum) to 100 (volume is maximum). Headphone volume values can be changed via the “CURSOR LEFT” and “CURSOR RIGHT” keys on the RC-transmitter after pressing the “MENU” button and selecting “SOUND” and “HEADPHONE VOLUME”.
- **DOLBY.** Indicates whether the received transmitter transmits Dolby sound (“ON”) or not (“OFF”). Attention: The presence of Dolby can only be tested by the software on the Dolby Signaling bit. If a Dolby transmission is received without a Dolby Signaling bit, this indicator will show “OFF” even though a Dolby transmission is received.
- **SURROUND MODE.** Indicates the by the customer selected surround mode (or automatically chosen mode). In case the set is a Non-Dolby set, there will be displayed “0”. If it is a Dolby-set then is displayed: “STEREO”, “3 STEREO”, “HALL”, “3DSURROUND”, “DOLBY PRO LOGIC” or “DOLBY DIGITAL”. These settings can be influenced after pressing the “MENU” button and selecting “SOUND” and SURROUND MODE”. It can also have been selected automatically by signaling bits (internal software).
- **TUNER FREQUENCY.** Indicates the frequency the selected transmitter is tuned to. The tuner frequency can be changed via the “CURSOR LEFT” and “CURSOR RIGHT” keys for fine tune after opening the installation menu and selecting “INSTALL” and “MANUAL INSTALL”.
- **DIGITAL OPTION.** Gives the selected digital mode, “100 HZ”, “DIGITAL SCAN”, “NATURAL MOTION”, “DOUBLE LINES”, or “PIXEL PLUS”. Change via “MENU”, “PICTURE”, “DIGITAL OPTIONS”.
- **CENTRE TRIM.** Indicates the difference between main volume and volume of centre speaker. Change via: “MENU”, “SETUP”, “SPEAKERS”, and “CENTRE VOLUME” (not available when “Surround Mode” is set to “STEREO” or “HALL”). The value can vary from “-10” to “+10”
- **TV SYSTEM.** Gives information about the video system of the selected transmitter.
  – BG: PAL BG signal received.
  – DK: PAL DK signal received.

– I: PAL I signal received.
– L/La: SECAM L/La signals received.
– M: NTSC M signal received with video carrier on 38.9 MHz.

Customer Service Menu 3

- **BALANCE.** Indicates the balance settings, between "-50" and "+50". Change via "MENU", "SOUND", and "BALANCE". Not applicable for Dolby Pro Logic sets.
- **CENTRE MODE.** Indicates if centre mode is set "ON" or "OFF". When centre mode is on, all TV speakers are used as one centre speaker. Change Centre mode via "MENU", "SETUP", "SPEAKERS", and "CENTRE MODE".
- **DNR.** Gives the selected DNR setting (Dynamic Noise Reduction), "OFF", "MINIMUM", "MEDIUM", or "MAXIMUM". Change via "MENU", "PICTURE", "DNR"
- **NOISE FIGURE.** Gives the noise ratio for the selected transmitter. This value can vary from 0 (good signal) to 127 (average signal) and to 255 (bad signal). For some software versions, the noise figure will only be valid when "Active Control" is set to "medium" or "maximum".
- **SOURCE.** Indicates which source is used and the video/audio signal quality of the selected source. (**Example:** Tuner, Video/NICAM) Source: "TUNER", "EXT1", "EXT2", "EXT3", "EXT4", "SIDE", "AV1", "AV2", "AV3" or "AV4". Video signal quality: "VIDEO", "S-VIDEO", "RGB 1FH", "YPBPR 1FH 480P", "YPBPR 1FH 576P", "YPBPR 1FH 1080I", "YPBPR 2FH 480P", "YPBPR 2FH 576P", "YPBPR 2FH 1080I", "RGB 2FH 480P", "RGB 2FH 576P" or "RGB 2FH 1080I". Audio signal quality: "STEREO", "SPDIF 1", "SPDIF 2" or "SPDIF".
- **AUDIO SYSTEM.** Gives information about the audio system of the selected transmitter: "ANALOGUE MONO", "ANALOGUE STEREO", "PCM 2/0", "DD 1/0", "DD 2/0 LtRt", "DD 2/0 L0R0", "DD 2/1", "DD 2/2", "DD 3/0", "DD 3/1", "DD 3/2", "DD 1+1", "MPEG 1/0", "MPEG 2/0", "MPEG 2/0 LtRt", "MPEG 2/1", "MPEG 2/2", "MPEG 3/0", "MPEG 3/1", "MPEG 3/2", "MPEG 1+1" or "MPEG 2+2".
- **TUNED BIT.** Gives information about the tuning method of the stored pre-set. If a channel is found via "automatic installation", you will see the value "Yes". When you change this (automatically found) frequency via "fine tune" adjustment (installation menu - manual installation), the displayed value will change to "No". Therefore, when you see the value "No" in this line, it is an indication that the received channel is a non-standard signal (e.g. of a VCR).
- **SURROUND SPEAKERS.** Indicates if the surround speakers are present, "YES" or "NO". Change via "MENU", "SETUP", "SPEAKERS", and "SURROUND SPEAKERS".
- **ON TIMER.** Indicates if the "On Timer" is set "ON" or "OFF" and if the timer is "ON" also displays start time, start day and program number. Change via "MENU", "TV", "FEATURES", and "ON TIMER".
- **PRESET LOCK.** Indicates if the selected preset has a child lock: "LOCKED" or "UNLOCKED". Change via "MENU", "TV", "FEATURES", "CHILD LOCK", and "CUSTOM LOCK".

Customer Service Menu 4

- **CHILD LOCK.** Indicates the last status of the general child lock: "UNLOCK", "LOCK", or "CUSTOM LOCK". Change via "MENU", "TV", "FEATURES", "CHILD LOCK", and "LOCK".
- **AGE LOCK.** Indicates the last status of the EPG rating for child lock: "OFF", "4 YEARS", "6 YEARS", "8 YEARS", "10 YEARS", "12 YEARS", "14 YEARS" or "16 YEARS". This is only displayed if child lock is set to "CUSTOM LOCK"
- **LOCK AFTER.** Indicates at what time the child lock is set: "OFF" or e.g. "18:45" (lock time). This is only displayed if child lock is set to "CUSTOM LOCK"
- **CATEGORY LOCK.** Indicates the last status of the EPG theme childlock: "MOVIES", "NEWS", "SHOWS", "SPORTS", "CHILDREN", "MUSIC", "CULTURE", or "SERIES". This is only displayed if child lock is set to "CUSTOM LOCK". It is possible that more than one value is shown.
- **PROGRAM CATEGORY.** Indicates the theme of the selected transmitter: "MOVIES", "NEWS", "SHOWS", "SPORTS", "CHILDREN", "MUSIC", "CULTURE", or "SERIES".
- **TV RATINGS LOCK.** Only applicable for US.
- **MOVIE RATINGS LOCK.** Only applicable for US.
- **V-CHIP TV STATUS.** Only applicable for US.

Customer Service Menu 5

- **V-CHIP MOVIE STATUS.** Only applicable for US.
- **OPTIONS 1.** Gives the option codes of option group 1 as set in SAM (Service Alignment Mode).
- **OPTIONS 2.** Gives the option codes of option group 2 as set in SAM (Service Alignment Mode).
- AVL. Indicates the last status of AVL (Automatic Volume Level): "ON" or "OFF". Change via "MENU", "TV", "SOUND", "AVL"
- **DELTA VOLUME.** Indicates the last status of the delta volume for the selected preset as set by the customer: from "-12" to "+12". Change via "MENU", "TV", "SOUND", "DELTA VOLUME".
- **SURROUND TRIM L.** Indicates the last status of "SURROUND LEFT VOLUME" as set by the customer: from "-10" to "+10". Only available in Digital Dolby sets. Change via "MENU", "SETUP", "SPEAKERS", "SURROUND L VOLUME.
- **SURROUND TRIM R.** Indicates the last status of "Surround Right Volume" as set by the customer: from "-10" to "+10". Only available in Digital Dolby sets. Change via "MENU", "SETUP", "SPEAKERS", "SURROUND R VOLUME.
- **FRONT SPKR DIST.** Indicates the last status of the distance to the front speakers as set by the customer: "1m", "2m", or "3m",.... Change via "MENU", "SETUP", "SPEAKERS", "TO FRONT".
- **SURR. SPKR DIST.** Indicates the last status of the distance to the surround speakers as set by the customer: "1m", "2m", or "3m",.... Change via "MENU", "SETUP", "SPEAKERS", "TO SURROUND".

How to exit CSM

Use one of the following methods:

- After you press a key on the RC-transmitter (with exception of the "CHANNEL", "VOLUME" and digit (0-9) keys), or
- After you switch the TV-set "OFF" with the mains switch.

5.3 Problems and Solving Tips (related to CSM)

Note: Below described problems are all related to the TV settings. The procedures to change the value (or status) of the different settings are described above. New value(s) are automatically stored.

5.3.1 Picture Problems

Snowy/noisy picture

1. Check line 24 "Noise Figure". In case the value is 127 or higher, and the value is also high on other programs, check the aerial cable/aerial system. For some software versions, the noise figure will only be valid when "Active Control" is set to "medium" or "maximum".
2. Check lines 11 "Sharpness" and 24 "Noise Figure". In case the value of line 11 is 3 or 4 and the value of line 24 is high (127 or higher), decrease the "Sharpness" value.

Picture too dark

1. Press "MENU", "TV", "PICTURE", "SMART PICTURE". In case the picture improves, increase the "Brightness" or the "Contrast" value. The new value(s) are automatically stored (in "personal" pre-set) for all TV channels.

2. Check line 7 “Brightness” and 8 “Contrast”. If the value of line 7 is low (< 10) or the value of line 8 is low (< 10), increase the “Brightness” or the “Contrast” value.

Picture too bright
1. Press “MENU”, “TV”, “PICTURE”, “SMART PICTURE”. In case the picture improves, decrease the “Brightness” or the “Contrast” value. The new value(s) are automatically stored (in “personal” pre-set) for all TV channels.
2. Check lines 7 “Brightness” and 8 “Contrast”. If the value of line 7 is high (> 40) or the value of line 8 is high (> 50). Decrease the “Brightness” value or increase the “Contrast” value.

White line around picture elements and text
1. Press “MENU”, “TV”, “PICTURE”, “SMART PICTURE”. In case the picture improves, decrease the “Sharpness” value. The new value is automatically stored (in “personal” pre-set) for all TV channels.
2. Check line 11 “Sharpness”. Decrease the “Sharpness” value. The new value is automatically stored for all TV channels.

No picture
Check line 27 “Tuned bit”. In case the value is “No”, install the required program again. Open the installation menu and perform manual installation.

Blue picture
No proper signal is received. Check the aerial cable/aerial system.

Blue picture and/or unstable picture
A scrambled or decoded signal is received.

Black and white picture
Check line 9 “Colour”. In case the value is low (< 10), increase the “Colour” value. The new value is automatically stored for all TV channels.

No colours/colour lines around picture elements or colours not correct or unstable picture
1. Check line 20 “TV System”. If a “strange” system pops up, something has gone wrong during installation. Re-install the channel.
2. In case line 20 is “L”, the installed system for this pre-set is “France”, while “West Europe” is required. Install the required program again: open the installation menu and perform manual installation. Select system “West Europe”.

Menu text not sharp enough
1. Press “MENU”, “TV”, “PICTURE”, “SMART PICTURE”. In case picture improves, decrease the contrast value. The new value(s) are automatically stored for all TV channels.
2. Check line 8 “Contrast”. The value of line 8 is high (> 50). Decrease the contrast value.

5.3.2 Sound Problems

No sound from left and right speaker
Check line 6 “Volume”. The value is low. Increase the value of “Volume”. The new value(s) are automatically stored (in “personal” pre-set) for all TV channels.

Sound too loud for left and right speaker
Check line 6 “Volume”. The value is high. Decrease the value of “Volume”. The new value(s) are automatically stored (in “personal” pre-set) for all TV channels.

5.4 ComPair

5.4.1 Introduction

ComPair (Computer Aided Repair) is a service tool for Philips Consumer Electronics products. ComPair is a further development on the European DST (service remote control), which allows faster and more accurate diagnostics. ComPair has three big advantages:
- ComPair helps you to quickly get an understanding on how to repair the chassis in a short time by guiding you systematically through the repair procedures.
- ComPair allows very detailed diagnostics (on I^2C level) and is therefore capable of accurately indicating problem areas. You do not have to know anything about I^2C commands yourself because ComPair takes care of this.
- ComPair speeds up the repair time since it can automatically communicate with the chassis (when the microprocessor is working) and all repair information is directly available. When ComPair is installed together with the SearchMan electronic manual of the defective chassis, schematics and PWBs are only a mouse click away.

5.4.2 Specifications

ComPair consists of a Windows based faultfinding program and an interface box between PC and the (defective) product. The ComPair interface box is connected to the PC via a serial or RS232 cable.
For this chassis, the ComPair interface box and the TV communicate via a bi-directional service cable via the service connector.

The ComPair faultfinding program is able to determine the problem of the defective television. ComPair can gather diagnostic information in two ways:
- **Automatic** (by communication with the television): ComPair can automatically read out the contents of the entire error buffer. Diagnosis is done on I^2C level. ComPair can access the I^2C bus of the television. ComPair can send and receive I^2C commands to the micro controller of the television. In this way, it is possible for ComPair to communicate (read and write) to devices on the I^2C busses of the TV-set.
- **Manually** (by asking questions to you): Automatic diagnosis is only possible if the micro controller of the television is working correctly and only to a certain extends. When this is not the case, ComPair will guide you through the faultfinding tree by asking you questions (e.g. *Does the screen give a picture? Click on the correct answer: YES / NO*) and showing you examples (e.g. *Measure test-point I7 and click on the correct oscillogram you see on the oscilloscope*). You can answer by clicking on a link (e.g. text or a waveform picture) that will bring you to the next step in the faultfinding process.

By a combination of automatic diagnostics and an interactive question / answer procedure, ComPair will enable you to find most problems in a fast and effective way.

Beside fault finding, ComPair provides some **additional features** like:
- Up- or downloading of pre-sets.
- Managing of pre-set lists.
- Emulation of the Dealer Service Tool (DST).
- If both ComPair and SearchMan (Electronic Service Manual) are installed, all the schematics and the PWBs of the set are available by clicking on the appropriate hyperlink.
  Example: *Measure the DC-voltage on capacitor C2568 (Schematic/Panel) at the Mono-carrier.*
  – Click on the “Panel” hyperlink to automatically show the PWB with a highlighted capacitor C2568.
  – Click on the “Schematic” hyperlink to automatically show the position of the highlighted capacitor.

5.4.3 Stepwise Start-up

Under normal circumstances, a fault in the power supply, or an error during start-up, will switch the television to protection mode. ComPair can take over the initialisation of the television. In this way, it is possible to distinguish which part of the start-up routine (hence which circuitry) is causing the problem.
In sets with the Muppet IC present (dual screen functionality), step 2 is skipped.
Take notice that the transition between two steps can take some time, so give the set some time to reach a stable state. During the transition time the LED can blink strangely.

Stepwise start- up explanation
This is realised via ComPair and is very helpful when a **protection** is activated (see also chapter “Protections”).

Table 5-2 Stepwise start-up table

State	Description mode	Display LED	Enabled protection
0	Low power standby: 5V2/3V3 present, uP in standby-mode	On	None
1	High power Standby: TV-set in standby-mode	Wait 1s, flash 1 x	None
2	Main Power On: HOP in standby, 5V/8V present, I2C protections on, SSB is powered by standby-supply (5V/8V). Degaussing (12 s) has been activated, MSP is reset.	Wait 1s, flash 2 x	4 & 5
3	Initialized (Semi standby): most IC's are initialized, HOP still in standby	Wait 1s, flash 3 x	Plus 1, 6 & 18
4	HOP: HOP fully powered and working, EHT is present, rest of IC's initialized, black current stabilisation is off, picture is still blanked	Wait 1s, flash 4 x	Plus 2 & 16
5	On: TV-set operates, black current stabilisation is on, picture is unblanked.	Wait 1s, flash 5 x	

Note (*):
- When the set is in stepwise mode and, due to stepping-up, a protection is activated, the set will really go into protection (blinking LED). The set will not leave the stepwise-mode however. If state X is the state where the set went to protection, stepwise start-up will return to state X-1. At state (X-1) diagnostic measurements can be performed. Also, in the short time the set is in state X but not yet in protection, you can also do some measurements.
- Due to the initialisation process of the Muppet IC, step 2 is not available in sets with Muppet. In this case, step 2 and 3 become one step

5.4.4 How To Connect

1. First, install the ComPair Browser software (see the Quick Reference Card for installation instructions).
2. Connect the RS232 interface cable between a free serial (COM) port of your PC and the PC connector (marked with “PC”) of the ComPair interface.
3. Connect the mains adapter to the supply connector (marked with “POWER 9V DC”) of the ComPair interface.
4. Switch the ComPair interface “OFF”.
5. Switch the television set “OFF” with the mains switch.
6. Connect the ComPair interface cable between the connector on the rear side of the ComPair interface (marked with “I^2C”) and the ComPair connector at the rear side of the TV.
7. Plug the mains adapter in a mains outlet, and switch the interface “ON”. The green and red LEDs light up together. The red LED extinguishes after approx. 1 second while the green LED remains lit.
8. Start the ComPair program and read the “Introduction” chapter.

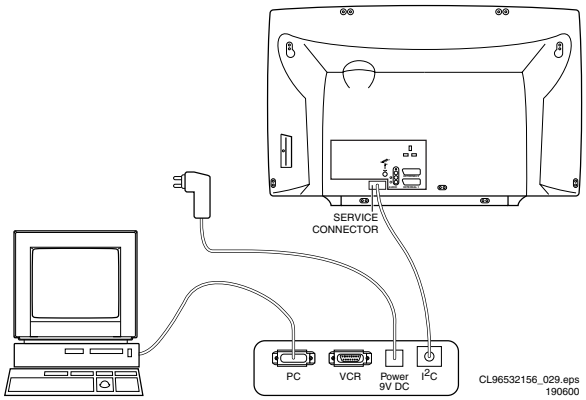


Figure 5-2 ComPair Interface connection

5.4.5 How To Order

ComPair order codes (EU/AP):
- Starter kit ComPair32/SearchMan32 software and ComPair interface (excl. transformer): 3122 785 90450.
- ComPair interface (excluding transformer): 4822 727 21631.
- Starter kit ComPair32 software (registration version): 3122 785 60040.
- Starter kit SearchMan32 software: 3122 785 60050.
- ComPair32 CD (update): 3122 785 60110.
- SearchMan32 CD (update): 3122 785 60120.
- ComPair interface cable: 3122 785 90004.
- ComPair firmware upgrade IC: 3122 785 90510.
- Transformer Europe: 4822 727 21632.
- Transformer UK: 4822 727 21633.

5.5 Error Codes

5.5.1 Introduction

The error code buffer contains all detected errors since the last time the buffer was erased. The buffer is written from left to right, new errors are logged at the left side, and all other errors shift one position to the right.
When an error has occurred, the error is added to the list of errors, provided the list is not full or the error is a protection error.
When an error occurs and the error buffer is full, then the new error is not added, and the error buffer stays intact (history is maintained), except when the error is a protection error.
To prevent that an occasional error stays in the list forever, the error is removed from the list after 50+ operation hours.
When multiple errors occur (errors occurred within a short time span), there is a high probability that there is some relation between them.

5.5.2 How to read the Error Buffer

Use one of the following methods:
- On screen via the SAM (only if you have a picture). Examples:
  - **0 0 0 0 0**: No errors detected
  - **6 0 0 0 0**: Error code 6 is the last and only detected error
  - **9 6 0 0 0**: Error code 6 was first detected and error code 9 is the last detected error

- Via the blinking LED procedure (when you have no picture). See next paragraph.
- Via ComPair.

5.5.3 How to clear the Error Buffer

Use one of the following methods:
- By activation of the “RESET ERROR BUFFER” command in the SAM menu.
- With a normal RC, key in sequence “MUTE” followed by **“062599”** and “OK”.
- When you transmit the commands “DIAGNOSE” - “99” - “OK” with ComPair (or with a DST).
- If the content of the error buffer has not changed for 50+ hours, it resets automatically.

5.5.4 Error Codes

In case of non-intermittent faults, clear the error buffer before you begin the repair. This to ensure that old error codes are no longer present. Before clearing the buffer, write down the content, as this history can give you significant information. If possible, check the entire contents of the error buffer. In some situations, an error code is only the result of another error code and not the actual cause (e.g., a fault in the protection detection circuitry can also lead to a protection).
There are various errors:
- I^2C device errors.
- I^2C bus errors.
- Protection errors.
- Errors not related to an I^2C device, but of importance:
  - **BLACK CURRENT LOOP (ERROR 28):** detection of a continuous fail of the black current stabilisation loop of the HOP.
  - **FALCONIC (ERROR 26):** at start-up, after initialisation of the PICNIC, the presence of the FALCONIC can be checked.
  - **EAGLE (ERROR 27):** at start-up, after initialisation of the PICNIC, the presence of the Eagle can be checked.

Table 5-3 Error Table

Error	Device	Description	Def. item	Defect. module indication	Diag
1	M24C32	NVM, spontaneous blinking error 1	7011	Control	B5a
2	Hfail Protection	Horizontal Flyback protection	/	Horizontal Flyback	/
3	SAA4978	PICNIC	7713	Feature Box	B3a
4	Supply 5V	5V protection	/	+5V Supply	B5a
5	Supply 8V	8V protection	/	+8V Supply	B5a
6	Slow I2C bus blocked	Spontaneous blinking error 6	/	Slow I2C Blocked	/
7	TDA9330	HOP High-end Output Processor	7301	Video Controller	B4
8	TDA932x	HIP High-end Input Processor	7323	Chroma IF IO	B2
13	UV1318/...	Tuner protection	1T01	Tuner	B13
14	MSPxxxx	ITT sound processor	7A02	Audio module	B6a
16	FBX	Feature Box Protection	/	+3V (Fbx) Supply	B3
18	Fast I2C bus blocked	Spontaneous blinking error 18	/	Fast I2C Blocked	/
19	TDA8444	Auto Scavem DAC	7500	Auto Scavem	SC1
21	M62320P	PIP I/O Expander	7P56	Video Dual Screen	B15b
23	UV1316/...	PIP Tuner	1T02	Video Dual Screen	B13
24	SAB9081	PIP Muppet	7PA6	Video Dual Screen	B15c
26	SAA4992	Falconic	7718	+3V (Fbx) Supply	B3b
27	T8F24EF	Eagle	7724	+3V (Fbx) Supply	B3c
28	Black current loop	Black current loop	/		/
29	PCF8574T	DVD I2C I/O Expander	7306	DVD Engine	T3
32	M29W400BT	Flash Ram (EPG)	7012	EPG Memory	B5a
34	TDA932x	Second HIP	7P09	Video Dual Screen	B15a
63	MAS3529E	Dolby Digital Decoder	7A30	Digital Audio Module	B6b
64	SAA6588T	TDL RDS	7100	TDL (Radio)	T2
81	DPL4519	Dolby Prologic Decoder	7A63	Digital Audio Module	B6c
82	TDA7309D	Headphone processor	7A06		B6a
83	TEA6422 (1)	Source select matrix audio	7I17	Audio Source Select	B14d
84	TEA6422 (2)	Source select matrix audio	7I18	Audio Source Select	B14d
85	TEA6415	Source select matrix video	7I24	Video Source Select	B14a
86	P89C664	TDL µP Radio	7002	TDL (Radio)	T1
87	/	TDL 12V audio off	/	TDL (Radio)	T1
88	TEA5762	TDL FM Radio	7101	TDL (Radio)	radio
89	M24C32	TDL NVM Radio	7011	TDL (Radio)	T1
91	See extra info	TDL LCD	/	TDL (Radio)	T
92	See extra info	TDL Motor	/	TDL (Radio)	T
93	See extra info	DVD 3V3	/	DVD Engine	T3
96	PCF8574	HDD Interface	7022	Harddisk Module	TS
97	See extra info	HDD Engine	/	Harddisk Module	/
98	See extra info	HDD Fan	fan	Harddisk Module	TS

Note:
- Error codes 1, 6, or 18 are protection codes and in this case, supplies of some circuits will be switched “OFF”. Also, in protection, the LED will blink the number of times equivalent to the most recent error code.
- Some errors are only for TDL-sets (EM6E AB) or sets with hard disk.

Extra info for certain errors:
- **Error 91:** If the TDL microprocessor gets an error from the LCD display, this will be reported to the OTC, and will log error 91 (only for TDL sets).
- Error 92: If one of the micro-switches of the LCD display is not closed within a timeout, the TDL microprocessor will report an error to the OTC, and error 92 will be logged (only for TDL sets).
- Error 93: If the 3V3 is not present in DVD mode, or is present when DVD is in stand-by, error 93 will be logged. The presence or absence of the supply voltage is detected via the I/O expander (schematic T3) (only for TDL sets).
- Error 97: There are 2 inputs to generate an error: The IO expander that checks the supply voltages and the HDD processor witch controls the hard disk itself. Both generate the same error: HDD error (only for sets with HDD).
- Error 98: via a control line of the HDD interface IC (7022) is sensed if the HDD fan is turning. In case the fan is not turning, the HDD will be switched off and error 98 will be logged (only for sets with HDD).

5.6 The Blinking LED Procedure

5.6.1 Introduction

Via this procedure, you can make the contents of the error buffer visible via the front LED. This is especially useful for fault finding, when there is no picture.

When the SDM is entered, the front LED will show (blink) the contents of the error-buffer. Error-codes > 10 are shown as follows:
– A long blink of 750 ms (which is an indication of the decimal digit),
– A pause of 1.5 s,
– “n” short blinks (where “n” = 1 - 9),
– When all the error-codes are displayed, the sequence finishes with a LED blink of 3 s,
– The sequence starts again.

Example: Error 12 9 6 0 0.
After activation of the SDM, the front LED will show:
– 1 long blink of 750 ms (which is an indication of the decimal digit) followed by a pause of 1.5 s,
– 2 short blinks followed by a pause of 3 s,
– 9 short blinks followed by a pause of 3 s,
– 6 short blinks followed by a pause of 3 s,
– 1 long blink of 3 s to finish the sequence,
– The sequence starts again.

Note: If errors 1, 6 or 18 occur, the LED always gives the last occurred error even if the set is NOT in service mode.

5.6.2 How to Enter

Use one of the following methods:
- Enter the SDM (only via soldering pads marked “SDM” on SSP). The blinking front LED will show the entire contents of the error buffer (this works in “normal operation” mode and in “protection” mode).
- Transmit the commands “MUTE” - **“062500”** - “OK” with a normal RC. The complete error buffer is shown. Take notice that it takes some seconds before the blinking LED starts.
- Transmit the commands “MUTE” - **“06250x”** - “OK” with a normal RC (where “x” is a number between 1 and 5). When x= 1 the last detected error is shown, x= 2 the second last error, etc.... Take notice that it takes some seconds before the blinking LED starts.
- “DIAGNOSE X” with the DST (where “x” is a number between 1 and 5). When x= 1 the last detected error is shown, x= 2 the second last error, etc.... When x = 0 all errors are shown.

5.7 Protections

5.7.1 Introduction

This chassis has only one microprocessor (OTC), which remains active during Standby. This because power of the microprocessor and the attached memory chip set is coming from the 3V3 supply, which is derived from the 5V Standby-circuitry. Therefore, in both Power-on as in Standby mode, the microprocessor is connected to this power supply.

If a fault situation is detected, an error code will be generated and if necessary, the set is put in protection mode. The protection mode is indicated by the blinking of the front LED at a frequency of 3 Hz (or by a coded blinking in special cases). In some error cases however, the microprocessor does not put the set in the protection mode (this is the case with the - hardware - loudspeaker protection of the audio amplifier).

The content of the error buffer can be read via the service menu (SAM), the blinking LED procedure or via DST/ComPair.

To get a quick diagnosis, this chassis has three service-modes implemented:
- The **Customer Service Mode** (CSM).
- The **Service Default Mode** (SDM). Start-up of the set in a predefined way.
- The **Service Alignment Mode** (SAM). In this mode, items of the set can be adjusted via a menu.

You can enter both SDM and SAM modes via the “service pads” on the SSP, via an RC-transmitter (DST or standard RC), or via ComPair. It is not possible to enter the SAM in “standby”; the TV has to be in “normal operation” mode.

The “Protection Diagram” shows the structure of the protection system. See diagram below.

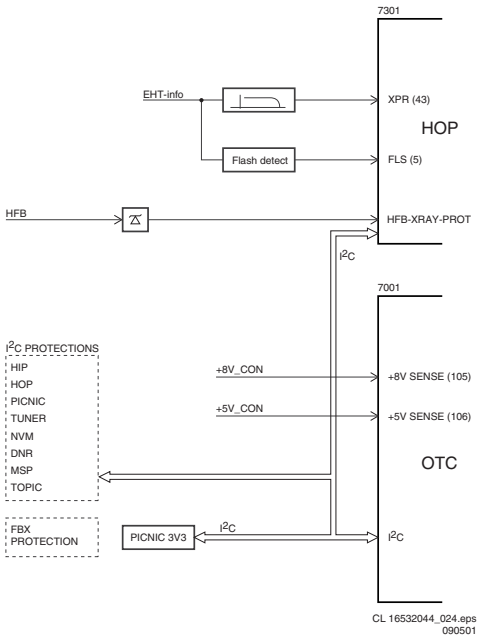


Figure 5-3 Protection diagram

There are several types of protections:
- I²C related protections.
- OTC related protections (via polling on I/O pins or via algorithms).
- HOP related protections (mainly for deflection items).
- Hardware errors that are not sensed by the OTC (e.g. vertical flyback protection, bridge coil protection, E/W protection, arcing protection).

All protections are explained below.

5.7.2 I²C Related Protections

In normal operation, some registers of the I²C controlled ICs are refreshed every 200 ms. During this sequence, the I²C busses and the I²C ICs are checked.
An I²C protection will take place if the SDA and SCL lines are short-circuited to ground, or to each other. An I²C error will also occur, if the power supply of the IC is missing (e.g. FBX_PROT (error 16)).

5.7.3 OTC Related Protections

If a protection is detected at an OTC input, the OTC will start to scan all protection inputs every 200 ms for 5 times. If the protection on one of the inputs is still active after 1 s, the microprocessor will put the set in the protection mode. Before the scanning is started, a so-called "ESD refresh" is carried out. This is done, because the interrupt on one of the inputs is possibly caused either by a flash or by ESD. As a flash or ESD can influence IC settings, the HIP, MSP, 3D Comb (US only) and wireless module are initialised again, to ensure the normal picture and sound conditions of the set.

8 V and 5 V protections: The microprocessor senses the presence of the 8 V and 5 V (via the "+5V_CON" and "+8V_CON" lines). If one (or both) of these voltages is (are) not present, an error code is stored in the error buffer of the NVM, and the set is put in the protection mode.

5.7.4 HOP Related Protections

The OTC reads every 200 ms, the status register of the HOP (via the I²C bus). If a protection signal is detected on one of the inputs of the HOP, the relevant error bit in the HOP register is set to "high". If this error bit is still "high" after 1 s, the OTC will store the error code in the error buffer of the NVM and, depending on the relevancy of the error bit, the set will either go into the protection mode or not.

The following protections are implemented:
- **HFB (Horizontal Flyback):** If the horizontal flyback is not present, this is detected via the HOP (HFB_X-RAY_PROT). One status bit is set to "high". The error code is stored in the error buffer and the set will go into the protection mode.
- **XPR (X-ray protection):** If the HFB pulses are too low (level detection), the HOP will detect this via the XPR-bit. The error will be logged in the error buffer and the set will go into protection mode.

Note: Both errors will be logged as HFB-failure.

5.7.5 Hardware Related Protections

Due to the architecture ("hot" deflection), some protections cannot be sensed by the microprocessor. Three of these protections will lead to a protection on set level (Standby mode and blinking LED), while another will only lead to a circuit protection.

TV-set Protection
The following fault conditions will lead to a "complete" set protection:
- **BRIDGECOIL protection:** This is sensed via the "EW" signal going to the base of TS7652 (via R3495 and D6499). In a normal situation, the voltage on C2498 (diagram A4) is high and TS7652 is conducting. When bridge coil 5422 (diagram A3) is short circuited, the voltage on C2498 changes to low, which will block TS7652. In this case, also TS7641 will block and the voltage on 2642 will rise until TS7443 is forced in conduction. The "SUP-ENABLE" signal (in normal operating condition -20 V) is shorted now to ground level, which will force the Main Power Supply to Standby mode.
- **ARC protection:** If there are "open" connections (e.g. bad solder joints) in the high-energy deflection circuitry, this can lead to damaging effects (read: fire). For that reason, the E/W current is sensed (via 3479//3480). If this current becomes too high, the "thyristor" circuit (TS7653 and TS7654) is triggered. TS7442 is switched "on" and TS7443 is forced into conduction. . The "SUP-ENABLE" signal is shorted now to ground level, which will force the Main Power Supply to Standby mode.
- **NON_VFB (No vertical Flyback) protection:** If the frame stage generates no pulses, TS7641 will block. TS7443 is now switched "on", which will lead to Standby mode. Therefore, in normal operation condition, TS7641 and TS7652 are conducting, while TS7443 is blocked.

Circuit Protection
The following fault condition will lead to a "partly" set protection:
- **PROT1 (DC) protection:** When a DC-voltage (positive or negative) is sensed on one of the loudspeaker outputs, the protection circuit (TS7704, 7705, 7706 and 7707 in diagram A6) will put the IC7700 in Standby mode (via tri-state input pin 6). For more details, see chapter "Circuit Descriptions".

5.8 Repair tips

5.8.1 Miscellaneous

The relay you hear when you switch the set "on" (from Standby or via the mains switch), is from the degaussing circuitry. It is not used for switching the Power Supply (as done in the MG-chassis).

Take care not to touch the "hot" heatsink while disconnecting the SSP, despite the fact that the mains cord is out of the mains socket. There can still be an annoying rest-voltage on the heatsink for a short while. Because the discharge resistors 3502 and 3503 (on the LSP between hot and cold part) are not stuffed for Europe. Instead, discharge resistors 3066 and 3057 on the Mains Switch panel are used, but because they are located before the Mains switch, they only discharge when this switch is "on".
Advice: when you want to disconnect the SSP, first disconnect the Mains cord, but keep the Mains Switch "on".

Where the circuitry was too "crowded" for service printing, you can find the correct location on the "test point overviews" in this manual.
A very large part of the LSP is "hot", such as:
- The primary part of the Standby Supply.
- The whole Main supply (except for the secondary Audio supply).
- And the complete deflection circuitry (so notice that the deflection coil is hot!).

5.8.2 Start-up Sequence

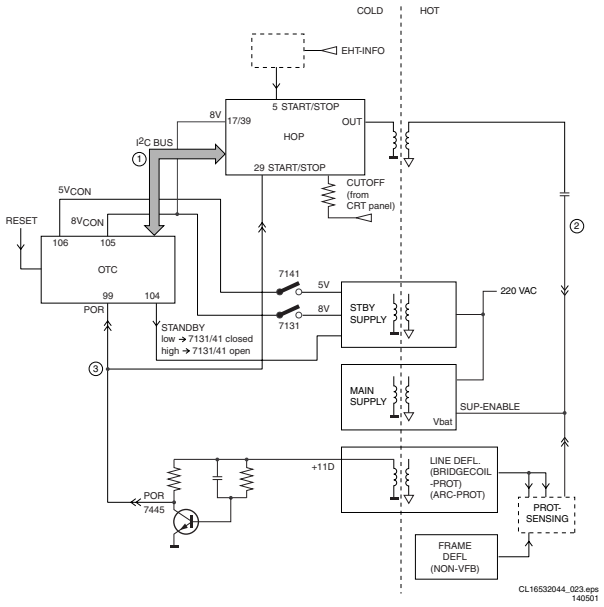


Figure 5-4 Start-up circuitry

The start up sequence differs from other sets (e.g. MG-sets or EM2E-sets, but is same as in EM3E-set):

1. When the set is switched “on”, the 5 and 8 V lines (“+5V_CON” and “+8V_CON”) of the standby power supply are activated.
2. After the OTC senses them, the µP will address the HOP via the I²C-bus, to start the drive [1].
3. Via the “SUP-ENABLE” signal, the Main Supply is switched “on” and will deliver the V_BAT to the Line deflection stage [2].
4. EHT generation is now started.
5. The OTC will un-blank the picture.
6. When you switch “off” the set, this is done in a controlled way via the POR signal [3].

Note: Standby is not directly achieved via the Standby line of the microprocessor, but indirectly via the HOP circuitry.

5.8.3 ComPair

This chassis does not have an IR transmitting LED (as in MG-sets). Therefore, a “Service” (ComPair) connector is implemented at the rear side of the set, which is directly accessible (as in A10-, EM2E-, EM3E and EM5E-sets). In addition to this, there is also a blinking LED procedure to show the contents of the error buffer.

When you use ComPair, you have the possibility to activate a “stepwise start-up” mode. With this mode, you can initiate the start-up sequence step by step. This also means that in certain steps, some protections are not activated. This is sometimes very convenient during repair.

5.8.4 Protections

Activating SDM via the “service pads” will overrule the processor-controlled protections, but not the hardware protections. This means, that the A/D-input protections (5 and 8 V) and the I²C “not-acknowledging” info of the feature box (FBX) and of the Tuner are overruled.
Caution: When doing this, the service technician must know what he is doing, as it could lead to damaging the set.

The “ARC”- and/or “BRIDGECOIL” protection are hardly ever triggered, however:

When you suspect the “ARC” protection, look for bad solder joints and smell. By interrupting resistor 3497, this protection is disabled (special attention needed!).
When you suspect the “BRIDGECOIL” protection, which can also be due to a too wide picture amplitude, shorten G and S of the E/W MOSFET 7480. This will disable the protection. You will now have minimal horizontal amplitude. Re-align the horizontal amplitude in the SAM menu and remove the G/S short of TS7480.

5.8.5 Main Supply

The simplest way is, to replace the components of the Main Supply with repair kit 3122 785 90550.

More detailed way:

1. Replace FET 7504 and zener 6505.
2. Disconnect the SSP panel.
3. Short B and E of TS7529, in order to put the Main Supply in “on”-mode (TS7529 is blocking then).
   Caution: To prevent that R3403 and TS7443 will be damaged, **first disable the HW-protection of the deflection circuit.** Therefore short circuit C2642 on the LSP (diagram A4).
4. Attach a load of 500 Ω to V_BAT capacitor C2515 (the supply can not work without a minimum load).
5. Use a variac, and slowly increase the V_MAINS. Measure over sensing resistors R3514//15, if a nice sawtooth voltage becomes available.
6. Also measure the V_BAT. This may never exceed +141 V. If it does, there is something wrong in the feedback circuitry (e.g. regulator 7506).

Note: Be careful when measuring on the gate of FET TS7504. This circuitry is very high ohmic and can easily be damaged (first connect ground to measuring equipment, than measure the gate).

5.8.6 Standby Supply

The simplest way is to replace the components of the Standby Supply with repair kit 3122 785 90530.

5.8.7 Line Deflection

The simplest way is to replace the components of the Line Deflection circuitry with repair kit: 3122 785 90330
Caution: item 3400 used in this chassis is different from the part supplied in the kit. See partlist for correct value and ordercode.

5.8.8 Frame Deflection

Caution: When the Frame Deflection circuitry is suspected, one must be careful. Because there is a DC-voltage on the frame deflection, **the beam current could damage the CRT neck, leading to a defective CRT**.

To prevent this from happening, you must:
Interrupt the resistors 3403 and 3404 on the CRT panel (diagram F1), in order to remove the “filament” voltage from the tube (no beam current, so no chance of destroying the CRT).
Interrupt resistor 3403 on the LSP (diagram A4) to disable the “SUP-ENABLE” line.
Measure with a multi-meter, or better with an oscilloscope, the functionality of the Frame stage.
After you have found the cause, exchange the defective component (e.g. TDA8177), and re-solder the interrupted resistors.

Table 5-4 Repair tips

Phenomenon	Possible Cause	Repair tip
No picture, no LED.	Standby Supply defective.	Measure circuitry (see diagram A2). Start at test-point A19.When the Mains switch is 'on', this voltage must always be available
No picture, LED blinking at 3 Hz.	Set is in protection due to various causes. For error codes see error-code list.	You have no picture, so: - Read the error buffer via ComPair (error buffer is accessible when set is in protection, compare-file will guide you to this) - Read the blinking LED information via standard remote command <mute>06250x<ok> - Or you read the error code sequence via standard remote command <mute>062500<ok>. When you have found the error, check the circuitry related to the supply voltage and I2C-communication or the circuitry that triggers the protection.
No picture, LED blinking with code 6-6-6 or 18-18-18.	No communication on slow I2C- or fast I2C-bus.	As processor cannot communicate with one of the 2 busses it the standby-led spontaneously starts blinking 6-6-6-etc or 18-18-18-etc... If in the error buffer somewhere is an error 6 or 18, these will have the highest priority starting the mentioned blinking. Measure dependent of the error on the I2C-bus which device is loading the bus. (Use I2C-overview)
No picture, LED blinking with code 1-1-1.	No communication on NVM-I2C bus to the uP.	As the uP cannot communicate with the NVM I2C bus, it spontaneously starts blinking 1-1-1. **Note:** when there is no access to the NVM, a lot of picture setting can go wrong.
No picture, no sound. Set is making audible squeaking sound	Supply is possibly in hiccup-mode, which is audible via a squeaking supply transformer.	Possible causes: 1- V_BAT is shorted (caused by short circuited line transistor 7421), or Sound winding is shorted (amplifier is shortening the power supply lines), or 2- D6514 is shorted (due to a too high V_BAT). Remove excessive load, to see what causes the failure, or check feedback circuit. See repair tip 'Main Power Supply' (supply needs a minimal load).
No picture, no sound. Blue LED works fine	Supply does not work correctly.	If e.g. V_BAT is only about 90 V, it is possible that the regulator IC (7506) is defective.
No RC-reception. Blue LED does not echo RC-commands.	uP circuitry or RC-receiver is defective.	In case the set does react on a local keyboard operation, you must check the RC-receiver circuitry (diagram E).
Relay (degaussing) is not audible, when set is switched from 'off' or 'standby' to 'on'.	uP is not working correctly.When pin 115 is low, the degaussing must be activated.	Check RESET-circuitry on diagram B5A. Check the level on pin 115 when you switch the set 'on'. Signal must be low initially and go to high after approx. 12 s.
Picture is rotated.	Rotation circuitry on diagram A5, or related supply to it, malfunctions.	Measure test points on diagram A5.
Picture is continuously switching 'off' and 'on', showing heavy 'switch' spots (set does not go into protection).	200 V is missing on CRT panel.	Probably a bad connection from LSP connector 1424 to CRT connector 1424 (diagram F1), or an interruption of the 200 V supplies line (e.g. R3341 on circuit F1 is interrupted).
Picture is not sharp.	Focus is possibly misaligned or SCAVEM-circuitry does not work correctly.	Re-align the 'FOCUS' potmeter on the Line Output Transformer, or check the SCAVEM circuitry on the CRT-panel (diagram F2). It is also possible that the DAF circuitry is defective (see diagram I). Check the V_dc values.
Picture is not synchronised.	The sync is derived in the HIP from xtal 1305 and/or 1308.	Maybe the crystals 1305 and/or 1308 are making a bad contact.
Picture is distorted.	Check video-path in Service Default Mode.	Investigate whether there is an error code present in the error buffer. In case there is one, check the I2C-bus and/or supply lines (see overview supply lines).Measure and check signal path Tuner-HIP-PICNIC-HOP-RGB amplifier.In case it is a geometry issue, check on diagram A4 opto-coupler 7482, OpAmps 7440/7450 and the Frame circuitry alignments or a possible corrupted NVM (7011) on diagram B5A.
Picture with horizontal stripes.	Pixel Plus processing is malfunctioning	Check functionality on circuitry (B3a, B3b, and B3c) of PICNIC (7713), FALCONIC (7718, EAGLE (7724) and/or field memories (7714, 7717, 7719, 7722 and 7723.Tip: the whole Pixel Plus chipset (3 ICs + 5 Field Memories) can be diagnosed via ComPair.
No menu, no OSD.	Probably a defective uP.	Measure test points B61to B64 on diagram B5A.
No NextView (EPG).	IC7012 defective or not powered.	Check circuitry around IC7012 on diagram B5A.
No Teletext.	IC7007 defective or not powered.	Check circuitry around IC7007 on diagram B5A. Check also B61to B64 around uP on diagram B5A.
Strange switch 'off' behaviour	TS7445 possibly defective.	Check, with a multi-meter, whether transistor TS7445 is well functioning. (diagram A3).


Phenomenon	Possible Cause	Repair tip
Problems caused by EPG (Electronic Program Guide). The TV set "hangs".	Problems with NexTView EPG broadcasts.	To switch from EPG 2C3 to Teletext guide. Press for 4 seconds, simultaneously the Menu button on the TV and digit 0 on the remote. The option settings for NexTView type and Flashram will not change.
NexTView EPG is not functioning only Teletext guide.	EPG version 2C3 is switched off during production.	To switch from Teletext guide to EPG 2C3. Press for 4 seconds, simultaneously the Menu button on the TV and digit 1 on the remote. The option settings for NexTView type and Flashram will not change.
Error codes of devices on slow I2C bus.	When there are errors on the slow bus it is possible that the TDL interface, DVD or radio module caused them.	When you clear the error buffer and do a functional test. Make sure you activate all modes available: TV, DVD and Radio in the user menu. By doing this all modules are activated and tested and possible error codes are logged. Another option is: You disconnect the flat cable (connector 1250) on the interface board TDL (T) to pinpoint where the problem is located on the slow bus.
Various symptoms, due to missing local supply voltage.	An interrupted fuse, NFR-resistor or connection.	When no symptom or error code leads you to a specific circuitry, use the supply lines overview (see supply lines overview), for a quick scan of all supply lines.

5.9 Software Downloading

In this chassis, you can upgrade the software via ComPair. You can find more information on how this procedure works in the ComPair file. It is possible that not all sets are equipped with the hardware, needed to make software upgrading possible. To speed up the programming process the firmware of the ComPair interface can be upgraded. See paragraph “How To Order” for the order number


6. Wiring Diagram, Block Diagrams and Overviews

Wiring Diagram

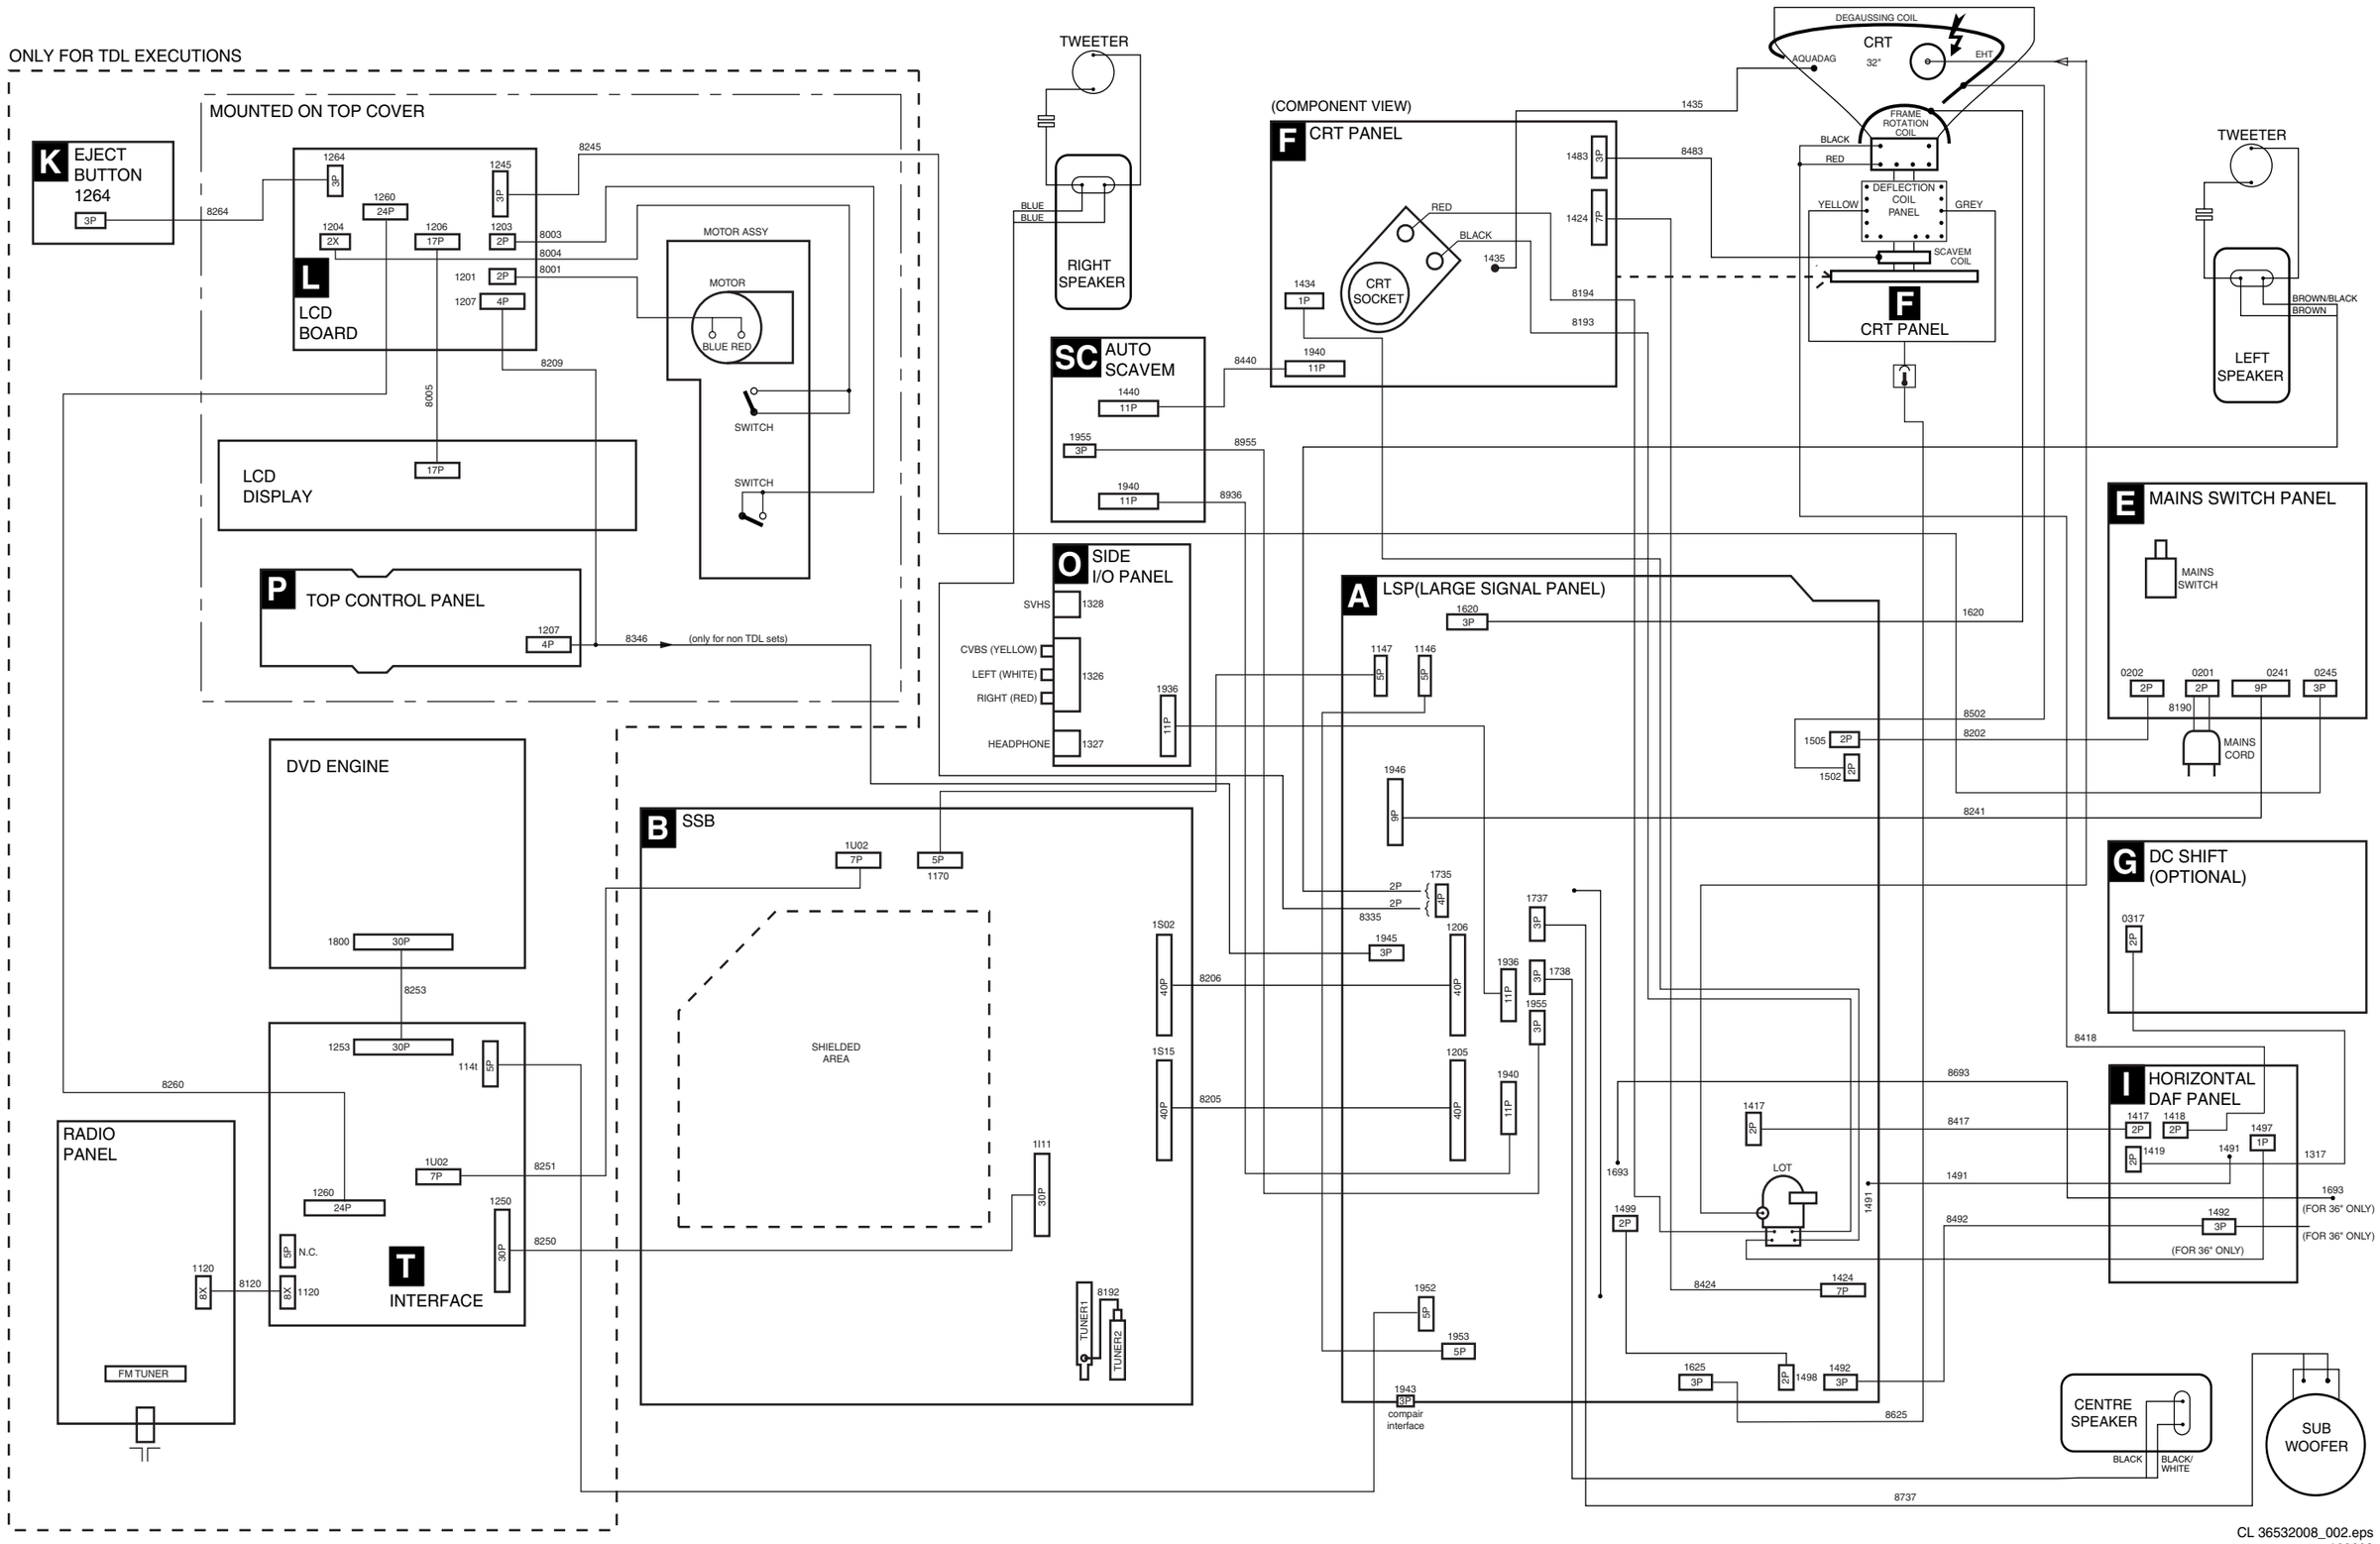


CL 36532008_002.eps
160603

Block Diagram Supply and Deflection

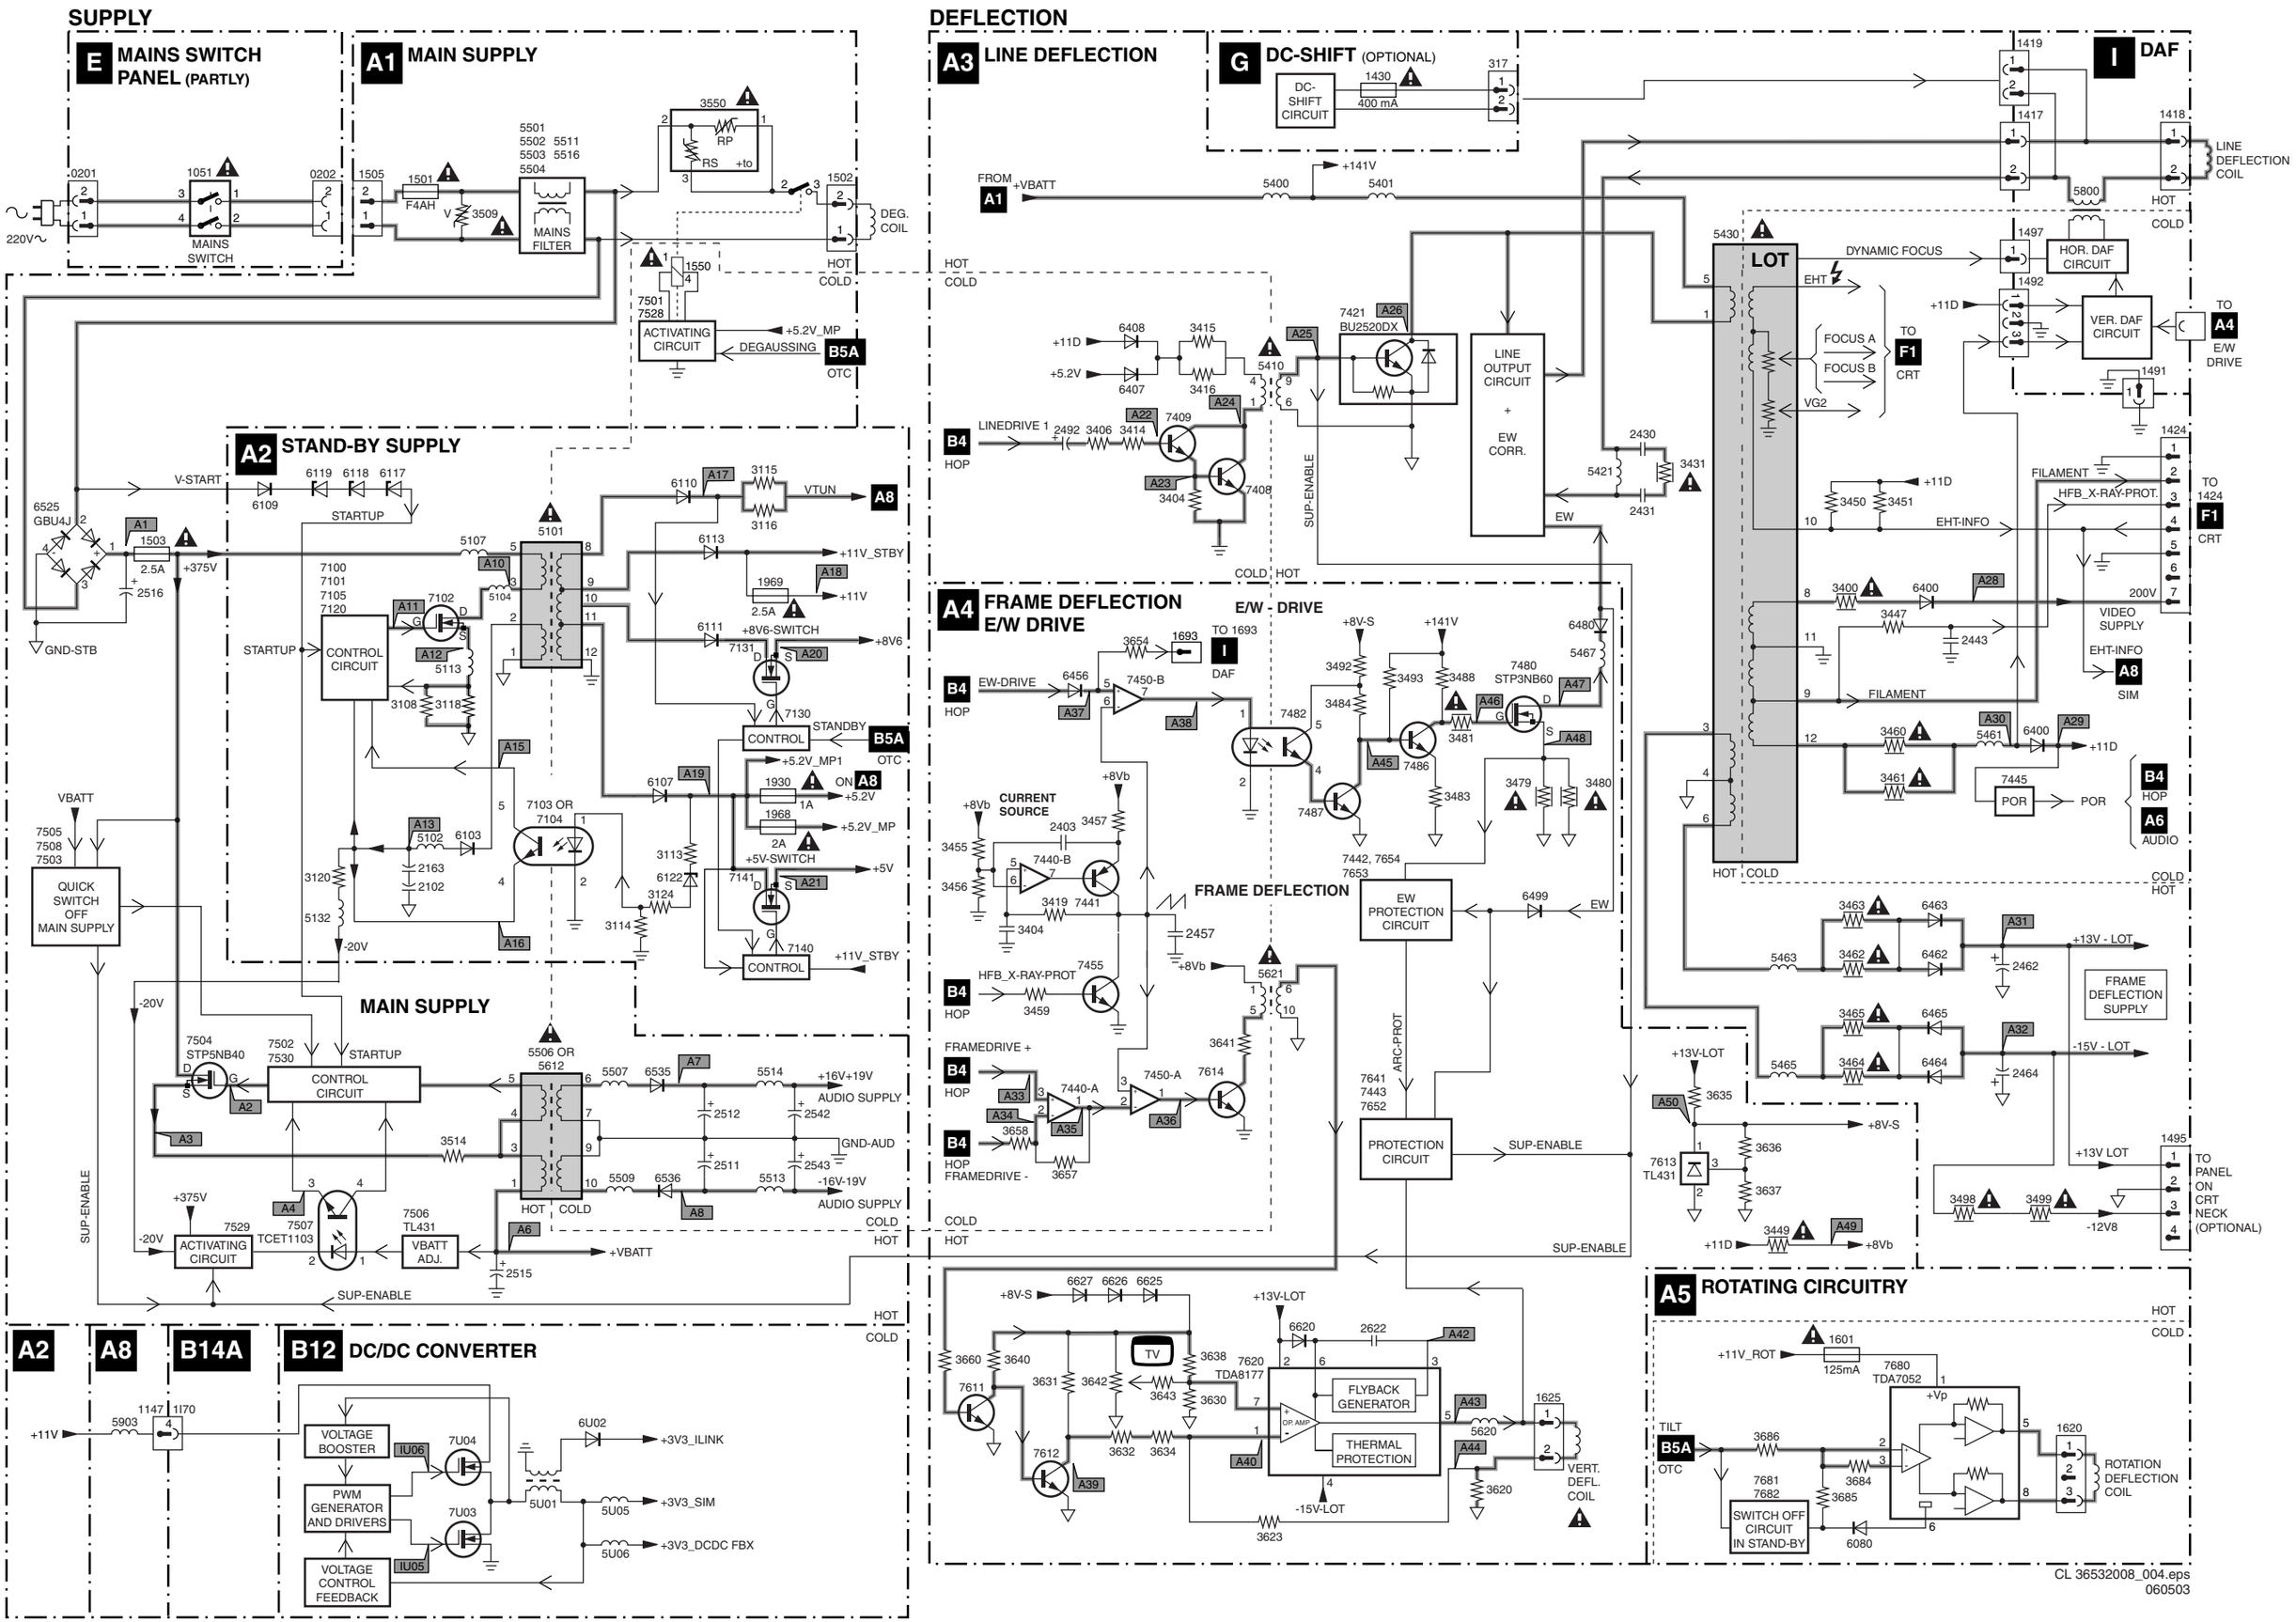

Testpoint Overview LSP, Auto SCAVEM, and CRT


LSP COPPER TRACK SIDE

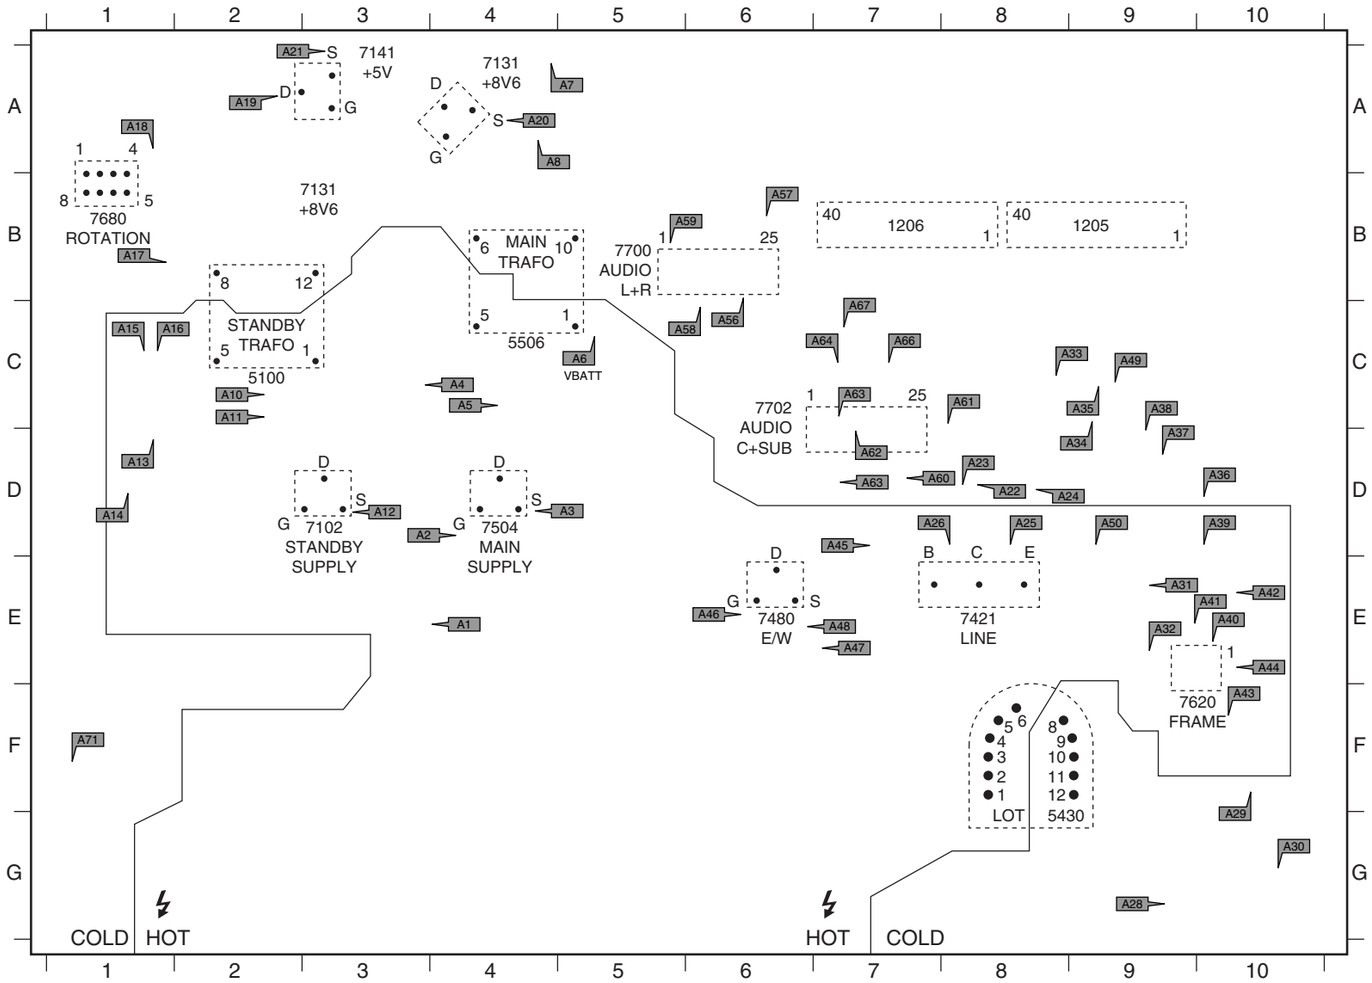


A1 E4
A3 D4
A4 C4
A5 C4
A6 C5
A7 A4
A8 B4
A10 C2
A11 C2
A12 D3
A13 D1
A14 D1
A15 C1
A16 C1
A17 B1
A18 A1
A19 A3
A20 A2
A21 A3
A22 D8
A23 D8
A24 D8
A25 D8
A26 D7
A28 G9
A29 G10
A30 G10
A31 E9
A32 E9
A33 C8
A34 D9
A35 C9
A36 D10
A37 D9
A38 C9
A39 D10
A40 E10
A41 E10
A42 E10
A43 F10
A44 E10
A45 D7
A46 E6
A47 E7
A48 E7
A49 C9
A50 D9
A56 C6
A57 B6
A58 C6
A59 B5
A60 D7
A61 C8
A62 D7
A63 D7
A64 C7
A66 C7
A67 C7
A71 F1

SC7 2 V / div DC 10µs / div
SC8 2 V / div DC 10µs / div
SC9 2 V / div DC 10µs / div
SC10 1 V / div DC 10µs / div
SC22 2 V / div DC 10µs / div
SC23 2 V / div DC 100µs / div
SC24 2 V / div DC 100µs / div

CRT PANEL (COPPER TRACK SIDE)

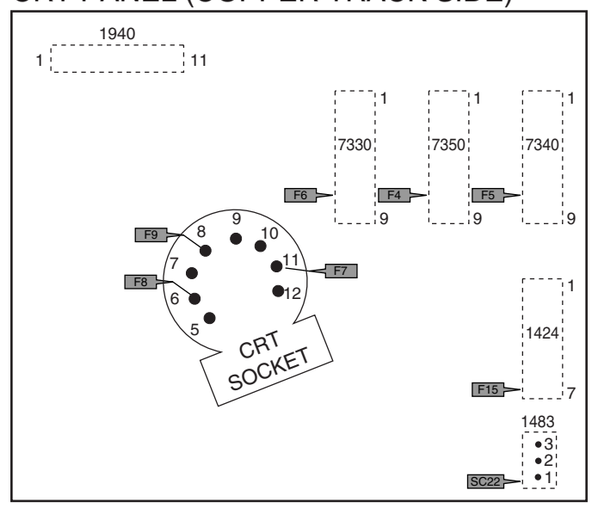


AUTO SCAVEM PANEL (COPPER TRACK SIDE)

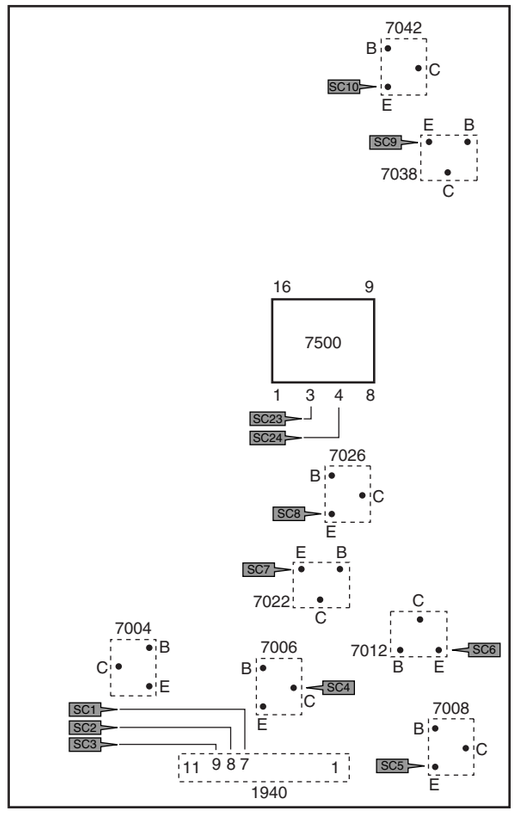


A1 PM3394B 50V / div DC 2us / div
A2 PM3394B 50V / div DC 5us / div
A3 PM3394B 50V / div DC 5us / div
A4 PM3394B 50V / div DC 5us / div
A5 PM3394B 5V / div DC 10us / div
A6 PM3394B 20V / div DC 10us / div
A10 PM3394B 50V / div DC 5us / div
A11 PM3394B 5V / div DC 5us / div
A12 PM3394B 2V / div DC 5us / div
A13 PM3394B 5V / div DC 10us / div
A14 PM3394B 200mV / div DC 10us / div
A15 500mV / div DC 5ms / div
A16 5V / div DC 5ms / div
A17 PM3394B 20V / div DC 5us / div
A18 PM3394B 5V / div DC 5us / div
A19 1V / div DC 5us / div
A22 PM3394B 1V / div DC 10us / div
A23 PM3394B 200mV / div DC 10us / div
A24 PM3394B 5V / div DC 10us / div
A25 PM3394B 2V / div DC 10us / div
A33 PM3394B 500mV / div DC 2ms / div
A34 PM3394B 500mV / div DC 2ms / div
A35 PM3394B 500mV / div DC 2ms / div
A36 PM3394B 200mV / div DC 10us / div
A37 PM3394B 500mV / div DC 2ms / div
A38 PM3394B 200mV / div DC 10us / div
A39 PM3394B 2V / div DC 10us / div
A40 PM3394B 200mV / div DC 2ms / div
A41 PM3394B 200mV / div DC 2ms / div
A42 PM3394B 20V / div DC 2ms / div
A43 PM3394B 10V / div DC 2ms / div
A44 PM3394B 200mV / div DC 2ms / div
A45 PM3394B 1V / div DC 10µs / div
A46 PM3394B 500mV / div DC 10µs / div
A47 PM3394B 50V / div DC 10µs / div
A48 PM3394B 500mV / div DC 10µs / div
A56 200mV / div DC 2ms / div
A57 PM3394B 20V / div AC 2us / div
A58 200mV / div DC 2ms / div
A59 PM3394B 10V / div DC 2us / div
F4 50V / div DC 10□s / div
F5 50V / div DC 10□s / div
F6 50V / div DC 10□s / div
F7 50V / div DC 10□s / div
F8 50V / div DC 10□s / div
F9 50V / div DC 10□s / div
F15 10 V / div DC 10µs / div
SC1 1 V / div DC 10µs / div
SC2 1 V / div DC 10µs / div
SC3 1 V / div DC 10µs / div
SC4 2 V / div DC 10µs / div
SC5 2 V / div DC 10µs / div
SC6 2 V / div DC 10µs / div

Block Diagram Video

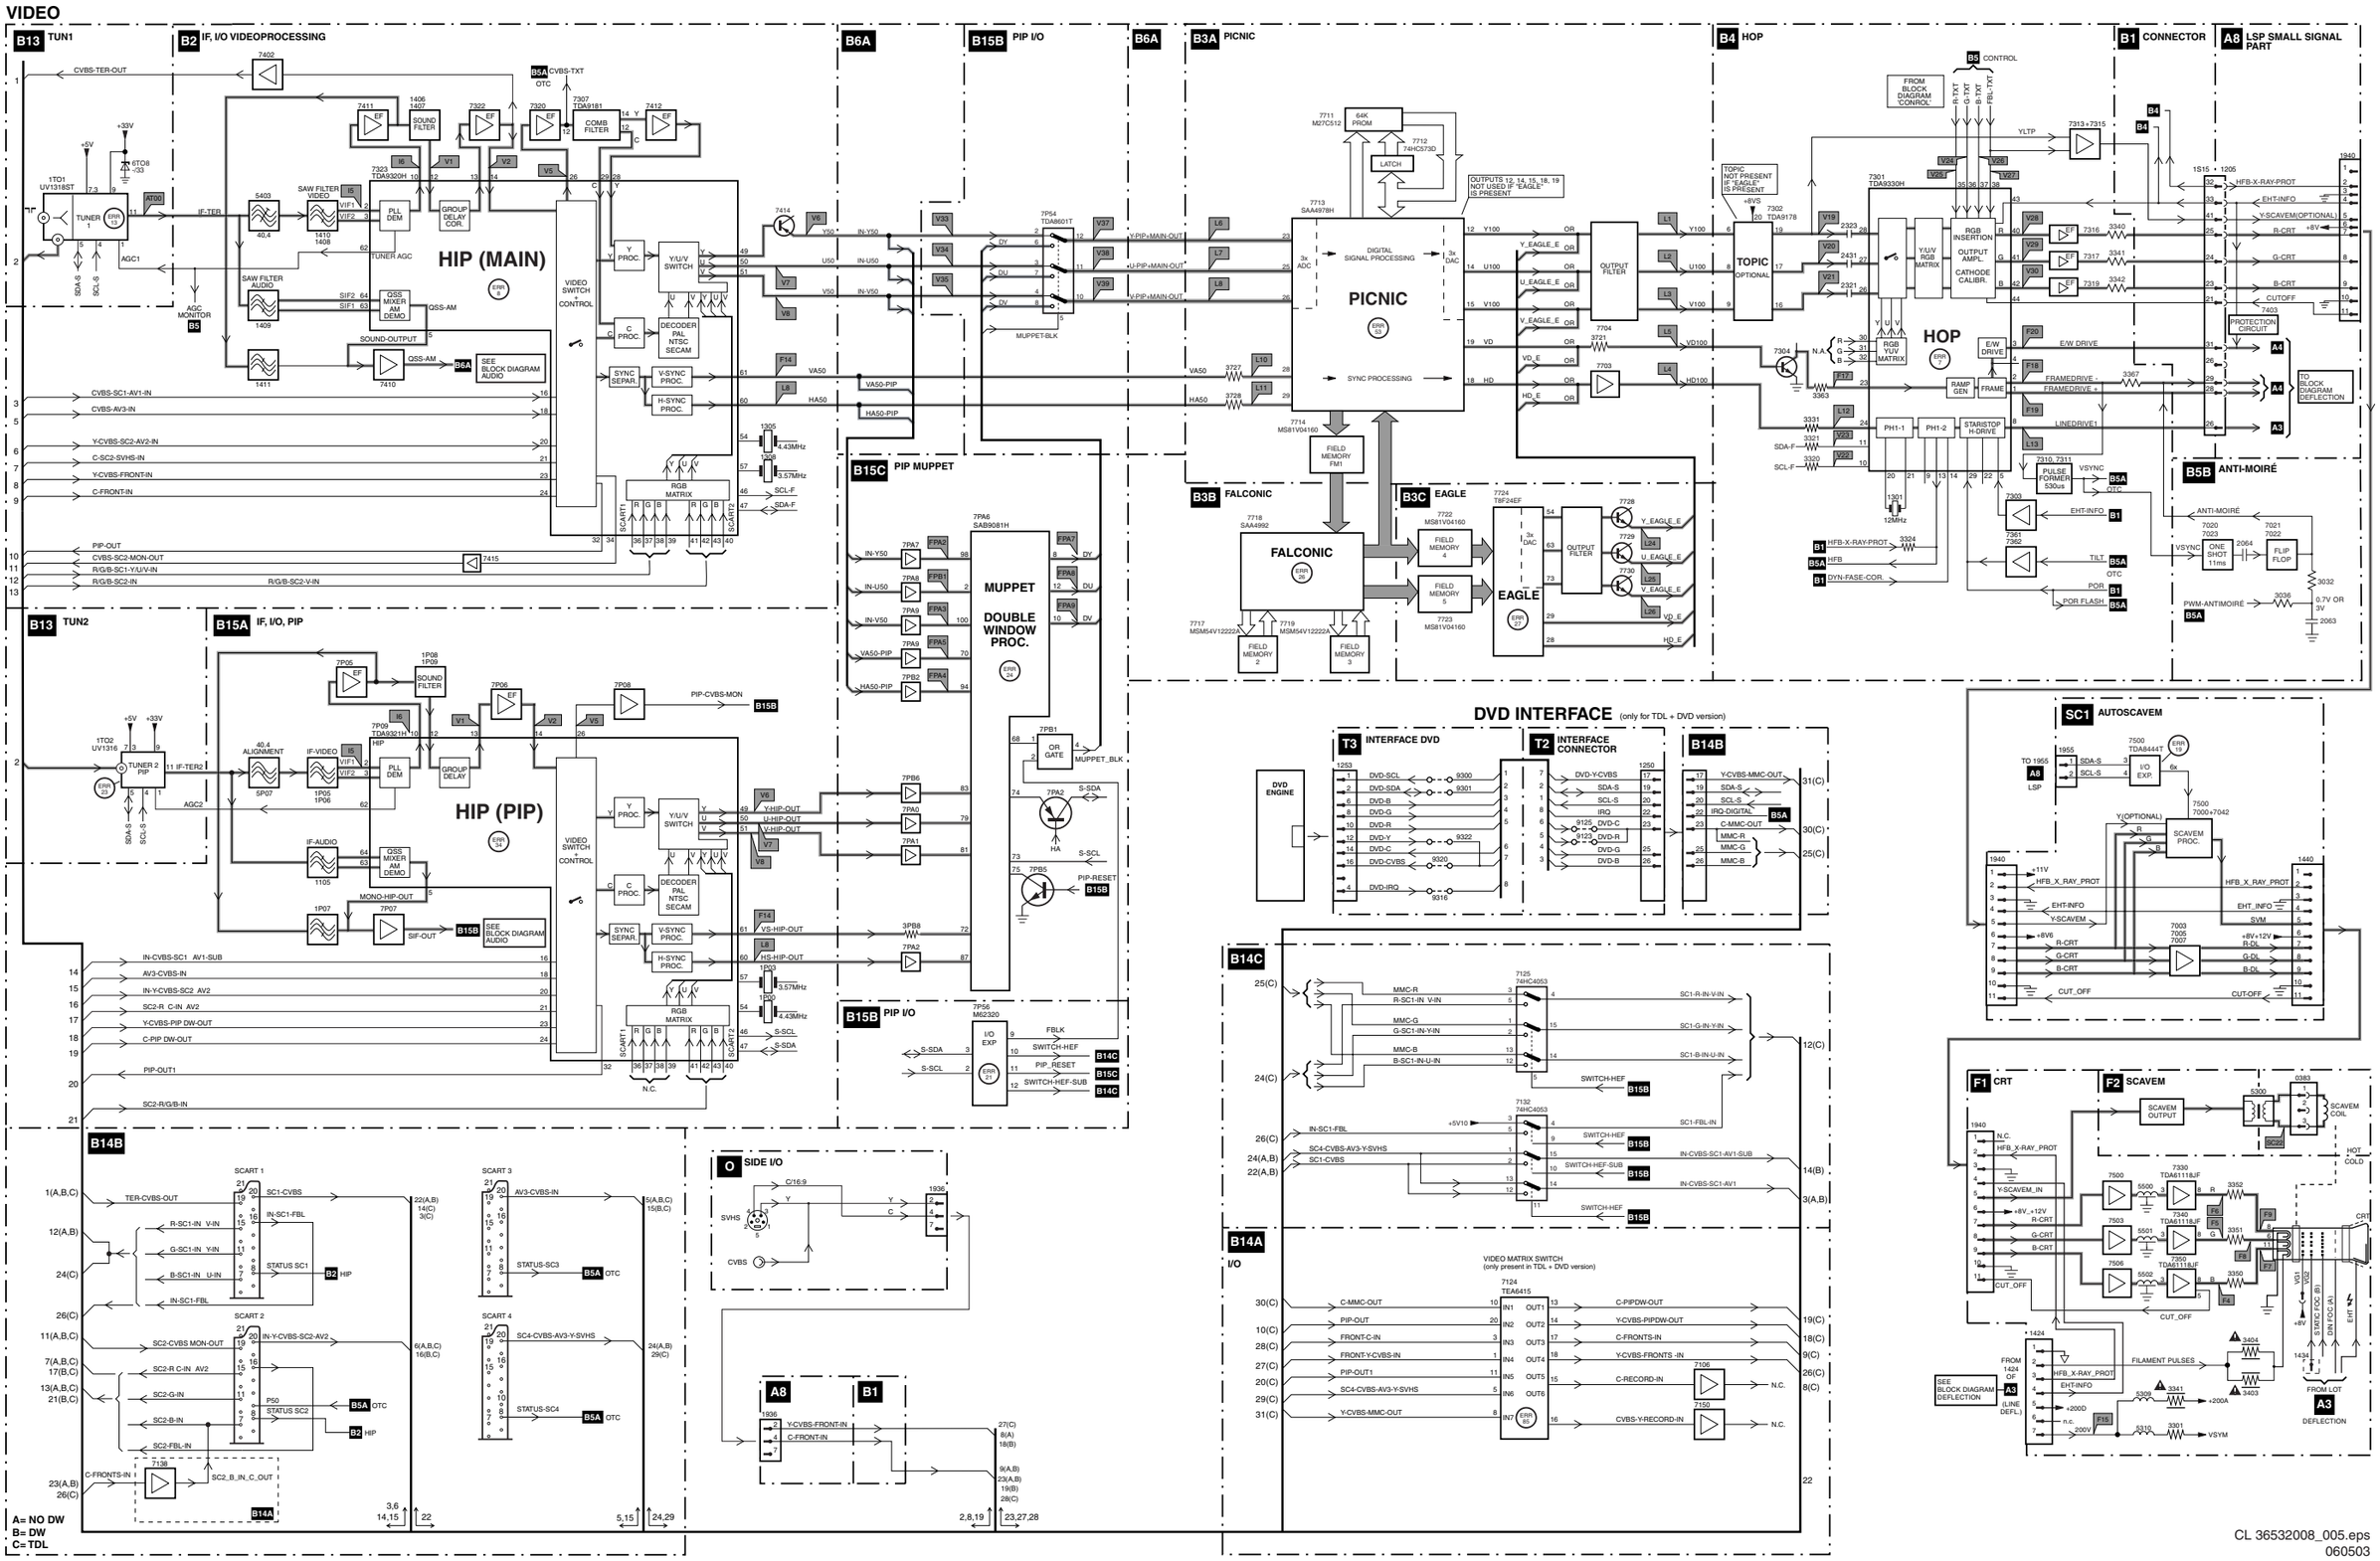



Testpoint Overview Small Signal Board

SSB side A

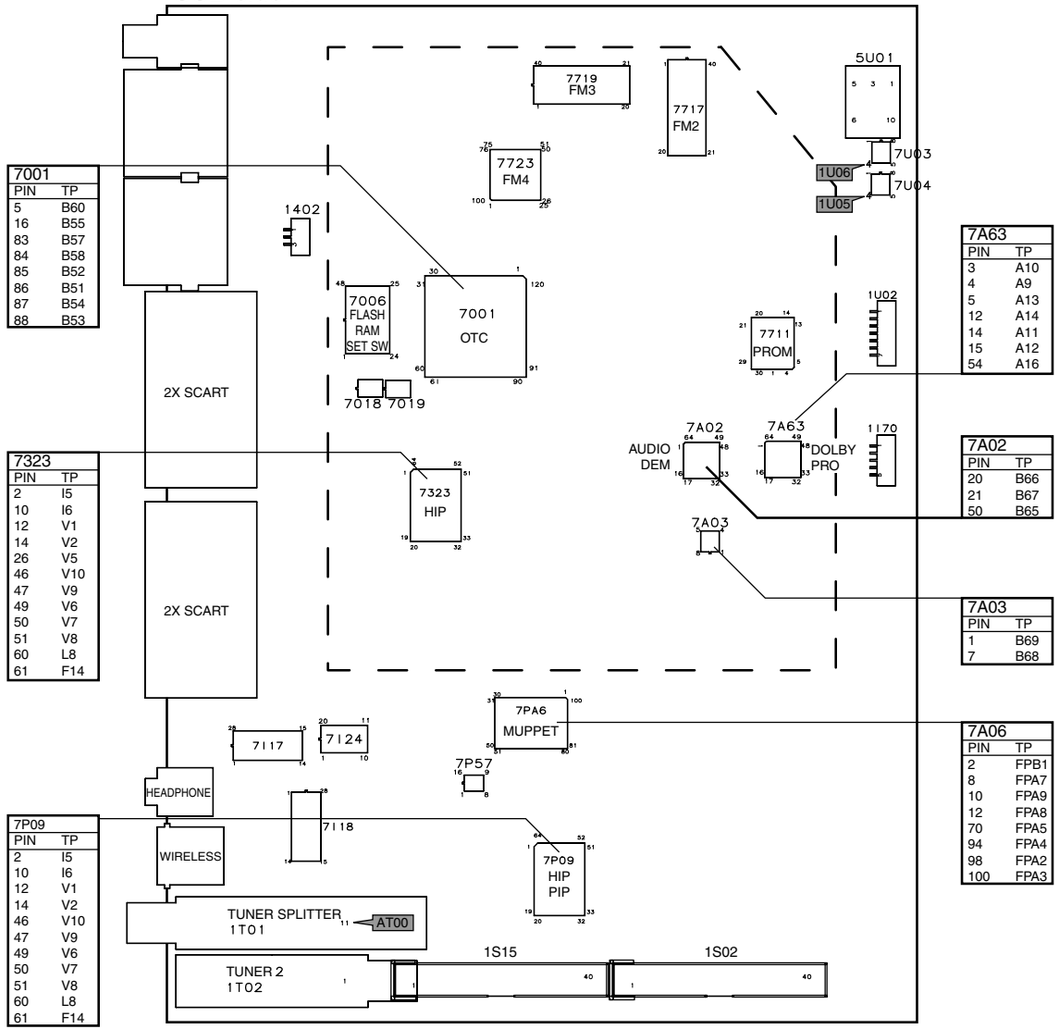


SSB side B

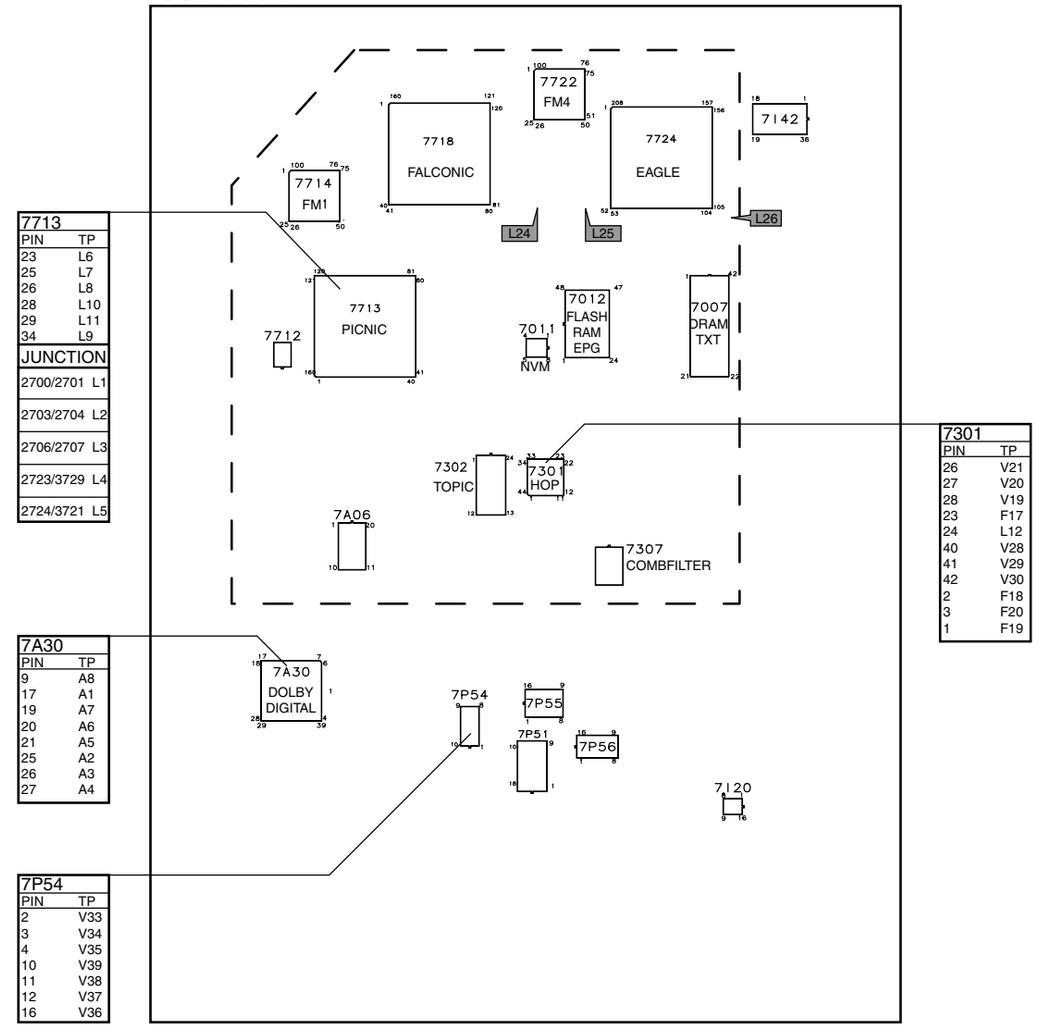

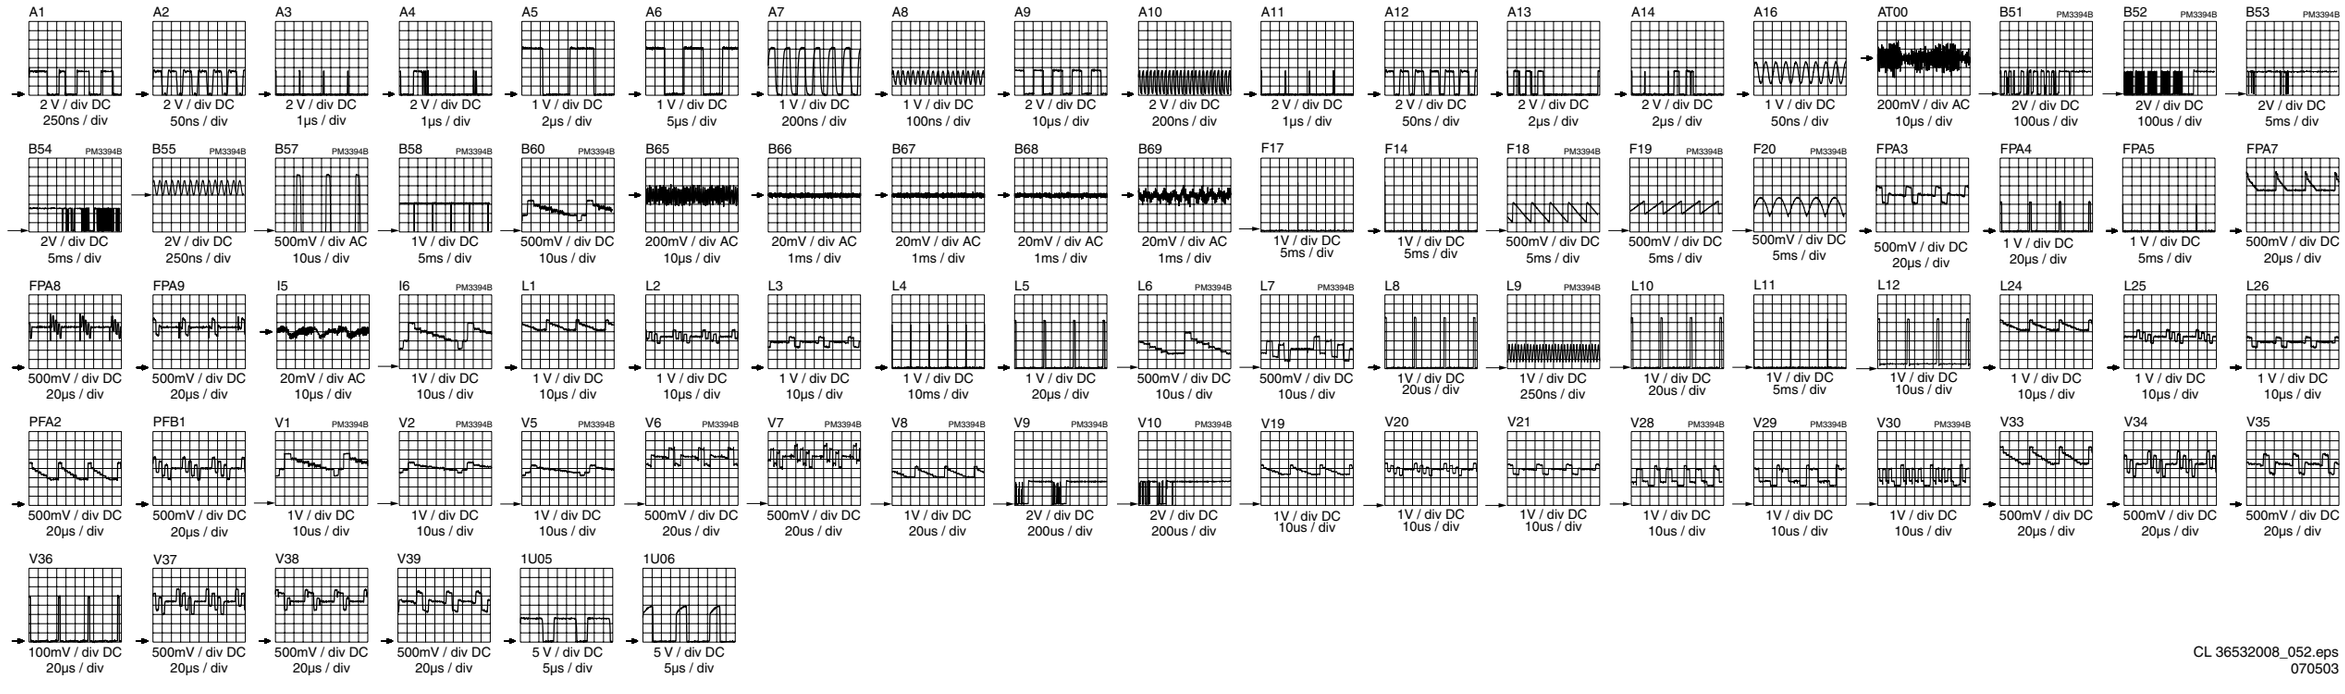


CL 36532008_052.eps
070503

Block Diagram Audio

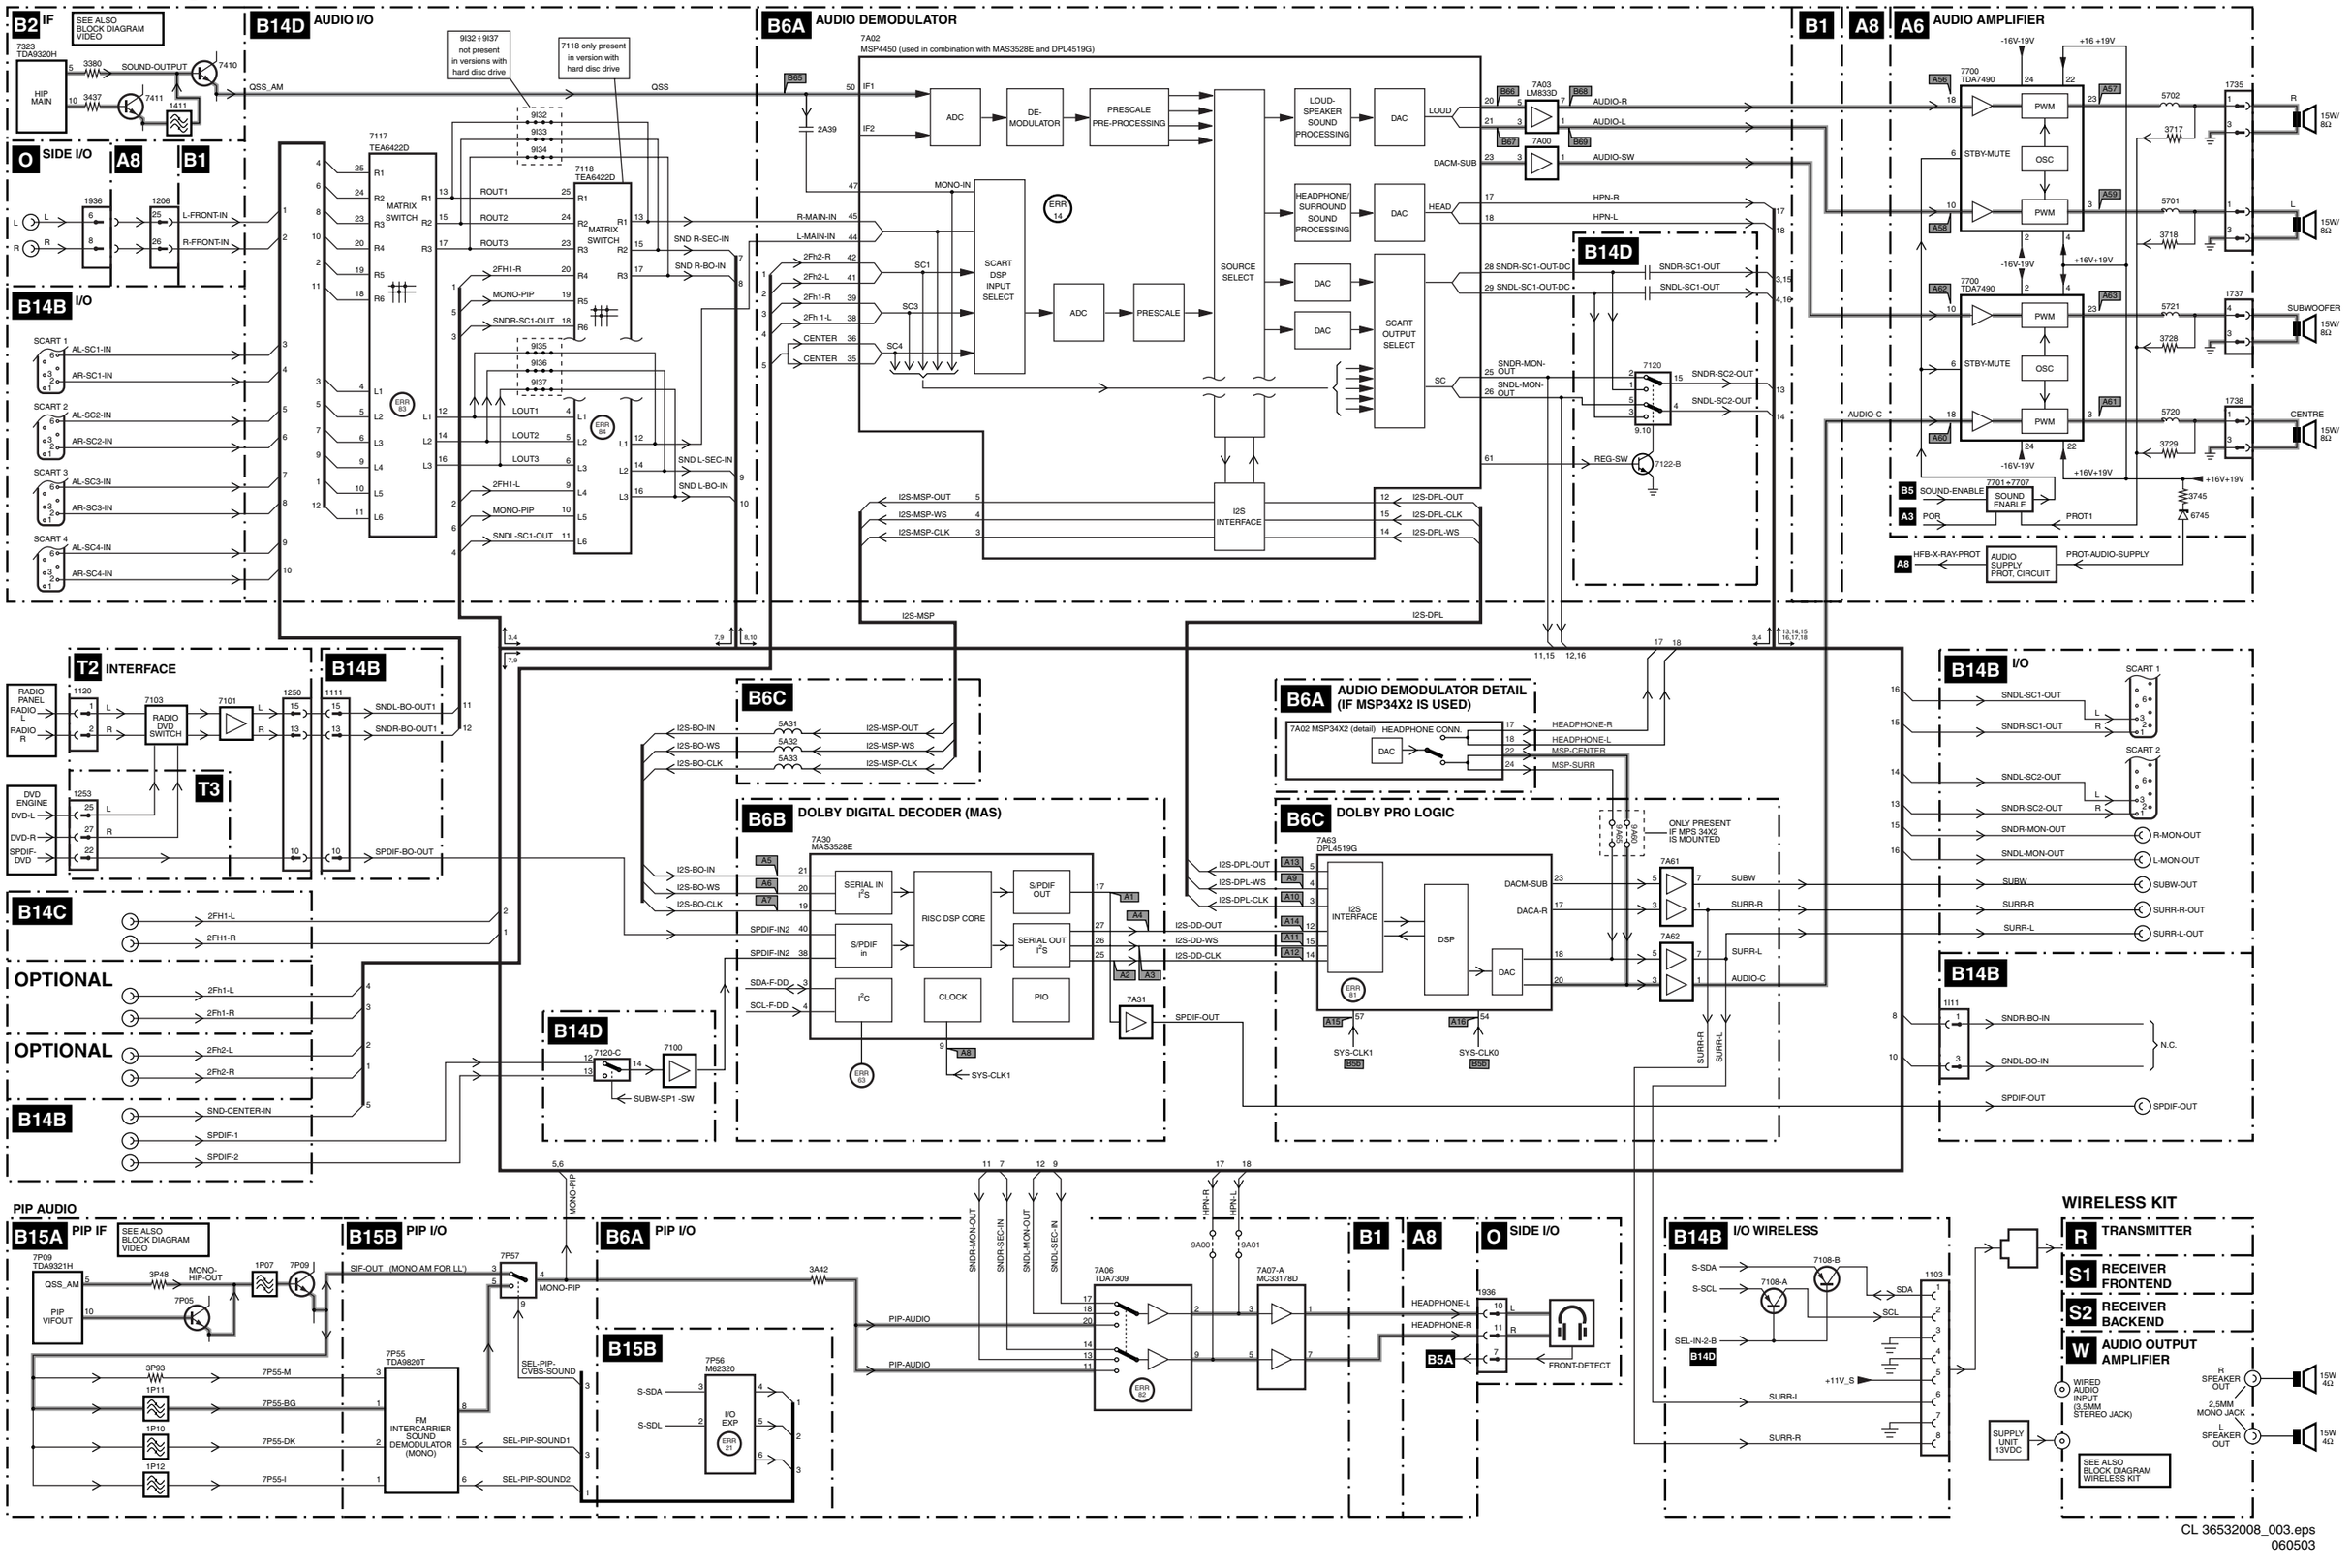


CL 36532008_003.eps
060503


Block Diagram Controls

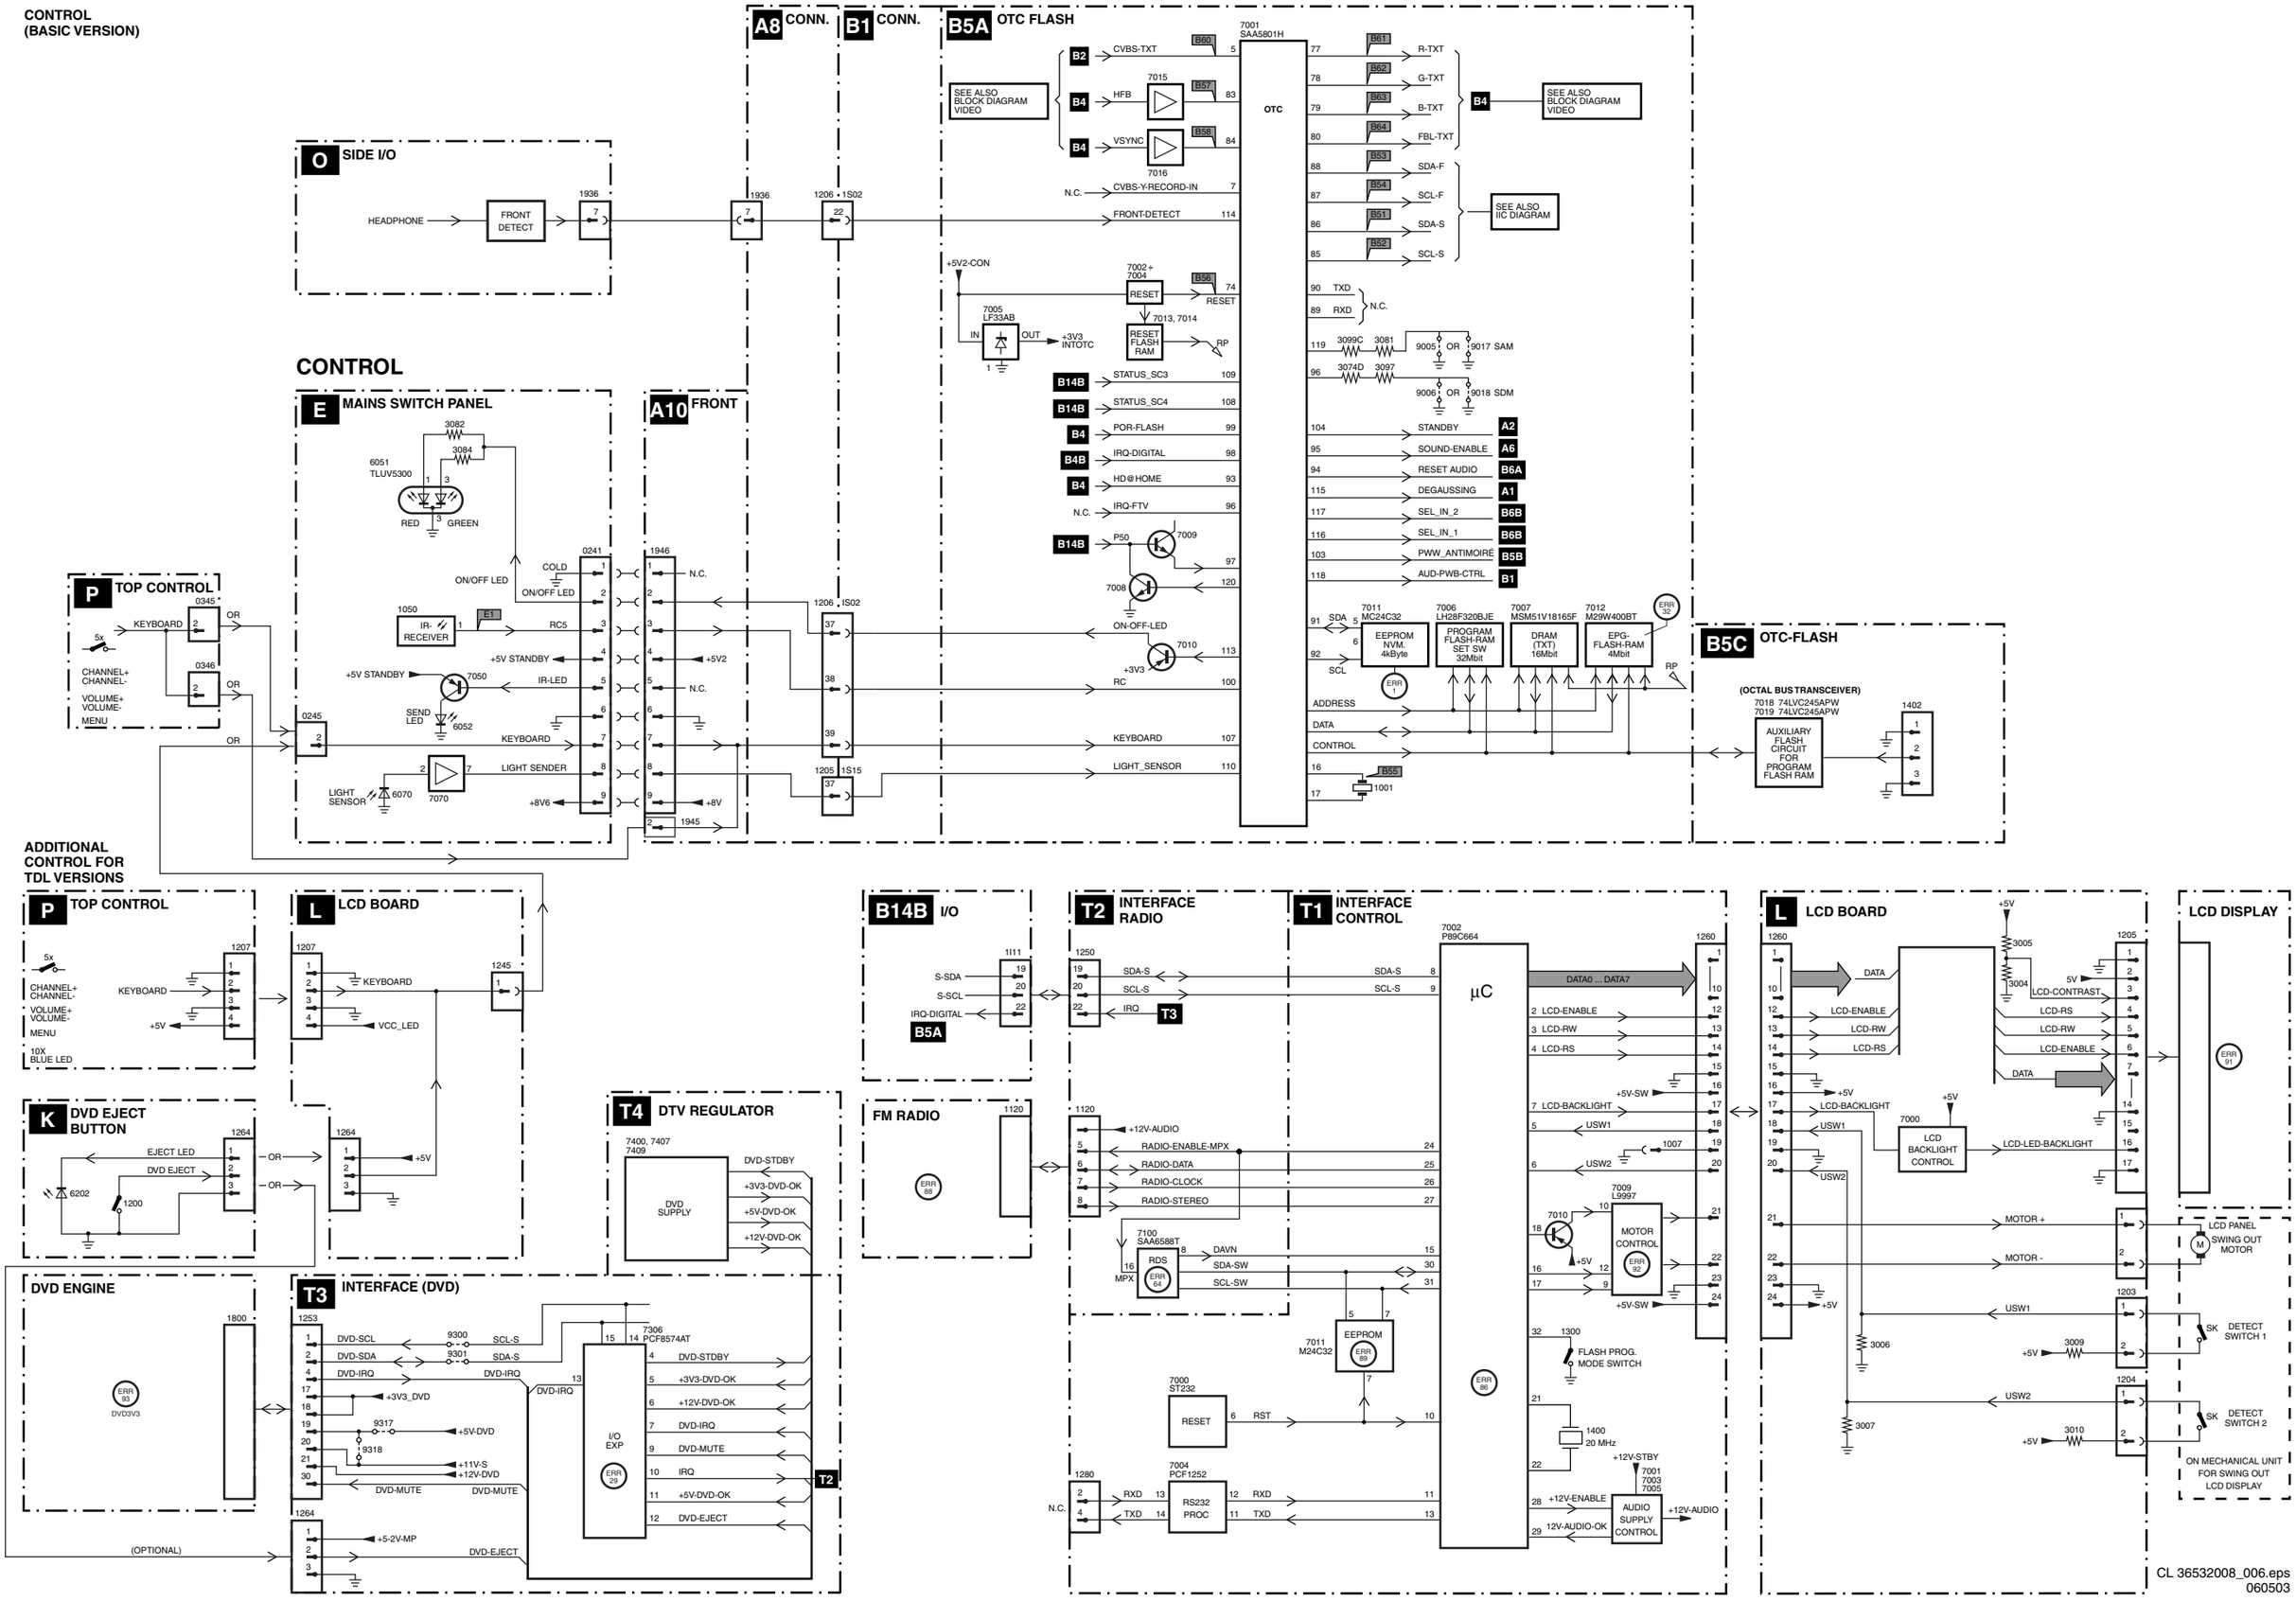

I2C IC's overview

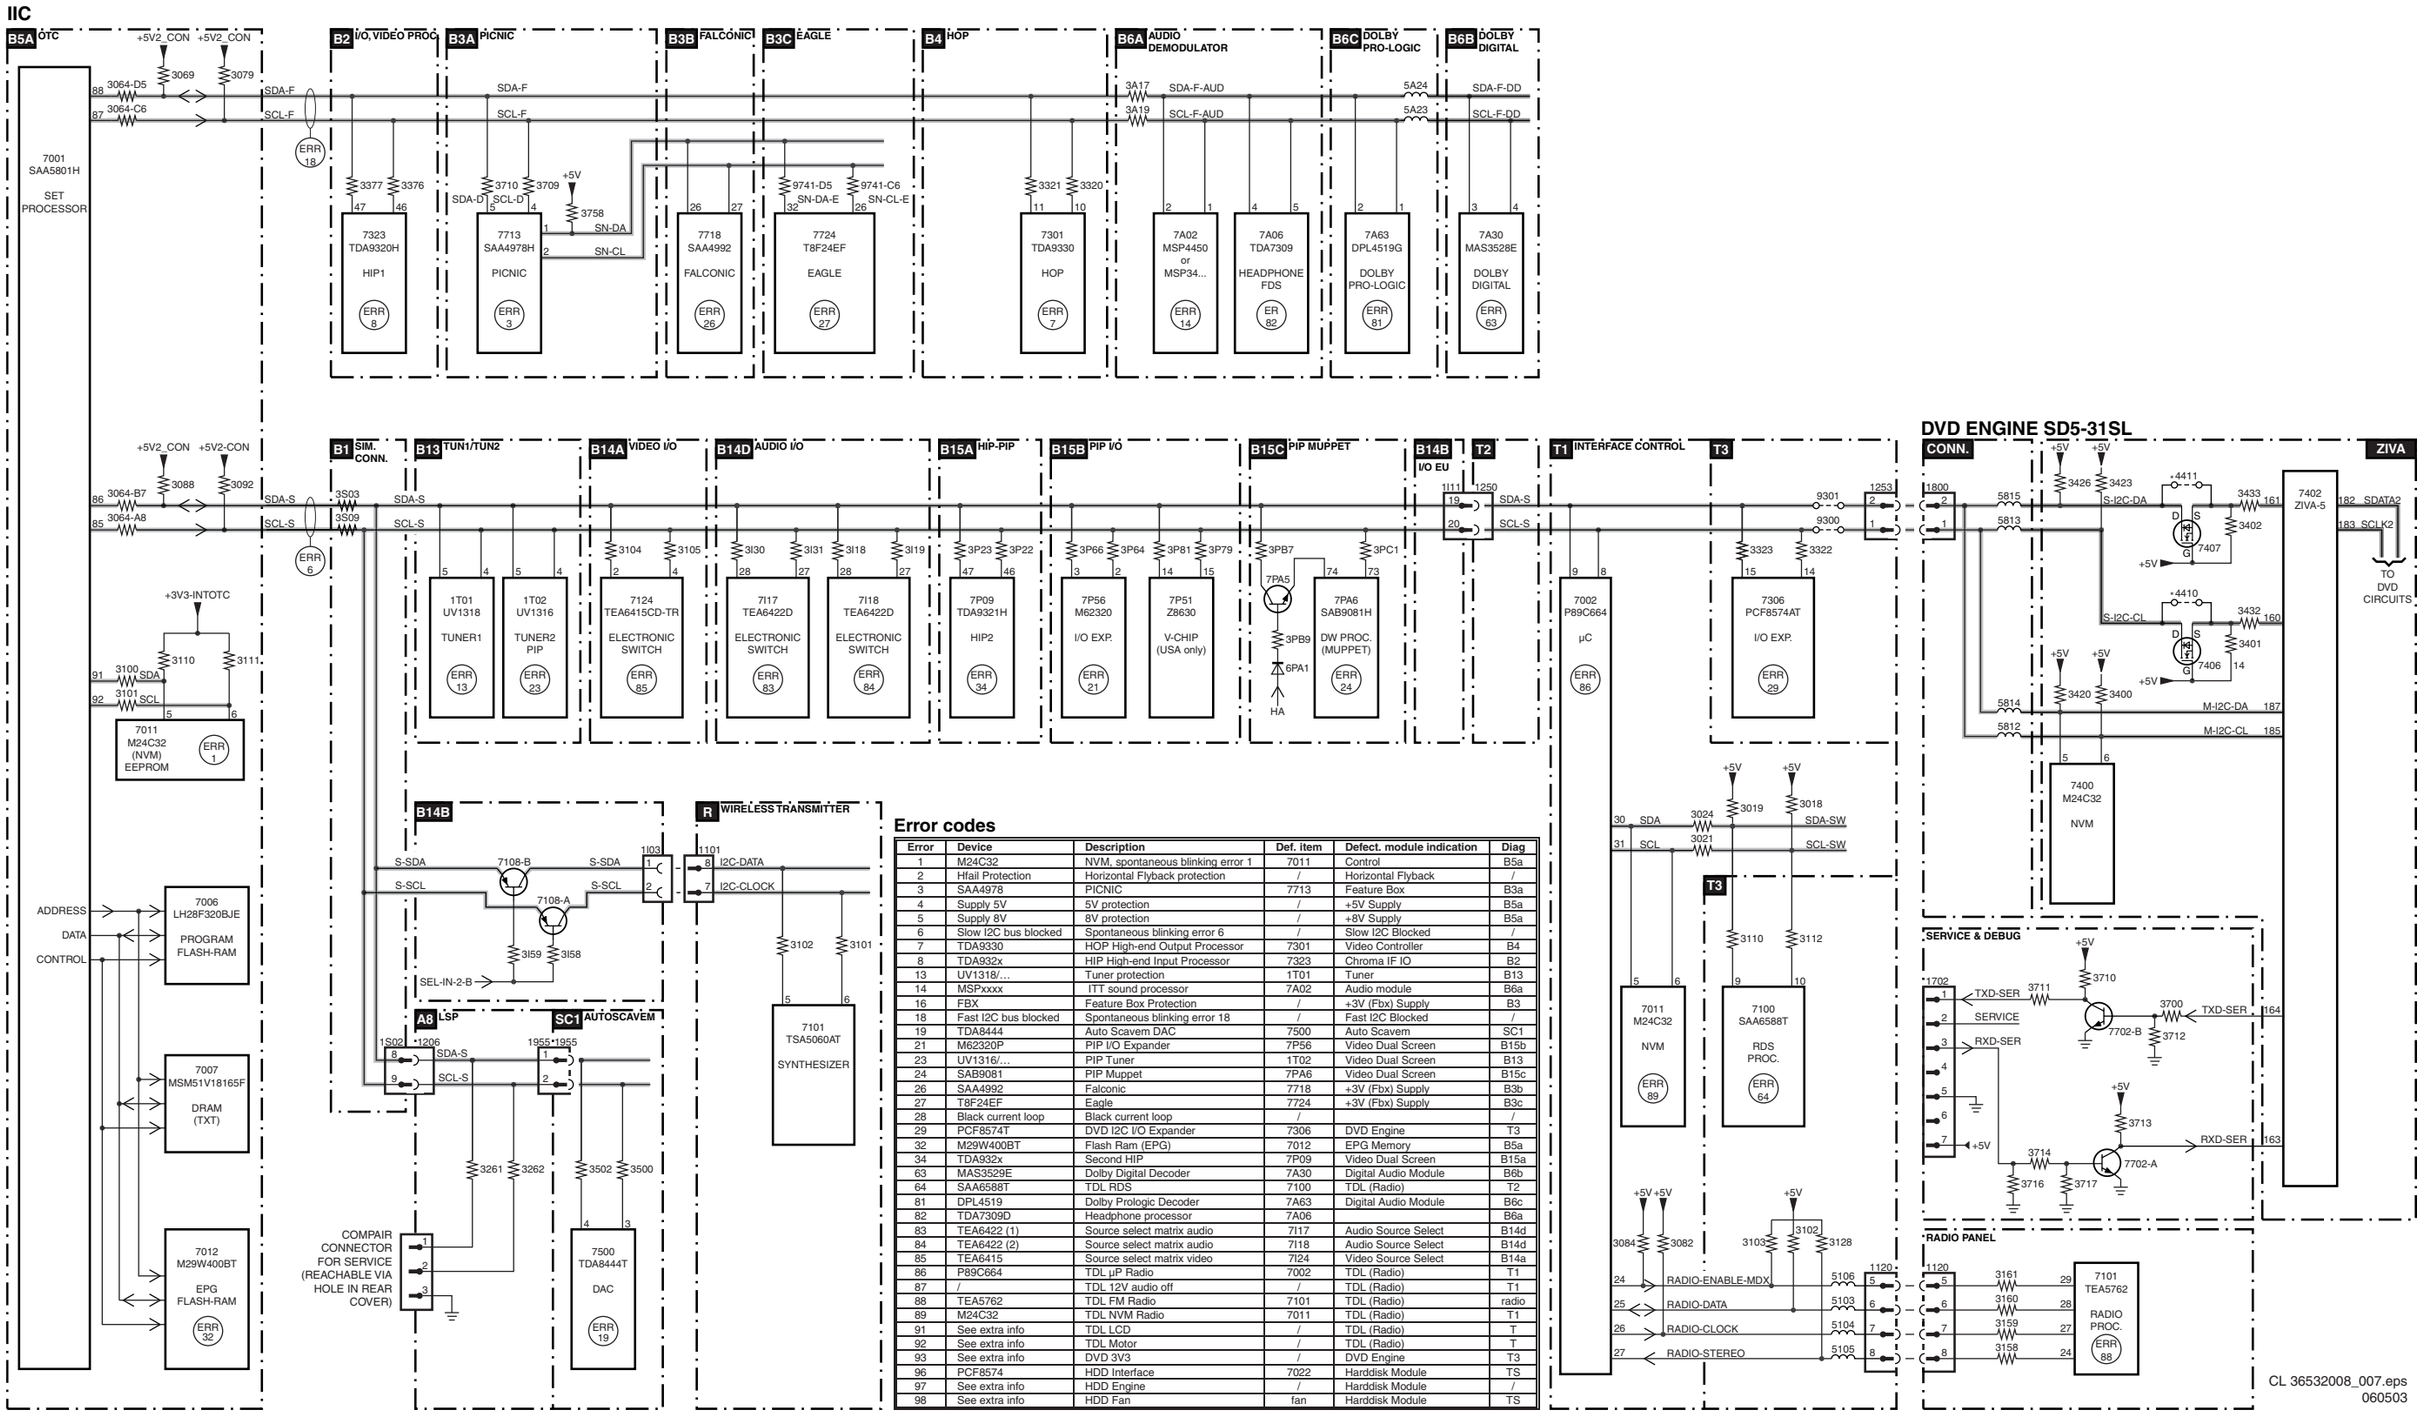


Supply Lines Overview

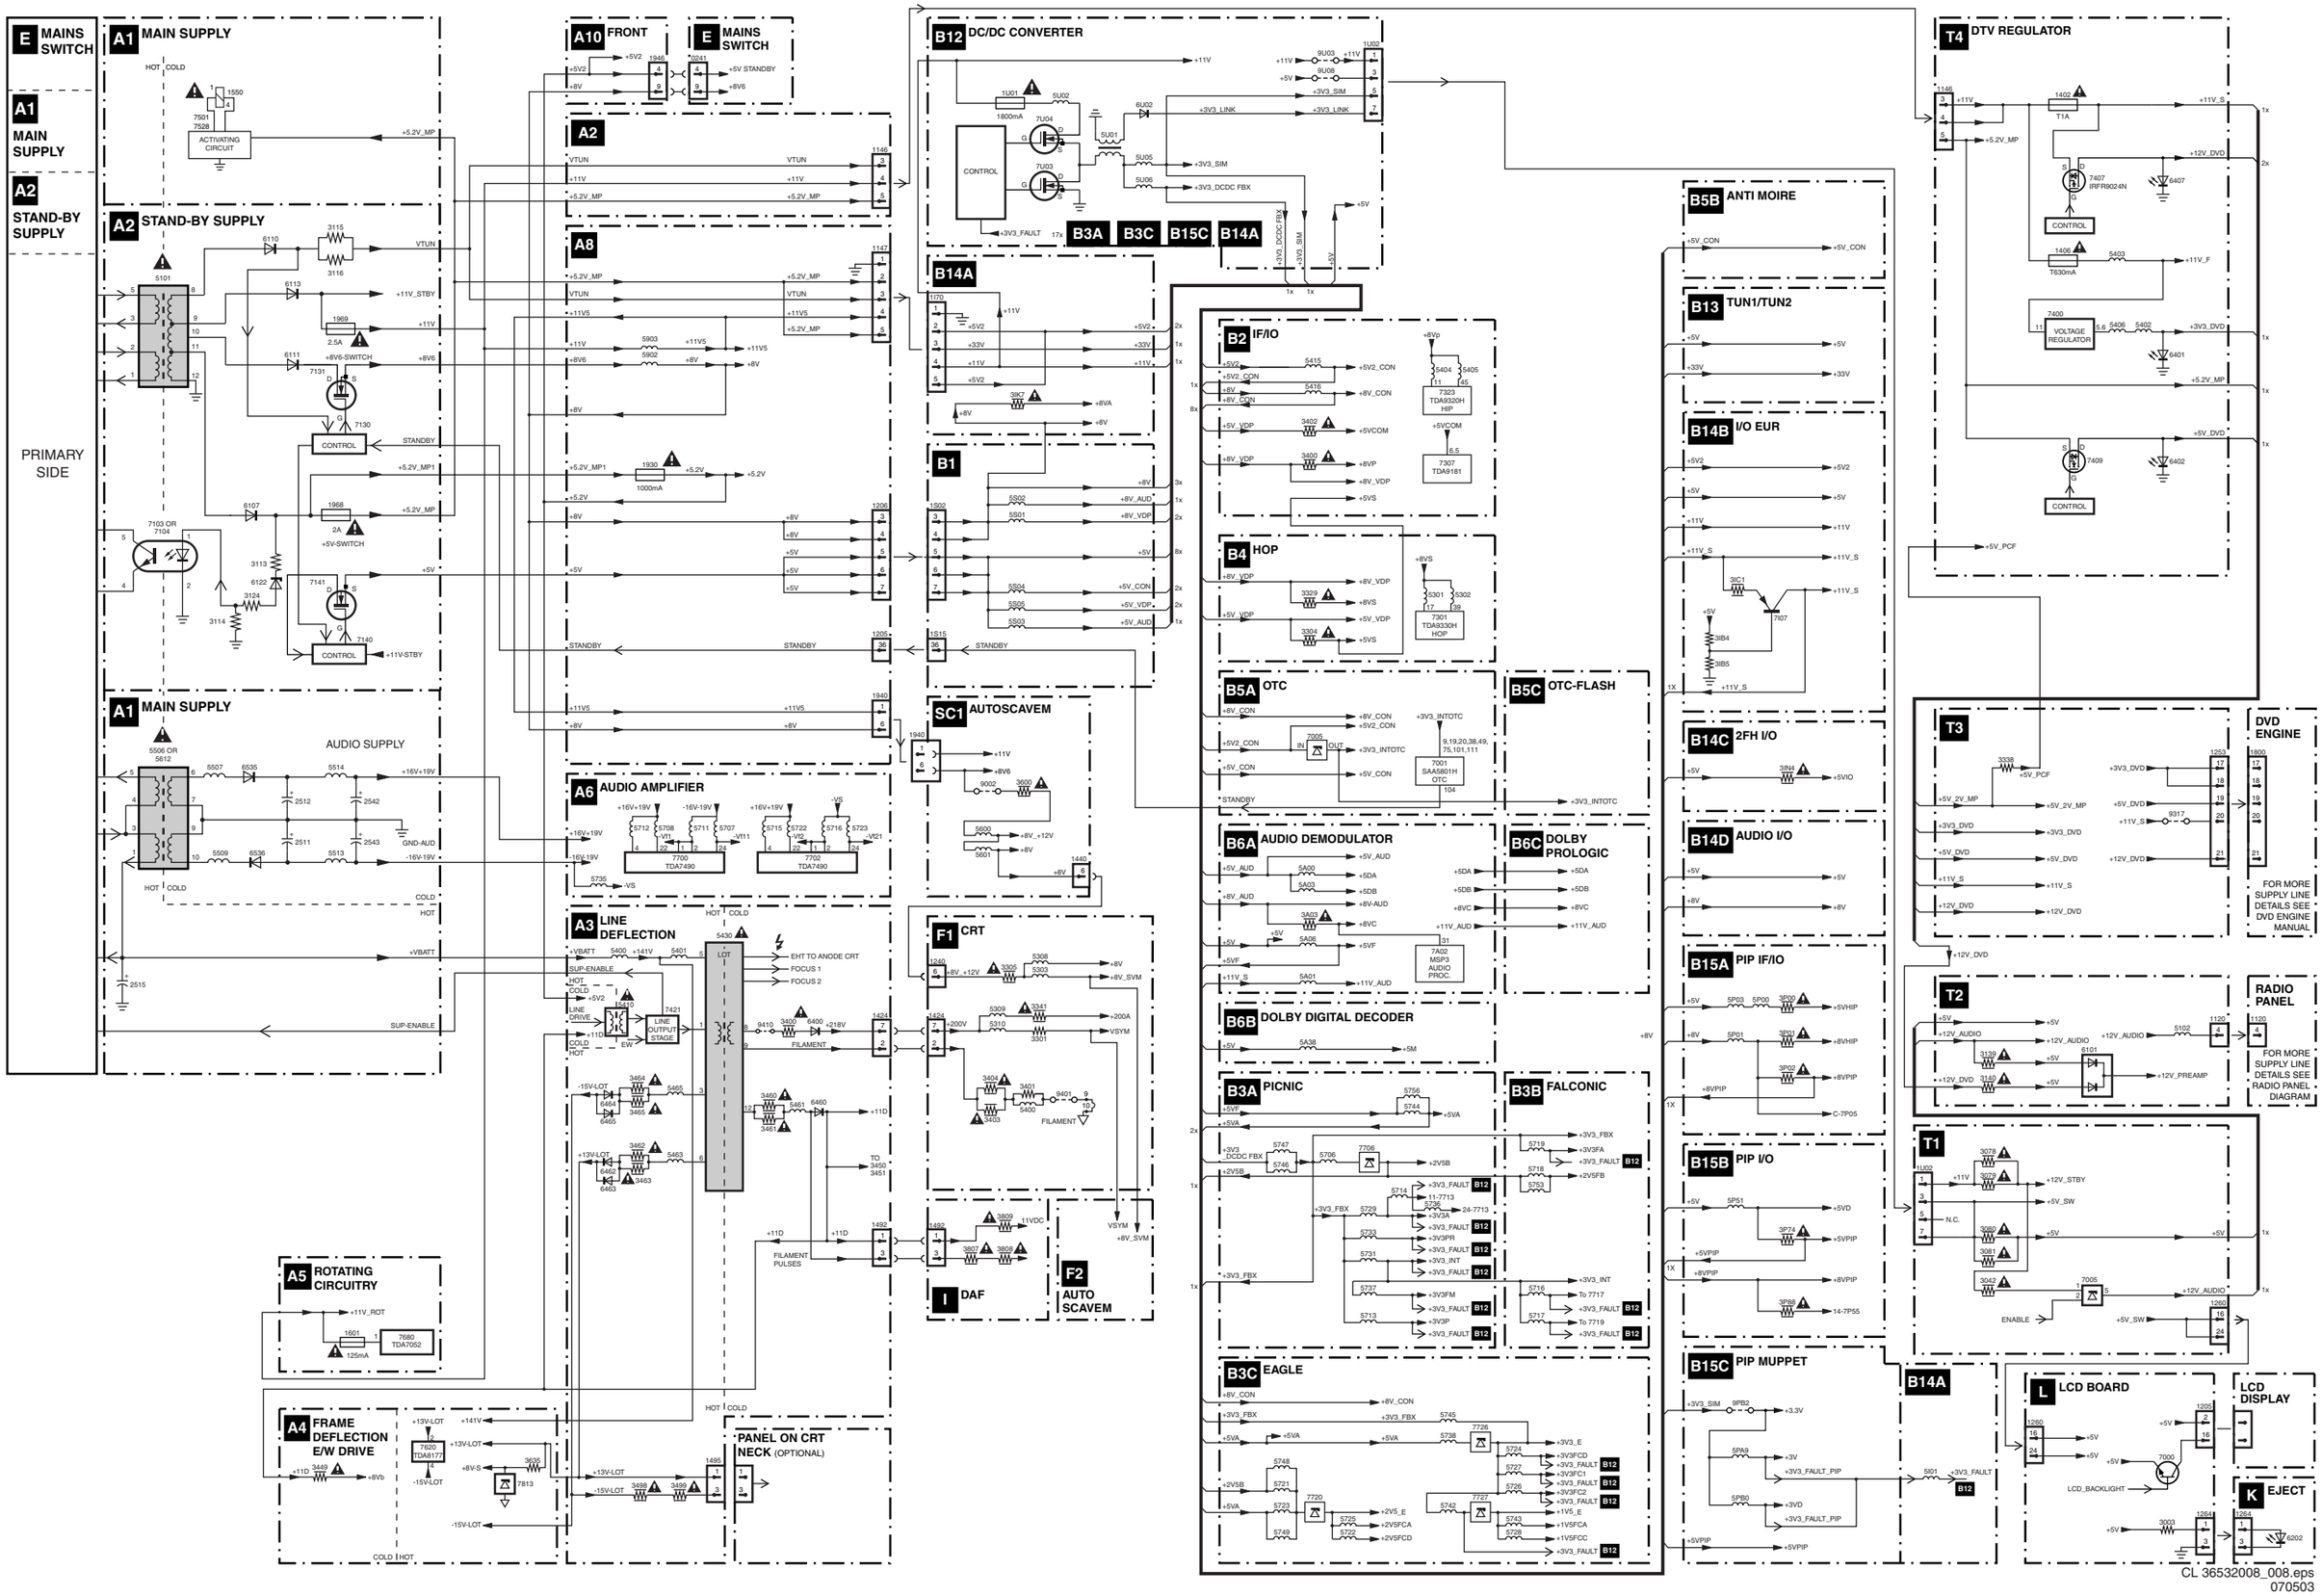

CL 36532008_008.eps
070503

Block Diagram Wireless Kit


BLOCK DIAGRAM WIRELESS KIT

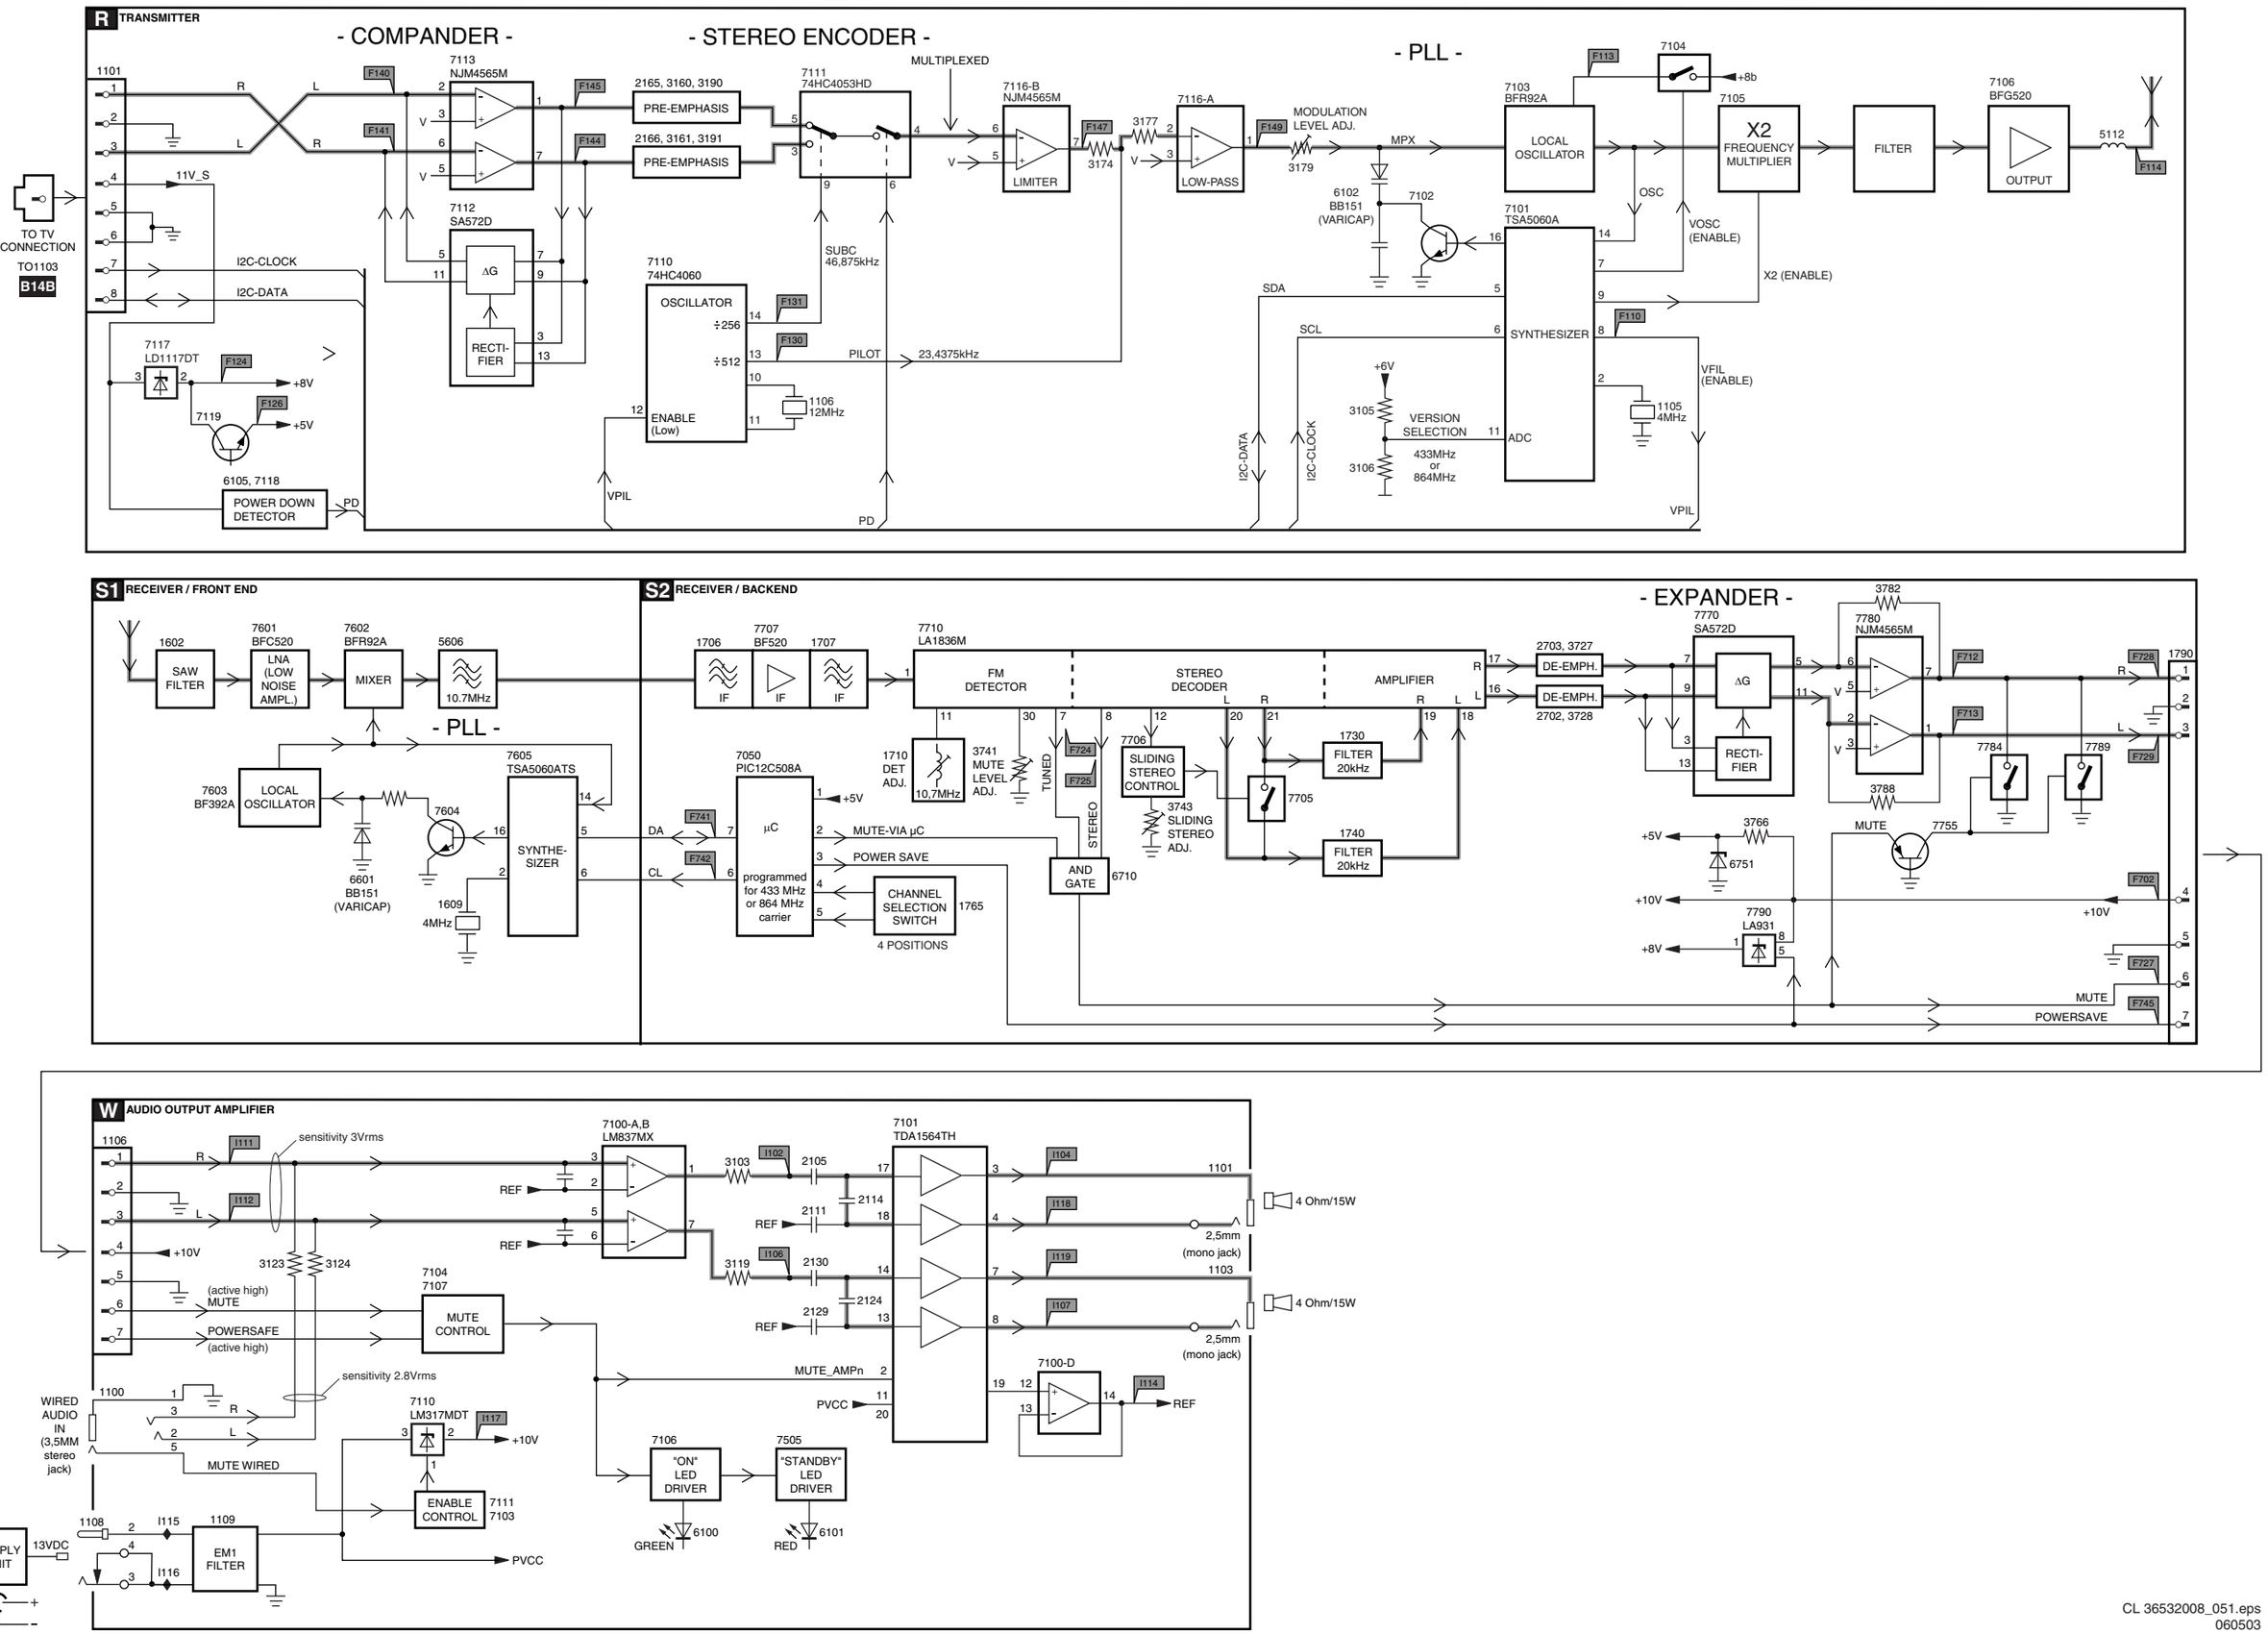


CL 36532008_051.eps
060503

7. Circuit Diagrams and PWB Layouts

Large Signal Panel: Main Supply

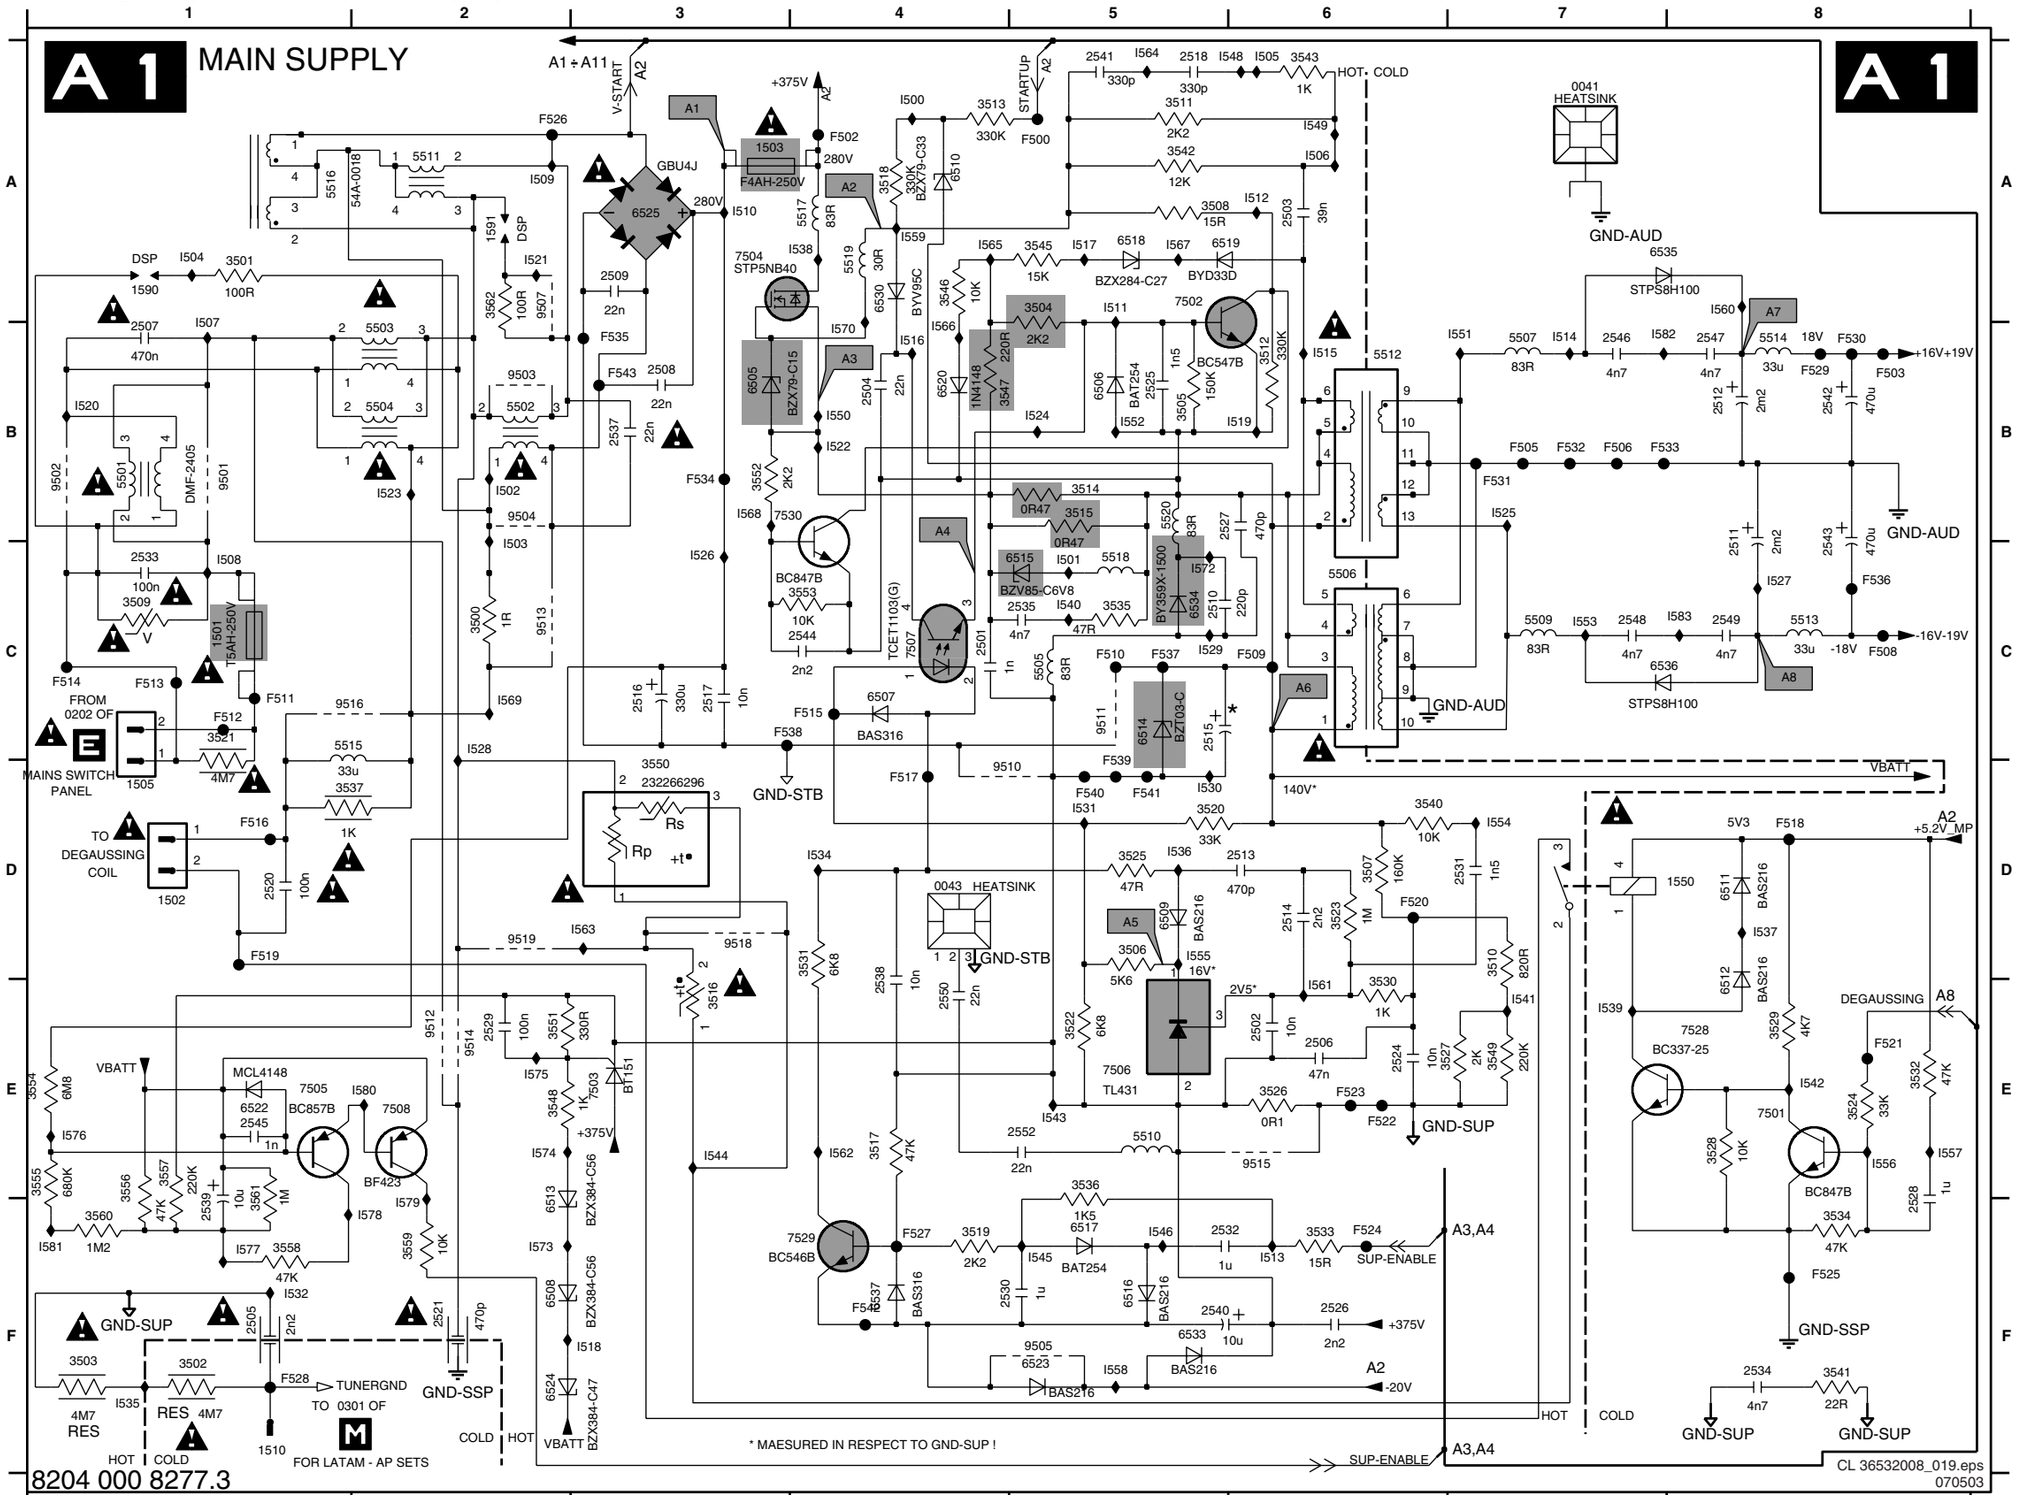

0041 A7	3506 D5	5511 A2	F502 A4	I523 B2	
0043 D4	3507 D6	5512 B6	F503 B8	I524 B5	
1501 C1	3508 A5	5513 C8	F505 B7	I525 B7	
1502 D1	3509 C1	5514 B8	F506 B7	I526 C3	
1503 A3	3510 D7	5515 C1	F508 C8	I527 C8	
1505 D1	3511 A5	5516 A1	F509 C6	I528 C2	
1510 F1	3512 B6	5517 A4	F510 C5	I529 C5	
A 1550 D8	3513 A4	5518 C5	F511 C1	I530 D5	
1590 A1	3514 B5	5519 A4	F512 C1	I531 D5	
1591 A2	3515 B5	5520 B5	F513 C1	I532 F1	
2501 C4	3516 E3	6505 B3	F514 C1	I534 D4	
2502 E6	3517 E4	6506 B5	F515 C4	I535 F1	
2503 A6	3518 A4	6507 C4	F516 D1	I536 D5	
2504 B4	3519 F4	6508 F2	F517 D4	I537 D8	
2505 F1	3520 D5	6509 D5	F518 D8	I538 A4	
2506 E6	3521 C1	6510 A4	F519 D1	I539 E7	
2507 B1	3522 E5	6511 D8	F520 D6	I540 C5	
B 2508 B3	3523 D6	6512 E8	F521 E8	I541 E7	
2509 A3	3524 E8	6513 F2	F522 E6	I542 E8	
2510 C5	3525 D5	6514 C5	F523 E6	I543 E5	
2511 C8	3526 E6	6515 C5	F524 F6	I544 E3	
2512 B8	3527 E7	6516 F5	F525 F8	I545 F5	
2513 D6	3528 E8	6517 F5	F526 A2	I546 F5	
2514 D6	3529 E8	6518 A5	F527 F4	I548 A6	
2515 C5	3530 E6	6519 A5	F528 F1	I549 A6	
2516 C3	3531 D4	6520 B4	F529 B8	I550 B4	
2517 C3	3532 E8	6522 E1	F530 B8	I551 B7	
C 2518 A5	3533 F6	6523 F5	F531 B7	I552 B5	
2520 D1	3534 F8	6524 F2	F532 B7	I553 C7	
2521 F2	3535 C5	6525 A3	F533 B7	I554 D7	
2524 E6	3536 E5	6530 A4	F534 B3	I555 D5	
2525 B5	3537 D1	6533 F5	F535 B3	I556 E8	
2526 F6	3540 D6	6534 C5	F536 C8	I557 E8	
2527 B6	3541 F8	6535 A7	F537 C5	I558 F5	
2528 F8	3542 A5	6536 C7	F538 C3	I559 A4	
2529 E2	3543 A6	6537 F4	F539 D5	I560 A8	
D 2530 F5	3545 A5	7501 E8	F540 D5	I561 E6	
2531 D7	3546 A4	7502 A5	F541 D5	I562 E4	
2532 F5	3547 B4	7503 E3	F542 F4	I563 D3	
2533 C1	3548 E2	7504 A3	F543 B3	I564 A5	
2534 F8	3549 E7	7505 E1	I500 A4	I565 A4	
2535 C5	3550 D3	7506 E5	I501 C5	I566 B4	
2537 B3	3551 E2	7507 C4	I502 B2	I567 A5	
2538 E4	3552 B3	7508 E2	I503 C2	I568 B3	
2539 F1	3553 C4	7528 E8	I504 A1	I569 C2	
2540 F5	3554 E1	7529 F4	I505 A6	I570 B4	
E 2541 A5	3555 E1	7530 B3	I506 A6	I572 C5	
2542 B8	3556 E1	9501 B1	I507 B1	I573 F2	
2543 C8	3557 E1	9502 B1	I508 C1	I574 E2	
2544 C4	3558 F1	9503 B2	I509 A2	I575 E2	
2545 E1	3559 F2	9504 B2	I510 A3	I576 E1	
2546 B7	3560 F1	9505 F5	I511 A5	I577 F1	
2547 B8	3561 E1	9507 A2	I512 A6	I578 F2	
2548 C7	3562 A2	9510 D4	I513 F6	I579 F2	
2549 C8	5501 B1	9511 C5	I514 B7	I580 E2	
2550 E4	5502 B2	9512 E2	I515 B6	I581 F1	
F 2552 E5	5503 B2	9513 C2	I516 B4	I582 B7	
3500 C2	5504 B2	9514 E2	I517 A5	I583 C8	
3501 A1	5505 C5	9515 E6	I518 F3		
3502 F1	5506 C6	9516 C1	I519 B6		
3503 F1	5507 B7	9518 D3	I520 B1		
3504 A5	5509 C7	9519 D2	I521 A2		
3505 B5	5510 E5	F500 A5	I522 B4		

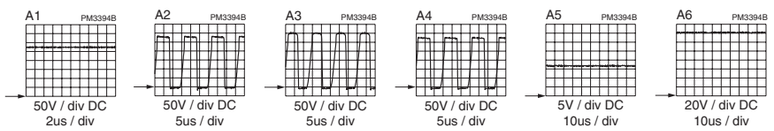


MAIN SUPPLY REPAIR KIT: 3122 785 90550

About DC-voltages measured:
- NORMAL ..V.
- STANDBY (..V.)

Large Signal Panel: Stand-by Supply

1146 D10	2109 E7	2123 D4	2153 E4	3103 C1	3117 C3	3134 A9	3149 D4	3169 A2	5106 D6	6105 C3	6118 B3	6144 D2	7131 A8	F102 A6	F114 E7	F143 E6	I113 C6	I125 C4	I139 E2	I152 A8	I166 C3	I183 A1	I198 E3
1968 C10	2110 D2	2124 E3	2154 E9	3104 C2	3118 C4	3135 B10	3150 C3	3170 B2	5107 A4	6106 E2	6119 B3	6147 D4	7140 E9	F103 C9	F115 E7	I100 A5	I114 C7	I126 D1	I140 E2	I153 B8	I167 D3	I184 E7	I199 A1
1969 B7	2111 D1	2129 A5	2155 A2	3105 C1	3120 A1	3137 C7	3151 A10	3171 A8	5108 C4	6107 C6	6120 D6	6148 D8	7141 D10	F104 C8	F116 E10	I103 B5	I115 C3	I127 D1	I141 E6	I154 A10	I168 D4	I185 A10	
2100 C5	2112 D3	2131 A9	2157 A3	3106 B1	3121 A3	3138 D2	3152 D2	3172 B9	5110 A5	6108 D2	6121 E6	6149 D8	9115 E5	F105 C9	F117 E10	I104 B6	I116 C6	I128 A3	I142 E7	I155 D4	I169 E4	I187 B9	
2101 C1	2113 B6	2140 E8	2158 A6	3107 B1	3122 A5	3140 A8	3153 B8	3173 B9	5112 B6	6109 B2	6122 E7	7100 E1	9116 E5	F106 C6	F118 E10	I105 B7	I117 C1	I129 D2	I143 A8	I157 D9	I170 E4	I188 A2	
2102 B1	2114 B2	2141 B9	2159 C2	3108 C4	3123 D6	3141 D8	3155 D9	3175 E8	5113 C4	6110 A6	6130 A8	7101 C3	9123 C4	F107 E10	F119 A4	I106 A4	I118 C1	I130 D2	I144 E7	I158 E8	I171 E9	I189 A7	
2103 C1	2115 C7	2143 B6	2160 A8	3109 C8	3124 E6	3142 E8	3159 C8	3176 E9	5114 C8	6111 D6	6131 B10	7102 B3	9124 B6	F108 E10	F120 D10	I107 B5	I119 C4	I131 D6	I145 A2	I160 A2	I172 A8	I191 B8	
2104 C6	2117 D6	2144 D3	2161 A2	3111 C1	3125 D1	3144 A8	3160 D3	5101 B5	5115 B7	6113 B6	6132 A10	7103 E6	9126 C10	F109 E10	F121 A9	I108 B1	I120 C4	I132 D7	I146 E2	I161 A3	I173 C4	I192 C2	
2105 C1	2118 C6	2145 C2	2162 C2	3113 D7	3126 E2	3145 E3	3161 A8	5102 C1	5131 B1	6114 E2	6133 B8	7104 E5	9128 A1	F110 E10	F122 D1	I109 B1	I121 C6	I133 D7	I147 E5	I162 A3	I176 A10	I193 D9	
2106 B2	2119 C7	2147 D9	2163 A1	3114 E6	3127 E2	3146 E4	3162 C2	5103 C6	5132 A1	6115 C3	6134 B8	7105 D3	9129 A1	F111 D7	F123 A9	I110 B4	I122 C3	I134 A3	I149 A4	I163 A2	I180 B8	I195 C2	
2107 C6	2121 A2	2149 E7	3101 C2	3115 A6	3130 A8	3147 E3	3166 C8	5104 B4	6103 B1	6116 D4	6141 D9	7120 A3	F100 A1	F112 B1	F124 D9	I111 C1	I123 C1	I135 D7	I150 C2	I164 A2	I181 B8	I196 D3	
2108 A4	2122 A2	2152 A4	3102 D1	3116 A6	3132 B9	3148 C3	3167 C8	5105 C4	6104 C2	6117 B2	6142 D3	7130 B9	F101 B7	F113 B1	F126 B10	I112 C2	I124 C4	I136 A1	I151 C7	I165 C1	I182 B10	I197 D3	

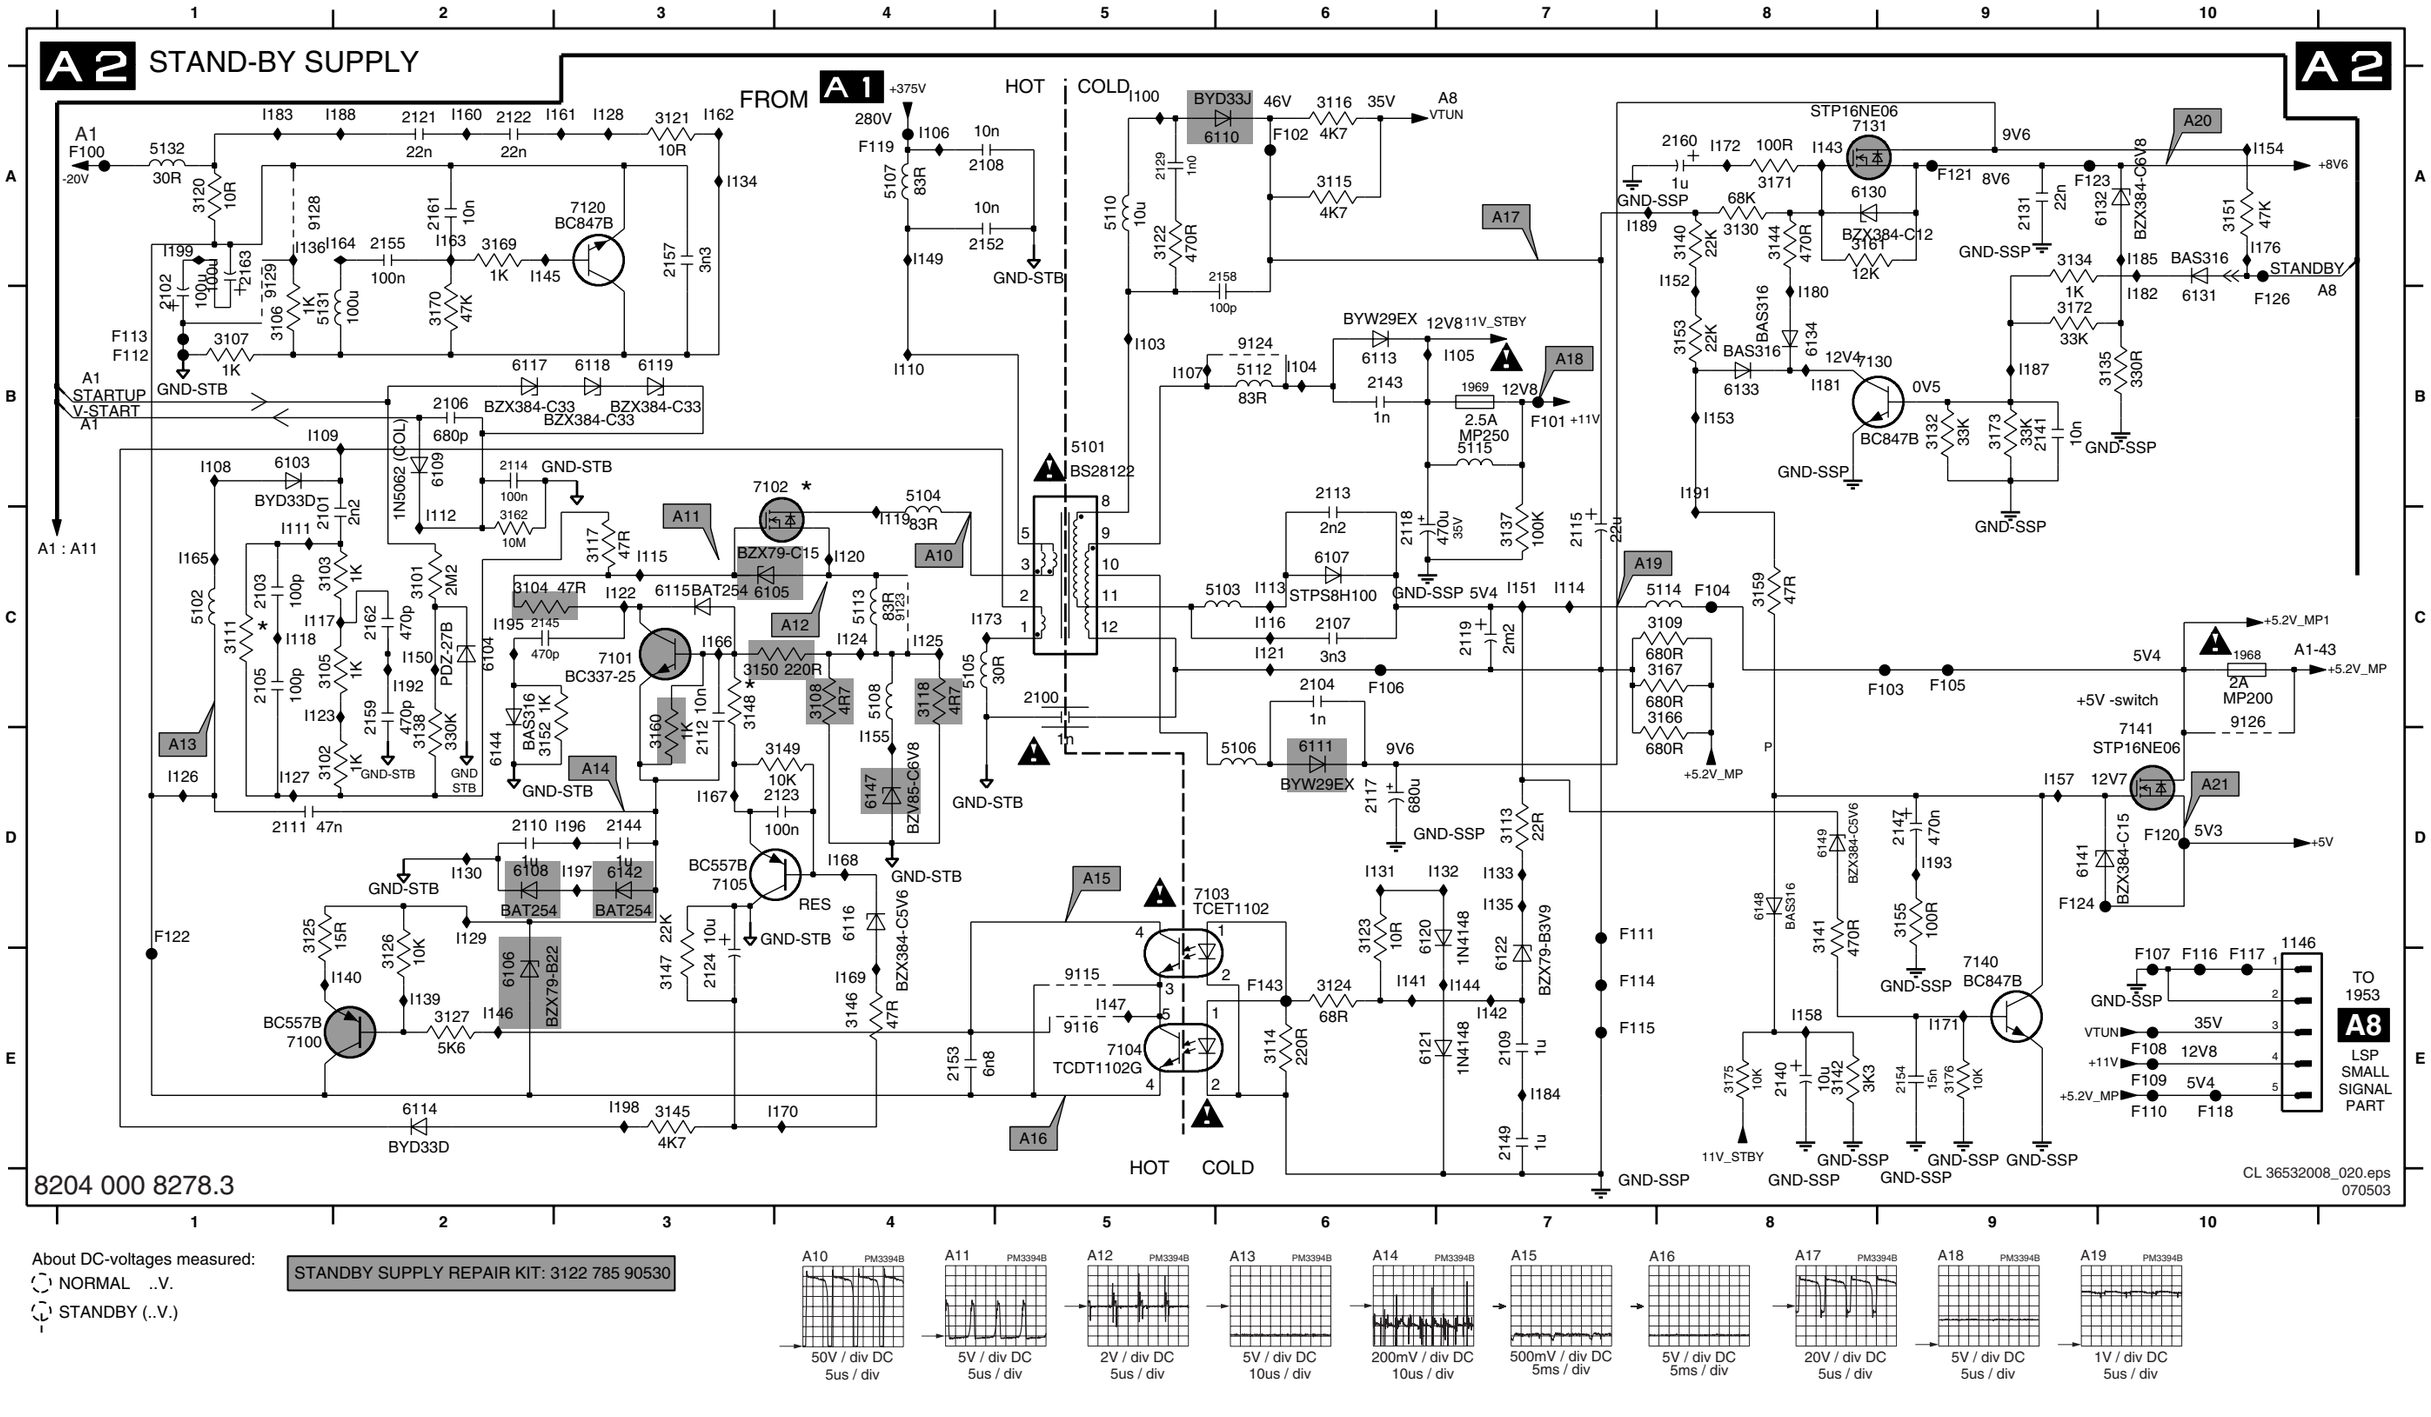


About DC-voltages measured:
- NORMAL ..V.
- STANDBY (..V.)

STANDBY SUPPLY REPAIR KIT: 3122 785 90530

Large Signal Panel: Line Deflection

0042 F8 1498 D13 2413 B4 2422 E6 2433 D8 2445 H12 2468 E11 3402 F9 3415 A4 3436 D8 3446 G12 3460 E11 3499 A12 5422 E7 5465 B10 6409 F10 6422 C7 6465 B11 9417 C6 F403 A6 F411 B8 F419 C2 F429 D12 F438 C11 I405 A6 I414 A11 I424 B11 I432 C8 I440 C9 I457 E11 I474 G3 I482 E11 I491 H11
1417 B8 1499 D13 2414 B4 2423 E6 2434 D8 2450 D10 2469 E10 3404 D4 3416 A4 3437 F11 3447 F12 3461 E11 3689 E10 5423 B7 5466 E10 6410 F11 6423 B8 7407 H11 9423 B8 F404 A12 F412 B8 F421 C11 F430 D12 F439 H13 I406 A6 I416 A4 I425 B10 I433 C7 I441 C8 I458 E12 I475 G4 I483 D11 I492 H11
1424 C13 2400 D6 2415 C3 2424 D8 2435 B7 2460 E13 2488 B7 3406 C3 3417 C5 3440 F3 3448 H10 3462 A10 5400 D6 5424 E7 5469 D10 6411 G10 6434 E8 7408 C5 9425 C7 F405 D6 F413 B13 F422 C11 F431 E13 F440 G10 I407 A7 I417 A9 I426 B5 I434 C8 I443 D10 I460 E12 I476 F4 I484 E11 I493 G12
1430 A9 2401 E8 2417 C5 2425 B6 2440 F4 2461 E12 2492 C3 3407 C4 3423 B8 3441 F3 3450 C10 3463 A10 5401 E9 5425 C7 6400 D11 6412 G10 6435 D8 7409 C4 9426 A6 9623 B5 F407 D6 F414 B12 F423 C6 F432 E13 I400 A3 I408 A3 I418 B7 I427 B10 I435 C3 I444 D8 I461 F10 I477 F9 I485 H12 I494 G12
1491 D12 2402 E12 2418 C6 2426 B7 2441 G12 2462 A11 2494 A6 3409 B5 3425 C7 3442 G4 3451 C11 3464 A10 5402 A7 5426 A6 6401 H12 6413 G10 6460 E12 7421 B6 9623 B5 F407 D6 F415 B6 F424 C6 F433 F13 I401 E9 I409 A5 I419 B8 I428 B10 I436 C3 I445 D11 I463 F11 I478 C9 I487 F10 I495 G10
1492 E14 2405 G9 2419 C8 2427 F10 2463 A11 2495 A7 3410 A6 3426 C7 3443 F4 3452 H11 3465 B10 5410 B5 5430 C10 6406 C3 6414 H10 6462 A11 7445 G3 F400 D6 F408 B6 F416 B8 F425 C6 F434 C5 I402 A4 I410 A10 I420 B9 I429 B11 I437 C5 I447 D9 I466 F10 I479 A12 I488 F11 I496 B13
1493 D10 2409 C4 2420 C6 2431 C8 2443 G12 2464 B11 3400 D11 3411 B4 3427 E6 3444 G11 3453 H11 3469 E12 5411 B5 5431 E12 6407 A4 6415 H10 6463 A11 9401 E9 F401 D6 F409 A12 F417 C8 F426 D3 F436 C11 I403 C7 I411 A11 I421 D10 I430 B4 I438 C6 I454 D12 I471 E10 I480 B12 I489 H10 I497 E11
1495 A13 2412 B4 2421 E7 2432 D7 2444 H10 2465 B11 3401 E9 3414 C4 3435 D8 3445 G11 3454 F11 3498 A12 5421 C8 5463 A10 6408 A4 6421 A7 6464 B11 9410 E10 F402 D6 F410 A12 F418 C4 F427 D4 F437 G2 I404 D5 I413 A10 I422 B4 I431 B5 I439 C4 I455 E8 I473 F3 I481 B11 I490 H10

A3 LINE DEFLECTION

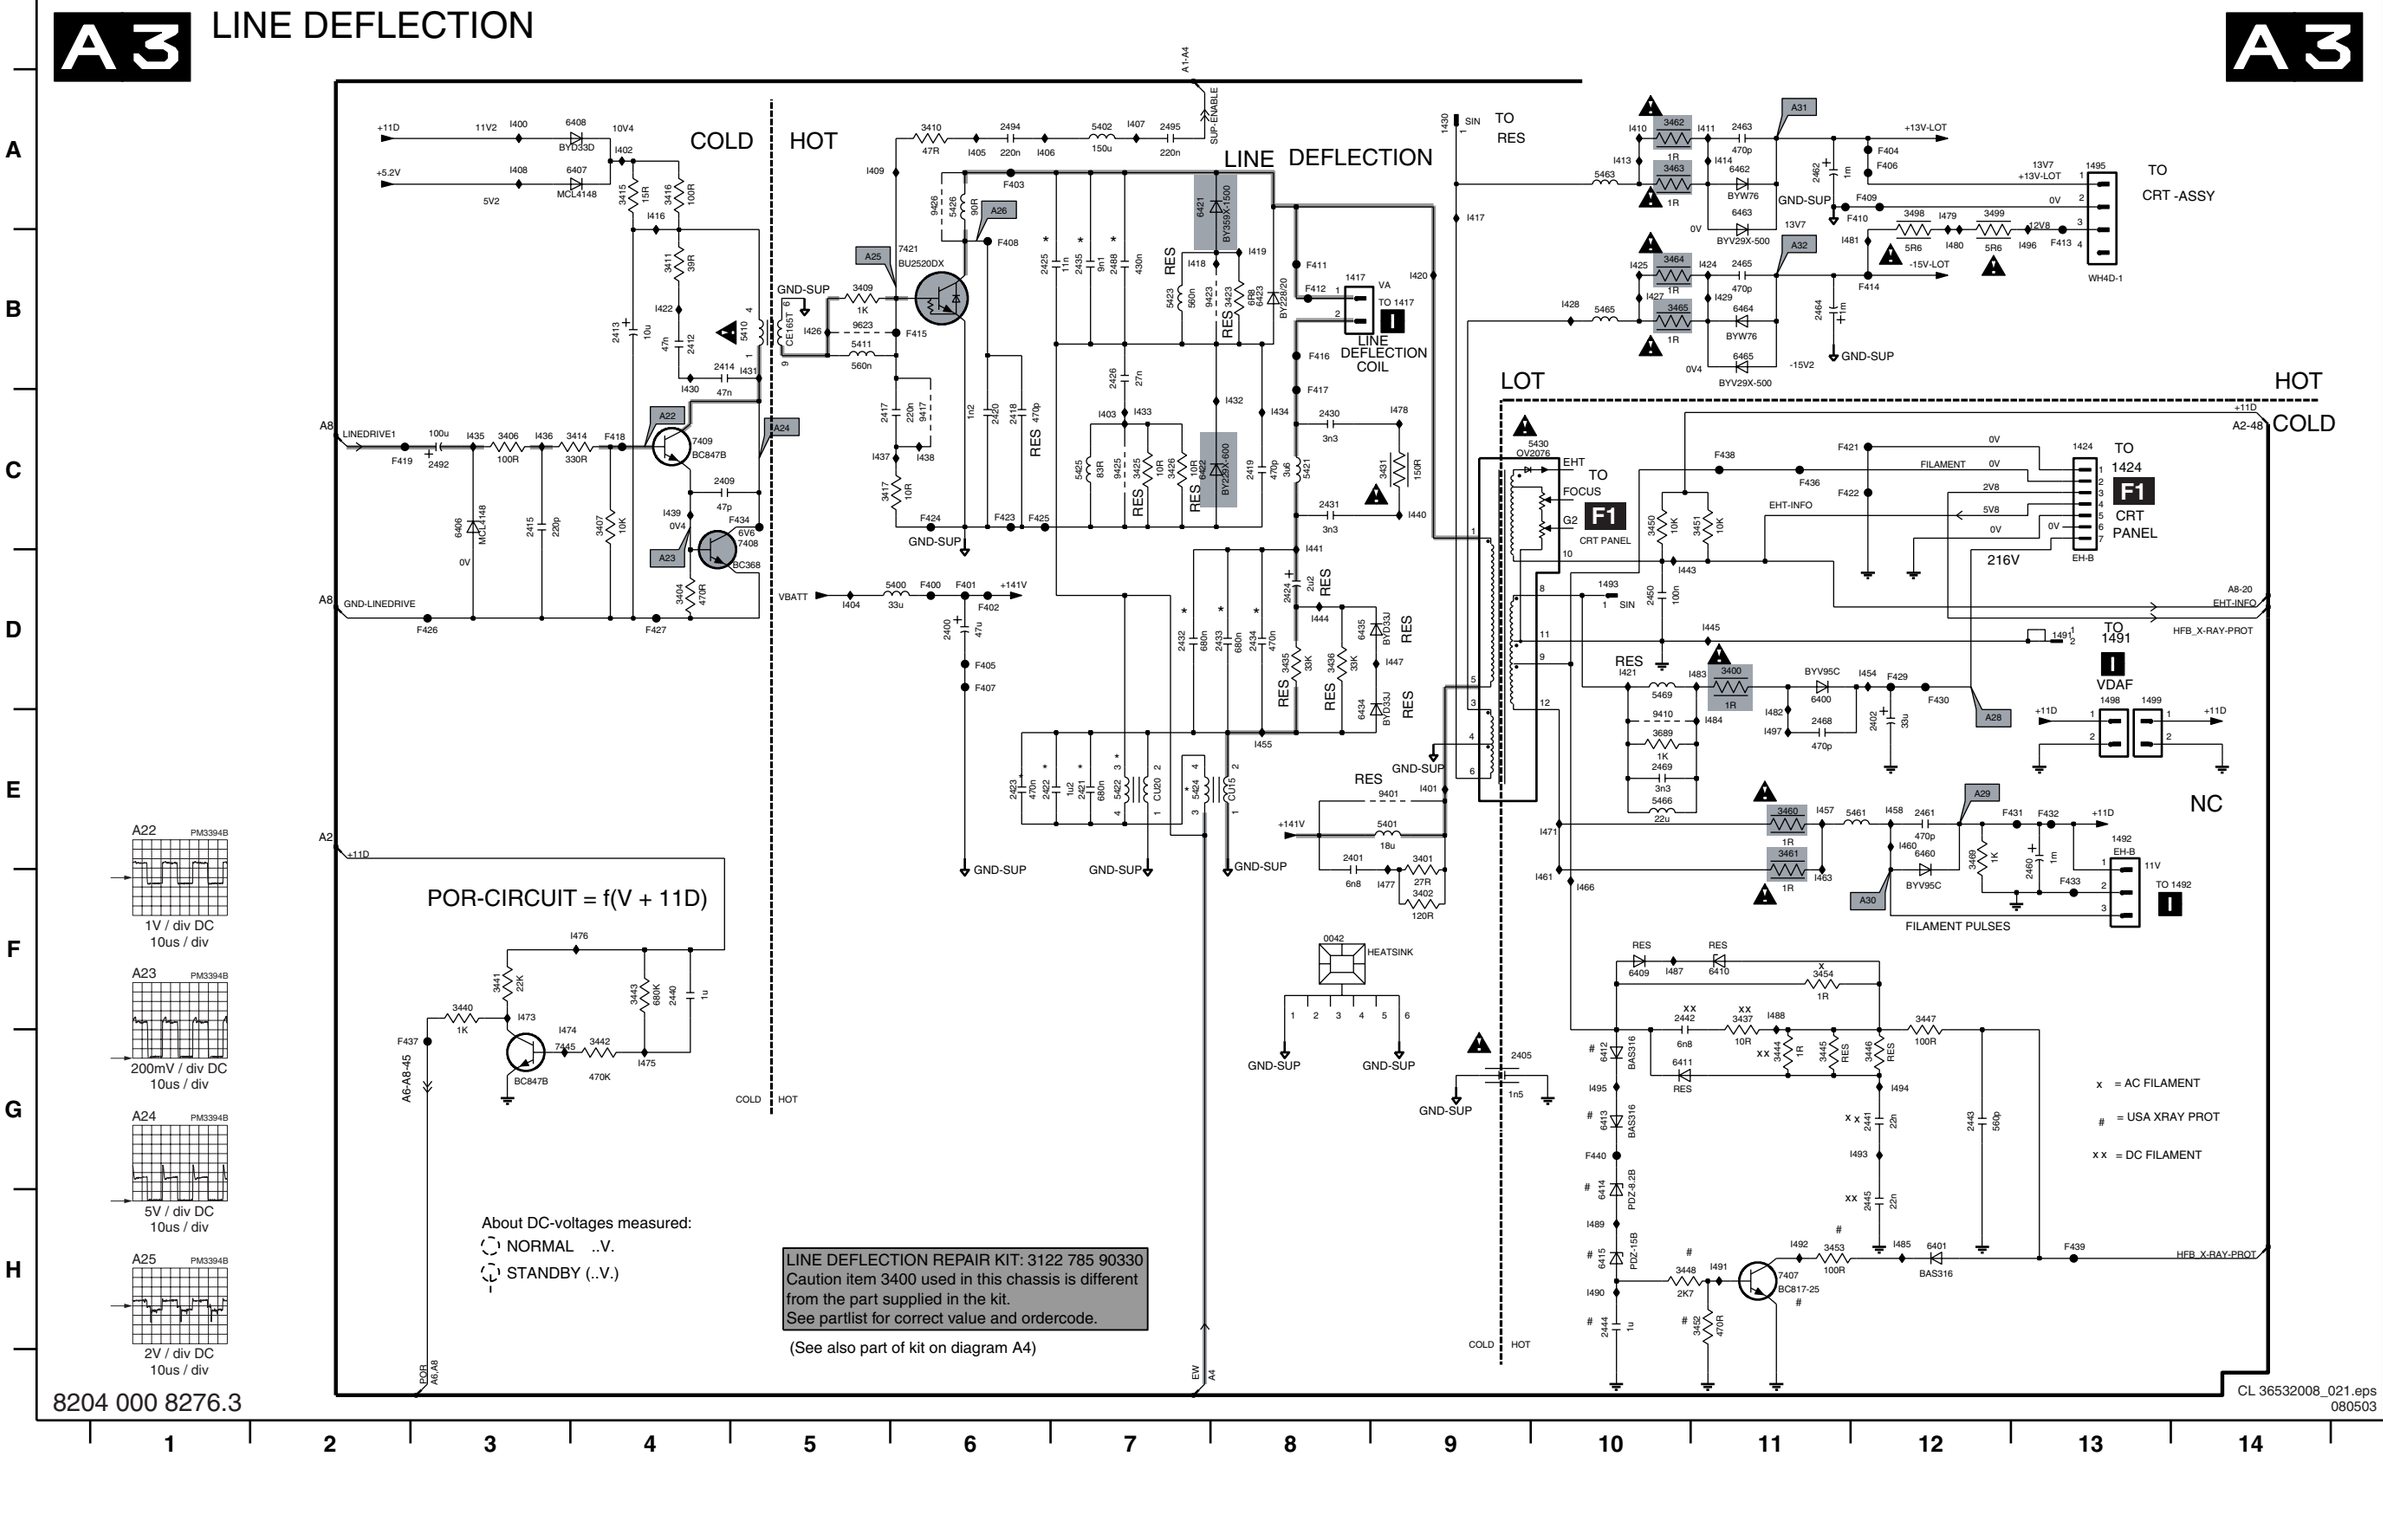

POR-CIRCUIT = f(V + 11D)

About DC-voltages measured:
- NORMAL ..V.
- STANDBY (..V.)

x = AC FILAMENT
# = USA XRAY PROT
xx = DC FILAMENT

LINE DEFLECTION REPAIR KIT: 3122 785 90330
Caution item 3400 used in this chassis is different from the part supplied in the kit.
See partlist for correct value and ordercode.

(See also part of kit on diagram A4)

A22 PM3394B — 1V / div DC, 10us / div
A23 PM3394B — 200mV / div DC, 10us / div
A24 PM3394B — 5V / div DC, 10us / div
A25 PM3394B — 2V / div DC, 10us / div

Large Signal Panel: Frame Deflection E/W Drive

1625 B13	2481 F9	2620 C9	2635 A8	3419 D3	3472 E12	3486 E3	3611 B3	3631 B7	3643 B8	3658 C2	5621 A5	6493 F12	6623 A11	7450-B F5	7641 A12	F602 A9	F614 E3	F628 E2	I610 A9	I622 A13	I634 C12	I646 D5	I658 F8	I670 D12	I692 F11
1627 C13	2482 G10	2621 D10	2642 B11	3420 C3	3474 E13	3487 F3	3620 D11	3632 C7	3644 A12	3659 C2	6405 A12	6494 F12	6624 C12	7455 D3	7652 B13	F603 A11	F615 F12	F629 C7	I611 A12	I623 A7	I635 C12	I647 C6	I659 F13	I671 E12	I693 B5
1693 F4	2487 A13	2622 A10	2653 D10	3421 D2	3475 F11	3488 E9	3621 D11	3633 B7	3645 A11	3660 B6	6442 B12	6499 F14	6625 A7	7480 F10	7653 F13	F604 A11	F616 D10	I600 A9	I612 A13	I624 B8	I636 C10	I648 A7	I660 F10	I672 A7	I694 A6
2403 D3	2490 E8	2623 C3	2656 B2	3422 D3	3476 E12	3489 F10	3622 D11	3634 C9	3646 C12	3661 C12	6455 E3	6614 C5	6626 A7	7482 F6	7654 E12	F605 B3	F617 D11	I601 A11	I613 A10	I625 B9	I637 C11	I649 D4	I661 F10	I673 A6	I695 A6
2404 D2	2491 F12	2624 C11	2657 B3	3449 F2	3478 F11	3490 E5	3623 D10	3635 A9	3647 C12	3662 B6	6456 F3	6615 E5	6627 A6	7483 E6	9405 F4	F606 B13	F618 D11	I602 B5	I614 F4	I626 B11	I638 F4	I650 E3	I662 F9	I674 B9	I696 F3
2448 B12	2493 G4	2625 C10	2659 C2	3455 C2	3479 F10	3491 F12	3624 C11	3636 A9	3648 D11	3663 C13	6457 F2	6616 C5	6628 C13	7486 F9	9481 F5	F607 B2	F621 E14	I603 E8	I615 A11	I627 C5	I639 C10	I651 E5	I663 F10	I675 D3	I697 F3
2451 F2	2497 E12	2627 C11	2660 F11	3456 D2	3480 F11	3492 E8	3625 C12	3637 A9	3652 A12	3664 C2	6458 G3	6617 B7	7440-A B3	7487 F8	9482 F7	F608 B11	F622 E13	I604 F2	I616 B12	I628 C3	I640 C12	I652 E12	I664 C11	I676 B12	I698 G2
2454 F3	2498 F14	2628 A8	2661 C8	3457 C4	3481 F10	3493 E8	3626 C12	3638 B8	3653 C11	3665 B12	6480 E10	6618 A7	7440-B D3	7611 A7	9483 E7	F609 B13	F623 F2	I605 D3	I617 B13	I629 B8	I641 B7	I653 E10	I665 F9	I677 C12	
2457 E4	2499 E13	2629 C12	2662 C3	3458 E3	3482 F9	3495 F13	3627 C12	3639 C6	3654 F4	3688 G10	6481 F9	6619 C12	7441 D3	7612 D6	9499 F13	F610 C2	F624 F11	I606 A13	I618 A9	I630 D13	I642 C9	I654 E5	I666 F7	I678 D2	
2458 E2	2603 C6	2630 B9	3403 A13	3459 E2	3483 F9	3496 F8	3628 A7	3640 A7	3655 B2	3690 C7	6482 F8	6620 A10	7442 D13	7613 A9	9620 B10	F611 C13	F625 F12	I607 F8	I619 A9	I631 C8	I643 D4	I655 E10	I667 F13	I679 E2	
2466 D12	2604 C9	2631 B9	3412 D5	3466 E12	3484 E8	3497 D13	3629 C12	3641 C6	3656 B2	5467 F10	6483 F10	6621 A10	7443 A13	7614 C5	9622 B11	F612 C13	F626 G3	I608 B8	I620 B11	I632 C11	I644 D2	I656 E9	I668 F10	I689 F10	
2480 F9	2605 C5	2633 D7	3418 E9	3467 A12	3485 F7	3610 B5	3630 B8	3642 B8	3657 C3	5620 B11	6491 E13	6622 B10	7450-A B4	7620 B10	F601 F2	F613 C2	F627 F11	I609 A11	I621 B4	I633 C11	I645 D3	I657 F7	I669 A12	I690 F4	

NOTE BRIDGECOIL PROTECTION (5422) IS TRIGGERED VIA EW)


About DC-voltages measured:
NORMAL ..V.
STANDBY (..V.)

8204 000 8276.3

CL 36532008_022.eps
080503


Large Signal Panel: Rotation Circuitry

1601 A2	3649 D1	3683 D1	3686 B1	6081 B3	6084 C1	7682 D3	F632 C2	I680 C1	I683 B3	I687 C2	I699 D1
1620 C4	3681 D2	3684 B2	3687 C3	6082 B2	7680 B2	F630 B4	F633 E2	I681 D2	I684 D1	I688 E2	
2601 B2	3682 E2	3685 C1	6080 C2	6083 C4	7681 D2	F631 C4	F634 B1	I682 D2	I685 B2	I691 C1	

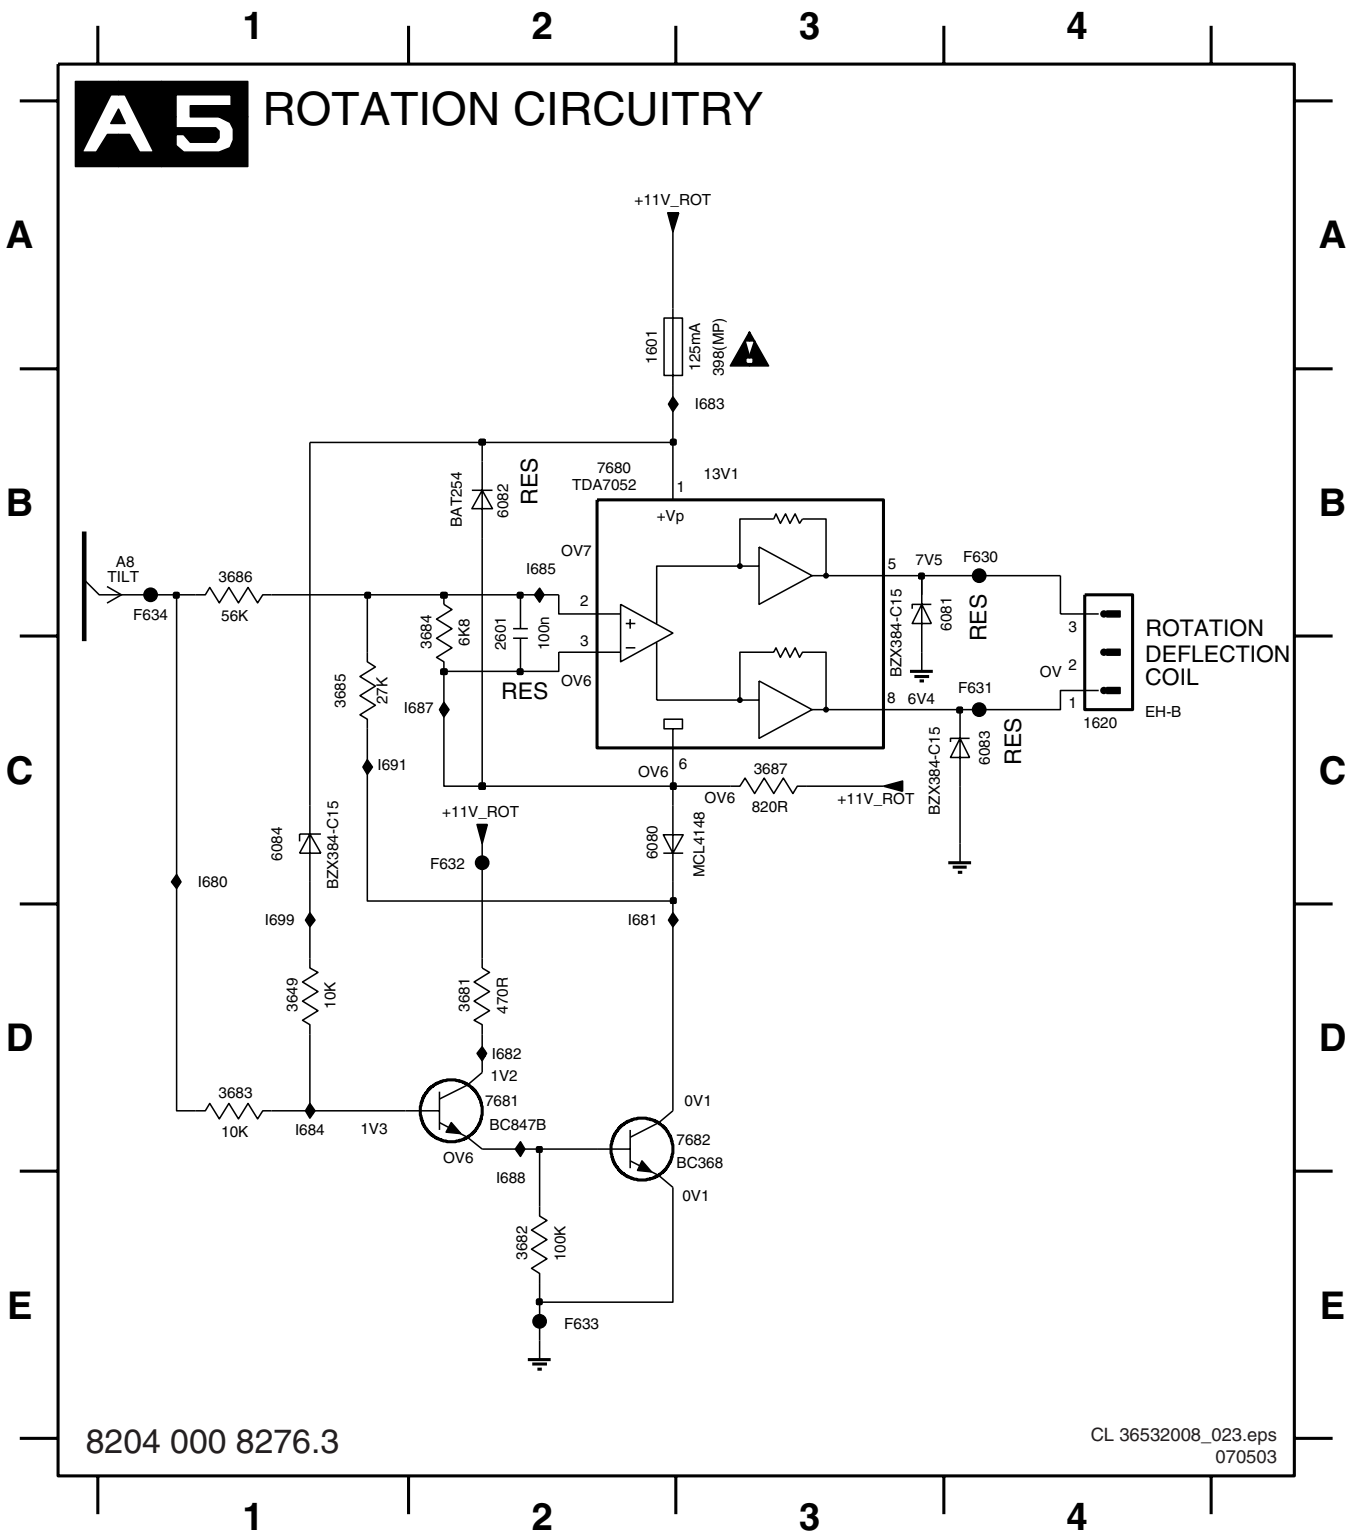

Large Signal Panel: Audio Amplifier

A6 AUDIO AMPLIFIER

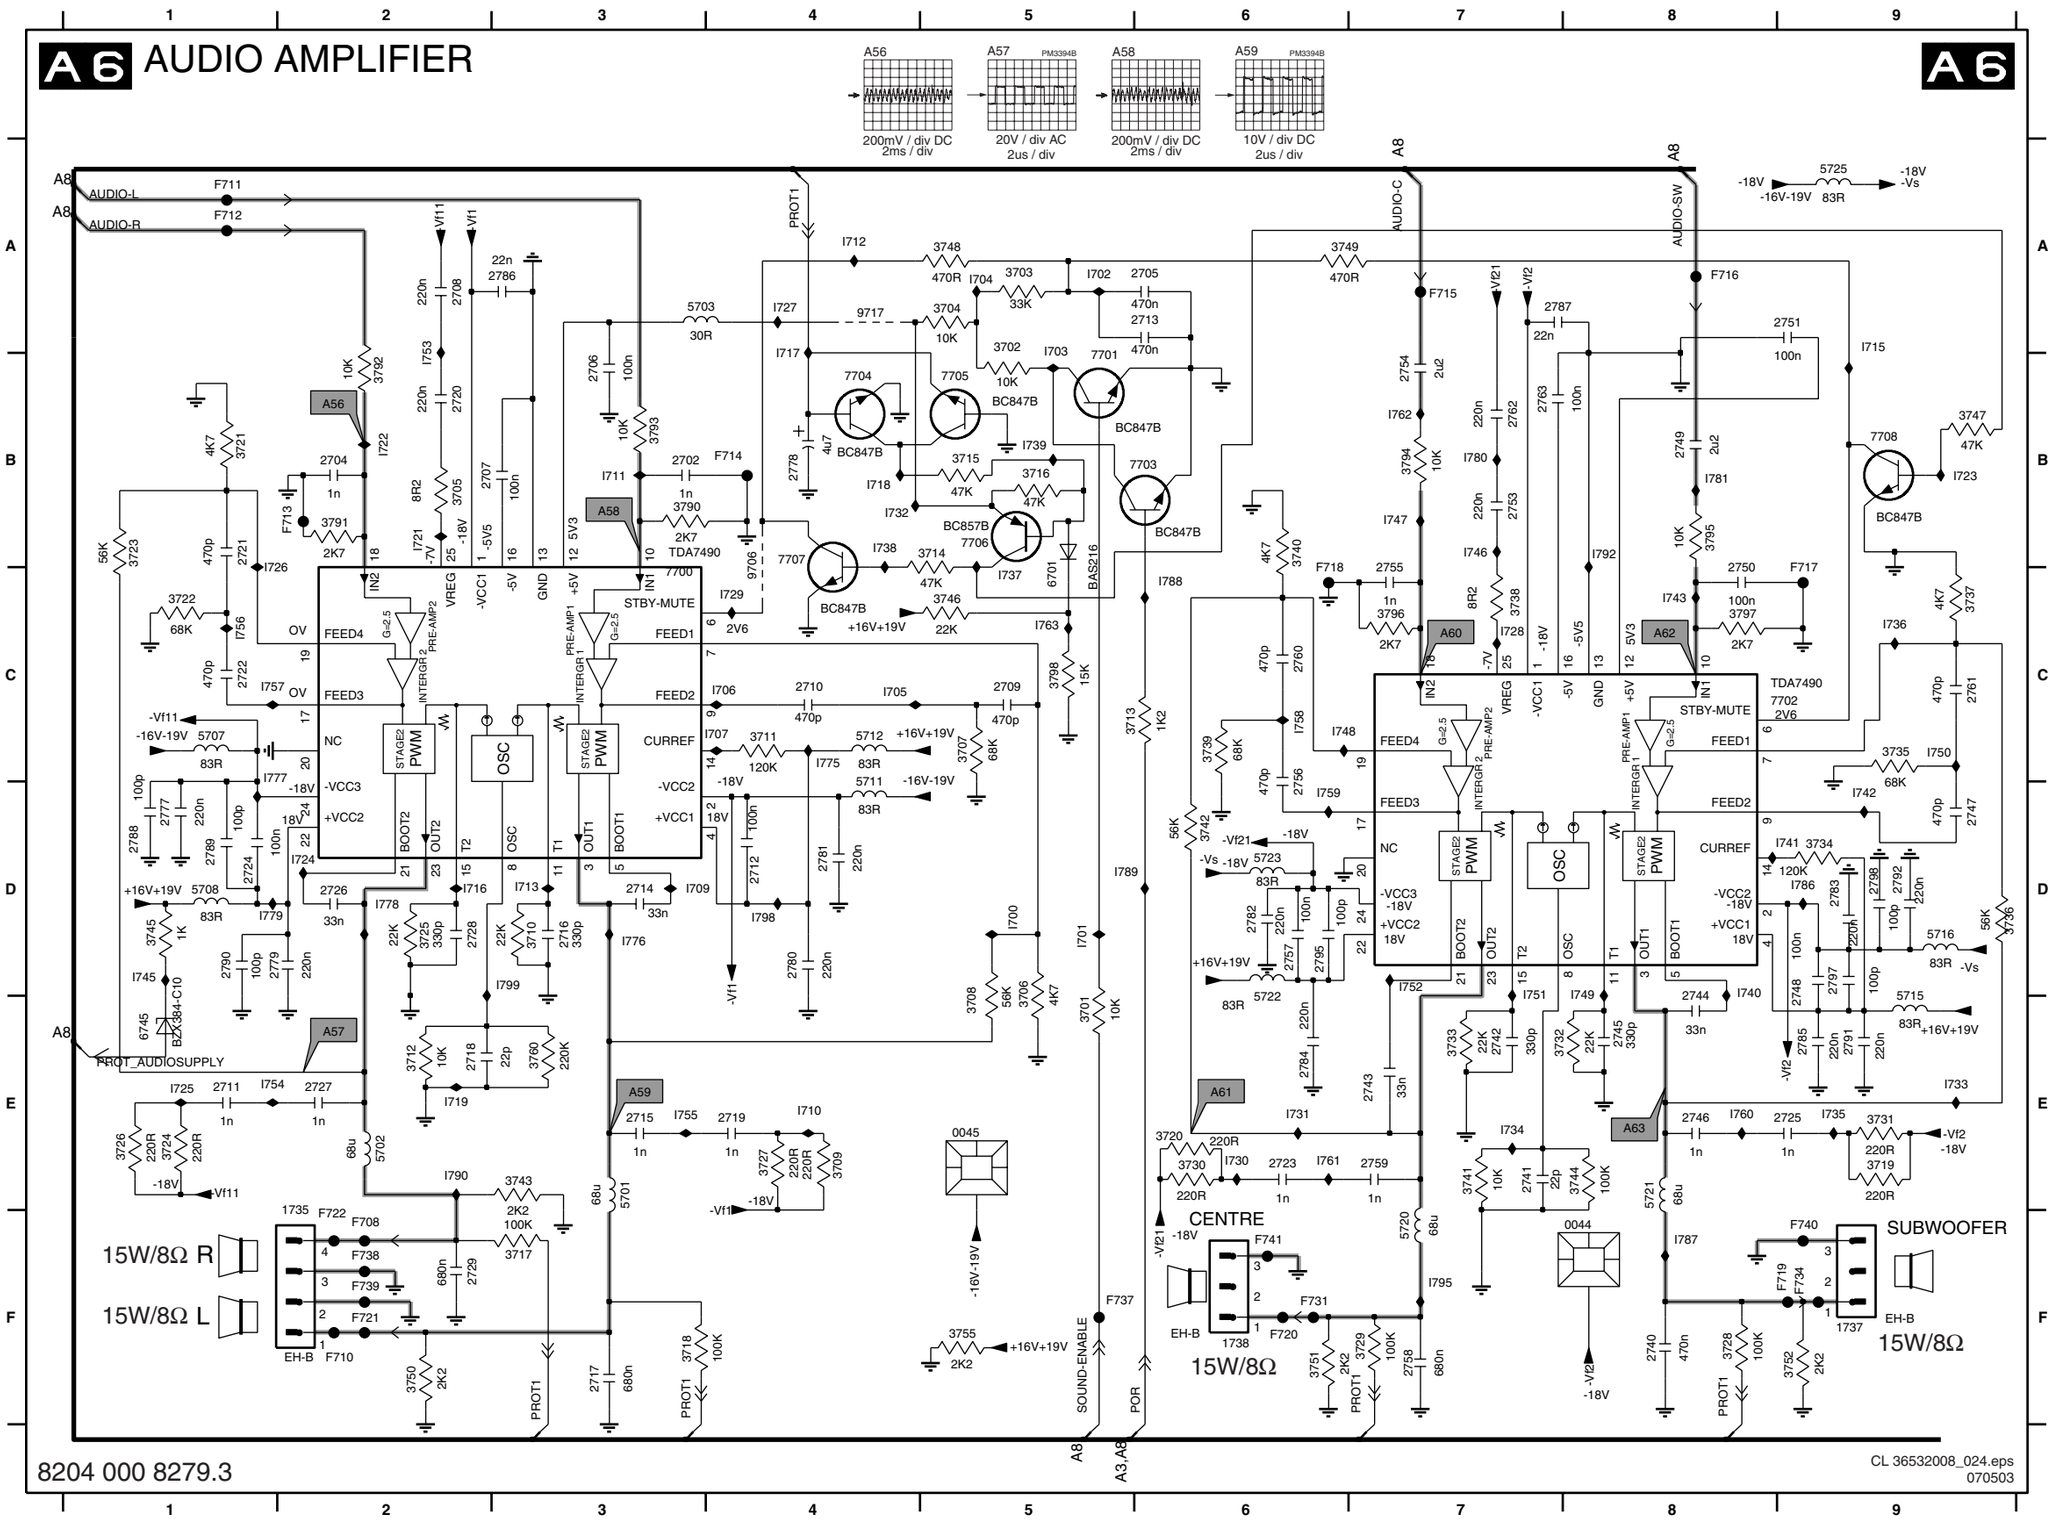

	0044 F8	2785 E9	3755 F5	I704 A5	I786 D9
	0045 E5	2786 A3	3760 E3	I705 C4	I787 F8
	1735 E2	2787 A7	3790 B3	I706 C4	I788 C6
	1737 F9	2788 D1	3791 B2	I707 C4	I789 D5
	1738 F6	2789 D1	3792 B2	I709 D3	I790 E2
	2702 B3	2790 D1	3793 B3	I710 E4	I792 B8
	2704 B2	2791 E9	3794 B7	I711 B3	I795 F7
	2705 A6	2792 D9	3795 B8	I712 A4	I798 D4
A	2706 B3	2795 D6	3796 C7	I713 D3	I799 D3
	2707 B2	2797 D9	3797 C8	I715 A9	
	2708 A2	2798 D9	3798 C5	I716 D2	
	2709 C5	3701 E5	5701 E3	I717 A4	
	2710 C4	3702 A5	5702 E2	I718 B4	
	2711 E1	3703 A5	5703 A3	I719 E2	
	2712 D4	3704 A5	5707 C1	I721 B2	
	2713 A6	3705 B2	5708 D1	I722 B2	
	2714 D3	3706 D5	5711 D4	I723 B9	
B	2715 E3	3707 C5	5712 C4	I724 D2	
	2716 D3	3708 E5	5715 E9	I725 E1	
	2717 F3	3709 E4	5716 D9	I726 B1	
	2718 E2	3710 D3	5720 F7	I727 A4	
	2719 E4	3711 C4	5721 E8	I728 C7	
	2720 B2	3712 E2	5722 E6	I729 C4	
	2721 B1	3713 C6	5723 D6	I730 E6	
	2722 C1	3714 B5	5725 A9	I731 E6	
	2723 E6	3715 B5	6701 C5	I732 B4	
	2724 D1	3716 B5	6745 E1	I733 E9	
C	2725 E9	3717 F3	7700 B3	I734 E7	
	2726 D2	3718 F3	7701 B5	I735 E9	
	2727 E2	3719 E9	7702 C8	I736 C9	
	2728 D2	3720 E6	7703 B5	I737 C5	
	2729 F2	3721 B1	7704 B4	I738 B4	
	2740 F8	3722 C1	7705 B5	I739 B5	
	2741 E7	3723 B1	7706 B5	I740 D8	
	2742 E7	3724 E1	7707 B4	I741 D9	
	2743 E7	3725 D2	7708 B9	I742 D9	
D	2744 E8	3726 E1	9706 B4	I743 C8	
	2745 E8	3727 E4	9717 A4	I745 D1	
	2746 E8	3728 F8	F708 F2	I746 B7	
	2747 D9	3729 F7	F710 F2	I747 B7	
	2748 D9	3730 E6	F711 A1	I748 C6	
	2749 B8	3731 E9	F712 A1	I749 D8	
	2750 C8	3732 E8	F713 B2	I750 C9	
	2751 A9	3733 E7	F714 B4	I751 D7	
	2753 B7	3734 D9	F715 A7	I752 D7	
	2754 B7	3735 C9	F716 A8	I753 A2	
E	2755 C7	3736 D9	F717 C9	I754 E1	
	2756 C6	3737 C9	F718 C6	I755 E3	
	2757 D6	3738 C7	F719 F9	I756 C1	
	2758 F7	3739 C6	F720 F6	I757 C1	
	2759 E7	3740 B6	F721 F2	I758 C6	
	2760 C6	3741 E7	F722 F2	I759 D6	
	2761 C9	3742 D6	F731 F6	I760 E8	
	2762 B7	3743 E3	F734 F9	I761 E6	
	2763 B7	3744 E8	F737 F5	I762 B7	
F	2777 D1	3745 D1	F738 F2	I763 C5	
	2778 B4	3746 C5	F739 F2	I775 C4	
	2779 D2	3747 B9	F740 F9	I776 D3	
	2780 D4	3748 A5	F741 F6	I777 C1	
	2781 D4	3749 A6	I700 D5	I778 D2	
	2782 D6	3750 F2	I701 D5	I779 D1	
	2783 D9	3751 F6	I702 A5	I780 B7	
	2784 E6	3752 F9	I703 A5	I781 B8	

Large Signal Panel: Small Signal Part

A8 LSP SMALL SIGNAL PART

A8

+8V6 — 5902 33u — +8V

+11V — 5903 33u — +11V5

+5.2V_MP1 — 1930 1A MP100 — +5.2V

EHT-INFO

3433 470K — 2489 33n — GND — 7403 BC847B — +11V5

6404 BAS316

3434 220K — 6403 BZX384-C5V6 — EW-DRIVE

3430 330K

3427 56K — 6402 BAS316 — 3428 680K

2486 10n — GND

3429 100K — 2483 4n7

3432 560K

F904 — 2950 1n RES

1936

Y_CVBS-FRONT-IN
C-FRONT-IN
L-FRONT-IN
FRONT-DETECT
R-FRONT-IN
HEADPH-L
HEADPH-R

F905 F906 F924 EH-B

TO 0241 SIDE I/O

TO COMPAIR CONNECTOR

F914 F915 F916 — 1943 SDA-S SCL-S — EH-S

3261 100R — 3262 100R

c001 GND — c002 GND-LINEDRIVE — F920

1955 SDA-S SCL-S — EH-B

I904 I905

SDA-S SCL-S

TO 1955 SC1 AUTO SCAVEM

1940

I959

HFB_X-RAY-PROT +11V5
EHT-INFO F907
F908 F909 +8V
R-CRT F910
G-CRT F911
B-CRT F912
CUTOFF F913

GND-SSP GND-RGB-CRT

TO 1940 SC1 AUTO SCAVEM

PANORAMA — I902 — 9918 — I923 — 1932 — PH-B — RESERVED NC

1966 PH-B NC RES

SCL-S SDA-S

SDA-S
SCL-S

A4 A3,A4 HFB_X-RAY-PROT 9908 I927

1951 SDA-S SCL-S +5V +8V — I924 I928 — B5B-EH-A — RESERVED NC

VTUN 9907
+5.2V RES 9904
+5V 9906 RES
+8V 9931 RES
+11V5 9901 RES
VTUN 9902 RES
I925

1937 — B10B-EH-A — NC

9936 9940

I922 VA HA — 1948 — PH-B — NC

TO 1101 TS TIMESHIFT INTERFACE or TO 1146 T4 DTV REGULATOR

1952 — B5B-PH-K — 11V — 1953 — B5B-EH-A

TO 1146 A2 STANDBY SUPPLY

+8V — 3211 2K2 — I907 — 3212 100R — 7210 BC847B

3213 15R — I903 — 7211 BC817-25

A6 PROT_AUDIOSUPPLY F917 — 3210 1K

1147 — +5.2V_MP +11V5 VTUN +5.2V_MP — 35V I932

TO 1I70 B14A

A1-A11

A10 A10 A10 A10

A6 A6 A6 A6

A3 A4 A4 A4 A5 A2 A6

CUTOFF B-CRT G-CRT R-CRT LINEDRIVE1 I910 GND-LINEDRIVE I911 FRAMEDRIVE+ I912 FRAMEDRIVE- I913 GND I914 EW-DRIVE I915 HFB_X-RAY-PROT I916 EHT-INFO 2455 DYN-FASE-COR I918 TILT 2947 4n7 I919 STANDBY LIGHT-SENSOR I929 IRQ-DIGITAL I930 +5.2V 2941 100n I931 Y-SCAVEM +8V 2942 100n I935 +5V 2943 100n I936 +5V +8V SDA-S SCL-S POR I940 SOUND-ENABLE I941

FRONT-DETECT I942 Y_CVBS-FRONT-IN I943 C-FRONT-IN I944 L-FRONT-IN I945 R-FRONT-IN I946 HEADPH-L 2948 100u I947 HEADPH-R 2949 100u I948 GND-AUD

AUDIO-C I952 AUDIO-SW I953 AUDIO-L 2945 2u2 I954 AUDIO-R 2946 2u2 I951 GND-AUD I955 ON-OFF-LED I956 RC I957 KEYBOARD I958 DEGAUSSING I960

I901 8967 1 SIN — LIGHTNING CABLE — 9949 9950

TO B1 1S15 — 1205 — 0V1 8V4 8V4 5V2 5V2 5V2 0V 2V2 — 1206 — TO B1 1S02


A1 ÷ A11

8204 000 8280.3

CL 36532008_025.eps 070503


1147 E12 I941 H8
1205 H1 I942 H10
1206 H12 I943 H10
1930 A8 I944 H10
1932 E7 I945 H10
1936 C5 I946 H10
1937 B12 I947 H10
1940 E5 I948 H10
1943 D3 I951 H11
1948 C12 I952 H11
1951 A12 I953 H11
1952 D11 I954 H11
1953 D12 I955 H11
1955 E3 I956 H12
1966 F7 I957 H12
2455 G5 I958 H12
2483 C7 I959 E5
2489 B6 I960 H12
2496 C6 c001 E1
2941 H6 c002 F1
2942 H7
2943 H7
2945 G11
2946 G11
2947 G6
2948 G10
2949 H10
2950 C5
3210 E9
3211 E9
3212 E10
3213 D10
3261 D2
3262 E3
3427 C6
3428 C7
3429 C7
3430 B7
3432 C7
3433 B6
3434 B7
5902 B1
5903 C1
6402 C7
6403 B7
6404 B6
7210 E9
7211 E10
7403 B6
8967 H1
9901 C11
9902 C11
9904 B11
9906 B11
9907 B10
9908 B9
9918 E7
9931 C11
9936 C10
9940 D10
9949 H3
9950 H3
F904 C4
F905 D5
F906 D5
F907 E4
F908 E4
F909 E4
F910 E4
F911 E4
F912 E4
F913 F4
F914 D3
F915 D3
F916 D3
F917 E9
F920 F2
F924 D5
I901 H1
I902 E6
I903 E10
I904 E2
I905 E3
I907 E9
I910 H4
I911 H4
I912 H5
I913 H5
I914 H5
I915 H5
I916 H5
I918 H6
I919 H6
I921 H6
I922 D11
I923 E7
I924 A11
I925 C11
I927 B10
I928 A11
I929 G6
I930 H6
I932 E11
I936 H7
I940 H8

Large Signal Panel: Front

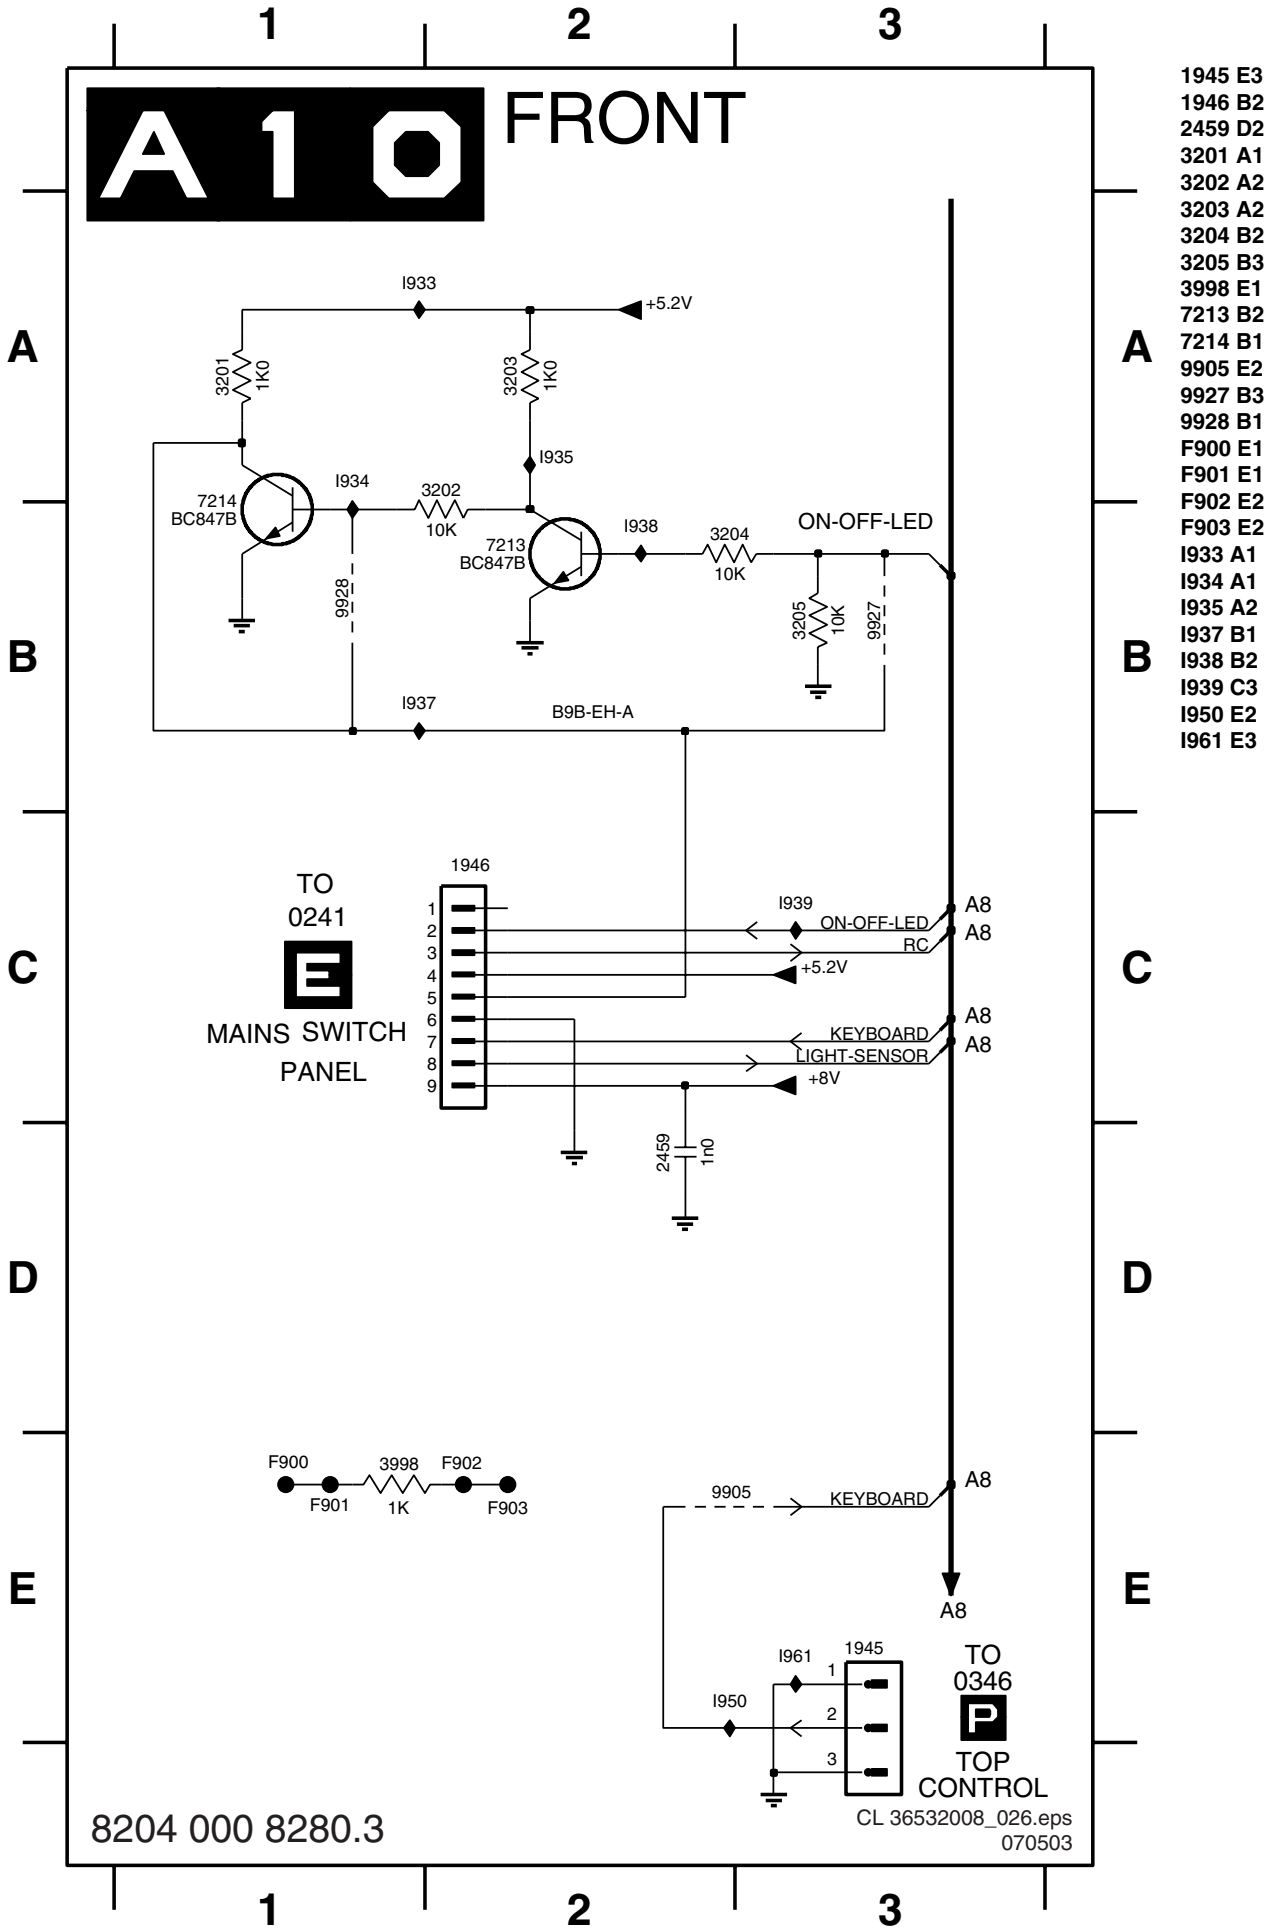


Layout Large Signal Panel (Top Side)

0041 F3 0042 C8 0043 C5 0044 E7 0045 F5 1146 G2 1147 G2 1205 F9 1206 F8 1417 B8 1424 A10
1430 C9 1491 A7 1492 A10 1493 A8 1495 C10 1498 A10 1499 D9 1501 A2 1502 A3 1503 C3 1505 A2
1510 D5 1550 C3 1590 A3 1591 B4 1601 G1 1620 F1 1625 B10 1627 B10 1693 D9 1735 G5 1737 E7
1738 E7 1901 E10 1902 F10 1930 G4 1932 E8 1936 E7 1937 G8 1940 F9 1943 G10 1945 G7 1946 G5
1948 G8 1951 F7 1952 G10 1953 G10 1955 E8 1966 F8 1969 F2 2100 E3 2101 D2 2102 E2
2104 F3 2106 C2 2107 F3 2108 C2 2111 D1 2113 F3 2114 C1 2115 E1 2117 G3 2118 F2 2119 F3
2121 E2 2122 E2 2124 C1 2140 G2 2143 F2 2147 G2 2152 E3 2157 E2 2158 F1 2160 F1 2163 E1
2400 B6 2401 A7 2402 A10 2405 A7 2413 D8 2418 C8 2419 C7 2420 C8 2421 B6 2422 A5 2423 A6
2424 C5 2425 C7 2426 C6 2430 B7 2431 B7 2432 B6 2433 B6 2434 B6 2435 C8 2450 A10 2451 D10
2460 A10 2461 A10 2463 C9 2464 C10 2465 C9 2468 A9 2469 A8 2487 A7 2488 C8 2490 D6
2491 A6 2492 E8 2500 D4 2501 D4 2503 D3 2505 D5 2506 E5 2507 A2 2508 B5 2509 B4 2510 D4
2511 G5 2512 G5 2517 C4 2518 D3 2520 A3 2521 B2 2526 D4 2527 C3 2529 C5 2531 E4
2533 A2 2537 B4 2539 C5 2540 F3 2541 C3 2542 F4 2622 C10 2624 B10 2625 B10 2627 B10
2628 D10 2642 A6 2717 G5 2729 G6 2740 E7 2758 E7 2778 D6 2947 G3 2948 F7 2949 F7
3101 F1 3102 D2 3103 D2 3104 D2 3105 D2 3106 D1 3107 E1 3111 G1 3113 E2 3114 F1 3115 F1
3116 G2 3117 D2 3118 C2 3123 E1 3124 F1 3125 D1 3126 E1 3127 E1 3130 F1 3137 G1 3144 F2
3162 C1 3400 A9 3401 A7 3402 A7 3403 A7 3409 C9 3411 D8 3415 D8 3416 E8 3417 C8
3418 C6 3423 C7 3425 C6 3426 C6 3431 B7 3435 B6 3436 B5 3449 E9 3450 A10 3451 B10 3460 A10
3461 A10 3462 C9 3463 C9 3464 C9 3469 A10 3476 A7 3478 C6 3479 C6 3480 C6 3488 C5
3492 D7 3493 C6 3495 A6 3498 C9 3499 C10 3500 A4 3501 A3 3502 D6 3503 D5 3505 E3 3507 E4
3508 D4 3509 A2 3511 D3 3513 C3 3514 D5 3515 E5 3516 C3 3518 C3 3520 E4 3521 A2 3526 E5
3533 F4 3537 A3 3540 E4 3541 D5 3542 D3 3543 D3 3545 D3 3546 E3 3550 C4 3551 C5 3554 C5
3555 C5 3559 D5 3562 B4 3620 C10 3621 C10 3622 C10 3623 C10 3624 B10 3625 C10 3626 C10 3628 D9
3634 C10 3635 C9 3641 D10 3642 B10 3645 A7 3648 D10 3661 C10 3663 C10 3681 G1 3687 G1 3689 A8
3711 F6 3713 E6 3728 F6 3747 E6 3749 D7 3755 E6 3967 F10 3968 F10 3971 F10 3972 F10 3973 F10
3974 E10 3975 F10 3979 E10 3983 E10 3985 E10 3986 E10 3987 E10 3993 D10 3998 E1 5101 E2
5102 B8 5106 F3 5107 F3 5108 D2 5110 E2 5112 F2 5113 F2 5114 G2 5115 F2
5131 E2 5400 C5 5401 A7 5402 B8 5410 D9 5411 C8 5421 B7 5422 A6 5423 C7 5424 A6 5425 C7
5426 C8 5430 B10 5461 A10 5463 C9 5465 C8 5466 A8 5467 C6 5469 A8 5501 B1 5502 A5 5503 A3
5504 A3 5505 D4 5506 E5 5507 F4 5509 F5 5511 B4 5512 E5 5513 G5 5514 G4 5515 A3 5516 A5
5517 D4 5518 E5 5620 D3 5620 B10 5621 D10 5701 F6 5702 F6 5707 G6 5708 F6 5711 G5 5712 F6
5715 E7 5716 E6 5720 E7 5721 E6 5722 D7 5723 D7 5725 E5 5902 G3 5903 G1 6103 D1 6105 D3
6106 C1 6107 F3 6109 C2 6110 E2 6111 F3 6113 F3 6114 D1 6120 F1 6121 F1 6122 F1
6147 D3 6400 A9 6405 A7 6408 E8 6421 D8 6422 D7 6423 C7 6434 B6 6435 C6 6460 A10 6462 C9
6463 C9 6464 C9 6465 C9 6480 C7 6505 D4 6510 C3 6514 D5 6515 D5 6519 E3 6520 E3 6525 B5
6530 D3 6534 D3 6535 G4 6536 G5 6619 B10 6620 C10 6621 C10 6622 C10 7100 D1 7101 C2
7102 D2 7103 E1 7104 E1 7105 C1 7131 G4 7141 G3 7408 D8 7421 D8 7440 D9 7480 D6 7482 D8
7483 D8 7502 E3 7503 D5 7504 D4 7506 E4 7507 E4 7508 C5 7528 B2 7529 F4 7613 D9 7620 C10
7680 F1 7682 G1 7700 F6 7702 E6 8967 G6 9102 F2
9103 G3 9104 G2 9105 G3 9106 F3 9107 F2 9108 F2 9109 F3 9110 G3 9112 G2 9114 D2 9117 G3
9119 G1 9120 G2 9121 F2 9124 F2 9126 G2 9127 E2 9130 F2 9260 F10 9401 B7 9402 B5 9403 C5
9404 C5 9405 E9 9406 B7 9408 C10 9409 A10 9410 A8 9411 A10 9412 E8 9413 E9 9414 E9
9415 E9 9423 C7 9425 C6 9426 C8 9501 B2 9502 A2 9503 B4 9504 B5 9507 B4 9510 D4
9511 C4 9513 B5 9514 B3 9515 E5 9516 A4 9517 D4 9518 B3 9519 B4 9551 B4 9554 C4
9556 E5 9557 E4 9558 E4 9560 C5 9563 E5 9564 C3 9566 E4 9568 D5 9569 C5 9570 F5
9571 F5 9573 F4 9620 C10 9622 C10 9623 C9 9650 C10 9651 C10 9652 A10 9655 A10 9656 A10
9658 C8 9659 B6 9660 B6 9661 B5 9663 B5 9664 C10 9665 C8 9666 C8 9667 C7 9669 D7
9670 C7 9671 B6 9674 A8 9675 A10 9701 E6 9703 E6 9708 D7 9709 F6 9712 E6 9715 D6
9718 E6 9719 E5 9720 E6 9721 D6 9901 G7 9902 G8 9905 F7 9907 G7 9909 F7 9910 E8
9911 E8 9912 E8 9913 E8 9914 E8 9915 E9 9916 E8 9917 E8 9923 F7 9926 G6 9929 G9
9930 G8 9932 G1 9934 F7 9935 G7 9936 G10 9937 G8 9938 G9 9939 F8 9940 G10 9941 G8
9942 F9 9943 G8 9944 G8 9945 G8 9946 G9 9947 G8 9948 F9 9951 G3 9952 G6 9953 G6
9955 G6 9956 G6 9958 B1 9960 F8 9961 F8 9964 G3 9967 G4 9969 E9 9970 F9 9971 F9
9972 F9 9974 G6 9975 G4 9976 B1 9982 F8 9983 F7 9991 G7 9992 G6 9993 G8

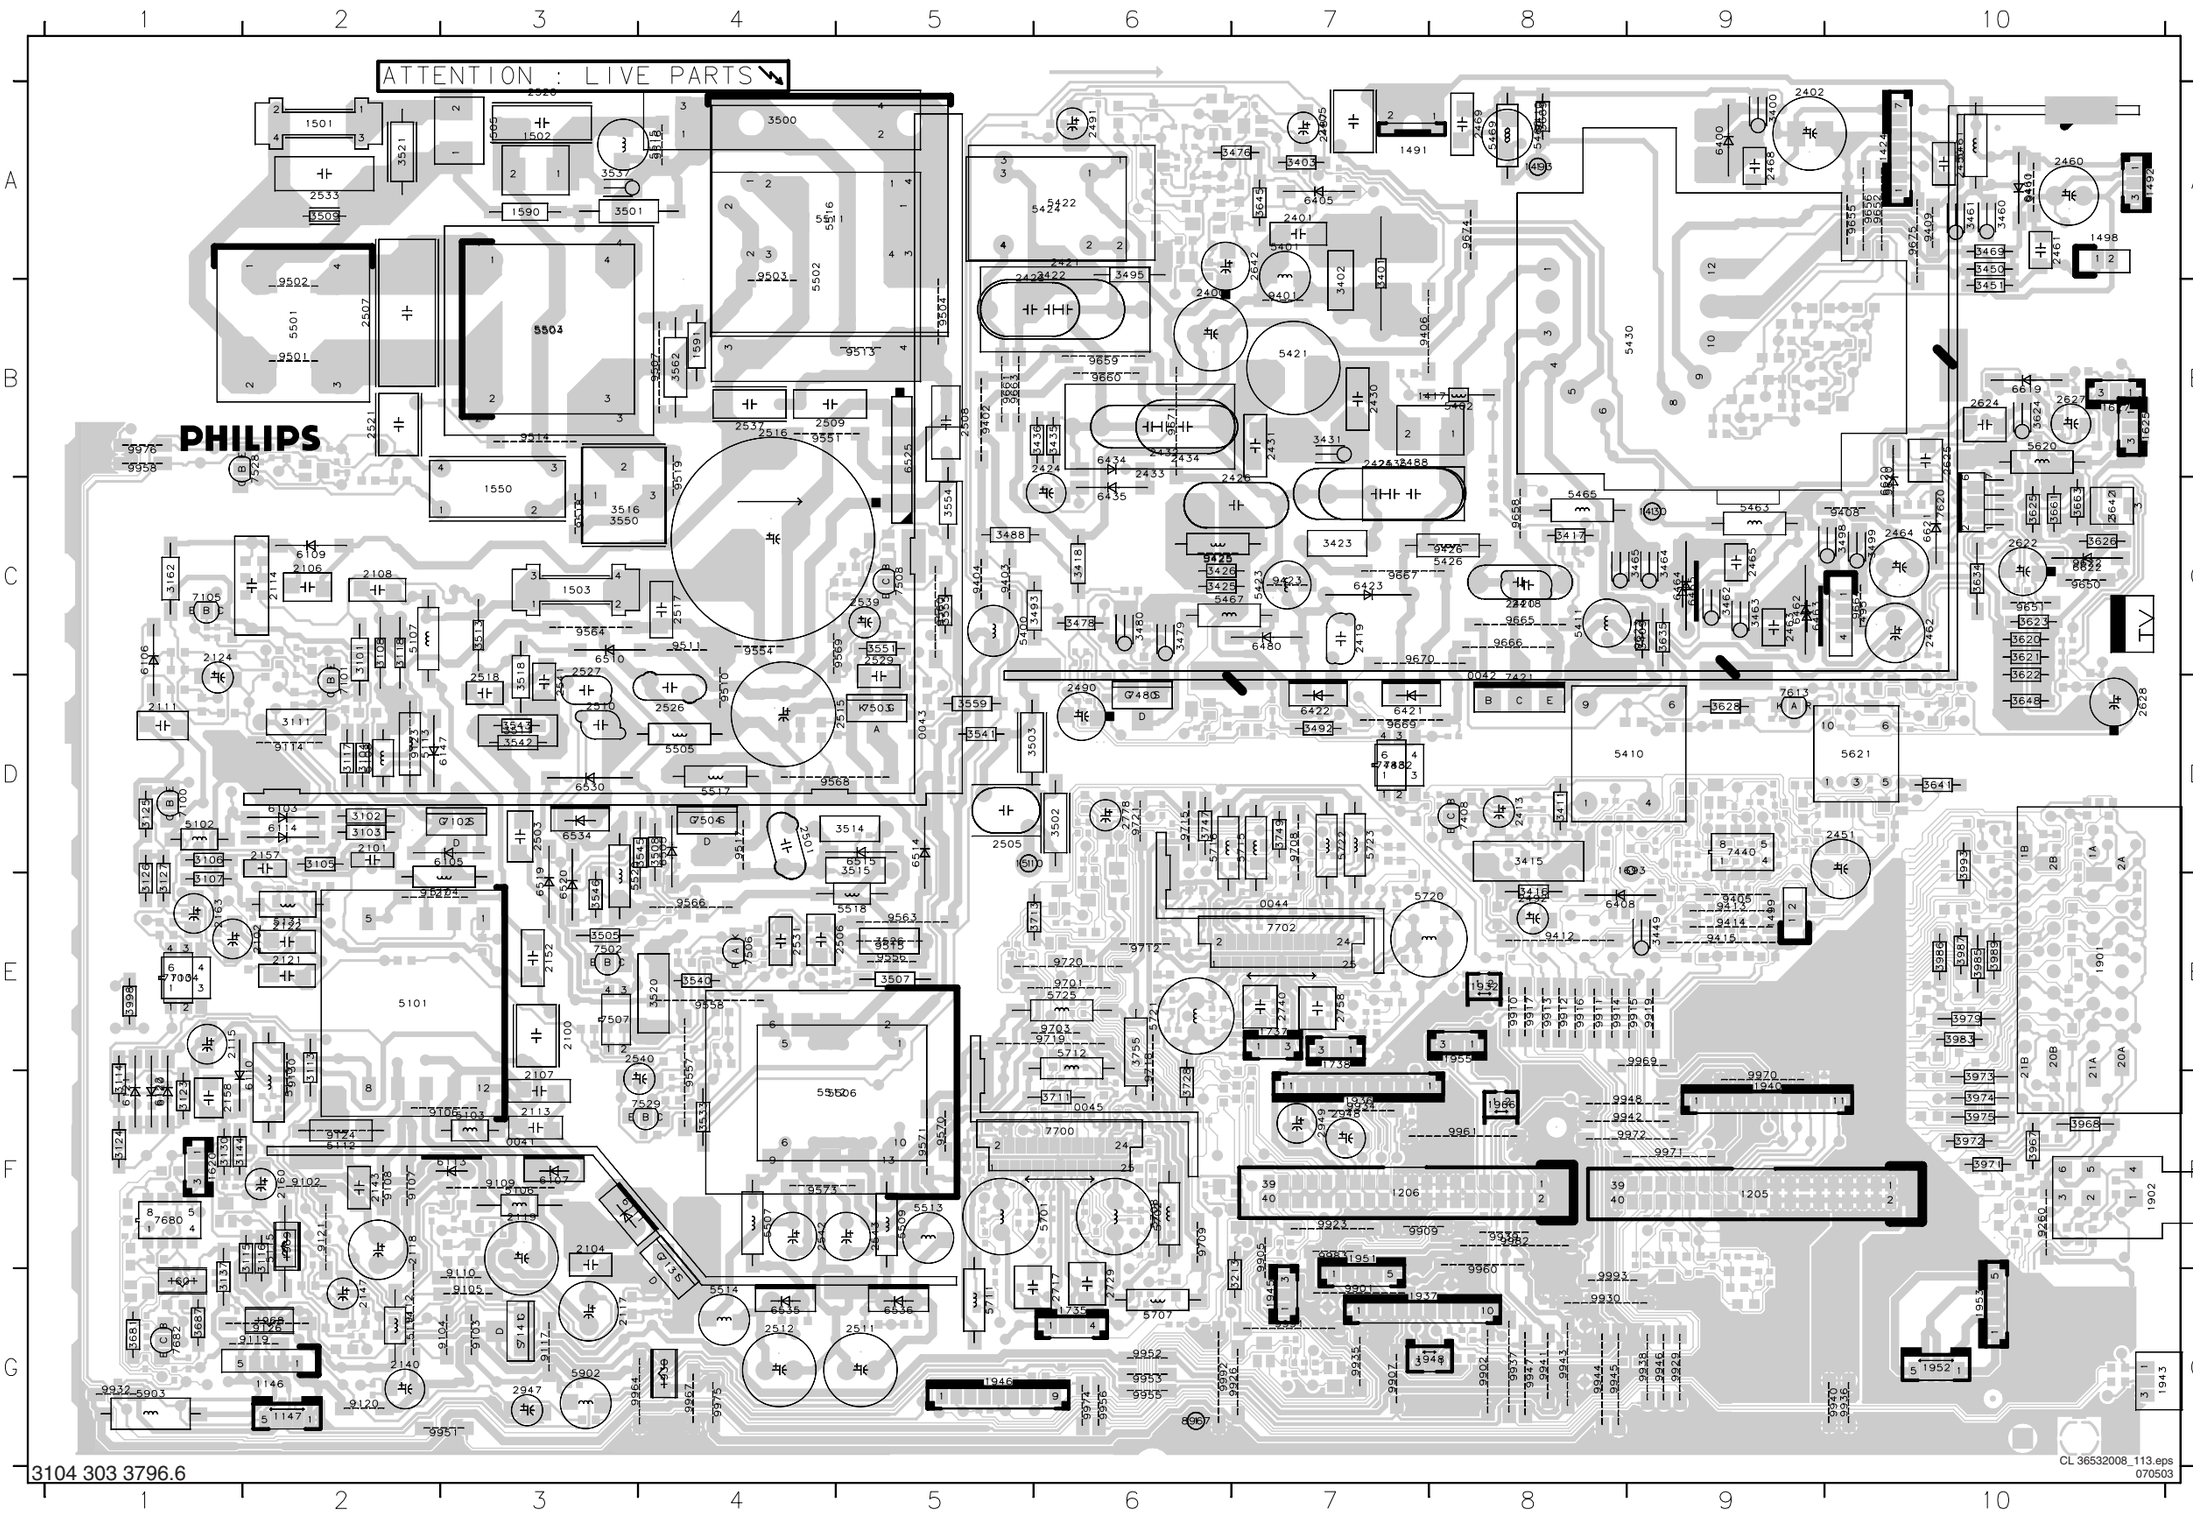

Layout Large Signal Panel (Overview Bottom Side)

0041 F8 0042 C3 0043 B6 0044 E4 0045 F6 1146 G10 1147 G9 1205 F2 1206 F3 1417 B4 1424 A1 1430 C2 1491 A4 1492 A1 1493 A3 1495 C2 1498 A1 1499 E2 1501 A9 1502 A8 1503 C8 1505 A9 1510 D6 1550 C8 1590 A8 1591 B7 1601 G10 1620 F10 1625 B1 1627 B1 1693 D2 1735 G5 1737 E4 1738 E4 1901 E1 1902 F1 1930 G7 1932 E3 1936 F4 1937 G3 1940 F2 1943 G1 1945 G4 1946 G6 1948 G4 1951 F4 1952 G1 1953 G1 1955 E3 1966 F3 1968 G10 1969 G9 2100 E8 2101 E9 2102 E10 2103 D9 2104 G8 2105 D9 2106 C9 2107 F8 2108 C9 2109 F10 2110 C10 2111 D10 2112 D9 2113 F8 2114 C9 2115 F10 2117 G8 2118 F9 2119 F8 2121 E9 2122 E9 2123 C10 2124 C9 2129 F9 2131 G8 2140 G8 2141 G9 2143 F9 2144 C10 2145 C9 2147 G9 2149 F10 2152 E8 2153 E10 2154 F8 2155 E9 2157 D9 2158 F10 2159 D9 2160 F9 2161 E9 2162 D9 2163 E10 2400 B5 2401 A4 2402 A2 2403 D2 2404 D2 2405 A4 2409 D3 2412 D3 2413 D3 2414 D3 2415 D3 2417 C3 2418 C3 2419 C4 2420 C3 2421 B5 2422 B5 2423 B5 2424 C5 2425 B4 2426 C5 2430 B4 2431 B4 2432 B5 2433 B5 2434 B5 2435 C4 2440 D2 2441 B2 2442 B2 2443 B2 2444 B1 2445 B1 2448 A5 2450 A1 2451 E1 2454 E2 2455 F2 2457 D1 2458 E3 2459 G6 2460 A1 2461 A1 2462 C1 2463 C2 2464 C1 2465 C2 2466 A5 2468 A2 2469 A3 2480 C5 2481 C5 2482 D5 2483 F2 2487 A4 2488 C4 2489 F2 2490 D5 2491 A5 2492 E3 2493 E2 2494 B3 2495 B4 2496 F2 2497 A5 2498 A5 2499 A5 2501 D7 2502 E7 2503 D8 2504 D8 2505 D6 2506 E7 2507 B9 2508 B6 2509 B7 2510 D8 2511 G6 2512 G7 2513 E7 2514 E7 2515 D7 2516 C7 2517 C7 2518 D8 2520 A8 2521 B9 2524 E7 2525 E8 2526 D7 2527 D8 2528 B9 2529 C6 2530 E7 2531 E7 2532 E7 2533 A9 2534 D6 2535 E6 2537 B7 2538 E7 2539 C6 2540 F8 2541 D8 2542 F7 2543 F7 2544 D7 2545 C6 2546 G7 2547 G7 2548 G6 2549 G6 2550 D7 2552 D7 2601 F10 2603 D1 2604 C1 2605 D1 2620 C1 2621 C1 2622 C1 2623 D2 2624 B1 2625 B1 2627 B1 2628 D1 2629 B1 2630 D1 2631 D1 2633 C1 2635 D2 2642 A4 2653 C1 2656 D2 2657 D2 2659 D2 2660 A5 2661 C1 2662 E2 2702 E5 2704 E5 2705 D5 2706 F5 2707 F5 2708 F5 2709 F6 2710 F6 2711 F5 2712 F6 2713 D5 2714 F6 2715 F6 2716 F5 2717 G5 2718 F5 2719 G6 2720 F5 2721 F5 2722 F5 2723 E4 2724 F5 2725 E5 2726 F5 2727 F5 2728 F5 2729 F5 2740 E4 2741 E4 2742 E4 2743 E4 2744 E5 2745 E4 2746 E5 2747 E4 2748 D5 2749 D5 2750 E4 2751 E4 2753 E4 2754 D4 2755 D4 2756 E4 2757 D4 2758 E4 2759 E4 2760 E4 2761 E5 2762 E4 2763 E4 2777 F5 2778 D5 2779 F5 2780 F6 2781 F6 2782 E4 2783 E5 2784 E4 2785 E5 2786 F6 2787 E5 2788 F5 2789 F5 2790 F5 2791 E5 2792 E5 2795 D4 2797 E4 2798 E5 2941 G3 2942 G3 2943 G3 2945 F4 2946 F4 2947 G8 2948 F4 2949 F4 2950 F4 2985 F1 2987 F1 2988 F1 2989 F1 2990 E1 2991 E1 2993 D1 2994 D1 2995 E1 2996 E1 2997 D1 2998 D1 2999 D1 3101 C9 3102 D9 3103 D9 3104 D9 3105 D9 3106 D10 3107 E10 3108 C9 3109 G10 3111 D9 3113 E9 3114 F10 3115 F10 3116 G9 3117 D9 3118 C9 3120 E9 3121 E9 3122 F9 3123 F10 3124 F10 3125 D10 3126 E10 3127 E10 3130 F10 3132 G9 3134 G9 3135 G9 3137 G10 3138 D9 3140 F10 3141 F8 3142 G9 3144 F9 3145 D9 3146 C9 3147 D10 3148 C9 3149 C10 3150 C9 3151 G9 3152 C9 3154 C9 3155 F9 3159 F9 3160 C9 3161 G7 3162 C10 3166 G10 3167 G10 3169 E9 3170 E9 3171 F10 3172 G9 3173 G9 3175 F9 3176 F8 3200 E5 3201 G4 3202 G4 3203 G4 3204 G4 3205 G4 3210 G5 3211 G5 3212 F5 3213 G4 3217 C3 3218 C5 3219 D2 3220 D2 3221 D2 3222 D2 3223 C4 3224 B2 3225 C5 3226 C5 3227 B2 3228 B2 3229 F2 3230 G2 3231 B4 3232 G2 3233 F2 3234 B2 3235 B5 3236 B6 3237 D2 3238 E2 3239 E3 3240 A1 3241 B1 3242 B1 3243 F2 3244 B2 3245 B2 3246 C2 3247 B2 3248 C2 3249 E2 3250 A1 3251 B1 3252 B1 3253 B1 3254 B2 3255 D2 3256 D2 3257 D2 3258 E3 3259 E3 3260 A1 3261 G1 3262 G1 3263 C2 3264 C2 3265 C2 3266 C2 3267 C2 3268 C2 3269 A1 3270 A1 3271 A1 3272 A1 3273 A1 3274 A1 3275 A1 3276 A1 3277 A1 3278 A1 3279 A1 3280 A1 3281 A1 3282 A1 3283 A1 3284 A1 3285 A1 3286 A1 3287 A1 3288 A1 3289 D5 3290 D5 3291 D5 3292 D5 3293 D5 3294 D5 3295 D5 3296 D5 3297 D5 3298 D5 3299 D5 3300 D5 3301 D5 3302 D5 3303 D5 3304 D5 3305 D5 3306 D5 3307 D5 3308 D5 3309 D5 3310 D5 3311 D5 3312 D5 3313 D5 3314 D5 3315 D5 3316 C8 3317 F7 3318 D8 3319 F7 3320 E7 3321 A9 3322 D8 3323 E7 3324 B9 3325 E7 3326 E6 3327 E6 3328 B9 3329 E7 3330 E7 3331 E7 3332 E7 3333 E7 3334 E7 3335 E7 3336 E7 3337 E7 3338 E7 3339 E7 3340 E7 3341 E7 3342 E7 3343 E7 3344 E7 3345 E7 3346 E7 3347 E7 3348 E7 3349 E7 3350 E7 3351 E7 3352 E7 3353 E7 3354 E7 3355 E7 3356 E7 3357 E7 3358 E7 3359 E7 3360 E7 3361 E7 3362 E7 3363 E7 3364 E7 3365 E7 3366 E7 3367 E7 3368 E7 3369 E7 3370 E7 3371 E7 3372 E7 3373 E7 3374 E7 3375 E7 3376 E7 3377 E7 3378 E7 3379 E7 3380 E7 3381 E7 3382 E7 3383 E7 3384 E7 3385 E7 3386 E7 3387 E7 3388 E7 3389 E7 3390 E7 3391 E7 3392 E7 3393 E7 3394 E7 3395 E7 3396 E7 3397 E7 3398 E10 3401 A4 3402 A4 3403 A4 3404 D3 3406 D3 3407 D3 3409 C2 3410 C3 3411 D3 3412 D2 3414 D3 3415 D3 3416 E3 3417 C3 3418 C5 3419 D2 3420 D2 3421 D2 3422 D2 3423 C4 3425 C5 3426 C5 3427 F2 3428 G2 3429 F2 3430 G2 3431 B4 3432 G2 3433 F2 3434 G2 3435 B5 3436 B6 3437 B2 3438 E3 3440 E2 3441 D2 3442 D2 3443 D2 3444 B2 3445 B2 3446 B2 3447 B2 3448 B1 3449 E2 3450 A1 3451 B1 3452 B1 3453 B1 3454 B2 3455 D2 3456 D2 3457 D2 3458 E3 3459 E3 3460 A1 3461 A1 3462 C2 3463 C2 3464 C2 3465 C2 3466 A5 3467 A4 3469 A1 3472 A5 3474 A5 3475 A6 3476 A4 3478 C5 3480 C5 3481 D5 3482 D5 3483 D5 3484 D4 3485 D3 3486 D2 3487 E2 3488 C6 3489 D5 3490 D4 3491 A5 3492 D4 3493 C5 3495 B5 3496 D4 3497 A4 3498 C2 3499 C1 3500 A7 3501 A7 3502 D5 3503 D5 3504 E7 3505 E8 3506 E7 3507 E6 3508 E7 3509 A9 3510 E7 3511 D8 3512 D7 3513 C8 3514 D6 3515 E7 3516 C8 3517 F7 3518 D8 3519 F7 3520 E7 3521 A9 3522 E7 3523 E7 3524 B9 3525 E7 3526 E6 3527 E6 3528 B9 3529 B9 3530 E7 3531 F7 3532 B9 3533 F7 3534 B9 3535 D6 3536 E7 3537 A8 3538 E7 3539 E7 3540 E7 3541 D6 3542 D8 3543 D8 3545 D8 3546 E8 3547 D7 3548 C6 3549 E6 3550 C8 3551 C6 3552 D7

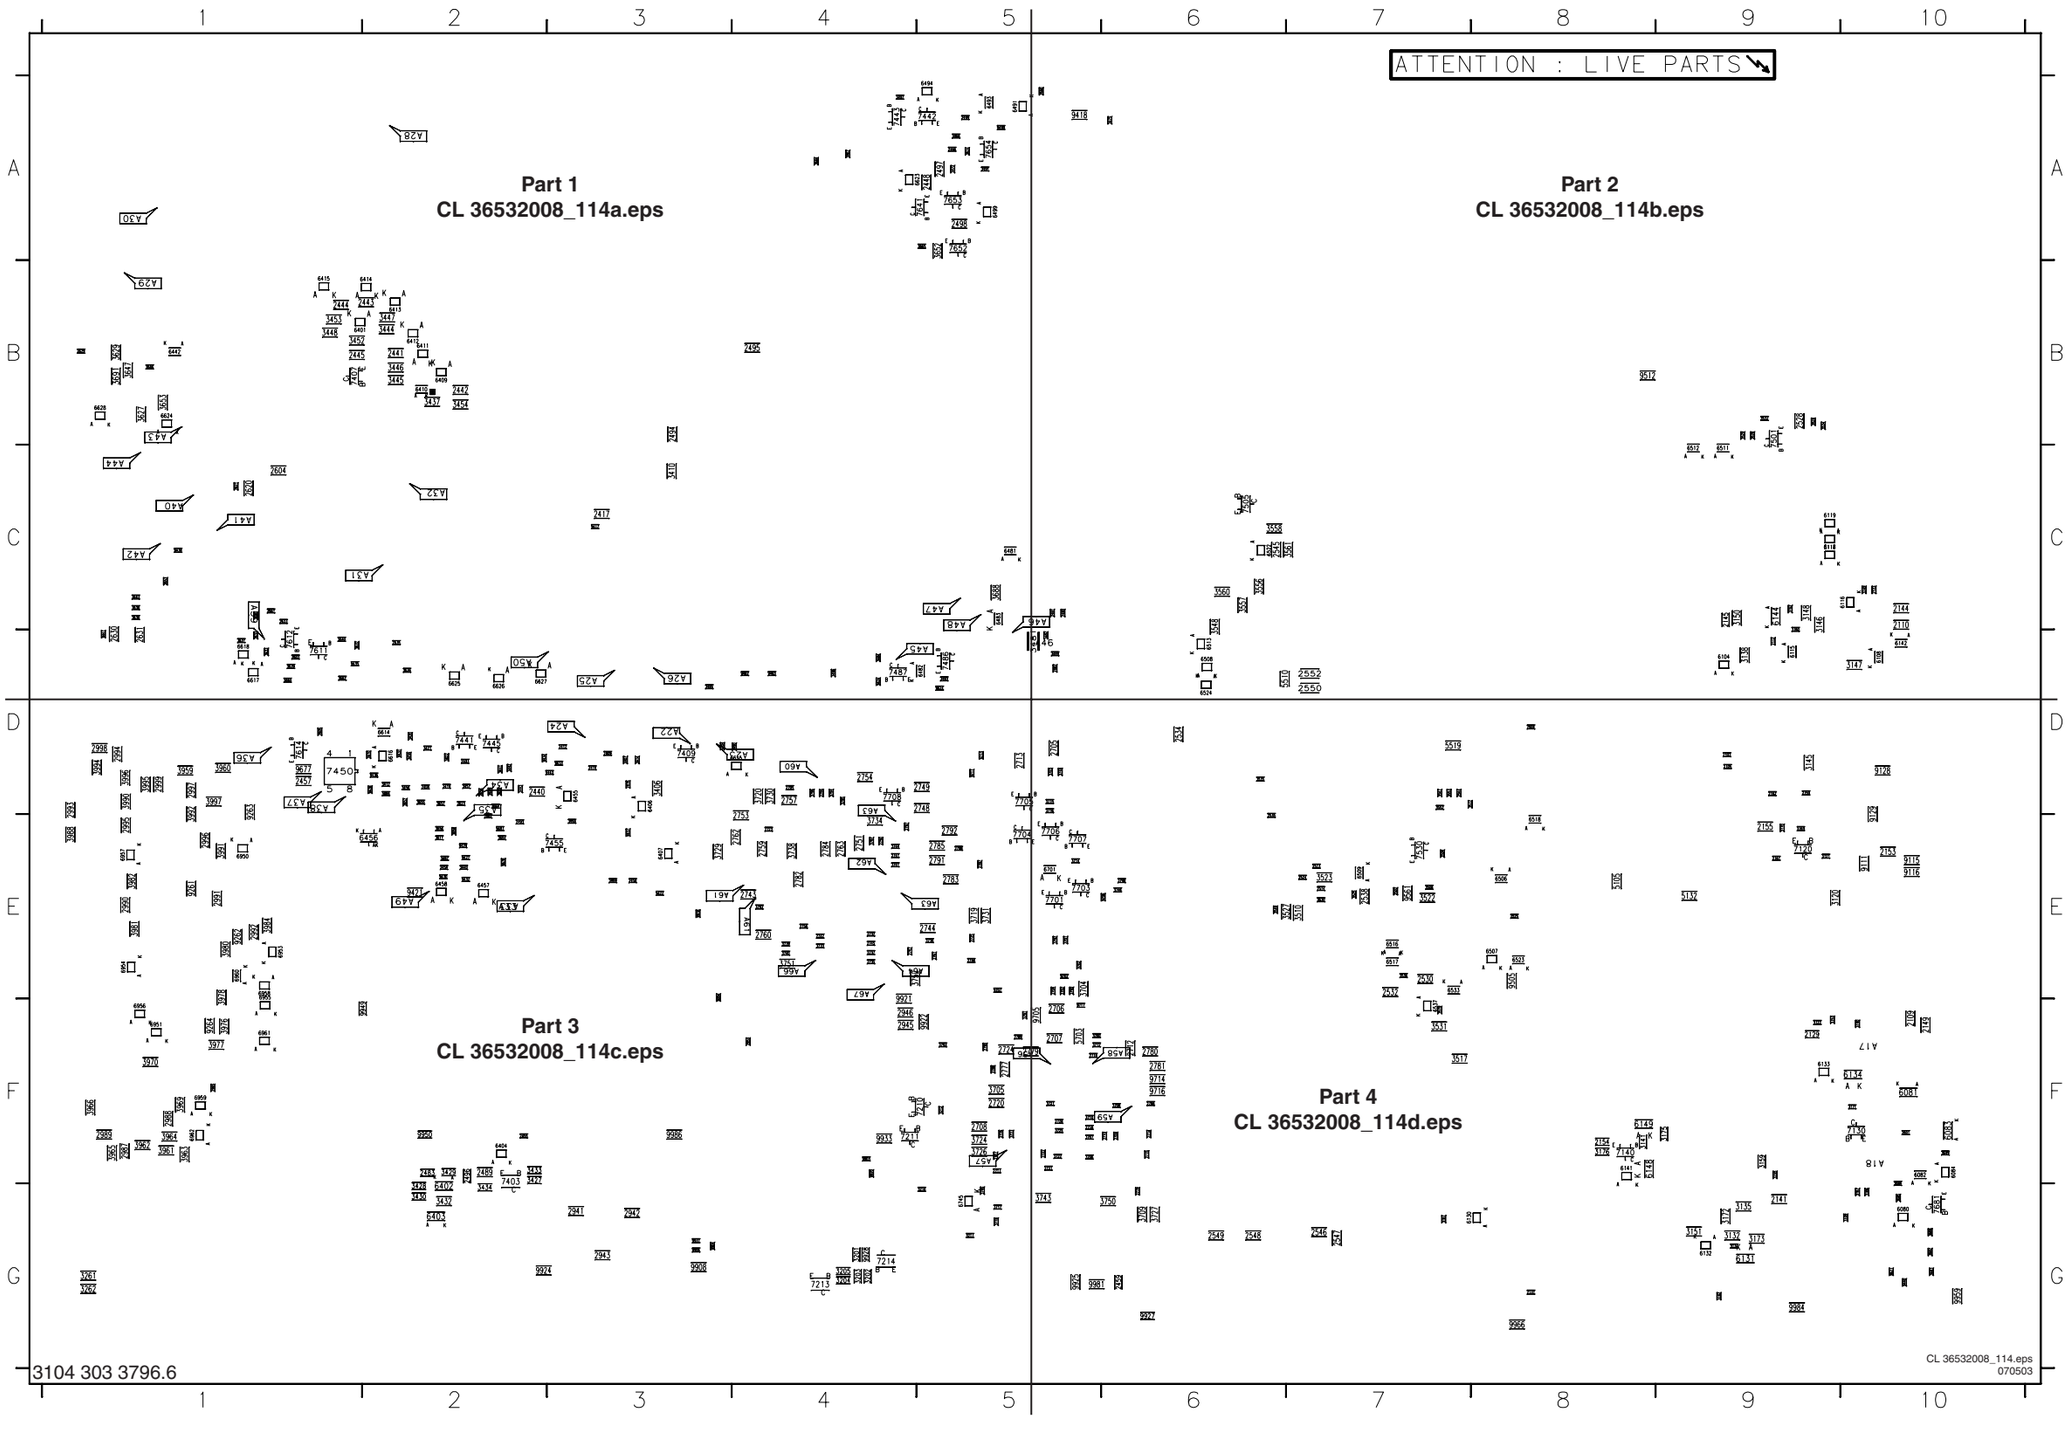


3553 D7 3554 C6 3555 C6 3556 C6 3557 C6 3558 C6 3559 D6 3560 C6 3561 C7 3562 B7 3610 D2 3611 E2 3620 C1 3621 C1 3622 C1 3623 C1 3624 B1 3625 C1 3626 C1 3627 B1 3628 D2 3629 B1 3630 C1 3631 D1 3632 D1 3633 D1 3634 C1 3635 C2 3636 D2 3637 D1 3638 C1 3639 D1 3640 D1 3641 D1 3642 B1 3643 C1 3644 A4 3645 A4 3646 B1 3647 B1 3648 D1 3649 F10 3652 A5 3653 B1 3654 E2 3655 D2 3656 E2 3657 D2 3658 E2 3659 D2 3660 D1 3661 C1 3662 D1 3663 B1 3664 D2 3665 A5 3681 G10 3682 G10 3683 G10 3684 F10 3685 G10 3686 G10 3687 G10 3688 C5 3689 A3 3690 C1 3691 B1 3701 E5 3702 E5 3703 D5 3704 E5 3705 F5 3706 F5 3707 F5 3708 F6 3709 G6 3710 F5 3711 F6 3712 F5 3713 E6 3714 E5 3715 D5 3716 D5 3717 G5 3718 G5 3719 E5 3720 D4 3721 F5 3722 F5 3723 F5 3724 F5 3725 F5 3726 F5 3727 G6 3728 F5 3729 E3 3730 D4 3731 E5 3732 E4 3733 E4 3734 E4 3735 E4 3736 E5 3737 E4 3738 E4 3739 E4 3740 E4 3741 E4 3742 E4 3743 G5 3744 E4 3745 G5 3746 E6 3747 D5 3748 D5 3749 D4 3750 G6 3751 E4 3752 E4 3755 E5 3760 F5 3790 E5 3791 F5 3792 E5 3793 F5 3794 D4 3795 D4 3796 D4 3797 E4 3798 E6 3959 D1 3960 D1 3961 F1

3962 F1 3963 F1 3964 F1 3965 F1 3966 F1 3967 F1 3968 F1 3969 F1 3970 F1 3971 F1 3972 F1 3973 E1 3974 F1 3975 F1 3976 F1 3977 F1 3978 E1 3979 E1 3980 E1 3981 E1 3982 E1 3983 E1 3984 E1 3985 E1 3986 E1 3987 E1 3988 E1 3989 E1 3990 D1 3991 E1 3992 D1 3993 D1 3994 D1 3995 D1 3996 D1 3997 D1 3998 E10 5101 E9 5102 D10 5103 F8 5104 E8 5105 E8 5106 F8 5107 C9 5108 D9 5110 E9 5112 F9 5113 D9 5114 G9 5115 F9 5131 E9 5132 E9 5400 C6 5401 A4 5402 B3 5410 D3 5411 C3 5421 B4 5422 A5 5423 C4 5424 A5 5425 C5 5426 C4 5430 B2 5461 A1 5463 C2 5465 C3 5466 A3 5467 C4 5469 A3 5501 B9 5502 B7 5503 B8 5504 B8 5505 D7 5506 F6 5507 F7 5509 F6 5510 D6 5511 A7 5512 F7 5513 F6 5514 G7 5515 A8 5516 A7 5517 D7 5518 E6 5519 D7 5520 E8 5620 B1 5621 D1 5701 F6 5702 F5 5703 F5 5707 G5 5708 F5 5711 G6 5712 F5 5715 D4 5716 D5 5720 E4 5721 E5 5722 D4 5723 D4 5725 E6 5902 G8 5903 G10 6080 G10 6081 F10 6082 F10 6083 F10 6084 F10 6103 D9 6104 D9 6105 D9 6106 C10 6107 F8 6108 D10 6109 C9 6110 E9 6111 F8 6113 F8 6114 D9 6115 D9 6116 C10 6117 C9 6118 C10 6119 C10 6120 F10 6121 F10 6122 E10 6130 G8 6131 G9 6132 G9 6133 F9 6134 F10 6141 F8 6142 D10 6144 C9 6147 D9 6148 F9 6149 F9 6400 A2 6401 B1 6402 G2 6403 G2 6404 F2 6405 A4 6406 D3 6407 E3 6408 E3 6409 B2 6410 B2 6411 B2 6412 B2 6413 B2 6414 B2 6415 B1 6421 D4 6422 D4 6423 C4 6434 B5 6435 C5 6442 B1 6455 D3 6456 E1 6457 E2 6458 E2 6460 A1 6462 C2 6463 C2 6464 C2 6465 C2 6480 C4 6481 C5 6482 D5 6483 C5 6484 D6 6485 E8 6486 D2 6487 E2 6488 C6 6489 D5 6490 D4 6491 A5 6493 A5 6494 A5 6499 A5 6505 D7 6506 E8 6507 E8 6508 D6 6509 E7 6510 C7 6511 C9 6512 C9 6513 D6 6514 D6 6515 D7 6516 E7 6517 E7 6518 D8 6519 E8 6520 E8 6522 C6 6523 E8 6524 D6 6525 C6 6530 D8 6533 E7 6534 D8 6535 G7 6536 G6 6537 E7 6614 D2 6615 D3 6616 D2 6617 D1 6618 D1 6619 B1 6620 C1 6621 C1 6622 C1 6623 A5 6624 B1 6625 D2 6626 D2 6627 D2 6628 B1 6701 E5 6745 G5 6950 E1 6951 F1 6953 E1 6954 E1 6955 E1 6956 F1 6957 E1 6958 E1 6959 F1 6960 E1 6961 F1 6962 F1 7100 D10 7101 C9 7102 D8 7103 E10 7104 E10 7105 C10 7120 E9 7130 F10 7131 G7 7140 F8 7141 G8 7210 F5 7211 F4 7213 G4 7214 G4 7403 F2 7407 B1 7408 D3 7409 D3 7421 C3 7440 D2 7441 D2 7442 A5 7443 A4 7445 D2 7450 D1 7455 E3 7480 D5 7482 D3 7483 D3 9102 F9 9103 G8 9104 G8 9105 G8 9106 F8 9107 F9 9108 F9 9109 F8 9110 G8 9111 E10 9112 G9 9114 D9 9115 E10 9116 E10 9117 G8 9119 G9 9120 G9 9121 F9 9123 D9 9124 F9 9126 G9 9127 E9 9128 D10 9129 D10 9130 F9 9260 F1 9261 E1 9262 E1 9263 D1 9264 F1 9401 B4 9402 B6 9403 C6 9404 C6 9405 E2 9406 B4 9408 C1 9409 A1 9410 A3 9411 A1 9412 E3 9413 E2 9414 E2 9415 E2 9417 C3 9418 A5 9421 E2 9422 E3 9423 C4 9424 D4 9425 C5 9426 C3 9427 E2 9428 D2 9429 E2 9430 E2 9431 D2 9432 E2 9433 D3 9434 D2 9436 D2 9437 E3 9438 C1 9440 G10 9441 D1 9443 D3 9481 E2 9482 D4 9483 D4 9499 A5 9501 B9 9502 B9 9503 B7 9504 B6 9505 E8 9507 B7 9510 D7 9511 C7 9512 B8 9513 B6 9514 B8 9515 E6 9516 A7 9517 D7 9518 B8 9519 B7 9551 B7 9554 C7 9556 E6 9557 E7 9558 E7 9560 C6 9561 E7 9563 E6 9564 C8 9566 E7 9568 D7


9569 C7 9570 F6 9571 F6 9573 F6 9620 B1 9621 G10 9622 C1 9623 C3 9624 D5 9650 C1 9651 C1 9652 A1 9655 A1 9656 A1 9658 C3 9659 B5 9660 B5 9661 B6 9663 B5 9664 C1 9665 C3 9666 C3 9667 C4 9669 D4 9670 C4 9671 B5 9674 A3 9675 A1 9676 E2 9677 D1 9701 E5 9702 E5 9703 E5 9705 F5 9706 E6 9707 E5 9708 E4 9709 F5 9711 D5 9712 E5 9713 D5 9714 F6 9715 D5 9716 F6 9717 F5 9718 E5 9719 E5 9720 E5 9721 D5 9901 G3 9902 G3 9903 F4 9904 G3 9905 F4 9906 G3 9907 G4 9908 G3 9909 F4 9910 E3 9911 E3 9912 E3 9913 E3 9914 E3 9915 E2 9916 E3 9917 E3 9918 E3 9919 E2 9920 F4 9921 E4 9922 F5 9923 F4 9924 G2 9925 G5 9926 G4 9927 G6 9928 G4 9929 G2 9930 G3 9931 G3 9932 G10 9933 F4 9934 F4 9935 G4 9936 G1 9937 G3 9938 G2 9939 F3 9940 G1 9941 G3 9942 F2 9943 G3 9944 G3 9945 G3 9946 G2 9947 G3 9948 F2 9949 F2 9950 F2 9951 G8 9952 G5 9953 G5 9955 G5 9956 G5 9958 B10 9959 G10 9960 F3 9961 F3 9964 G8 9966 G8 9967 G7 9969 E2 9970 F2 9971 F2 9972 F2 9974 G5 9975 G7 9976 B10 9981 G5 9982 F3 9983 F4 9984 G9 9986 F3 9991 G4 9992 G5 9993 G3 9994 E3

Layout Large Signal Panel (Part 1 Bottom Side)

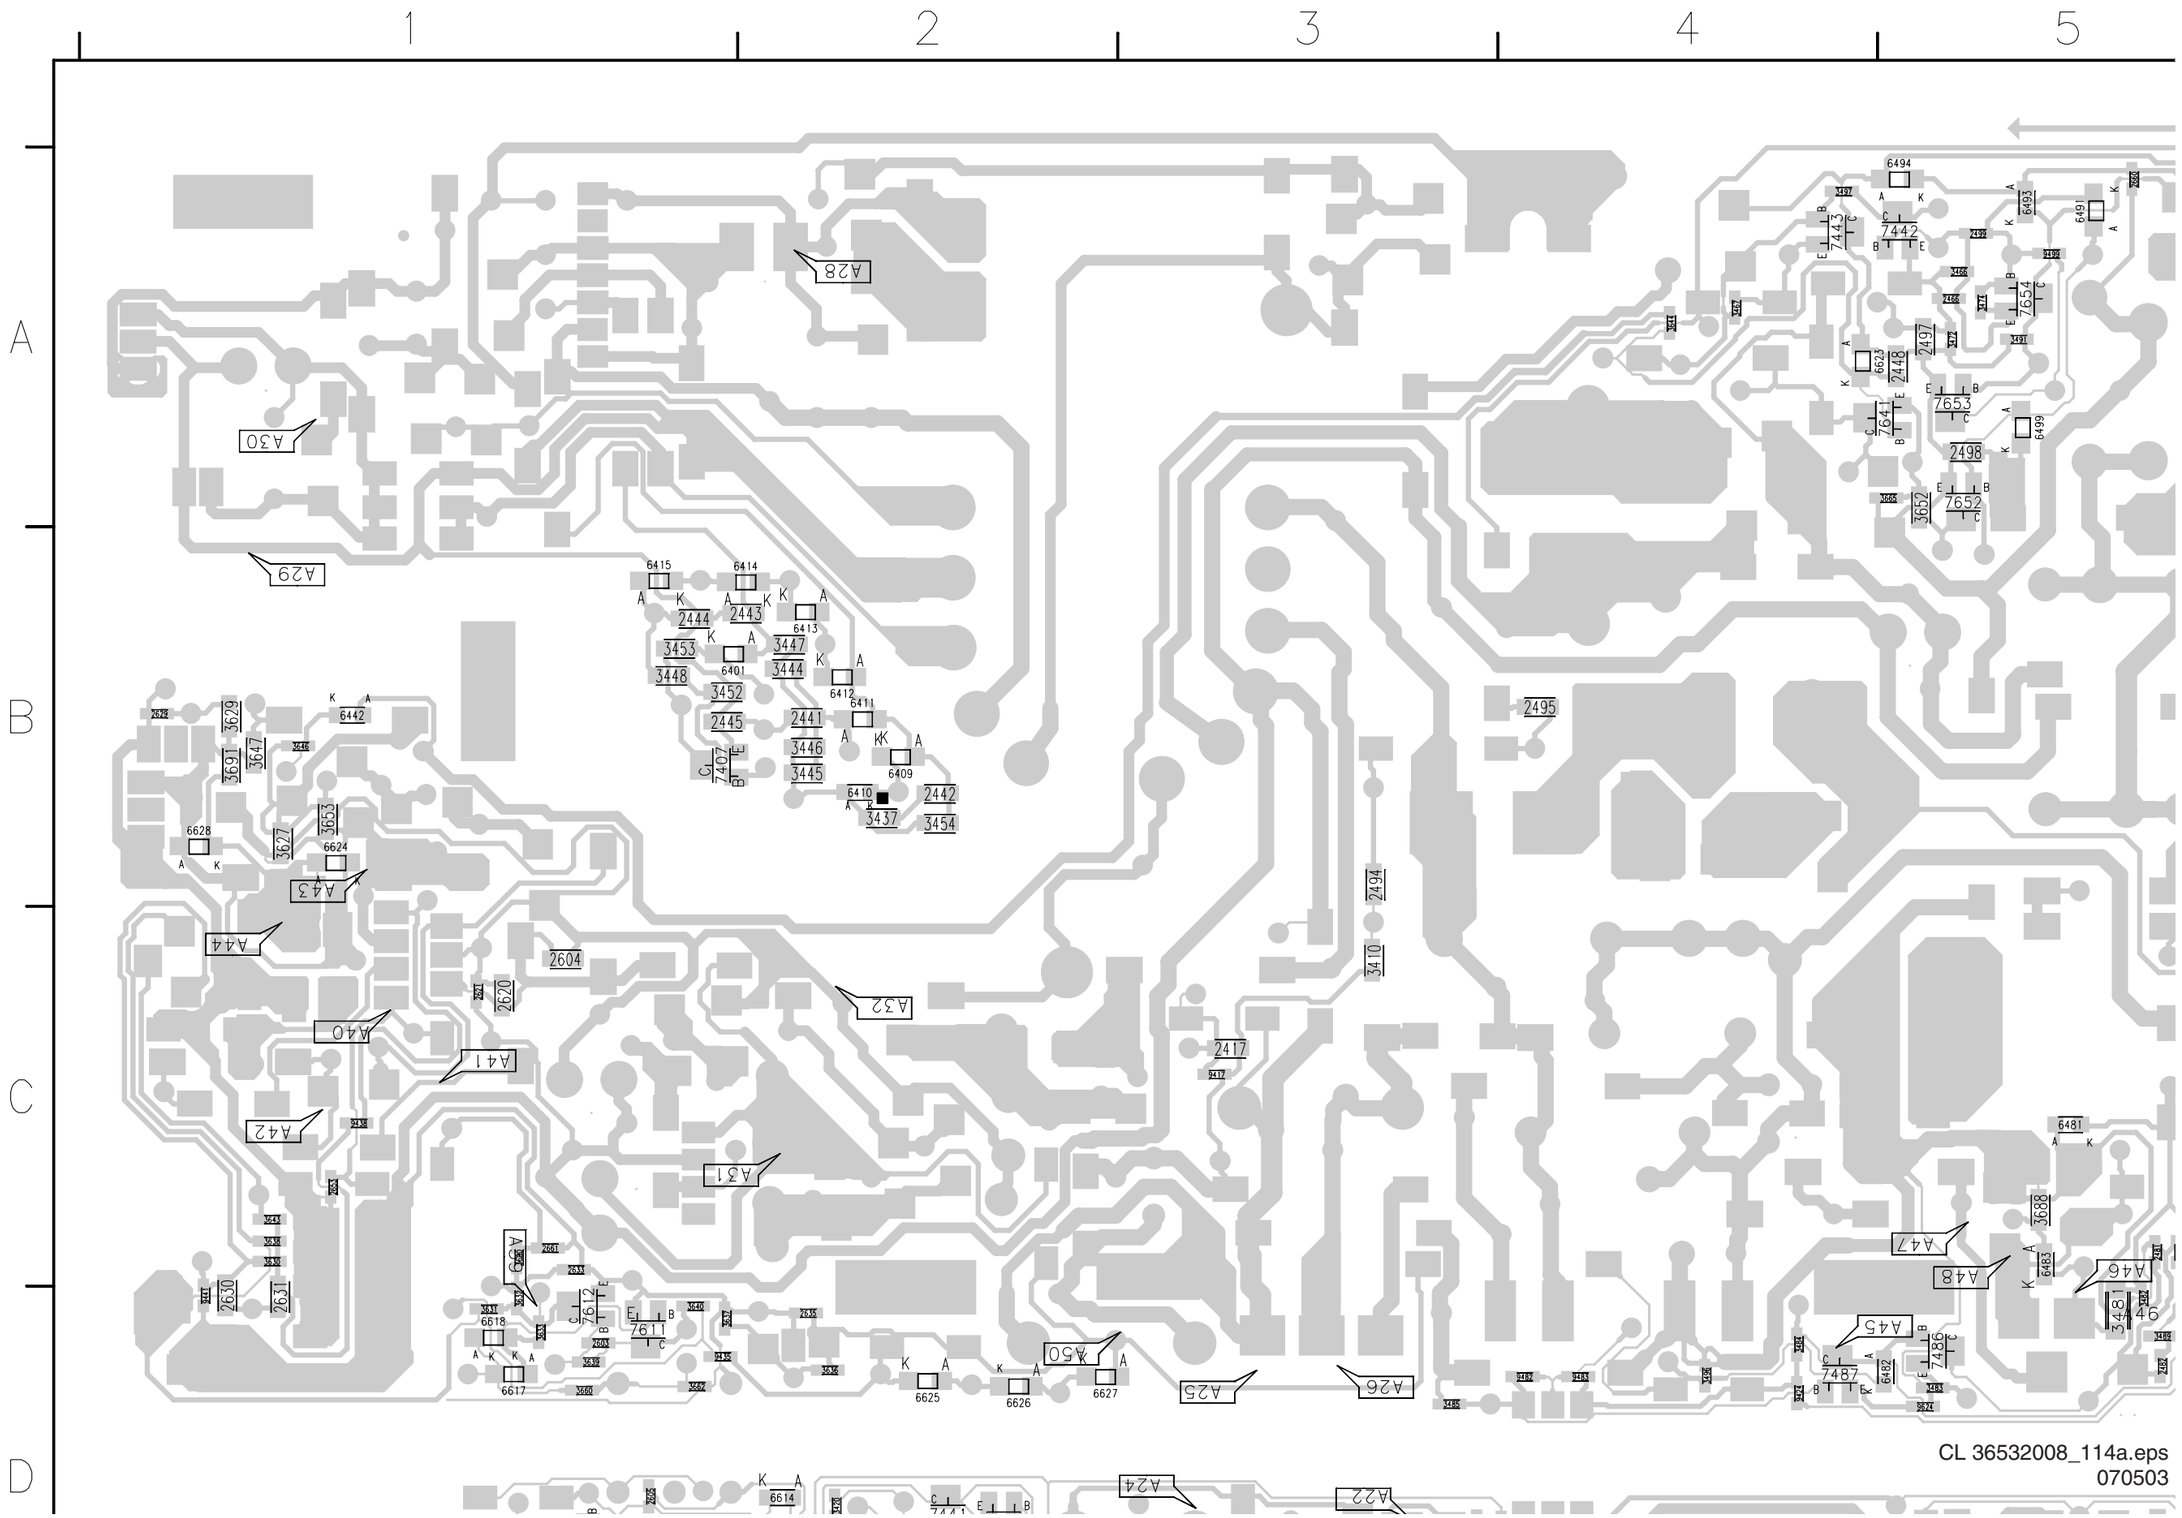


CL 36532008_114a.eps
070503

Layout Large Signal Panel (Part 2 Bottom Side)

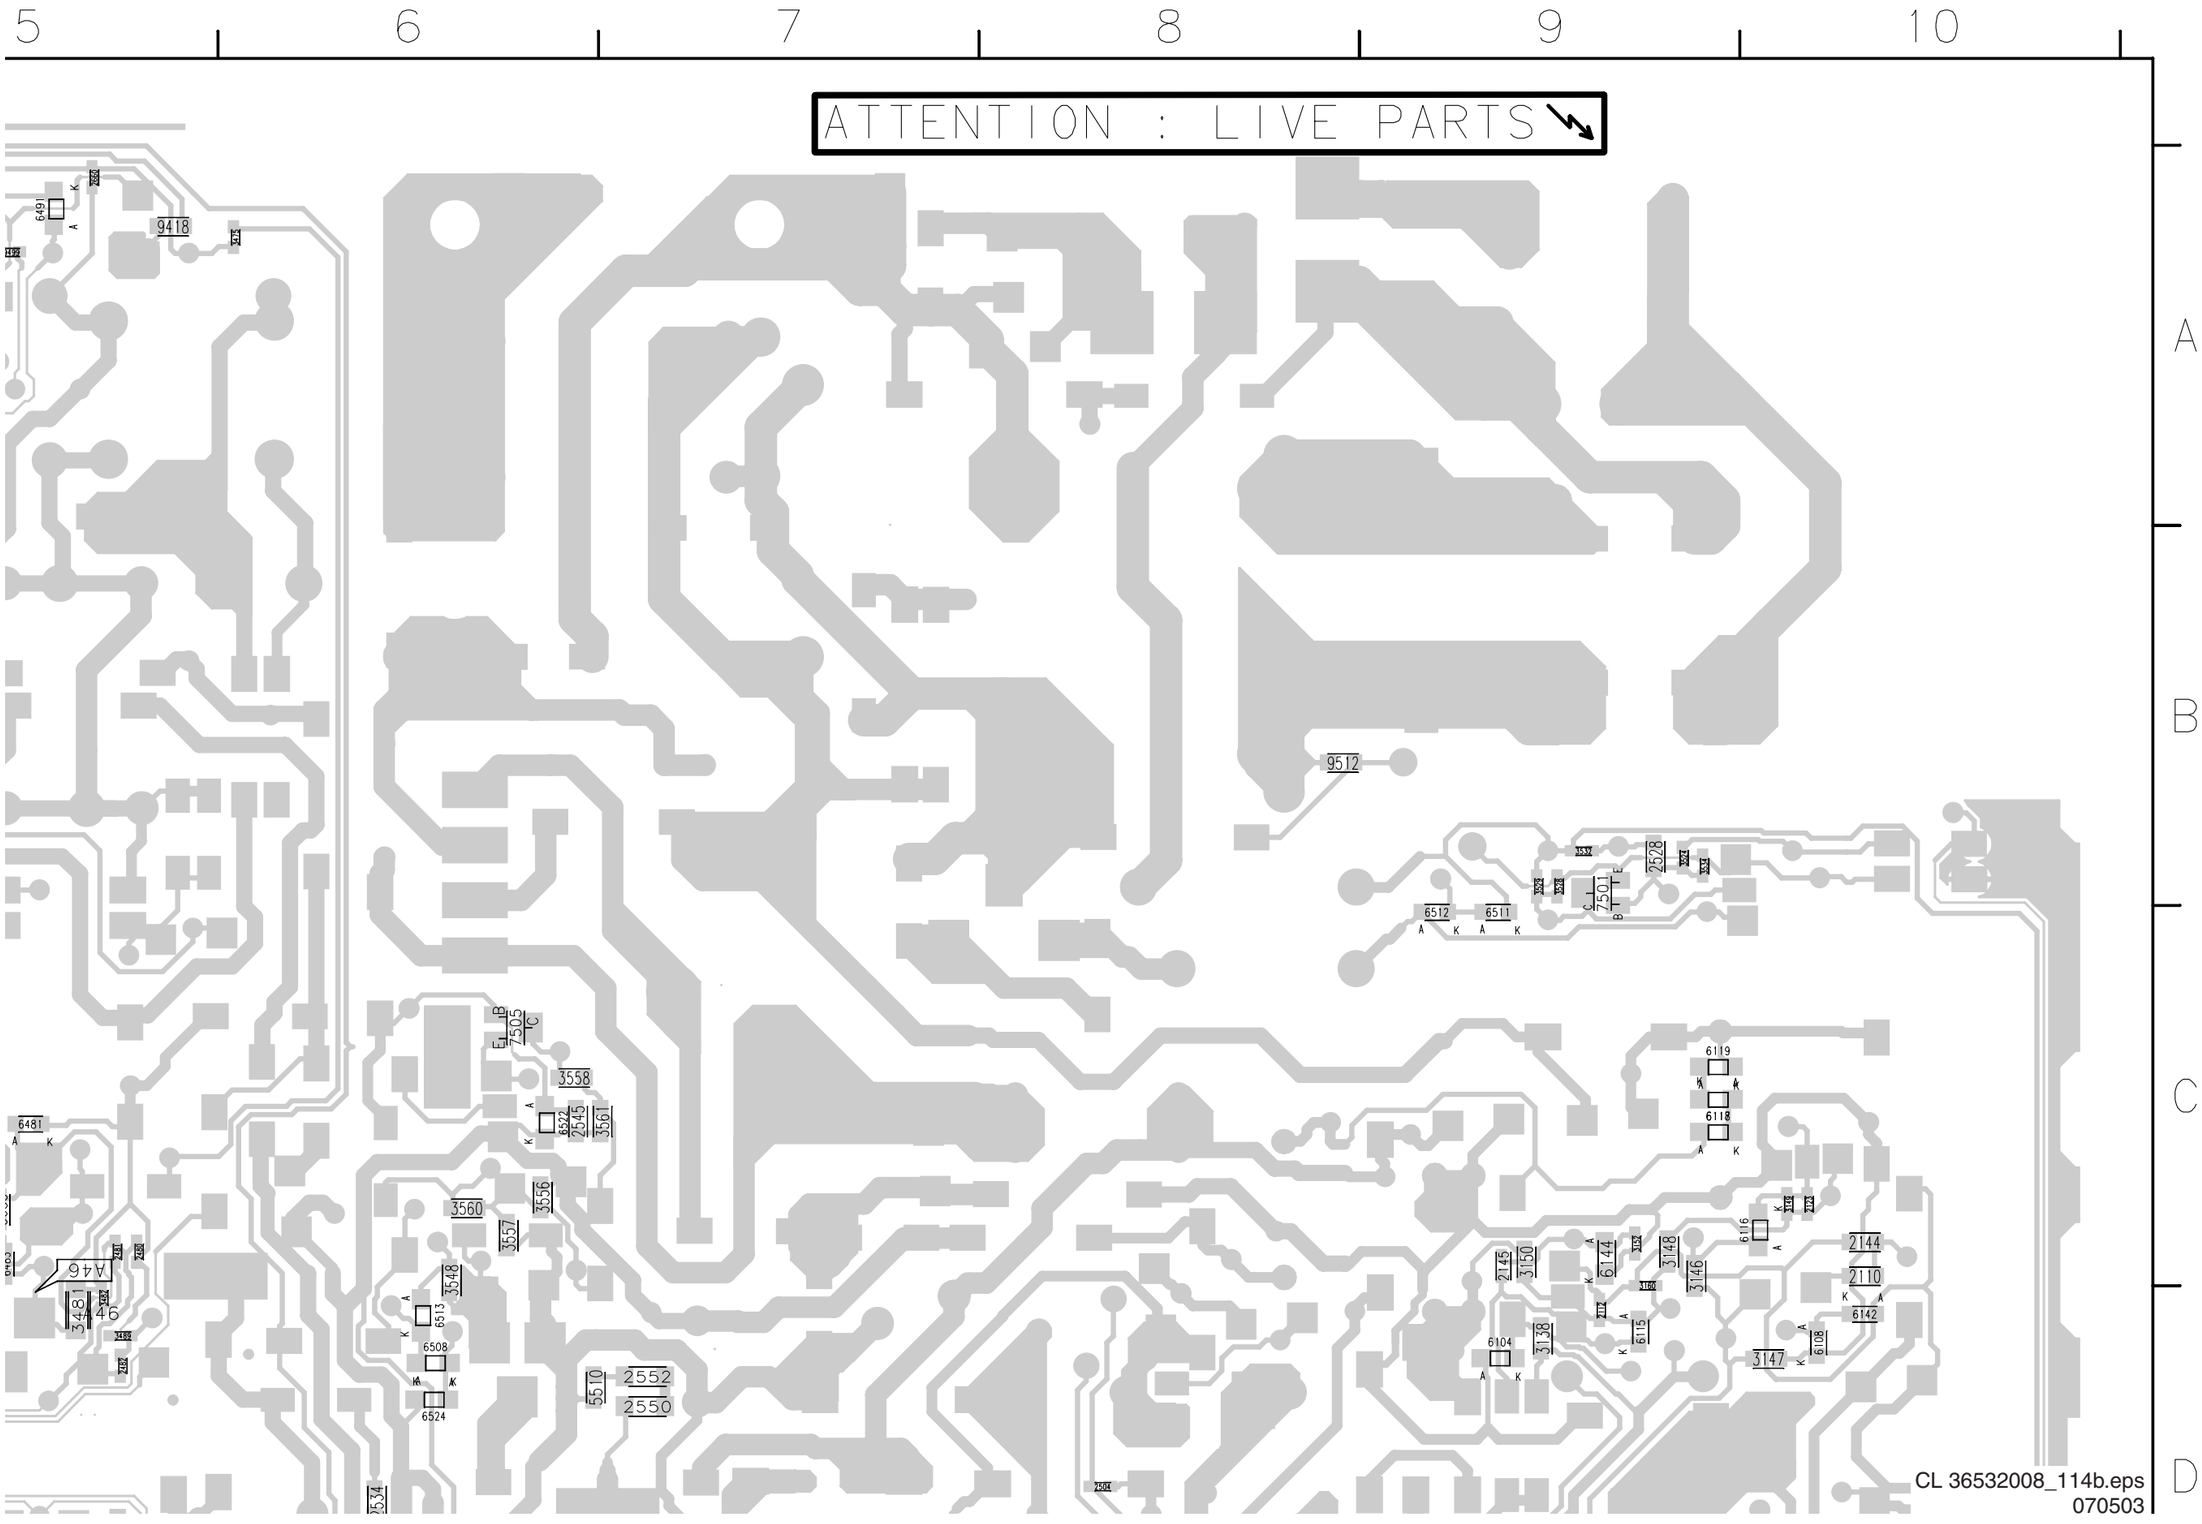


Layout Large Signal Panel (Part 3 Bottom Side)

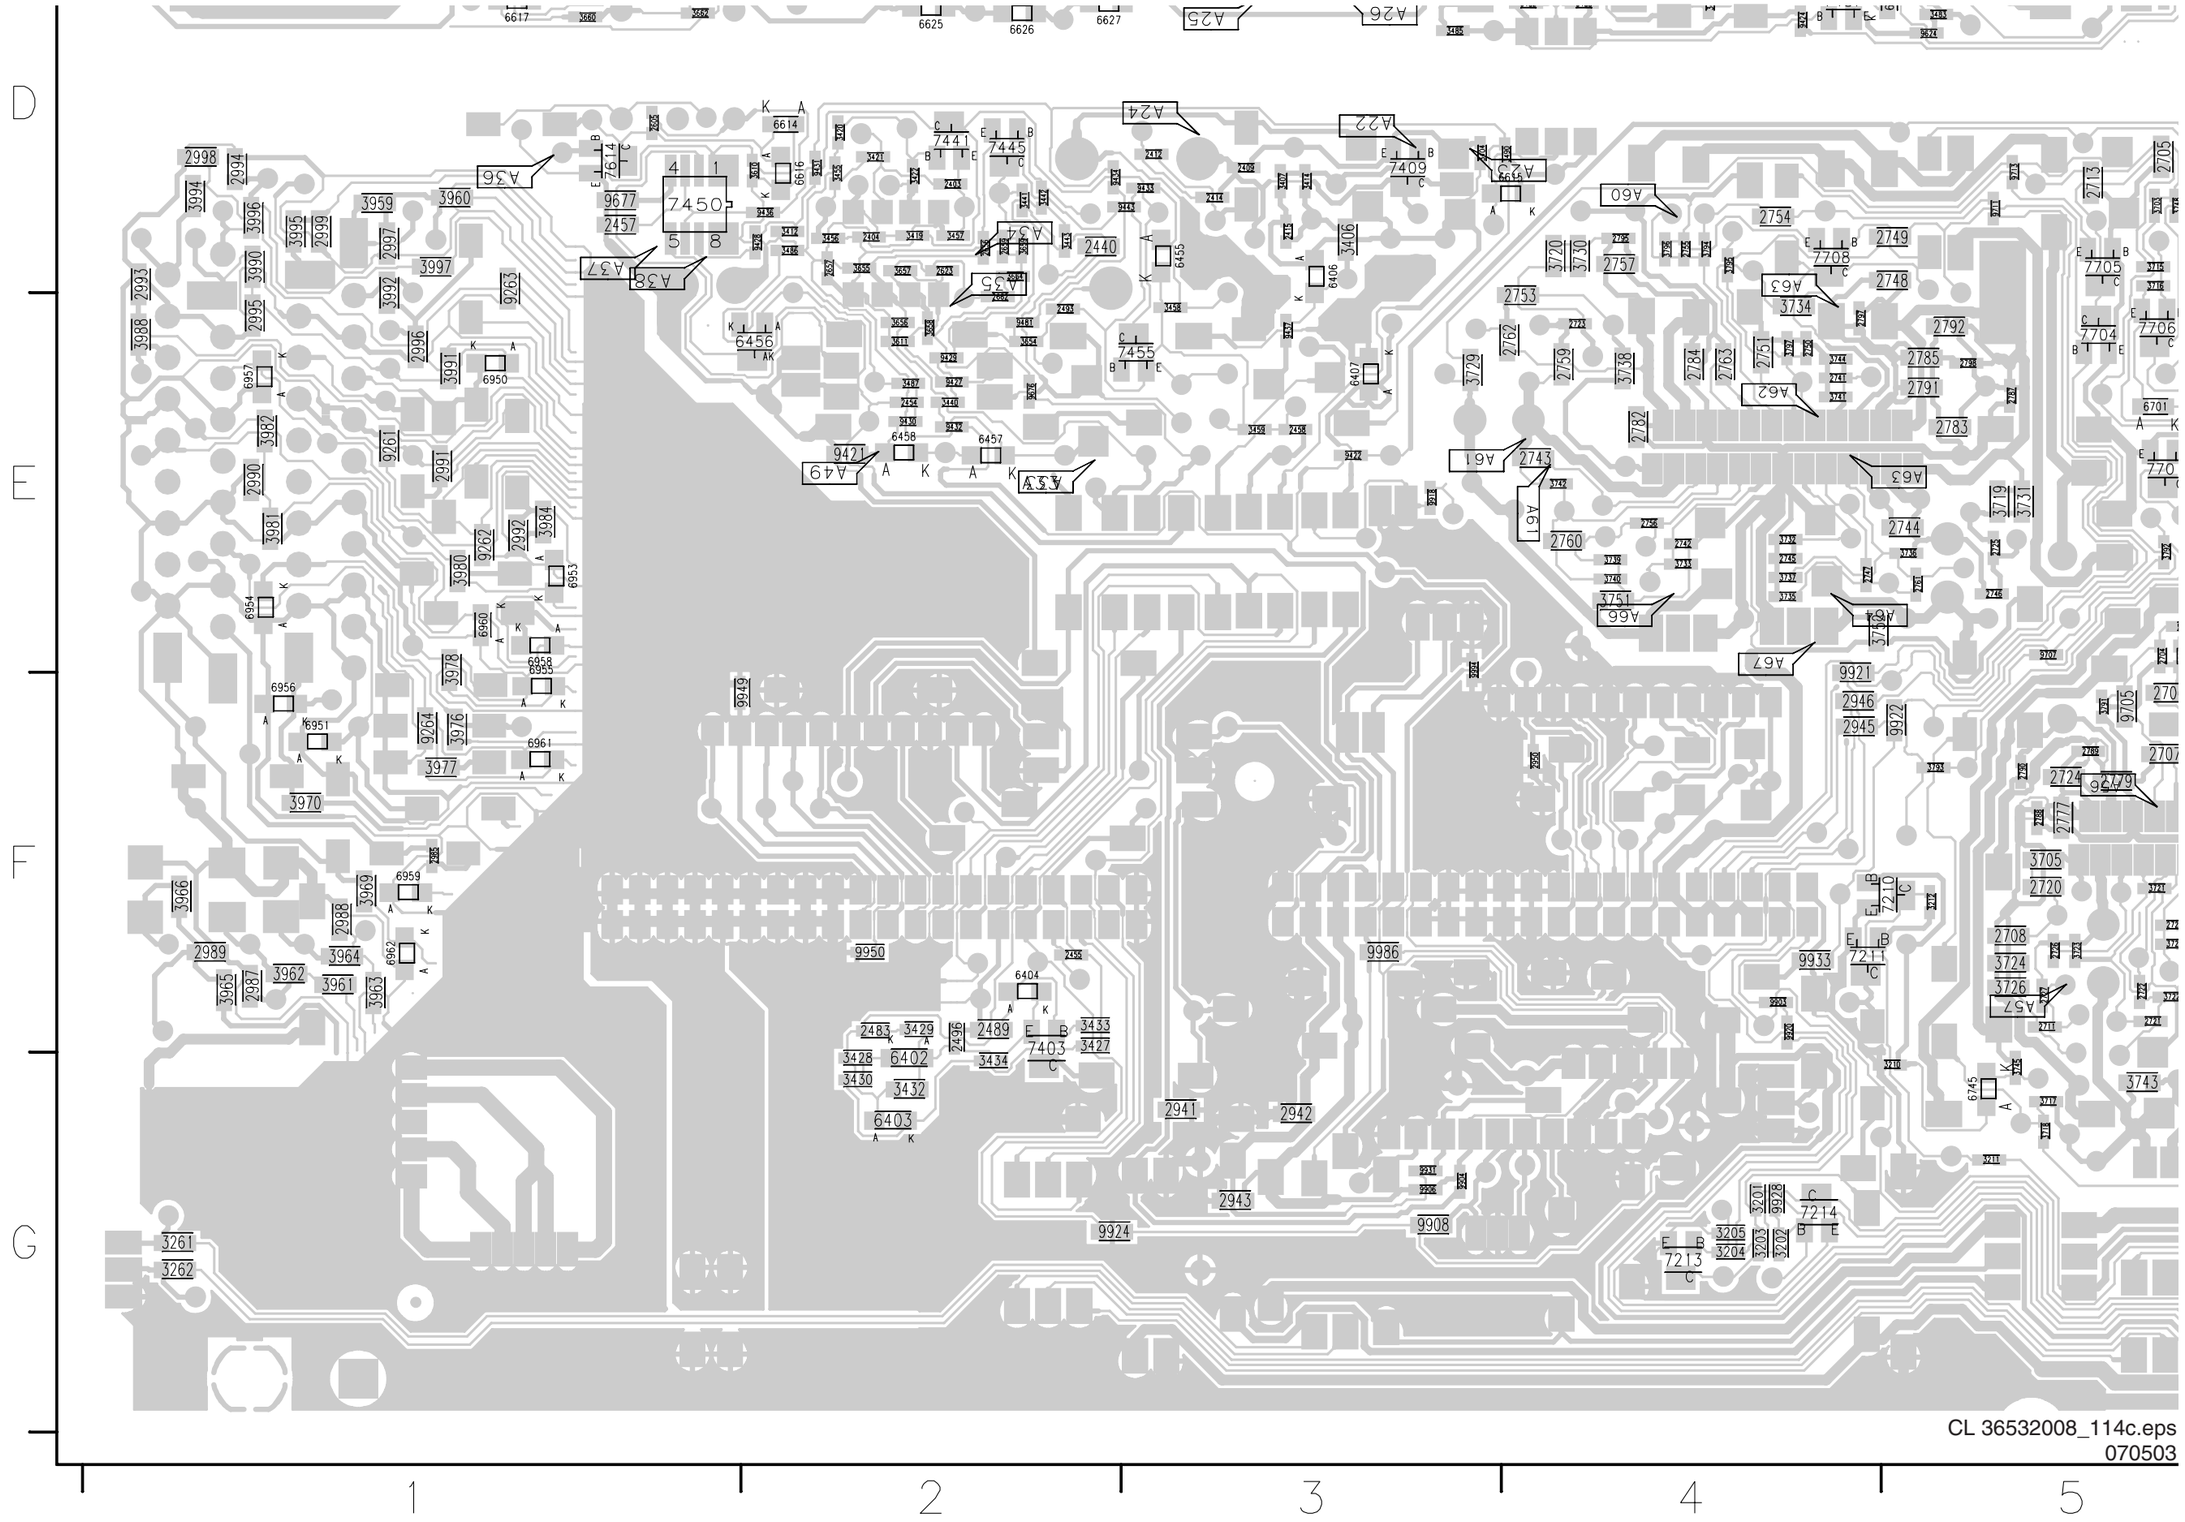


CL 36532008_114c.eps
070503

Layout Large Signal Panel (Part 4 Bottom Side)

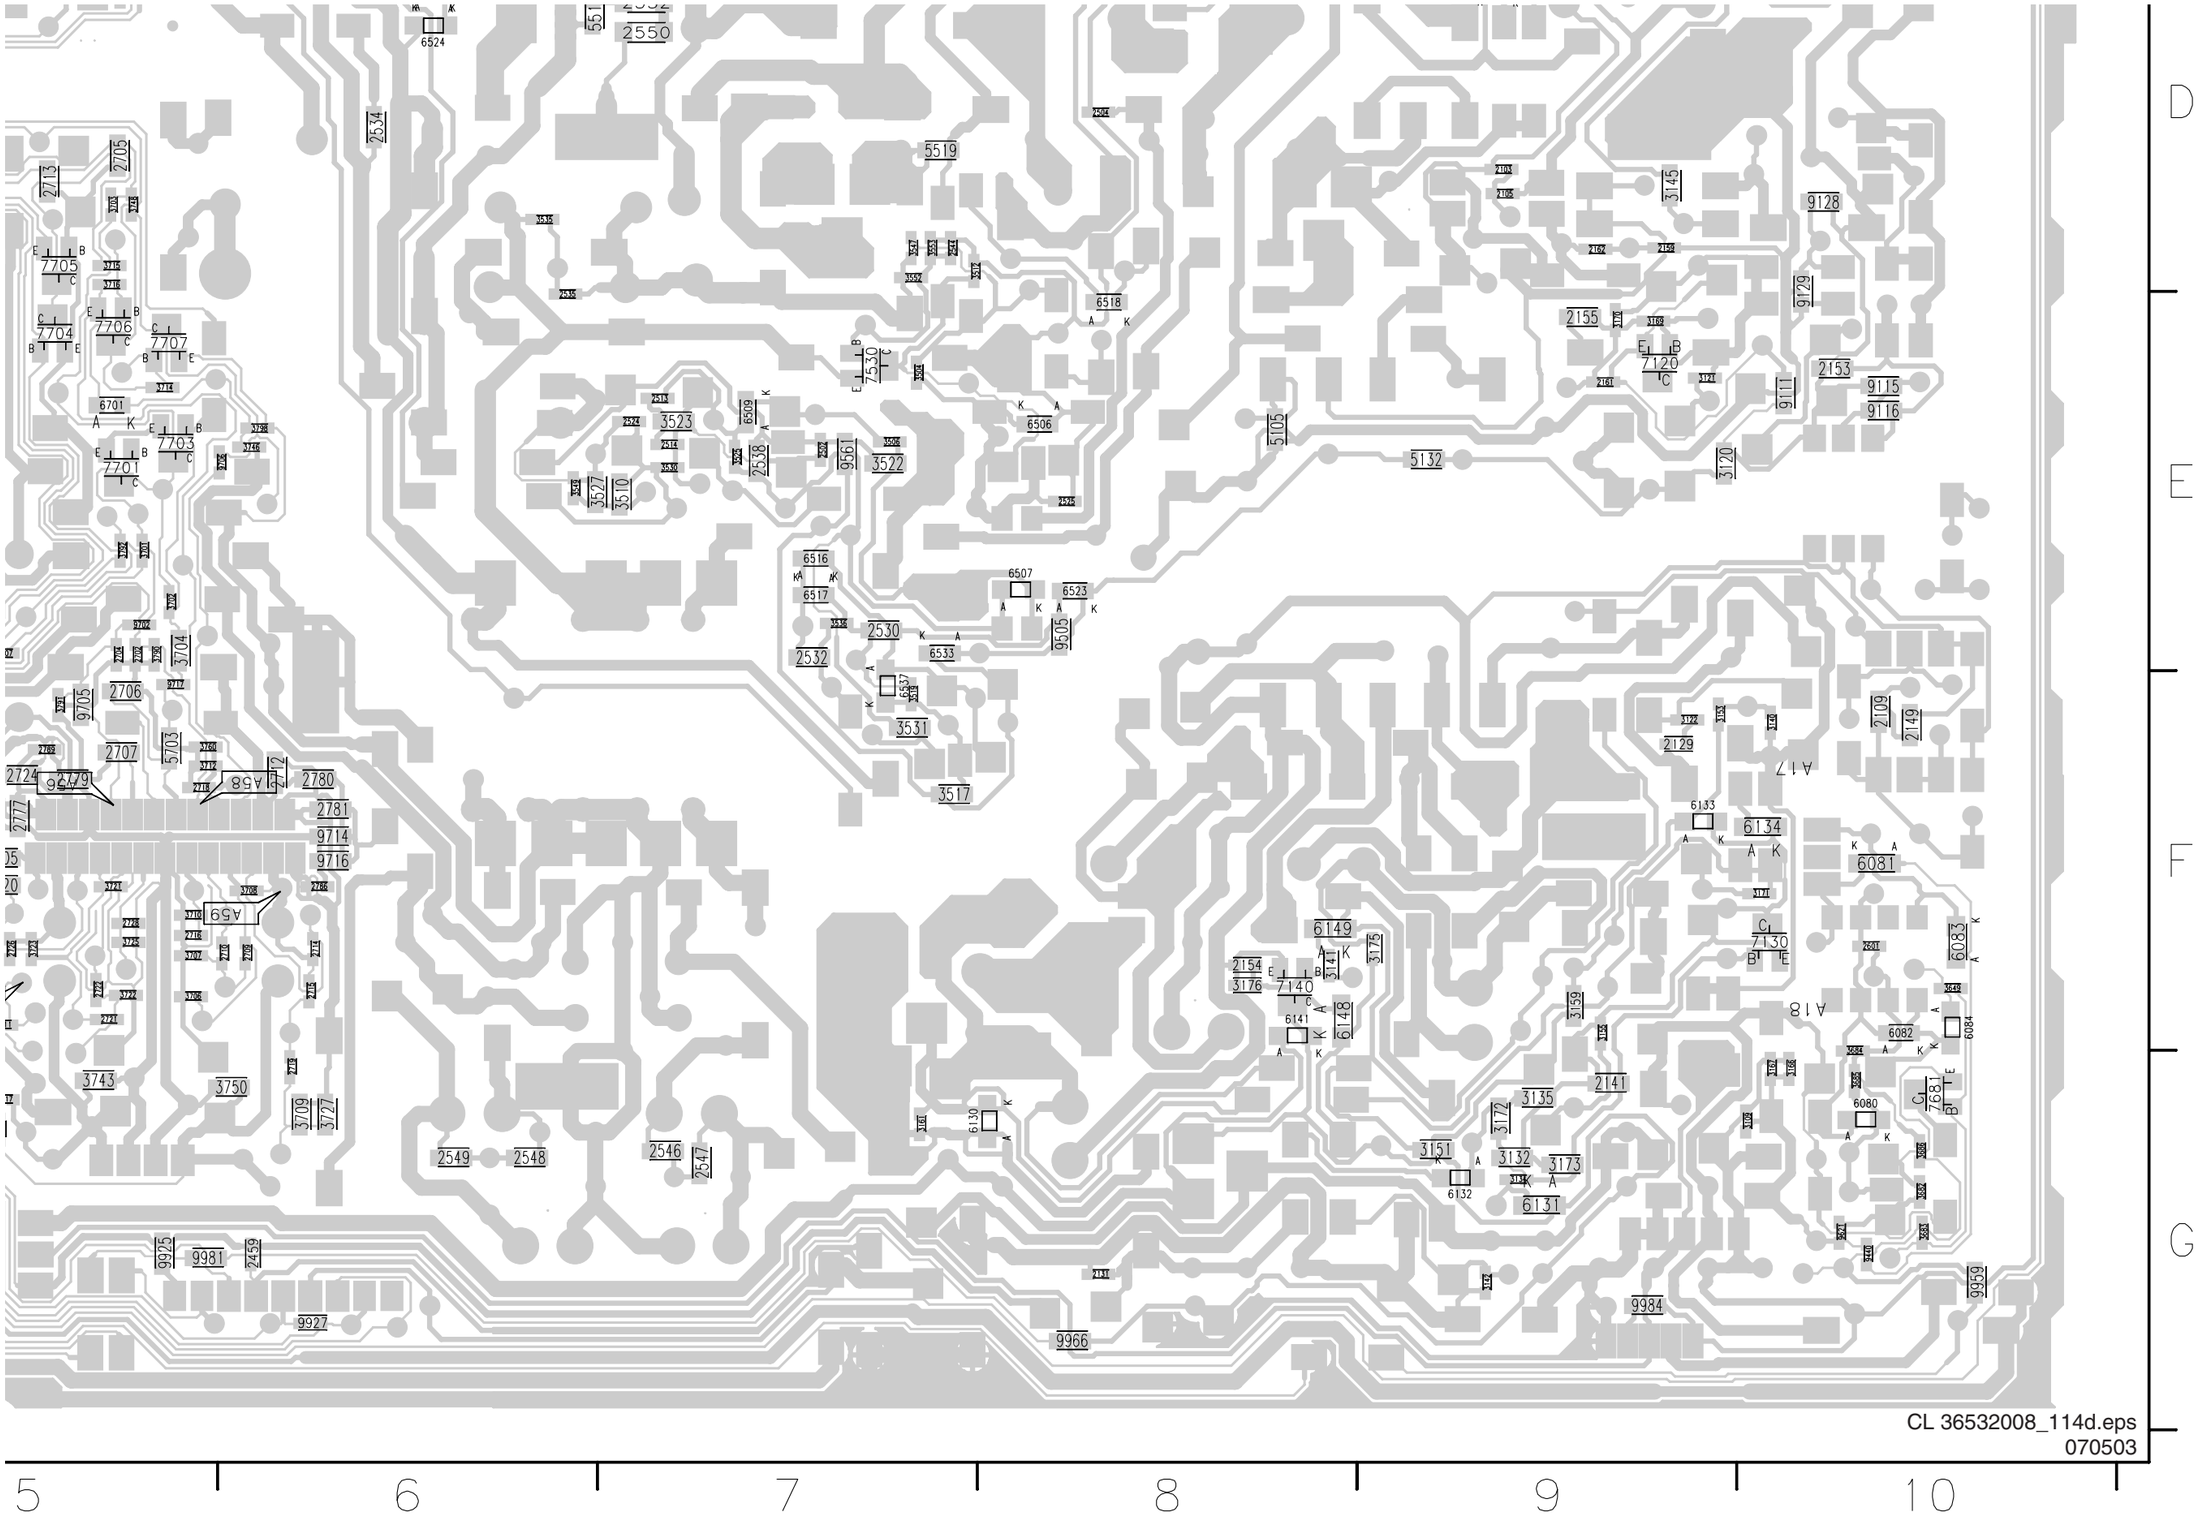

Small Signal Board: Connector

0S01 G1	2S03 F1	2S09 G14	2S15 G10	2S21 G7	2S27 G4	2S33 G6	2S39 H3	2S45 G4	3S05 G14	5S01 F2	9S02 G3	9S08 G4	9S14 F10	9S20 G6	9S26 F7	9S65 E10	FS01 C6	FS07 I6	FS13 I7	FS20 I8	FS26 I10	FS32 I11	FS38 I13	FS45 I14	FS51 I5	VS13 H6	VS19 H7	VS25 H8	VS34 H10	VS46 H12	VS54 H13	VS60 H14
1S01 C6	2S04 F2	2S10 G7	2S16 G11	2S22 G8	2S28 G5	2S34 G6	2S40 H3	2S46 H4	3S06 G13	5S02 F2	9S03 G3	9S09 G4	9S15 F11	9S21 G6	9S27 F7	9S66 G10	FS02 H5	FS08 I6	FS14 I7	FS21 I8	FS27 I10	FS33 I12	FS39 I12	FS46 I14	FS52 H8	VS14 H6	VS20 H7	VS26 H8	VS35 H10	VS47 H12	VS55 H13	VS61 H14
1S02 I14	2S05 F2	2S11 G10	2S17 G7	2S23 G8	2S29 G5	2S35 G6	2S41 H3	3S01 F14	3S07 F7	5S03 F1	9S04 G3	9S10 G4	9S16 G2	9S22 G6	9S28 F7	9S67 G10	FS03 H5	FS09 I6	FS15 I7	FS22 I9	FS28 I10	FS34 I12	FS40 I13	FS47 C7	FS53 I9	VS15 H6	VS21 H7	VS28 H8	VS41 H11	VS48 H12	VS56 H13	VS62 H12
1S15 I2	2S06 G13	2S12 G5	2S18 G7	2S24 G8	2S30 G5	2S36 G6	2S42 H3	3S02 F13	3S08 G5	5S04 F1	9S05 G3	9S11 G5	9S17 G5	9S23 G6	9S29 F7	9S68 H10	FS04 H6	FS10 I6	FS16 I7	FS23 I9	FS29 I11	FS35 I12	FS42 I13	FS48 C7	FS54 I9	VS16 H6	VS22 H7	VS31 H9	VS43 H11	VS49 H12	VS57 H13	VS63 H12
2S01 F1	2S07 G13	2S13 F9	2S19 G7	2S25 G8	2S31 G6	2S37 G6	2S43 G3	3S03 F9	3S09 G9	5S05 F1	9S06 G4	9S12 F8	9S18 G6	9S24 G6	9S30 F8	9S69 H10	FS05 H6	FS11 I7	FS17 I8	FS24 I9	FS30 I11	FS36 I12	FS43 I13	FS49 E9	VS11 H5	VS17 H6	VS23 H7	VS32 H9	VS44 H11	VS52 H12	VS58 H13	
2S02 F1	2S08 G14	2S14 G10	2S20 G7	2S26 G4	2S32 G6	2S38 H2	2S44 H4	3S04 F10	3S10 E9	9S01 G3	9S07 G4	9S13 F11	9S19 G6	9S25 F7	9S31 F8	FS00 C7	FS06 H6	FS12 I7	FS18 I8	FS25 I9	FS31 I11	FS37 I12	FS44 I13	FS50 E9	VS12 H6	VS18 H6	VS24 H7	VS33 H9	VS45 H11	VS53 H13	VS59 H13	

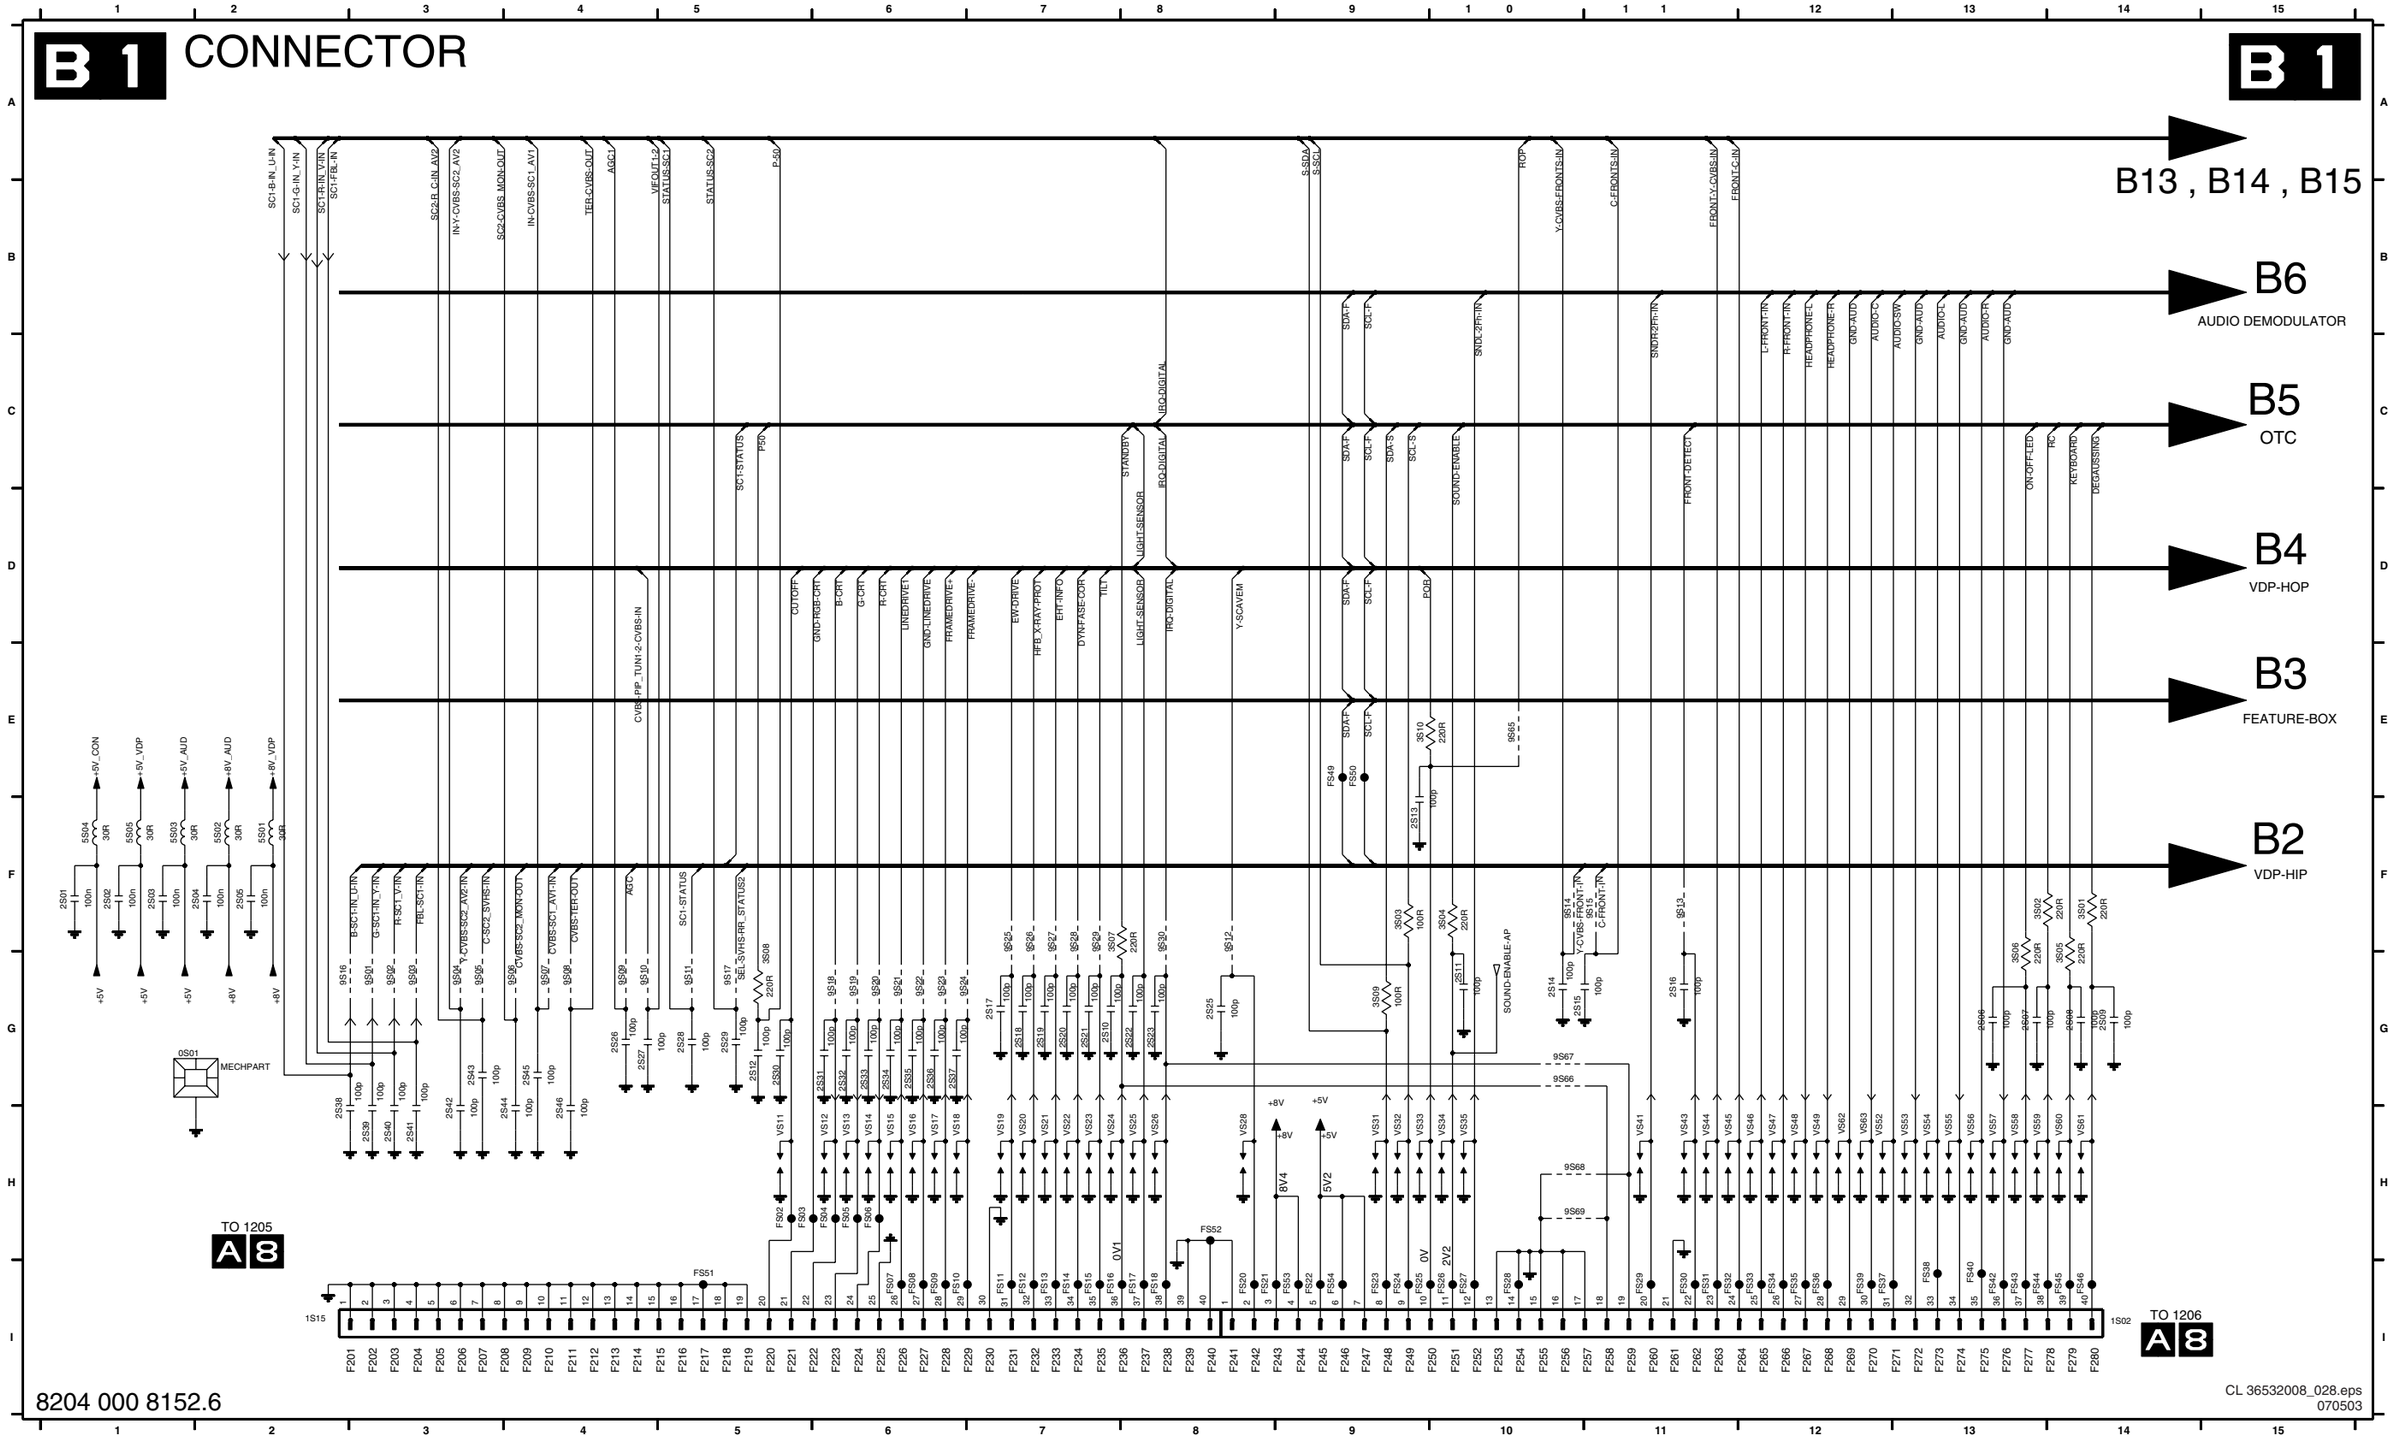

Small Signal Board: IF, I/O Video Processing

B2 IF,I/O VIDEOPROCESSING

B2

B1÷B18

HIP

SUPPLY

CTRL

SYNC

IF DEM

SAW-FILTER AUDIO

SAW-FILTER-VIDEO

SAW-FILTER VIDEO

MODU-LATOR COIL

GROUP DELAY COR.

I/O SWITCH

LUMA & CHROMA PROC.

OUTP SWITCH

COIL 40.4 SUPPRESSION

8204 000 8156.7

CL 36532008_029.eps
170403

1305 E11 3456 G5
1306 E12 3457 H5
1307 E12 3460 D13
1308 E13 3461 D14
1403 A1 3462 D14
1406 E5 3463 B5
1407 E5 3468 H11
1408-A G3 3473 D11
1408-B G3 3474 F9
1409-A C3 3475 G9
1409-B D3 3476 H9
1410-A E4 5309 H14
1410-B F3 5310 H14
1411 G6 5311 I4
2302 H14 5312 F14
2305 C11 5316 A1
2316 C11 5317 A1
2322 C11 5401 D2
2327 D12 5402 E5
2339 H8 5403 H2
2350 A11 5404 B7
2351 A11 5405 B7
2352 A11 5406 E6
2353 I12 5408 D6
2354 G12 5411 C1
2355 C12 5415 A2
2356 F11 5416 A3
2357 F11 6402 E2
2358 F11 6403 D2
2359 F11 6404 G2
2360 F11 6405 E2
2361 F13 7307 G11
2362 F13 7320 F9
2364 C12 7322 E7
2365 F7 7323 D9
2366 F8 7401 F2
2367 F8 7402 H7
2368 F8 7403 D2
2369 F8 7405 H1
2370 F8 7406 F5
2371 B10 7407 F5
2372 B10 7408 A11
2373 B8 7409 A12
2374 B8 7410 H5
2375 B8 7411 D6
2376 B7 7412 F14
2377 B6 7413 D13
2378 B7 7414 D11
2379 F12 7415 H9
2380 F12 9318 G11
2381 F12 9319 G11
2382 F12 9322 G8
2383 D12 9401 F3
2384 F7 9402 E3
2385 G13 9403 E2
2388 A11 9405 E2
2389 B12 9406 F13
2390 B1 9407 B4
2391 B3 9408 H7
2394 B6 9410 B4
2399 F7 9412 G6
2401 C6 9413 F7
2402 G7 9414 E7
2403 F9 9415 C3
2404 C7 9416 D5
2405 D1 9417 D6
2406 G2 9418 E5
2407 G3 9419 E7
2408 H3 9420 F6
2409 C7 9422 H6
2410 G9 A400 G3
2411 D6 A409 C5
2412 C1 A410 C5
2413 D5 A411 C4
2414 H6 A412 C4
2415 H6 F401 D7
2417 E7 F403 C7
2418 D7 F404 D12
2419 D7 F405 E12
2420 G8 F406 E12
2421 F14 F407 B10
2422 E13 F408 B10
2423 G14 F411 C6
2424 G11 F413 B6
2425 B1 F437 D1
2426 H13 F440 B8
2427 I14 I401 G10
2428 I14 I402 C7
2432 D12 I411 B5
2433 G9 I415 H8
3301 I12 I417 F8
3303 H11 I421 B8
3370 F9 I422 B8
3371 G9 I424 E14
3372 G9 I425 F14
3373 C11 I426 F14
3374 C11 I427 F14
3375 C12 I428 F13
3376 B10 I430 H14
3377 B10 I431 H14
3378 B10 I432 H12
3379 D11 I433 I11
3380 B7 I434 H11
3381 H8 I435 H11
3382 F7 I440 B4
3385 F7 I441 B7
3393 F11 I442 B7
3400 B5 I443 B6
3401 B7 I444 B5
3402 B1 I445 B5
3403 G7 I446 D5
3404 I6 I447 D5
3405 H5 I448 E6
3406 G2 I449 F7
3407 F2 I450 H6
3408 B5 I451 H5
3409 G2 I452 B1
3410 E3 I453 B11
3411 D2 I454 B12
3412 G6 I455 E12
3414 D2 I456 D13
3415 B5 I457 D14
3416 D5 I458 E5
3417 G5 c002 A8
3418 D7
3419 E5
3420 G6
3421 F5
3423 H1
3433 G1
3434 E2
3435 G5
3436 E6
3437 D7
3439 E6
3441 B5
3444 B11
3445 F6
3447 B11
3448 B12
3449 B12
3450 E14
3451 F14
3452 F14

I5 PM3394B 20mV / div AC 10µs / div
I6 PM3394B 1V / div DC 10us / div
V1 PM3394B 1V / div DC 10us / div
V2 PM3394B 1V / div DC 10us / div
V5 PM3394B 1V / div DC 10us / div
V6 PM3394B 500mV / div DC 20us / div
V7 PM3394B 500mV / div DC 20us / div
V8 PM3394B 1V / div DC 20us / div
V9 PM3394B 2V / div DC 200us / div
V10 PM3394B 2V / div DC 200us / div
F14 1V / div DC 5ms / div
L8 1V / div DC 20us / div

Small Signal Board: PICNIC (Feature Box)

B3A PICNIC (FEATURE BOX)

B3A

L6 PM3394B — 500mV / div DC, 10us / div
L7 PM3394B — 500mV / div DC, 10us / div
L9 PM3394B — 1V / div DC, 250ns / div
L10 — 1V / div DC, 20us / div
L11 — 1V / div DC, 5ms / div

(FBX SOFTWARE) PROM

MICRO-PROCESSOR PSP

PICNIC

BACK END
PEAKING
MUX

3 X DAC

MID END
HISTOGRAM
NOISE REDUCTION
TBC/SRC
MUX

ANALOG PROCESSING

3 X ADC

FRONT END

PLL

OSC

BST

FIELD MEMORY FM1

BUS A

BUS B

BUS C

BUS D

L1 — 1 V / div DC, 10µs / div
L2 — 1 V / div DC, 10µs / div
L3 — 1 V / div DC, 10µs / div
L4 — 1 V / div DC, 10ms / div
L5 — 1 V / div DC, 20µs / div

8204 000 8154.7

CL 36532008_030.eps
070503

1701 J5	3762 J13	FF24 K6
1702 J5	3763 J13	FF25 K5
1F01 K5	3764 E10	FF26 L5
2700 B3	3765 E10	FF27 L4
2701 B2	3830 D5	FF28 L5
2702 B3	3831 E5	FF29 L5
2703 B3	3832 G5	FF30 C3
2704 B2	3833 H6	IF01 B5
2705 B3	3834 H17	IF02 B6
2706 C3	3835 I17	IF03 B5
2707 C2	3836 I17	IF04 C5
2708 C3	3837 C11	IF05 H6
2713 F4	3845 K2	IF06 D7
2714 F4	5700 B3	IF07 E10
2718 H2	5701 B3	IF08 E7
2719 H2	5702 C3	IF09 E7
2720 I2	5706 K2	IF10 E7
2721 I3	5710 B7	IF11 E4
2722 J2	5711 C7	IF12 E6
2723 D2	5712 D5	IF13 E6
2724 E2	5713 E5	IF14 F4
2728 L2	5714 G4	IF15 F6
2729 L3	5729 H16	IF16 F13
2730 L4	5731 J16	IF17 F6
2740 H4	5733 I16	IF18 F13
2741 H4	5736 I5	IF19 G6
2742 H4	5737 C12	IF20 G13
2743 B5	5744 B12	IF21 H5
2744 B5	5746 G15	IF22 H5
2745 B7	5747 G15	IF23 H6
2746 C7	5754 B7	IF24 I5
2748 E6	5755 C7	IF25 I4
2749 E5	5756 B12	IF26 I4
2750 E6	5759 K15	IF27 J6
2751 G4	6830 D5	IF28 H6
2752 H5	6831 E5	IF29 C4
2753 I6	6832 G5	IF30 C5
2755 G6	6833 H6	IF80 B6
2756 J6	6834 H16	IF81 J16
2757 H6	6835 I16	
2758 K5	6836 I16	
2759 K6	6837 C12	
2760 L8	6845 K2	
2761 L10	7703 D2	
2762 J13	7706 K3	
2763 H13	7707 C4	
2764 E12	7708 B5	
2765 E11	7709 C4	
2766 E8	7710 C5	
2767 C12	7711 B8	
2769 D14	7712 D7	
2773 F16	7713 E6	
2775 F17	7714 C15	
2777 F18	7715 G3	
2778 F17	7734 F2	
2779 D17	7735 G2	
2781 B16	9700 A6	
2823 C7	9701 E5	
2824 C7	9702 D6	
2831 G3	9703 G6	
2870 B12	9704 K6	
2871 H16	9705 K4	
2872 H16	9706 K4	
2874 J16	9707-A I13	
2877 I16	9707-B I13	
2878 I16	9707-C I14	
2881 I5	9707-D I14	
2882 K14	9708-A H13	
2883 K15	9708-B H13	
3703 A3	9708-C I14	
3704 B3	9708-D I14	
3705 B3	9709-A G13	
3706 B3	9709-B H13	
3707 B3	9709-C H14	
3708 C3	9709-D H14	
3709 E4	9710-A G13	
3710 F4	9710-B G13	
3712 L7	9710-C G14	
3713 G2	9710-D G14	
3714 H2	9711 G14	
3715 H2	9725 D3	
3716 H3	9726 E3	
3717 H3	9729 G17	
3718 I3	9730 B7	
3719 F3	9731 B7	
3720 G3	9732 C6	
3721 D2	9733 C7	
3722 E2	9734 E5	
3725 I3	9735 D5	
3726 J2	9736 F2	
3727 I4	9737 F3	
3728 I3	9738 G2	
3729 D2	9760 C16	
3730 I2	9761 F16	
3731 D3	9767 B2	
3733 D3	9768 B2	
3734 E3	9769 C2	
3735 D3	AF01 B2	
3736 B4	AF02 C2	
3737 B5	AF03 B2	
3738 C5	FF02 B4	
3739 C4	FF04 B4	
3741 C5	FF05 B12	
3742 C5	FF06 C12	
3743 C5	FF07 C3	
3746 C6	FF08 D2	
3747 B5	FF09 D2	
3748 B5	FF10 G2	
3749 C4	FF11 C2	
3750 C5	FF12 H2	
3751 A6	FF14 H16	
3752 B6	FF15 H2	
3753 B6	FF16 I16	
3754 B6	FF17 I2	
3755 C4	FF19 I2	
3756 C4	FF20 J13	
3758 E6	FF21 J13	
3759 H6	FF22 K5	
3760 J5	FF23 K5	

Small Signal Board: Falconic

B3B FALCONIC

B3B

FALCONIC

COMPRESS

DECOMPRESS

DEINTERLACER

PIXEL PEAK

VECTORS

MOTION ESTIMATOR

LEFT MPRAM

RIGHT MPRAM

UPCONVERSION

VERTICAL PEAKING

VERTICAL ZOOM

DNR

SNERT INTER

CONTROL

BST

B3 a,b,c

7718 SAA4992

7717 MSM54V12222A FM2

7719 MSM54V12222A FM3

FIELD MEMORY

OKI PHILIPS

4721 X
4722 X
4723 X
4724 X
4712 X
4713 X
4714 X
4715 X

+3V3_INT +3V3FA +2V5FB +3V3_FAULT_FBX +3V3_FBX +2V5B

BAS316 IF40 IF41 FF41 FF42

CLK32 CLK32FM2 CLK32FM3

8204 000 8154.7

CL 36532008_031.eps
070503

2776 I12
2780 I1
2782 I3
2784 E1
2785 D4
2786 E4
2787 F4
2788 E4
2789 I6
2790 I8
2791 E13
2792 E13
2793 D13
2794 D13
2795 G11
2796 E11
2797 E11
2798 C11
2799 E14
2800 B8
2801 B7
2802 B7
2819 I14
2899 B6
3740 G4
3766 E4
3767 E3
3768-A I4
3768-B I4
3768-C I4
3768-D I4
3769-A I5
3769-B I5
3769-C I5
3769-D I5
3770 I6
3773 G3
3774 H3
3775-A I4
3775-B I4
3775-C I5
3775-D I5
3776-A I6
3776-B I6
3776-C I6
3776-D I6
3781 G3
3782 G4
3783 H4
3838 E14
3839 E2
3840 C14
5716 E1
5717 E13
5718 D13
5719 C13
5753 D13
6838 E13
6839 E2
6840 C13
7717 F1
7718 B4
7719 F13
9712 F3
9713 F2
9714 I3
9715 I2
9716 E4
9717 E3
9720 G4
9721 F14
9722 F14
9723 H14
9724 I14
9727 I13
9728 I2
FF41 C13
FF42 D13
IF40 E14
IF41 E2

Small Signal Board: Eagle

B3C EAGLE

B3b

FIELD MEMORY FM4

FIELD MEMORY FM5

EAGLE IC

B3a,b

B3c

L24 1 V / div DC 10µs / div

L25 1 V / div DC 10µs / div

L26 1 V / div DC 10µs / div

CL 36532008_032.eps 170403

8204 000 8154.7

2709 C6	3802 G8	IF58 B1
2710 D6	3803 G8	IF59 A8
2711 E7	3804 C13	IF60 B9
2712 A8	3805 I11	IF61 B5
2716 D6	3806 I14	IF63 D5
2717 J8	3807 I7	IF64 E1
2725 J8	3808 J10	IF65 F1
2726 J8	3809 I13	IF66 H13
2727 J10	3810 J7	IF67 H5
2731 A10	3811 J9	IF68 I8
2732 B12	3812 J9	IF69 I10
2733 C13	3813 J10	IF70 I13
2734 D13	3814 J12	IF71 I1
2735 G11	3815 J12	IF72 A7
2736 J11	3816 J13	IF73 D8
2737 J14	3817 J14	IF74 D8
2738 J13	3818 J14	IF75 F5
2739 J14	3819 G12	IF76 J7
2747 A9	3820 G12	IF77 G11
2754 A12	3821 H8	IF78 J13
2768 A9	3822 H7	IF82 D12
2770 J1	3823 H8	
2771 J2	3824 H7	
2772 J2	3825 G7	
2774 J4	3826 G7	
2783 I13	3827 G7	
2803 G14	3828 I5	
2804 F14	3829 A9	
2805 G13	3841 E5	
2806 B14	3842 E5	
2807 B13	3843 J1	
2808 B13	3844 F13	
2809 E4	5705 H13	
2810 B4	5721 A13	
2811 E4	5722 F14	
2812 F4	5723 A12	
2813 B3	5724 G13	
2814 I14	5725 F14	
2815 J8	5726 F4	
2816 J11	5727 E4	
2817 C1	5728 E14	
2818 J14	5738 G12	
2820 E2	5739 I8	
2821 E3	5740 I11	
2822 E3	5741 I14	
2825 D5	5742 J1	
2826 F4	5743 J3	
2827 I7	5745 G14	
2828 I12	5748 A13	
2829 F3	5749 A12	
2830 I12	5750 F14	
2832 F4	5751 F14	
2833 H5	5752 J3	
2835 I5	5757 D14	
2838 I3	6841 E5	
2839 J7	6842 E5	
2840 J10	6843 J1	
2841 J13	6844 F13	
2843 H1	7720 A13	
2845 C5	7722 B2	
2846 C5	7723 G2	
2847 A12	7724 B8	
2848 B7	7725 A6	
2851 A11	7726 G13	
2853 F13	7727 J2	
2854 E13	7728 I7	
2855 F7	7729 I9	
2857 F12	7730 I13	
2859 G11	7731 J7	
2860 G11	7732 J9	
2861 B7	7733 J12	
2864 D13	9718 A13	
2865 E13	9719 A13	
2866 G10	9740 I6	
2867 F7	9741-A J6	
2875 H12	9741-B J6	
2876 H12	9741-C J6	
2880 H13	9741-D I6	
2884 E14	9744 C14	
2885 J11	9745 C14	
2886 G8	9746 C14	
2887 G7	9747 C14	
2888 G7	9750 I6	
2889 G8	9753 E7	
2890 G9	9754 B8	
2891 G10	9762 B3	
2892 G7	9763 D3	
2893 H8	9764 F3	
2894 H10	9765 I3	
2895 H10	9766 H11	
2896 H9	AF10 I9	
2897 H9	AF11 I12	
2898 H7	AF12 I14	
3711 F8	FF50 A14	
3744 A6	FF51 F14	
3745 B6	FF53 G14	
3757 A8	FF54 J4	
3771 I6	FF55 E14	
3772 J6	FF56 E5	
3785 I7	FF57 J2	
3786 I9	FF58 F5	
3787 I12	FF59 G13	
3788 I7	FF61 G13	
3789 I10	IF51 A9	
3790 I13	IF52 A8	
3791 I8	IF53 A8	
3792 C13	IF54 A8	
3793 A7	IF55 A9	
3800 G8	IF56 A9	
3801 H10	IF57 B9	

Small Signal Board: HOP

B 4 HOP

B 4

B1 ÷ B18

TOPIC (OPTIONAL)

HOP

ONLY FOR NO HOP

N.C.

ONLY FOR NO HOP

8204 000 8156.7

CL 36532008_033.eps 070503

1301 G4	3344 E10	7316 B12	I309 C12
1304 H3	3345 D9	7317 C12	I310 C12
2301 C2	3346 D9	7318 E10	I311 D8
2303 F9	3347 D9	7319 C12	I312 F3
2304 G7	3348 D9	7340 B6	I313 D12
2306 I9	3349 F2	7361 I7	I314 D9
2307 F4	3350 B10	7362 H7	I315 D8
2308 G9	3351 B9	7375 B8	I316 E9
2309 E3	3352 B10	9302 B3	I317 D12
2310 E3	3353 A10	9303 B4	I319 B11
2311 I5	3354 B10	9304 B4	I320 B11
2312 G9	3355 B7	9305 B4	I321 G3
2313 F9	3356 H12	9308 C5	I326 C7
2314 F2	3357 G12	9309 C5	I330 B4
2315 F3	3358 B11	9310 C5	I331 B4
2317 B10	3359 B10	9311 I1	I332 B3
2318 F3	3360 B8	9312 J1	I333 C2
2319 G10	3361 H7	9313 F13	I338 E3
2320 G3	3362 G11	9314 I1	I339 F4
2321 C3	3363 F3	9315 I1	I357 E8
2323 B4	3364-A G11	9421 C9	I358 E4
2324 I6	3364-B G11	C001 H12	I359 F4
2325 H5	3364-C G10	F309 D11	I363 I5
2326 F12	3364-D H10	F311 D2	I365 E10
2328 B7	3365 G13	F312 F9	I366 C3
2329 B6	3366 H11	F329 H9	I367 E10
2330 B6	3367 F11	F347 E12	I368 B7
2331 B6	3368 F13	F348 H3	I369 B8
2332 F2	3369 C12	F349 H3	I370 B10
2333 E10	3383 B13	F350 H3	I371 I12
2334 E8	3384 D12	F351 H3	c200 F3
2335 G11	3386 G13	F352 H3	
2336 E9	3387 G2	F353 I3	
2337 B12	3388 B5	F362 I3	
2338 C12	3389 C13	F364 G4	
2340 J11	3390 E9	I302 F2	
2341 D12	3391 G12	I303 F4	
2342 B7	3394 E9	I304 B12	
2343 B9	3395 D3	I305 G5	
2344 I3	3396 D3	I306 G5	
2345 I2	3397 D2	I307 G7	
2346 I2	3398 D3	I308 B12	
2347 I2	3399 B5	I309 C12	
2348 I2	3442 E12	I310 C12	
2349 I2	3443 E13	I311 D8	
2363 G3	3453 D2	I312 F3	
2386 G12	3454 C1	I313 D12	
2393 E13	3455 C1	I314 D9	
2395 D3	3459 B11	I315 D8	
2396 D3	3465 B9	I316 E9	
2397 D3	3467 B8	I317 D12	
2398 A3	3470 B8	I319 B11	
2429 B4	3471 B8	I320 B11	
2431 B4	3472 I6	I321 G3	
3302 D4	5301 E2	I326 C7	
3304 I11	5302 F2	I330 B4	
3305 D3	5303 H1	I331 B4	
3306 E9	5304 H1	I332 B3	
3307 F9	5305 H1	I333 C2	
3308 E9	5306 H1	I338 E3	
3310 E9	5307 H1	I339 F4	
3311 G7	5308 I1	I357 E8	
3312 F11	5313 B12	I358 E4	
3313 E11	5314 C12	I359 F4	
3314 G8	5315 D12	I363 I5	
3315 H8	6301 E12	I365 E10	
3316 I10	6303 H9	I366 C3	
3317 G9	6304 H9	I367 E10	
3318 G9	6306 I5	I368 B7	
3319 F13	6307 I5	I369 B8	
3320 E3	6308 C2	I370 B10	
3321 E3	6309 E11	I371 I12	
3322 E12	6310 E10	c200 F3	
3323 I5	6311 E12		
3324 I5	6312 H8		
3325 B9	6313 I9		
3326 H5	6314 I9		
3327 H6	6316 D9		
3328 F9	6317 F12		
3329 E2	6319 E9		
3330 B7	6334 I5		
3331 G3	7301 C4		
3332 B7	7302 B1		
3333 G3	7303 H8		
3334 I5	7304 G2		
3335 B7	7305 C9		
3336 H6	7306 B9		
3337 B11	7309 G13		
3338 B12	7310-A G11		
3339 C3	7310-B H12		
3340 B13	7312 G10		
3341 C13	7313 B11		
3342 C13	7314 B10		
3343 D12	7315 B10		

F17 PM3394B 1V / div DC 5ms / div

F18 PM3394B 500mV / div DC 5ms / div

F19 PM3394B 500mV / div DC 5ms / div

F20 PM3394B 500mV / div DC 5ms / div

L12 1V / div DC 10us / div

V19 1V / div DC 10us / div

V20 1V / div DC 10us / div


V21 1V / div DC 10us / div

V28 PM3394B 1V / div DC 10us / div


V29 PM3394B 1V / div DC 10us / div

V30 PM3394B 1V / div DC 10us / div

Small Signal Board: OTC Flash

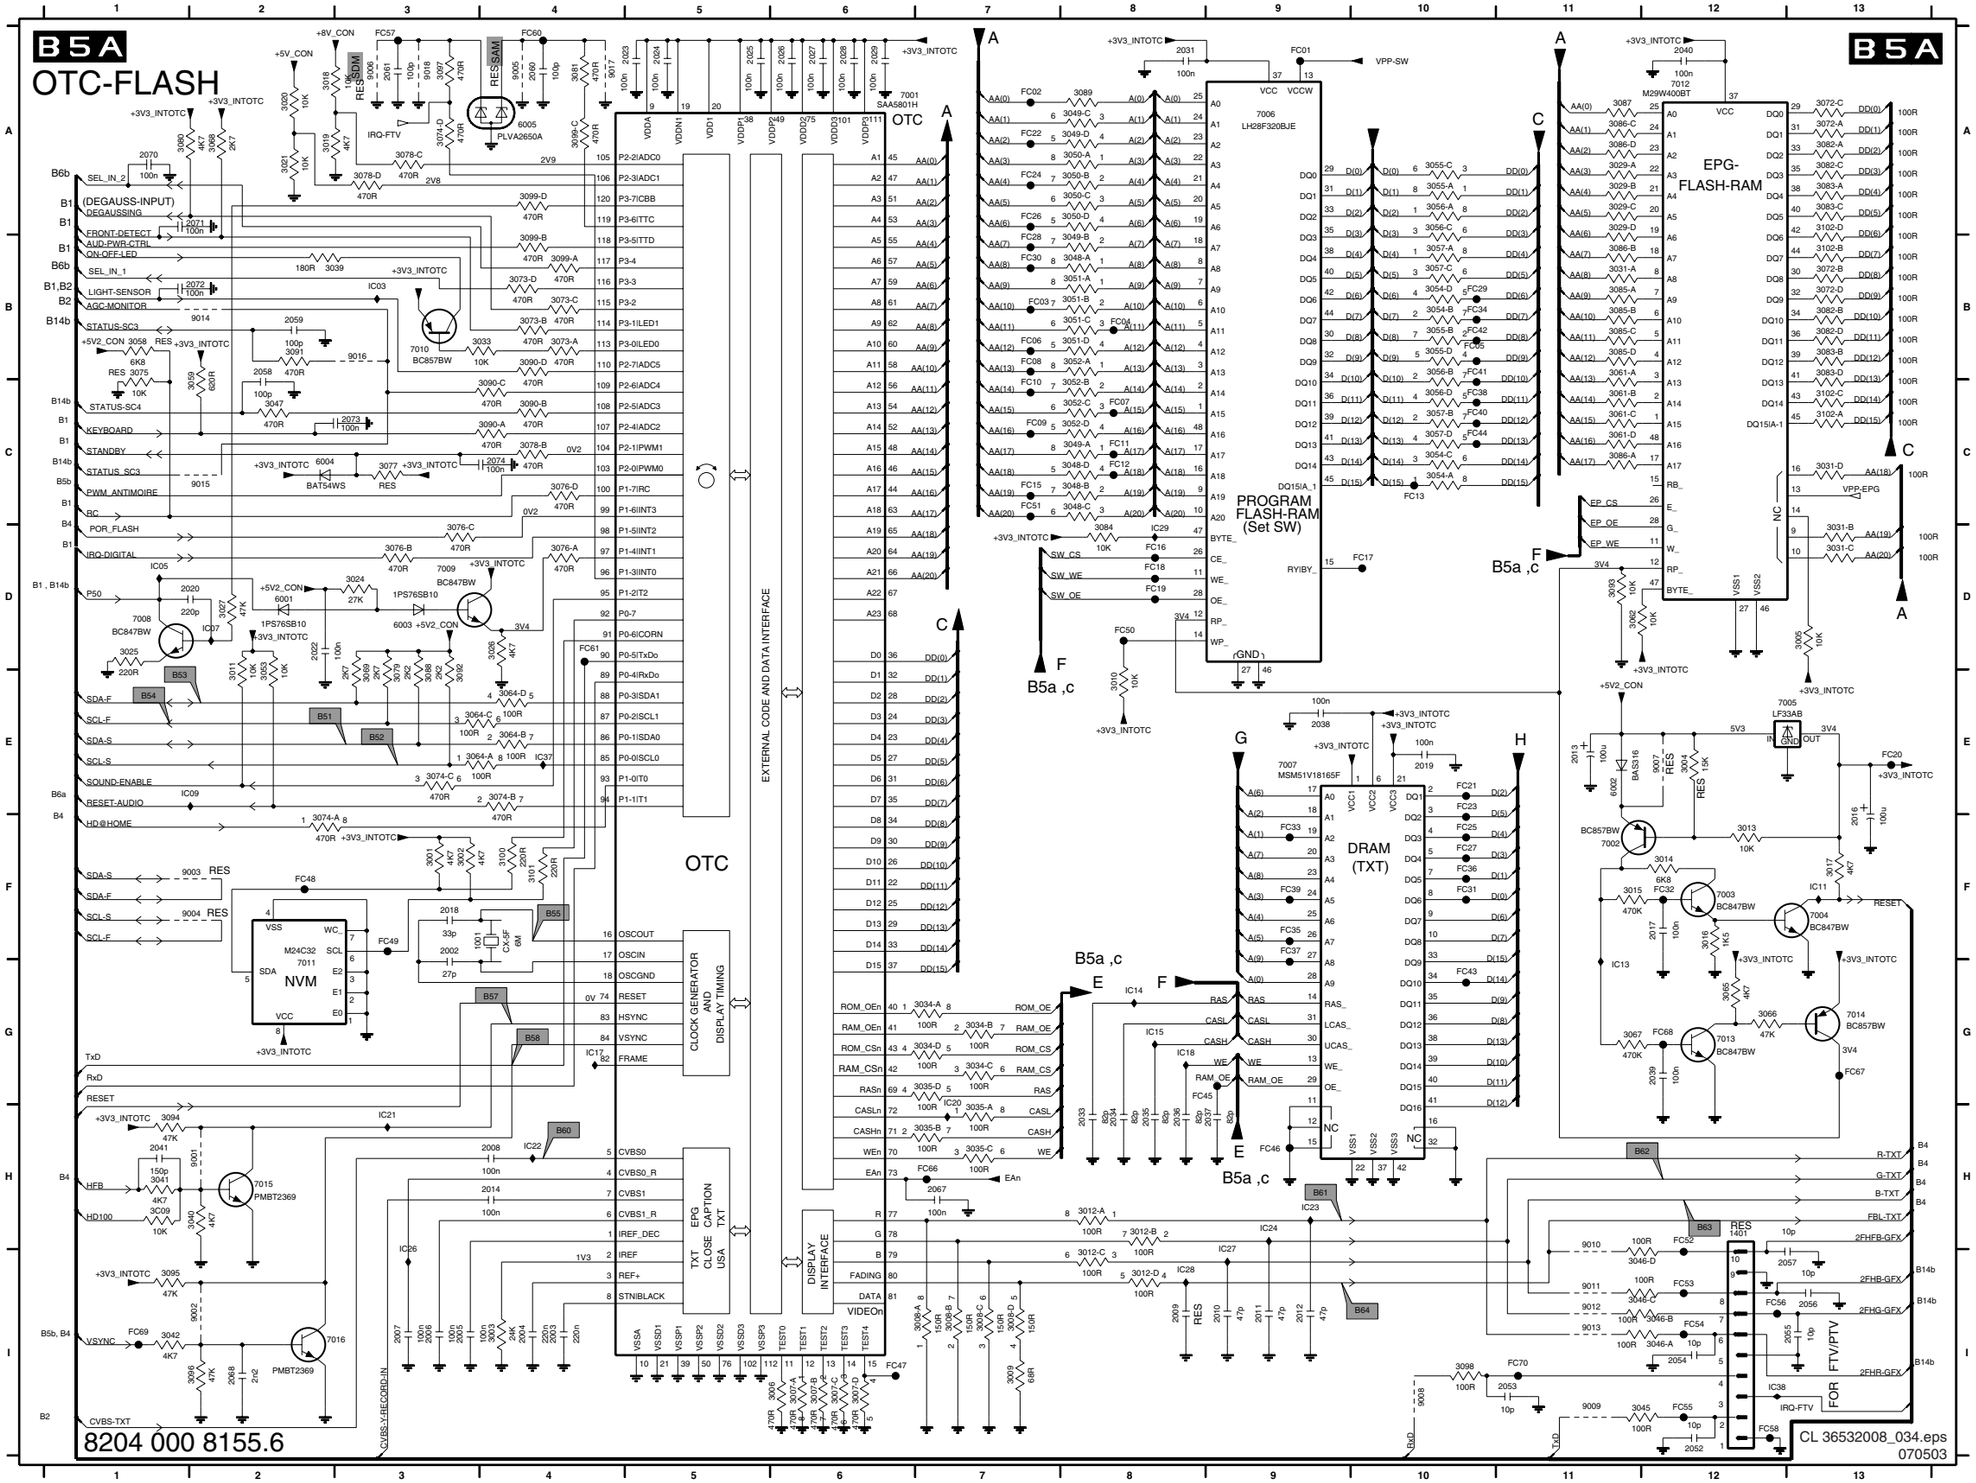


1001 F4	3031-B D13	3078-C A3	FC08 B7
1401 H12	3031-C D13	3078-D A3	FC09 C7
2002 F3	3031-D C13	3079 E3	FC10 C7
2003 I4	3033 B4	3080 A1	FC11 C8
2004 I4	3034-A G7	3081 A4	FC12 C8
2005 I3	3034-B G7	3082-A A13	FC13 C10
2006 I3	3034-C G7	3082-B B13	FC15 C7
2007 I3	3034-D G7	3082-C A13	FC16 D8
2008 H4	3035-A H7	3082-D B13	FC17 D10
2009 I8	3035-B H7	3083-A A13	FC18 D8
2010 I9	3035-C H7	3083-B B13	FC19 D8
2011 I9	3035-D G7	3083-C A13	FC20 E13
2012 I9	3039 B2	3083-D B13	FC21 E10
2013 E11	3040 H2	3084 D8	FC22 A7
2014 H4	3041 H1	3085-A B11	FC23 E10
2016 F13	3042 I1	3085-B B11	FC24 A7
2017 F12	3045 I12	3085-C B11	FC25 F10
2018 F3	3046-A I12	3085-D B11	FC26 A7
2019 E10	3046-B I12	3086-A C11	FC27 F10
2020 D2	3046-C I12	3086-B B11	FC28 B7
2022 D2	3046-D I12	3086-C A11	FC29 B10
2023 A5	3047 C2	3086-D A11	FC30 B7
2024 A5	3048-A B8	3087 A11	FC31 F10
2025 A5	3048-B C8	3088 E3	FC32 F12
2026 A6	3048-C C8	3089 A8	FC33 F9
2027 A6	3048-D C8	3090-A C4	FC34 B10
2028 A6	3049-A C8	3090-B C4	FC35 F9
2029 A6	3049-B B8	3090-C C4	FC36 F10
2031 A8	3049-C A8	3090-D B4	FC37 F9
2033 H8	3049-D A8	3091 B2	FC38 C10
2034 H8	3050-A A8	3092 E3	FC39 F9
2035 H8	3050-B A8	3093 D11	FC40 C10
2036 H8	3050-C A8	3094 H1	FC41 B10
2037 H9	3050-D A8	3095 I1	FC42 B10
2038 E9	3051-A B8	3096 I2	FC43 G10
2039 G12	3051-B B8	3097 A3	FC44 C10
2040 A12	3051-C B8	3098 I10	FC45 G8
2041 H1	3051-D B8	3099-A B4	FC46 H9
2052 I12	3052-A B8	3099-B B4	FC47 I6
2053 I11	3052-B C8	3099-C A4	FC48 F2
2054 I12	3052-C C8	3099-D A4	FC49 F3
2055 I13	3052-D C8	3100 F4	FC50 D8
2056 I13	3053 E2	3101 F4	FC51 C7
2057 I13	3054-A C10	3C08-A C13	FC52 H12
2058 B2	3054-B B10	3C08-B B13	FC53 I12
2059 B2	3054-C C10	3C08-C C13	FC54 I12
2060 A4	3054-D B10	3C08-D A13	FC55 I12
2061 A3	3055-A A10	3C09 H1	FC56 I12
2067 H7	3055-B B10	6001 D2	FC57 A3
2068 I2	3055-C A10	6002 E11	FC58 I12
2070 A1	3055-D B10	6003 D3	FC60 A4
2071 A2	3056-A A10	6004 C2	FC61 D4
2072 B2	3056-B B10	6005 A4	FC66 H7
2073 C3	3056-C A10	7001 A6	FC67 G13
2074 C4	3056-D C10	7002 F11	FC68 G12
3001 F3	3057-A B10	7003 F12	FC69 I1
3002 F3	3057-B C10	7004 F13	FC70 I11
3003 I4	3057-C B10	7005 E13	IC03 B3
3004 E12	3057-D C10	7006 A9	IC05 D1
3005 D13	3058 B1	7007 F10	IC07 D2
3006 I6	3059 C2	7008 D1	IC09 E2
3007-A I6	3061-A B11	7009 D3	IC11 F13
3007-B I6	3061-B C11	7010 B3	IC13 G11
3007-C I6	3061-C C11	7011 G2	IC14 G8
3007-D I6	3061-D C11	7012 A12	IC15 G8
3008-A I7	3062 D11	7013 G12	IC17 G4
3008-B I7	3064-A E3	7014 G13	IC18 G8
3008-C I7	3064-B E4	7015 H2	IC20 G7
3008-D I7	3064-C E3	7016 I2	IC21 H3
3009 I7	3064-D E4	9001 H2	IC22 H4
3010 E8	3065 G12	9002 I2	IC23 H9
3011 E2	3066 G12	9003 F2	IC24 H9
3012-A H8	3067 G11	9004 F2	IC26 H3
3012-B H8	3068 A2	9005 A4	IC27 H9
3012-C I8	3069 E3	9006 A3	IC28 I8
3012-D I8	3072-A A13	9007 E12	IC29 D8
3013 F12	3072-B B13	9008 I10	IC37 E4
3014 F12	3072-C A13	9009 I11	IC38 I12
3015 F11	3072-D B13	9010 H11	
3016 F12	3073-A B4	9011 I11	
3017 F13	3073-B B4	9012 I11	
3018 A2	3073-C B4	9013 I11	
3019 A2	3073-D B4	9014 B2	
3020 A2	3074-A F2	9015 C2	
3021 A2	3074-B E4	9016 B3	
3024 D3	3074-C E3	9017 A4	
3025 D1	3074-D A3	9018 A3	
3026 D4	3075 B1	FC01 A9	
3027 D2	3076-A D4	FC02 A7	
3029-A A11	3076-B D3	FC03 B7	
3029-B A11	3076-C D3	FC04 B8	
3029-C A11	3076-D C4	FC05 B10	
3029-D A11	3077 C3	FC06 B7	
3031-A B11	3078-B C4	FC07 C8	

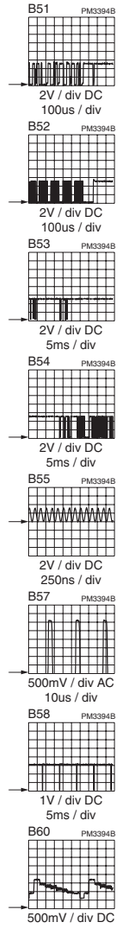


Small Signal Board: Anti-moiré

2062 B3	2065 D2	3022 A3	3030 B4	3037 C3	3044 C2	3070 D1	6007 B3	7022 B3	IC39 C2	IC83 B2	IC86 D2	
2063 B4	2066 A3	3023 A3	3032 B4	3038 C2	3060 D1	3071 B4	7020 D1	7023 D2	IC80 A3	IC84 C2		
2064 C2	2069 D2	3028 B3	3036 B4	3043 C2	3063 D2	6006 B2	7021 A2	FC59 A3	IC81 A2	IC85 D1		

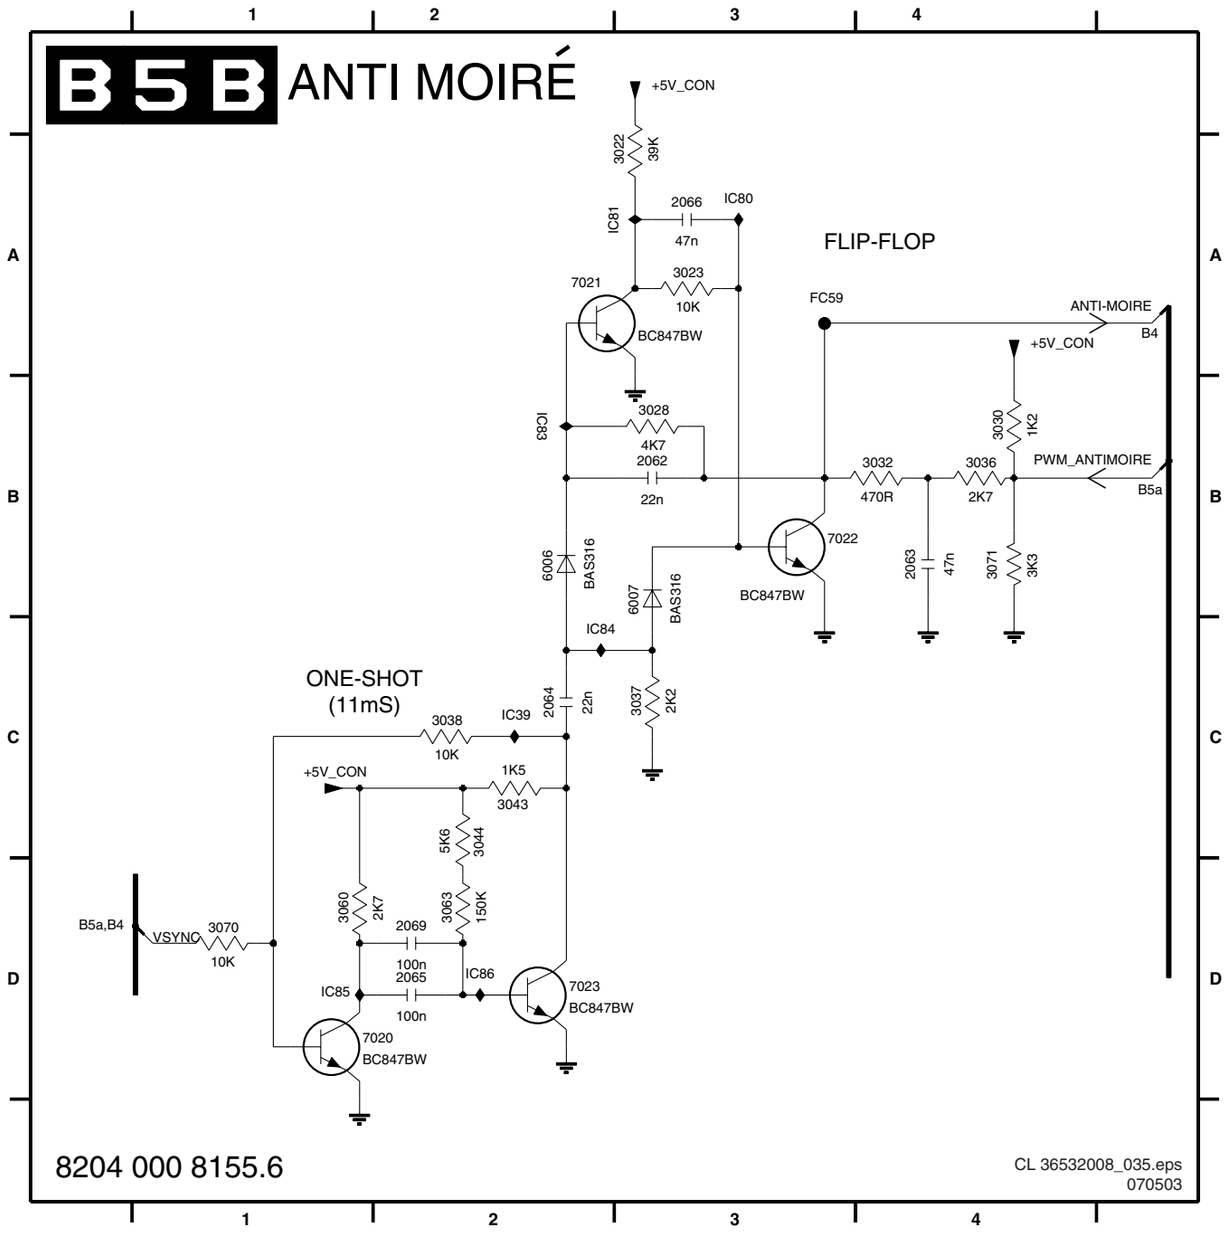

Small Signal Board: OTC Flash

1402 C2	2C02 D3	3C03 B2	3C06-A B4	3C06-D C4	3C07-C C4	7017 B2	9C00 A2	FC64 E3	
2C00 A2	3C00 A1	3C04 D2	3C06-B C4	3C07-A C4	3C07-D D4	7018 B3	FC62 F3	FC65 C1	
2C01 B3	3C01 A2	3C05 D2	3C06-C C4	3C07-B C4	3C08 B2	7019 D3	FC63 F3	FC71 B2	

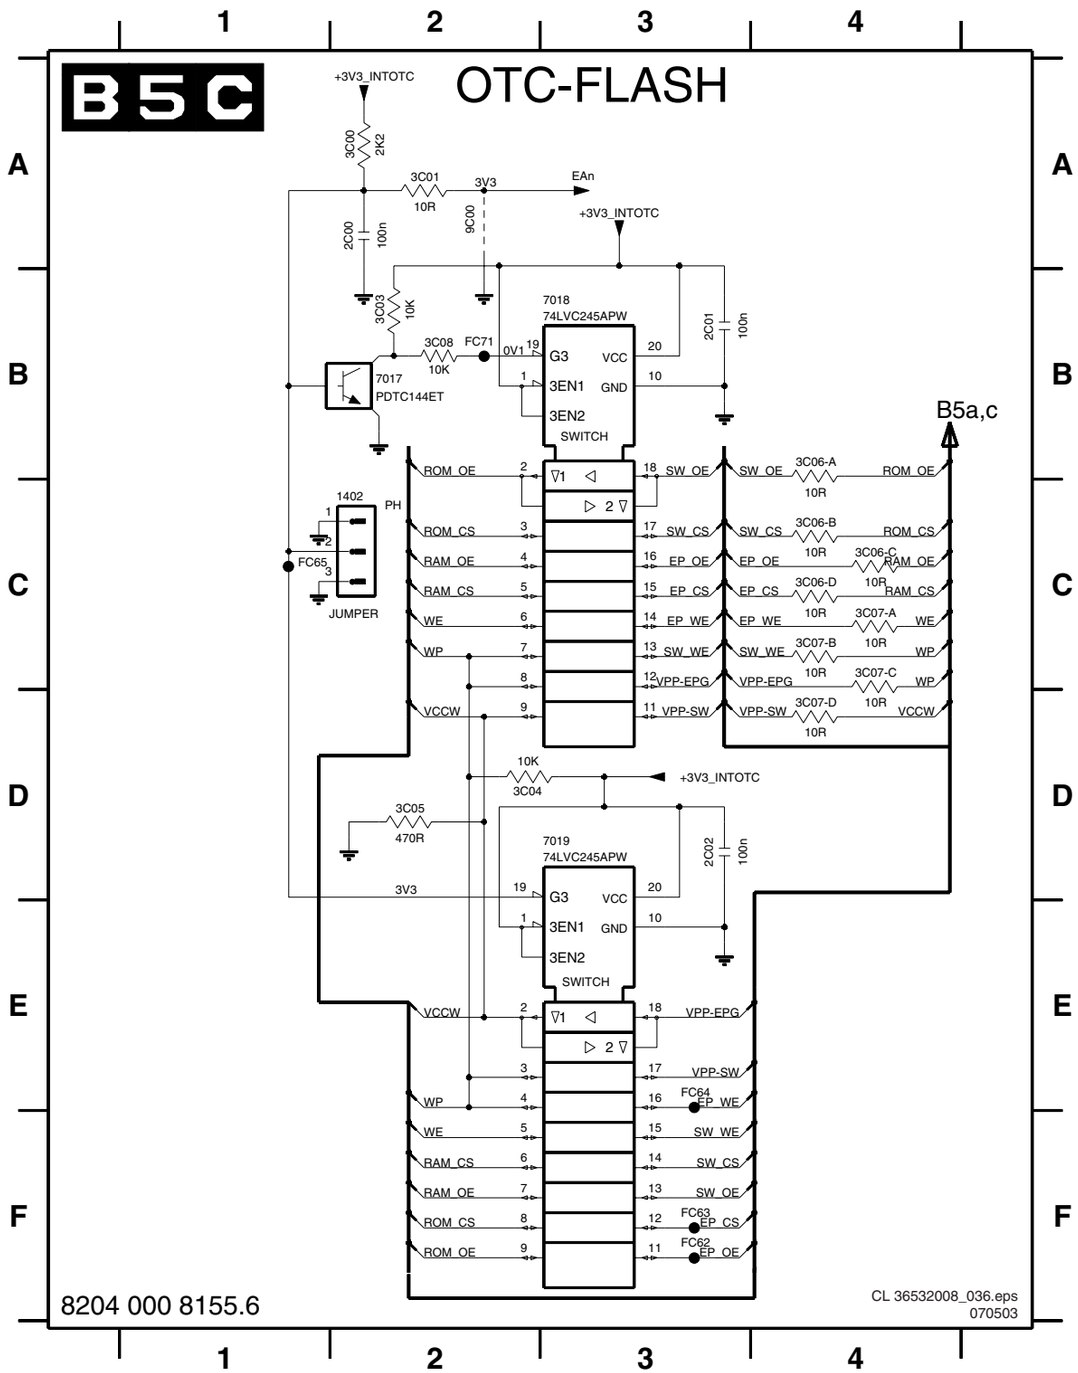

Small Signal Board: Audio Demodulator

B6A AUDIO DEMODULATOR

B6A

8204 000 8286.3

CL 36532008_037.eps
070503


*	7A02	REMARK
	MSP4450	USED IN COMBINATION WITH MAS 3528E AND DPL4519G

B65 B66 B67 B68 B69

1A00	G7	2A92	
2A00	A3	2A93	
2A01	B2	2A94	
2A02	B1	2A95	
2A03	B2	2A96	
2A04	B3	2A97	
2A05	B1	2A98	
2A06	B1	2A99	
2A07	B2	2AA0	
2A08	B2	2AA1	
2A09	B3	2AA5	
2A10	B13	2AA6	
2A11	B10	2AA7	
2A12	B4	2AA8	
2A13	B4	2AA9	
2A14	B13	2AB0	
2A15	B12	2AB2	
2A16	B12	2AB3	
2A17	B7	2AB4	
2A18	B6	2AB5	
2A19	I8	2AB6	
2A20	B11	2AB7	
2A21	B7	2AB8	
2A22	B10	3A00	
2A23	C9	3A01	
2A25	C11	3A02	
2A26	C10	3A03	
2A27	C7	3A05	
2A28	C13	3A06	
2A29	C2	3A08	
2A30	C10	3A09	
2A31	C9	3A11	
2A32	D1	3A12	
2A33	D2	3A13	
2A34	D13	3A14	
2A35	D7	3A15	
2A36	D9	3A16	
2A37	D2	3A17	
2A38	D13	3A18	
2A39	D2	3A19	
2A40	D9	3A20	
2A41	D9	3A21	
2A42	D8	3A22	
2A43	D8	3A23	
2A44	D8	3A25	
2A45	D2	3A26	
2A46	D2	3A27	
2A47	E1	3A28	
2A48	E13	3A29	
2A49	E2	3A30	
2A50	E8	3A31	
2A51	E1	3A32	
2A52	F13	3A33	
2A53	E2	3A34	
2A54	E8	3A35	
2A55	E1	3A36	
2A56	E2	3A37	
2A57	F13	3A38	
2A58	E1	3A39	
2A59	F2	3A3A	
2A60	F13	3A3B	
2A61	F1	3A3C	
2A62	F2	3A3D	
2A63	F1	3A3E	
2A64	F11	3A3F	
2A65	B7	3A40	
2A66	F9	3A41	
2A67	F2	3A42	
2A68	F1	3A43	
2A69	G9	3A44	
2A70	G9	3A45	
2A71	G2	3A46	
2A72	G9	3A47	
2A73	G1	3A48	
2A74	G9	3A49	
2A75	H9	3A50	
2A76	H12	3A51	
2A77	I13	3A52	
2A78	H13	3A53	
2A79	H3	3A54	
2A80	I9	3A55	
2A81	I10	3A56	
2A82	I12	3A66	
2A83	H10	5A00	
2A84	H2	5A01	
2A85	H2	5A03	
2A86	H2	5A04	
2A87	H13	5A05	
2A88	I11	5A06	
2A89	I10	5A10	
2A90	I10	5A11	
2A91	I3	5A12	

Small Signal Board: Dolby Digital Decoder

B6B DOLBY DIGITAL DECODER

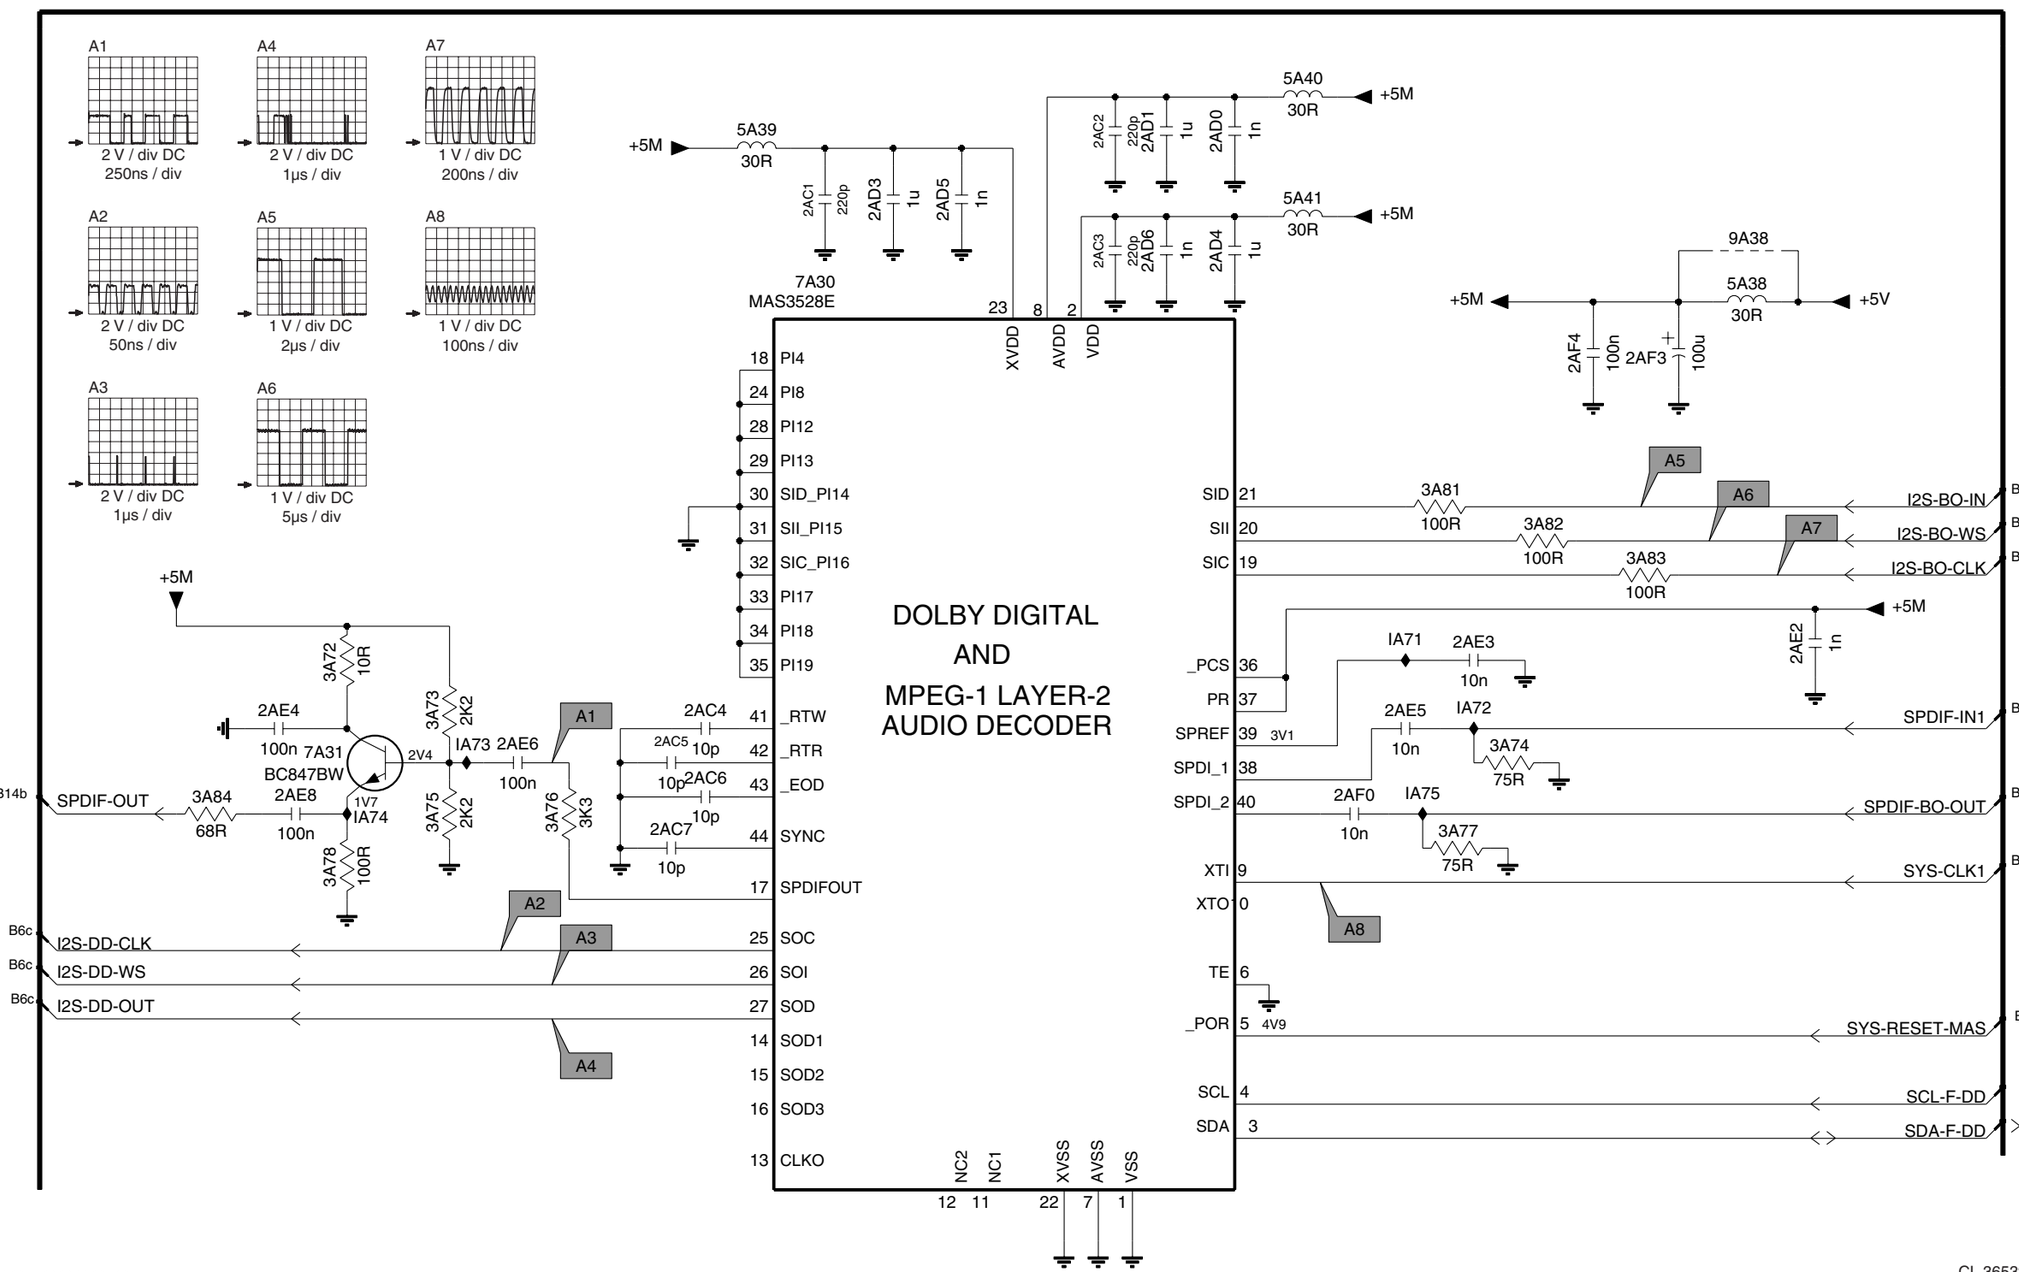


8204 000 8286.3

CL 36532008_038.eps
070503

2AC1 B4
2AC2 B5
2AC3 B5
2AC4 D4
2AC5 D4
2AC6 D4
2AC7 E4
2AD0 B6
2AD1 B6
2AD3 B4
2AD4 B6
2AD5 B5
2AD6 B6
2AE2 D8
2AE3 D7
2AE4 D2
2AE5 D7
2AE6 D3
2AE8 D2
2AF0 D6
2AF3 C8
2AF4 C7
3A72 D2
3A73 D3
3A74 D7
3A75 E3
3A76 E3
3A77 E7
3A78 E2
3A81 C7
3A82 C7
3A83 D8
3A84 E2
5A38 B8
5A39 B4
5A40 A6
5A41 B6
7A30 B4
7A31 D2
9A38 B8
IA71 D7
IA72 D7
IA73 D3
IA74 E2
IA75 D7

Small Signal Board: Dolby Prologic Processor

B6C DOLBY PRO LOGIC PROCESSOR

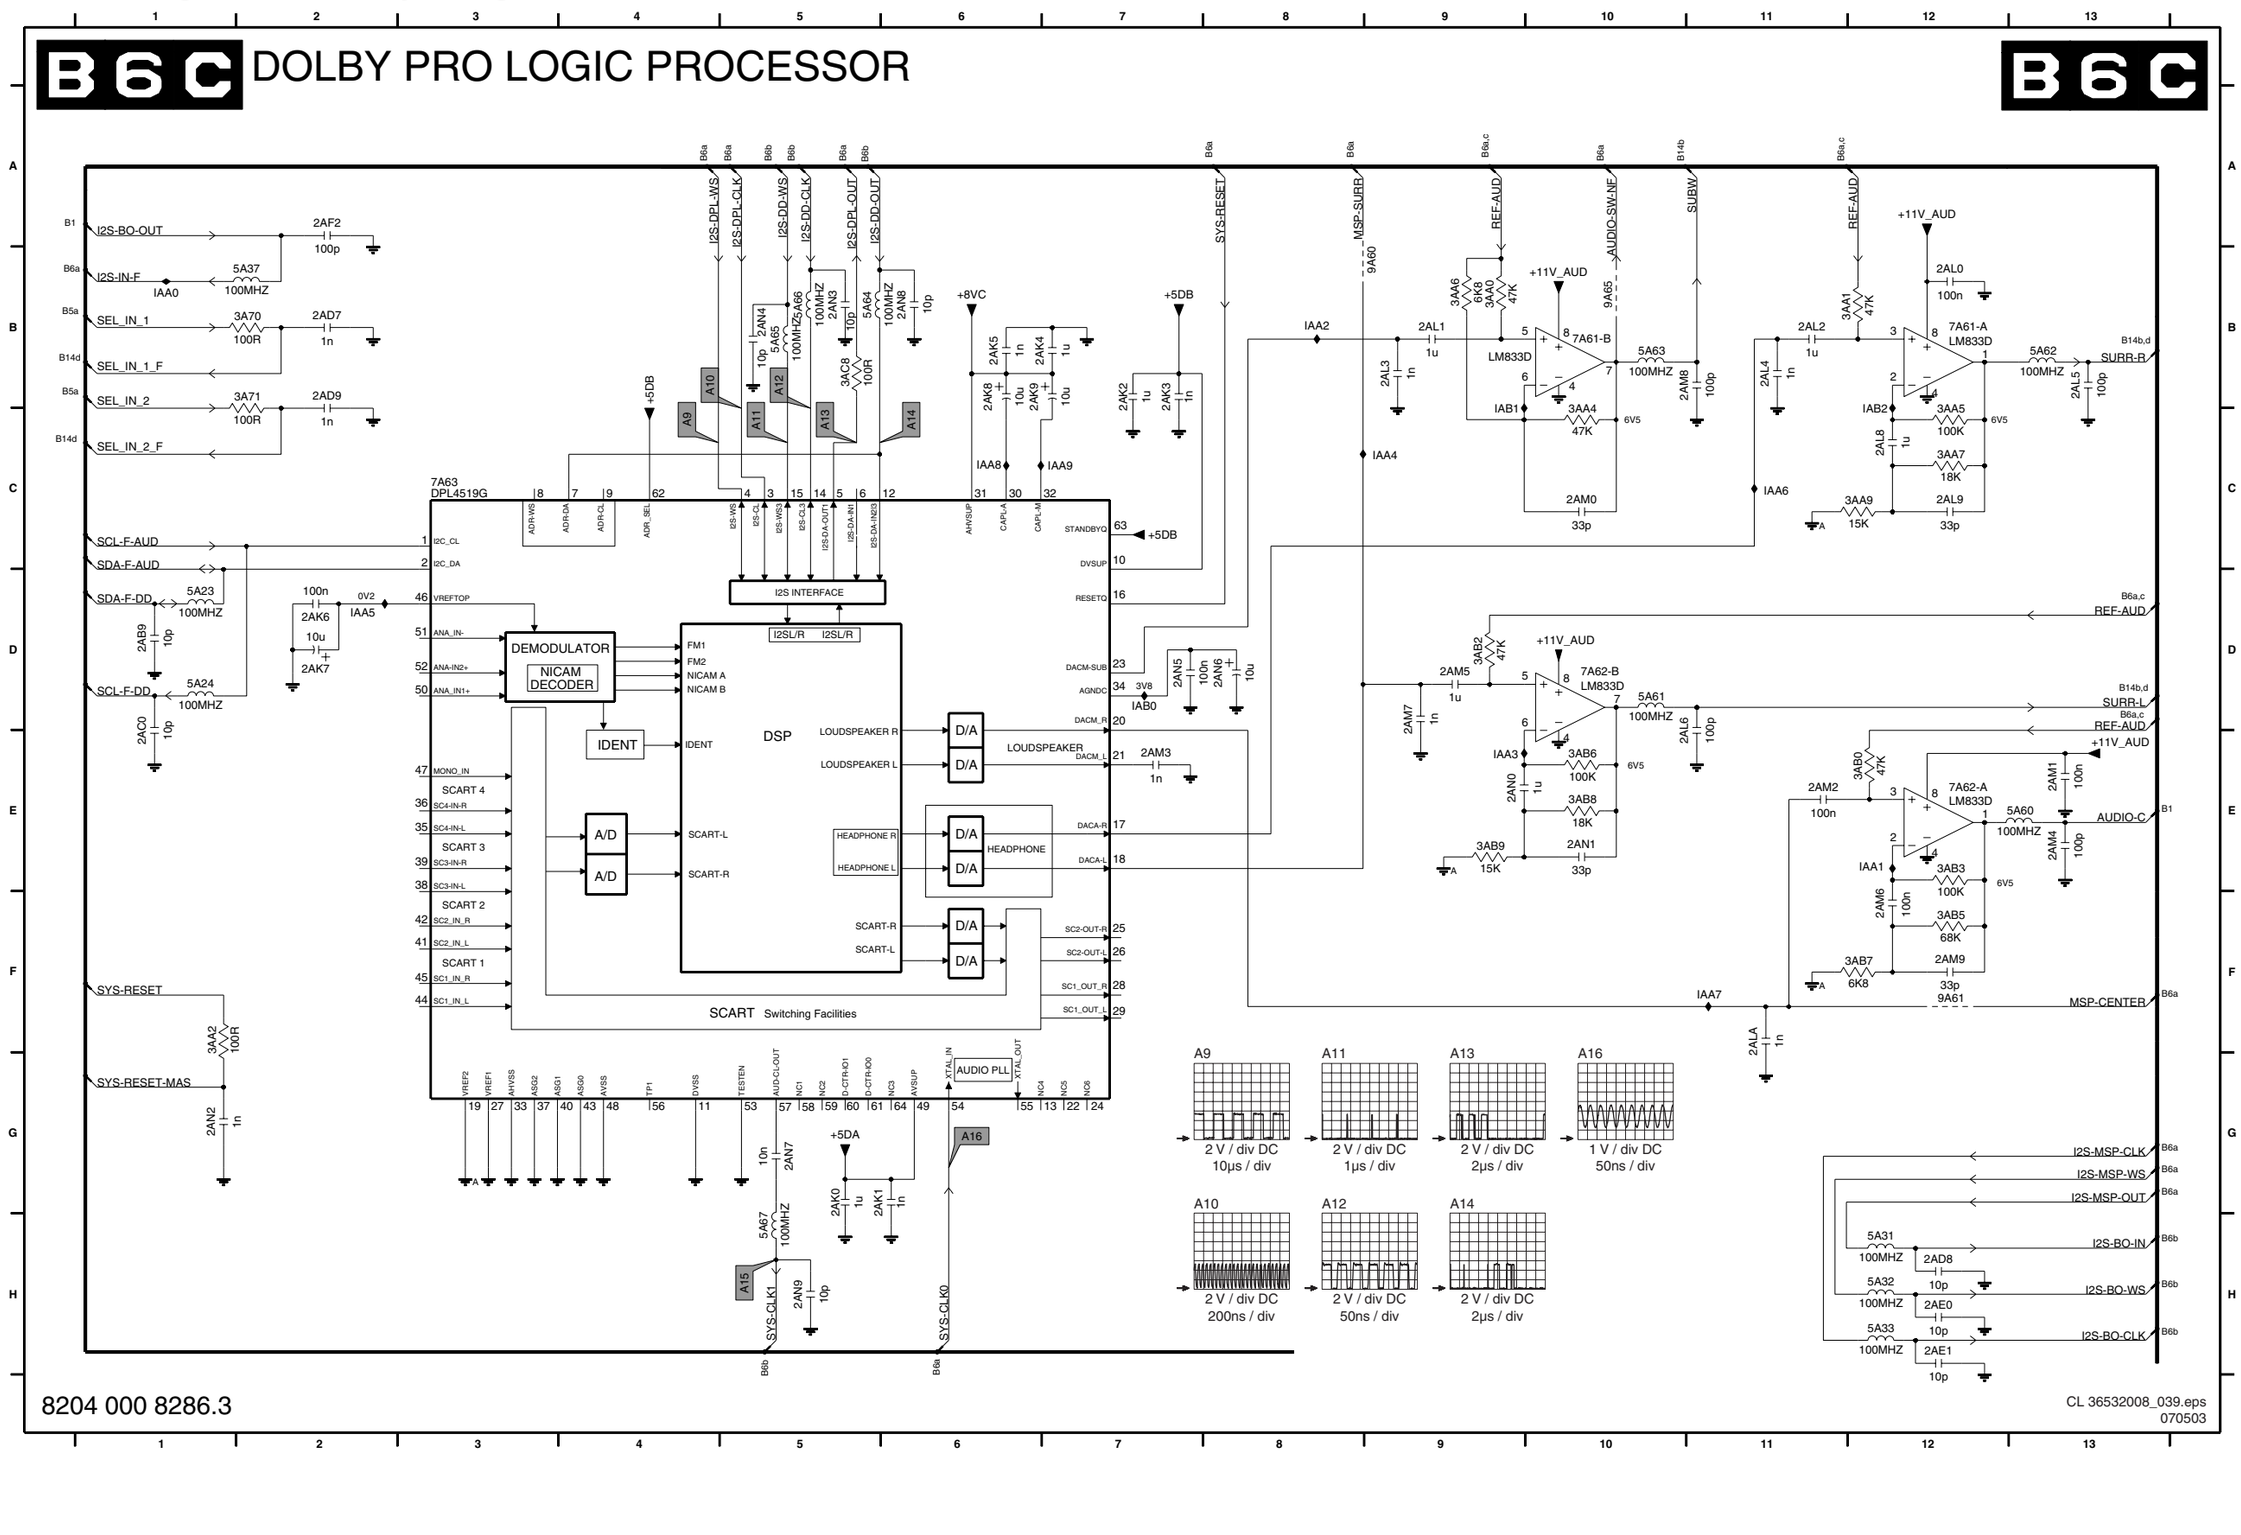


8204 000 8286.3

CL 36532008_039.eps
070503

2AB9 D1	7A61-B B10		
2AC0 E1	7A62-A E12		
2AD7 B2	7A62-B D10		
2AD8 H12	7A63 C3		
2AD9 B2	9A60 B9		
2AE0 H12	9A61 F12		
2AE1 H12	9A65 B10		
2AF2 A2	IAA0 B1		
2AK0 G5	IAA1 E12		
2AK1 G6	IAA2 B8		
2AK2 B7	IAA3 E9		
2AK3 B7	IAA4 C9		
2AK4 B7	IAA5 D2		
2AK5 B6	IAA6 C11		
2AK6 D2	IAA7 F11		
2AK7 D2	IAA8 C6		
2AK8 B6	IAA9 C7		
2AK9 B6	IAB0 D7		
2AL0 B12	IAB1 C9		
2AL1 B9	IAB2 C12		
2AL2 B11			
2AL3 B9			
2AL4 B11			
2AL5 B13			
2AL6 E11			
2AL8 C12			
2AL9 C12			
2ALA F11			
2AM0 C10			
2AM1 E13			
2AM2 E11			
2AM3 E7			
2AM4 E13			
2AM5 D9			
2AM6 F12			
2AM7 D9			
2AM8 B11			
2AM9 F12			
2AN0 E9			
2AN1 E10			
2AN2 G1			
2AN3 B5			
2AN4 B5			
2AN5 D7			
2AN6 D8			
2AN7 G5			
2AN8 B6			
2AN9 H5			
3A70 B2			
3A71 B2			
3AA0 B9			
3AA1 B12			
3AA2 F1			
3AA4 C10			
3AA5 C12			
3AA6 B9			
3AA7 C12			
3AA9 C12			
3AB0 E12			
3AB2 D9			
3AB3 E12			
3AB5 F12			
3AB6 E10			
3AB7 F12			
3AB8 E10			
3AB9 E9			
3AC8 B5			
5A23 D1			
5A24 D1			
5A31 H12			
5A32 H12			
5A33 H12			
5A37 B2			
5A60 E13			
5A61 D10			
5A62 B13			
5A63 B10			
5A64 B5			
5A65 B5			
5A66 B5			
5A67 H5			
7A61-A B12			


Small Signal Board: DC/DC-Convertor

1U01 A1	2U07 D4	2U15 A2	2U23 D11	2U32 D1	3U08 D9	3U16 D9	3U24 G6	3U32 H1	3U40 H7	3U48 B6	5U05 C11	6U07 D13	7U04 C5	7U11 F3	9U04 B11	FU04 C8	IU03 D1	IU11 B5	IU20 E9	IU28 H2	IU38 G9	cU02 G13
1U02 A13	2U08 D7	2U16 D2	2U24 H7	3U01 C13	3U09 D4	3U17 E7	3U25 F3	3U33 H3	3U41 H6	3U49 A7	5U06 D11	6U08 E3	7U05 D9	7U12 H3	9U05 A14	FU05 C7	IU04 E3	IU13 E7	IU21 E13	IU30 C3	IU39 H9	
2U01 A8	2U09 D6	2U17 D5	2U25 F5	3U02 B1	3U10 D13	3U18 E9	3U26 F5	3U34 G4	3U42 G5	3U50 A7	6U01 A2	6U09 E4	7U06-A D10	7U13 G9	9U06 B14	FU06 G6	IU05 E3	IU14 E6	IU22 E10	IU31 D2	IU40 H10	
2U02 B8	2U10 A3	2U18 C2	2U26 F6	3U03 C1	3U11 D4	3U19 E7	3U27 H10	3U35 H5	3U43 G5	3U51 B5	6U02 B8	6U10 H1	7U06-B E11	7U14 A6	9U07 B14	FU07 H1	IU06 E4	IU15 B7	IU23 A13	IU32 E2	IU42 C6	
2U03 B4	2U11 E9	2U19 H2	2U27 D2	3U04 D2	3U12 G10	3U20 E13	3U28 E1	3U36 H9	3U44 D2	5U01 C7	6U03 B5	6U11 H2	7U07 G7	7U15 A8	9U08 B11	FU08 C8	IU07 D4	IU16 C10	IU24 B13	IU34 H5	IU43 A6	
2U04 C5	2U12 E6	2U20 G4	2U28 E2	3U05 C3	3U13 D6	3U21 E3	3U29 C3	3U37 G9	3U45 E2	5U02 A2	6U04 B5	7U01 B2	7U08 E5	9U01 B11	FU01 B13	FU09 D11	IU08 C4	IU17 D8	IU25 G4	IU35 G6	IU44 A6	
2U05 D2	2U13 E13	2U21 C4	2U30 C1	3U06 D10	3U14 D1	3U22 E10	3U30 C2	3U38 G8	3U46 C9	5U03 C6	6U05 C1	7U02 C4	7U09 E1	9U02 A11	FU02 B13	IU01 B2	IU09 B5	IU18 D10	IU26 F3	IU36 H8	IU45 A7	
2U06 D3	2U14 B5	2U22 H6	2U31 D11	3U07 D8	3U15 D13	3U23 F13	3U31 C2	3U39 H8	3U47 A5	5U04 C6	6U06 D8	7U03 C6	7U10 F4	9U03 A11	FU03 B9	IU02 D1	IU10 B4	IU19 C13	IU27 G3	IU37 G8	cU01 G13	

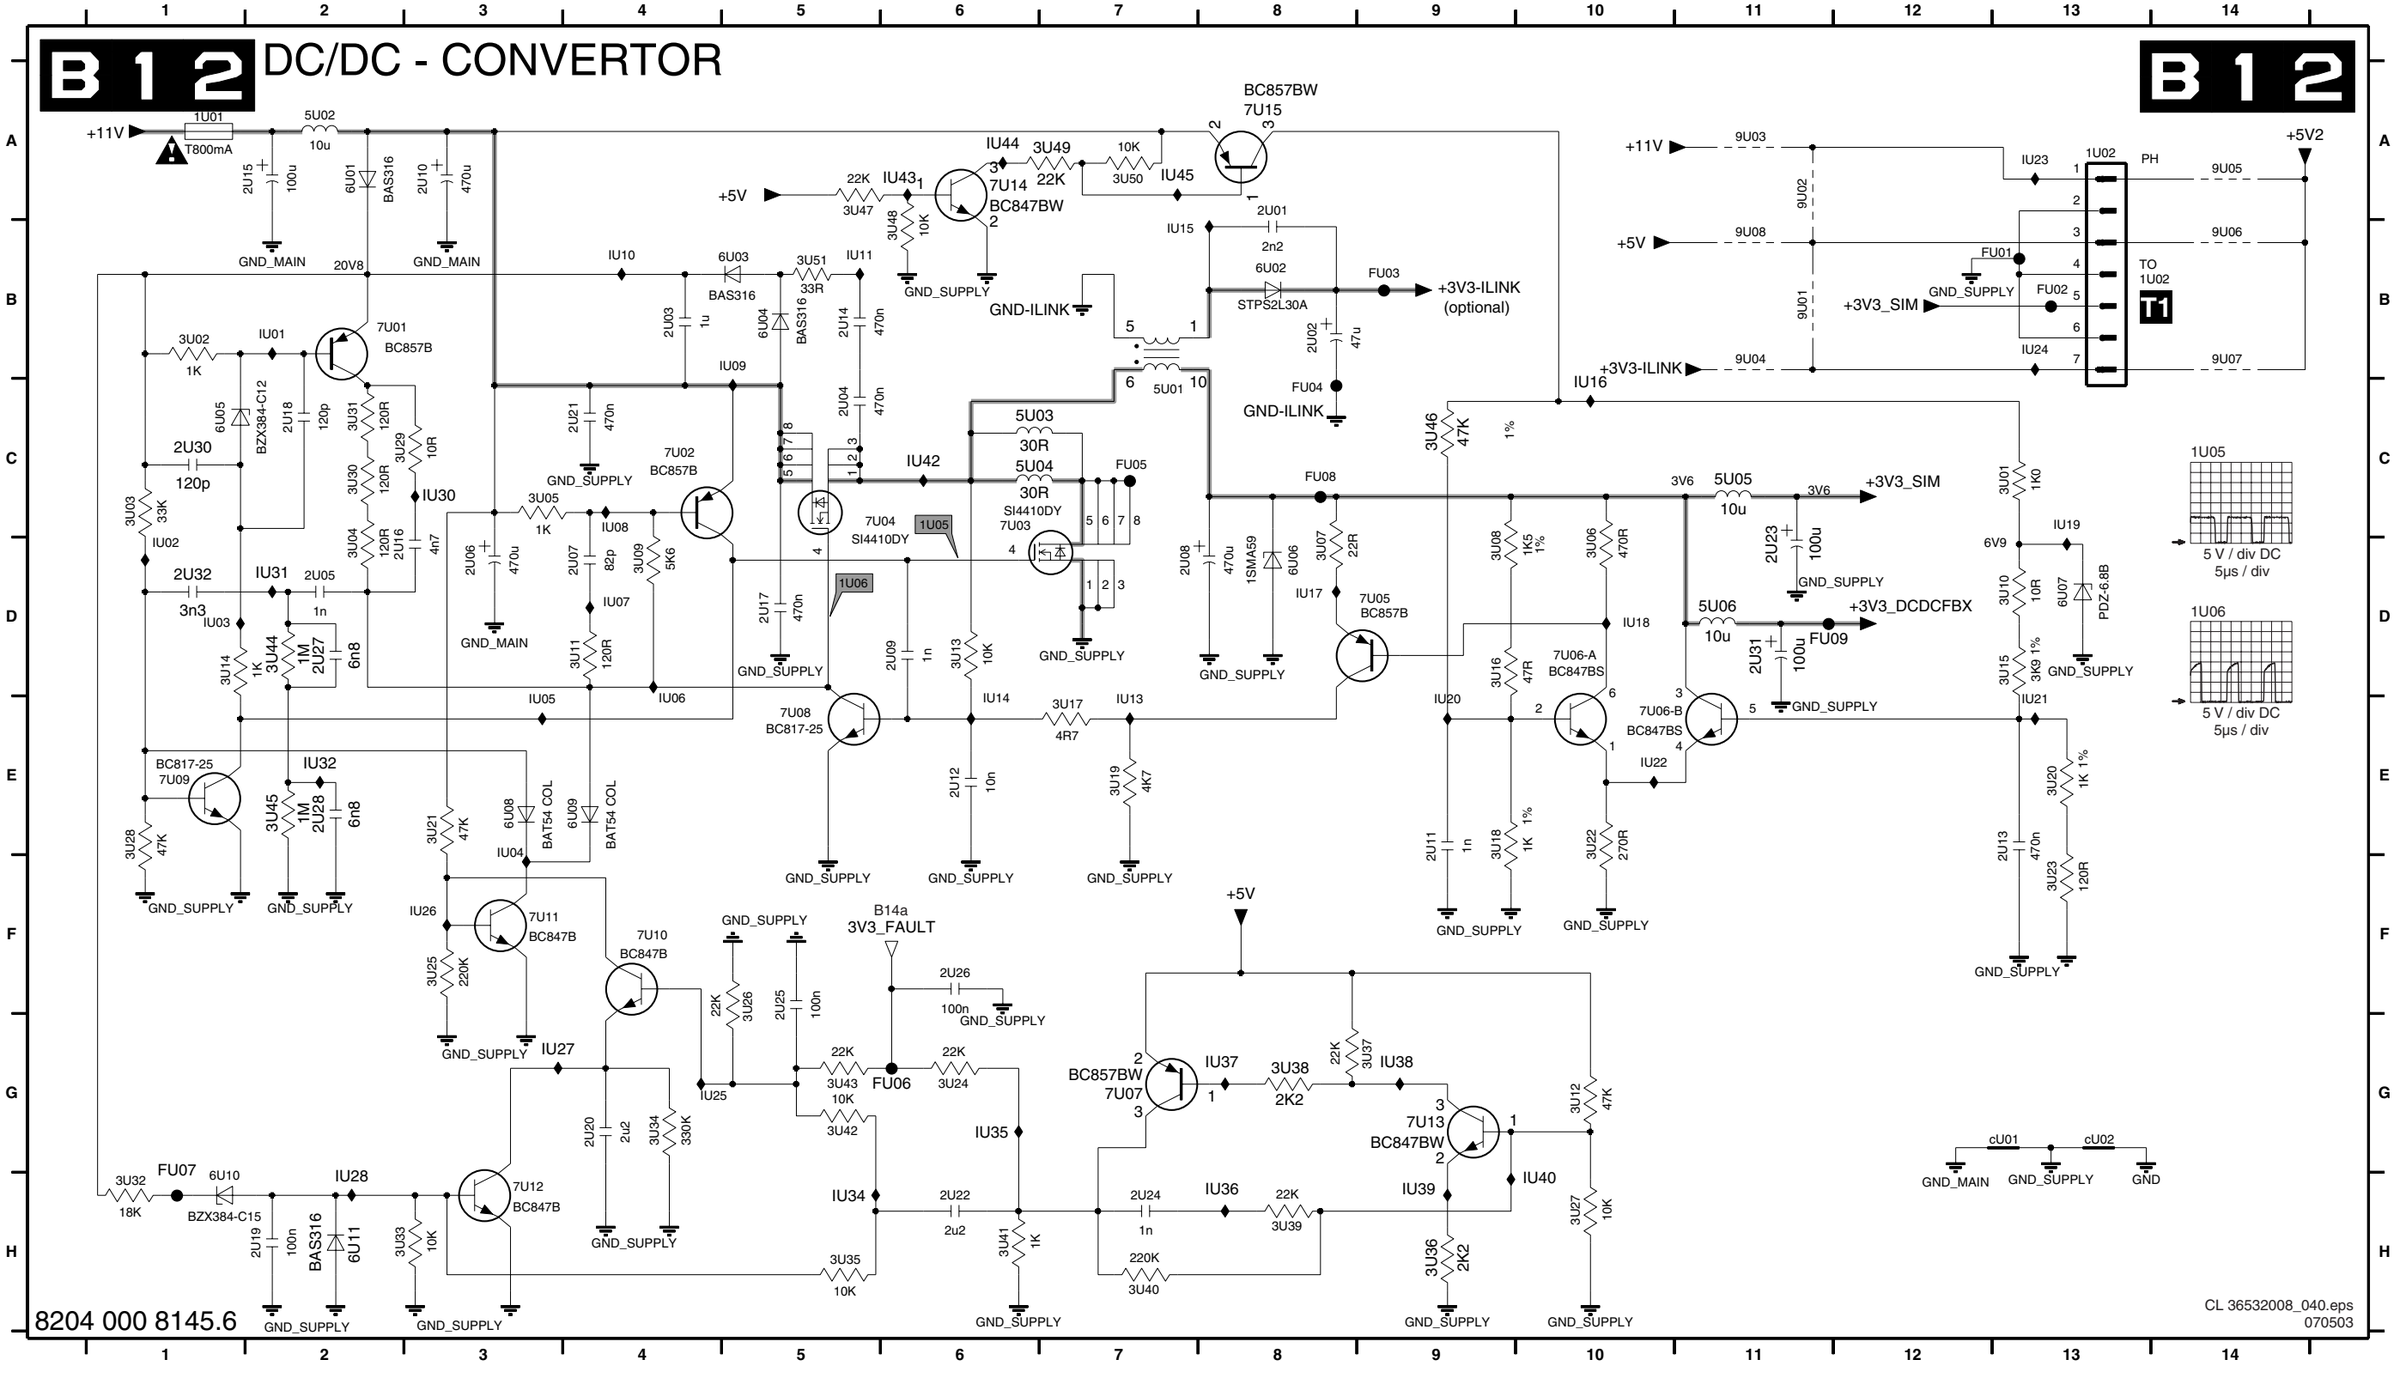


Small Signal Board: Tun1/Tun2

1T01 C2	2T02 D9	2T05 C1	2T09 D3	2T13 B2	2T16 D10	3T03 B2	3T06 D6	6T01 B2	6T04 B7	6T08 D5	9T02 B7	9T05 D2	9T08 D3	9T11 E6	9T14 C5	AT00 D4	FT04 C7	IT02 A2	IT08 C5	IT11 C6	IT14 D3
1T02 C7	2T03 B6	2T06 D3	2T10 D10	2T14 B7	2T17 D2	3T04 B6	5T02 C5	6T02 B6	6T06 D10	7T01 C5	9T03 D8	9T06 D7	9T09 E8	9T12 E6	9T15 C5	FT02 C2	FT05 D9	IT06 D2	IT09 C10	IT12 D6	IT15 D8
2T01 B2	2T04 C4	2T07 D7	2T12 C7	2T15 E3	2T18 D7	3T05 C6	5T03 C10	6T03 B2	6T07 D10	9T01 B2	9T04 D3	9T07 D3	9T10 E8	9T13 B1	9T16 C10	FT03 D4	IT01 B1	IT07 D7	IT10 A6	IT13 D3	IT16 D8

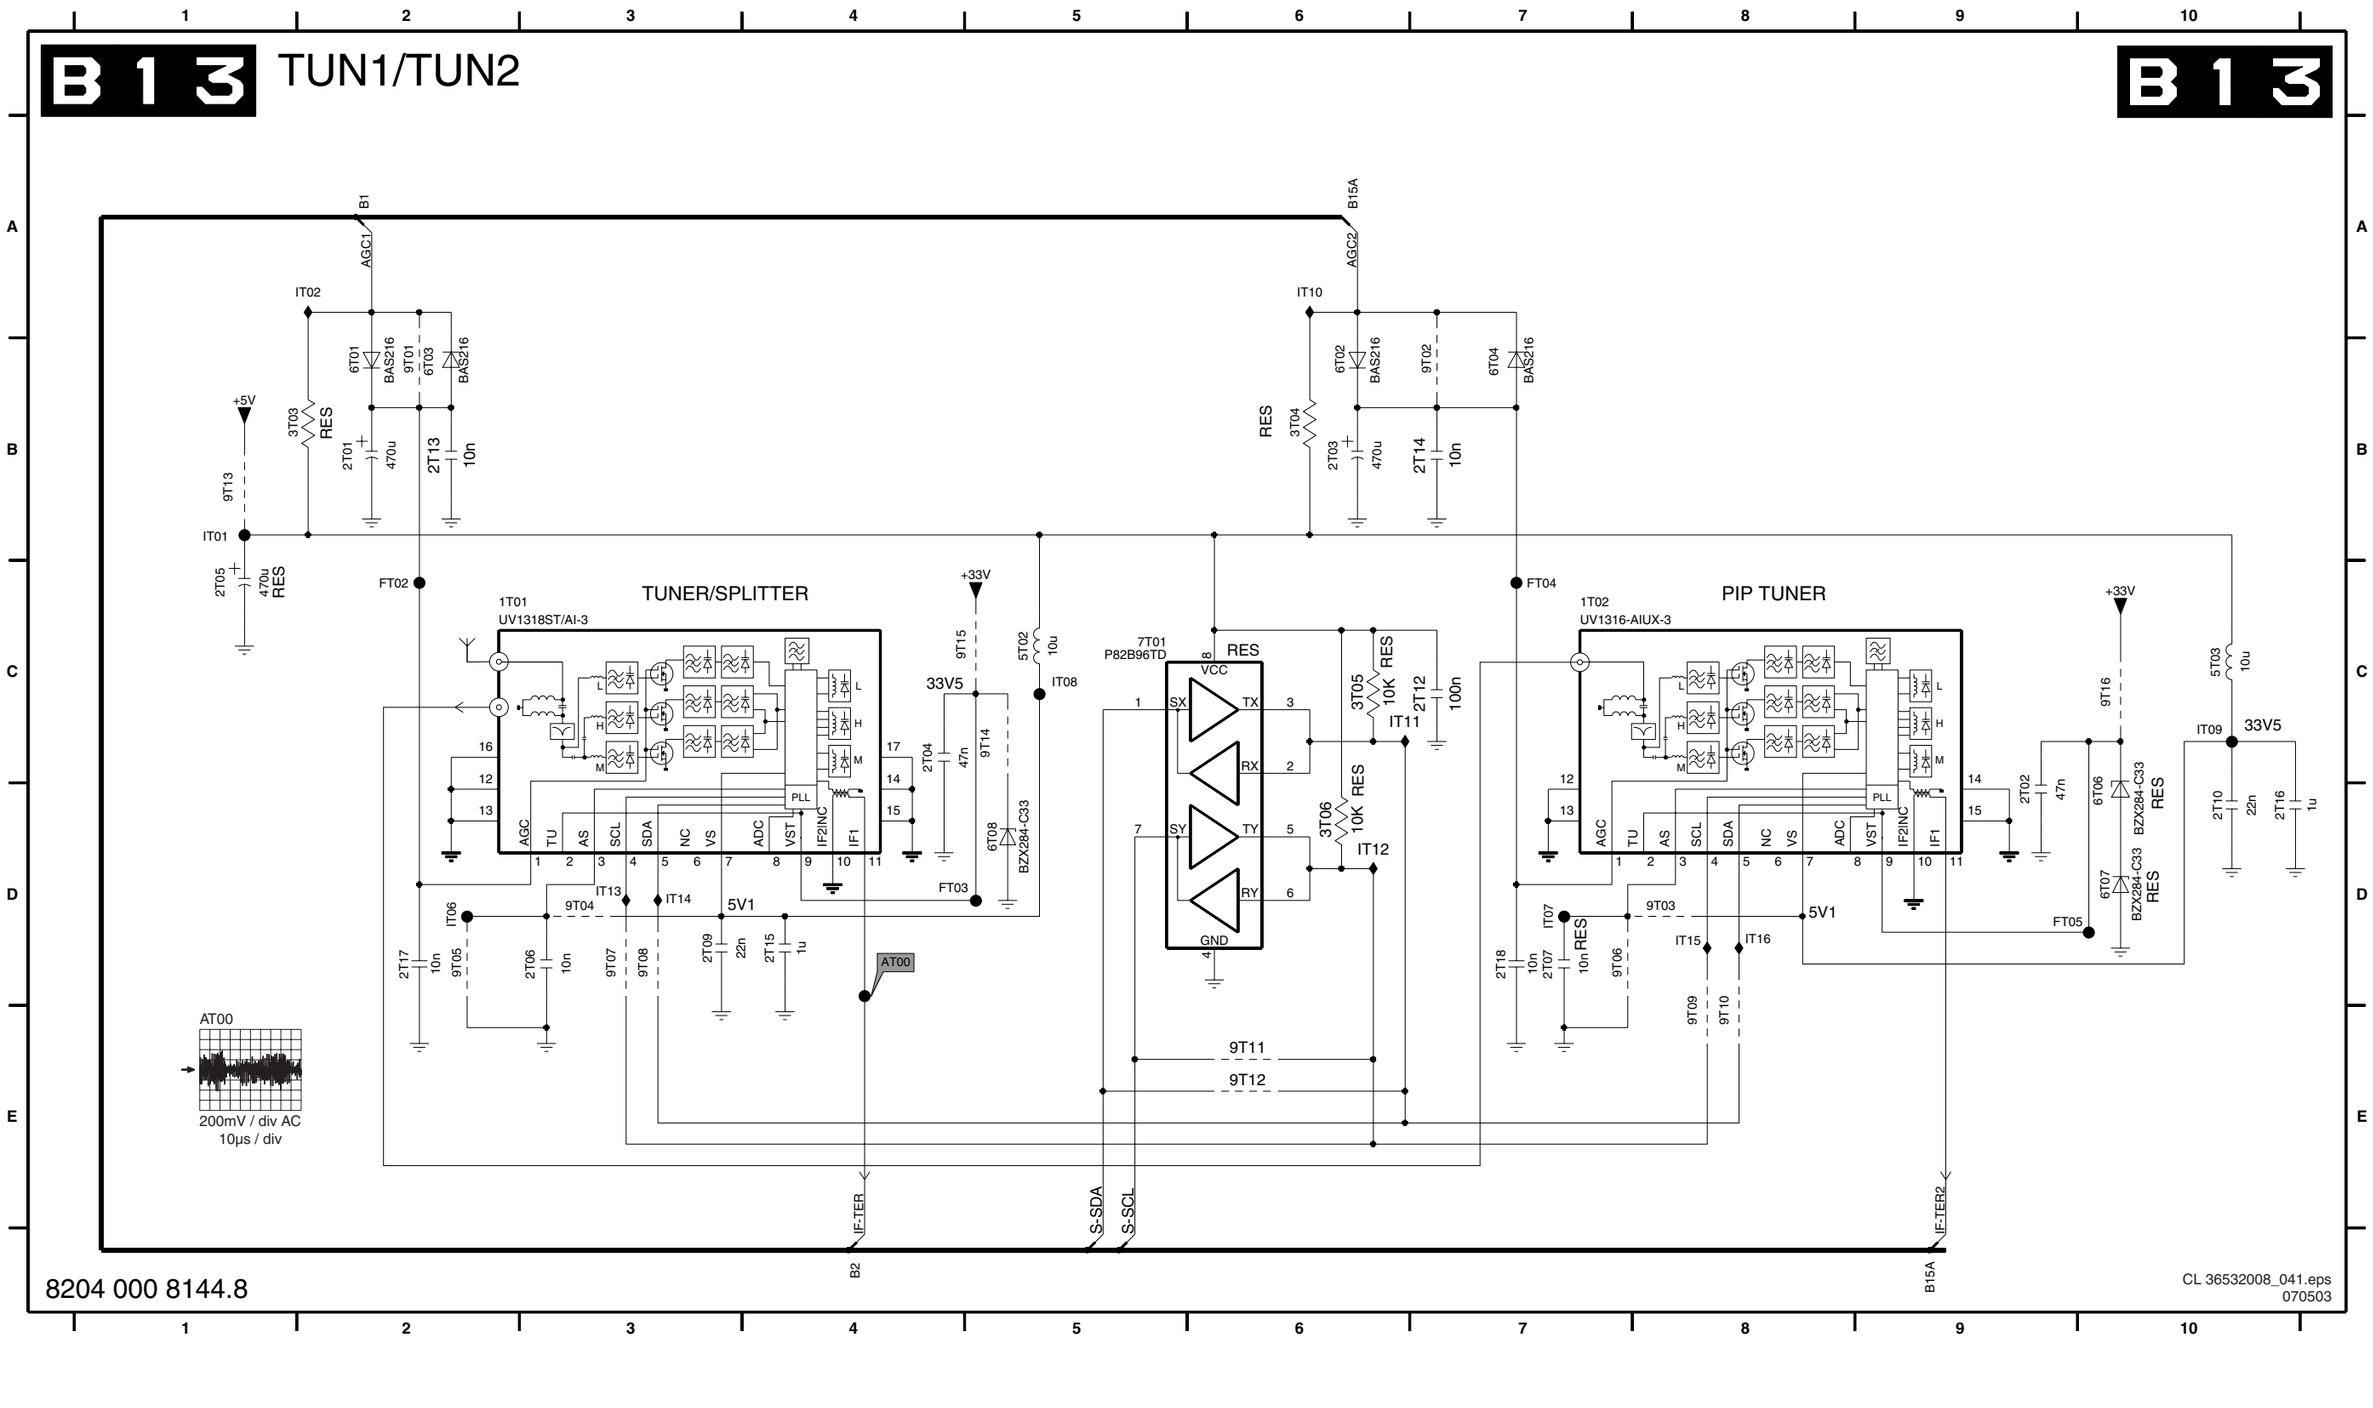

Small Signal Board: I/O Eur

B14A I/O EUR

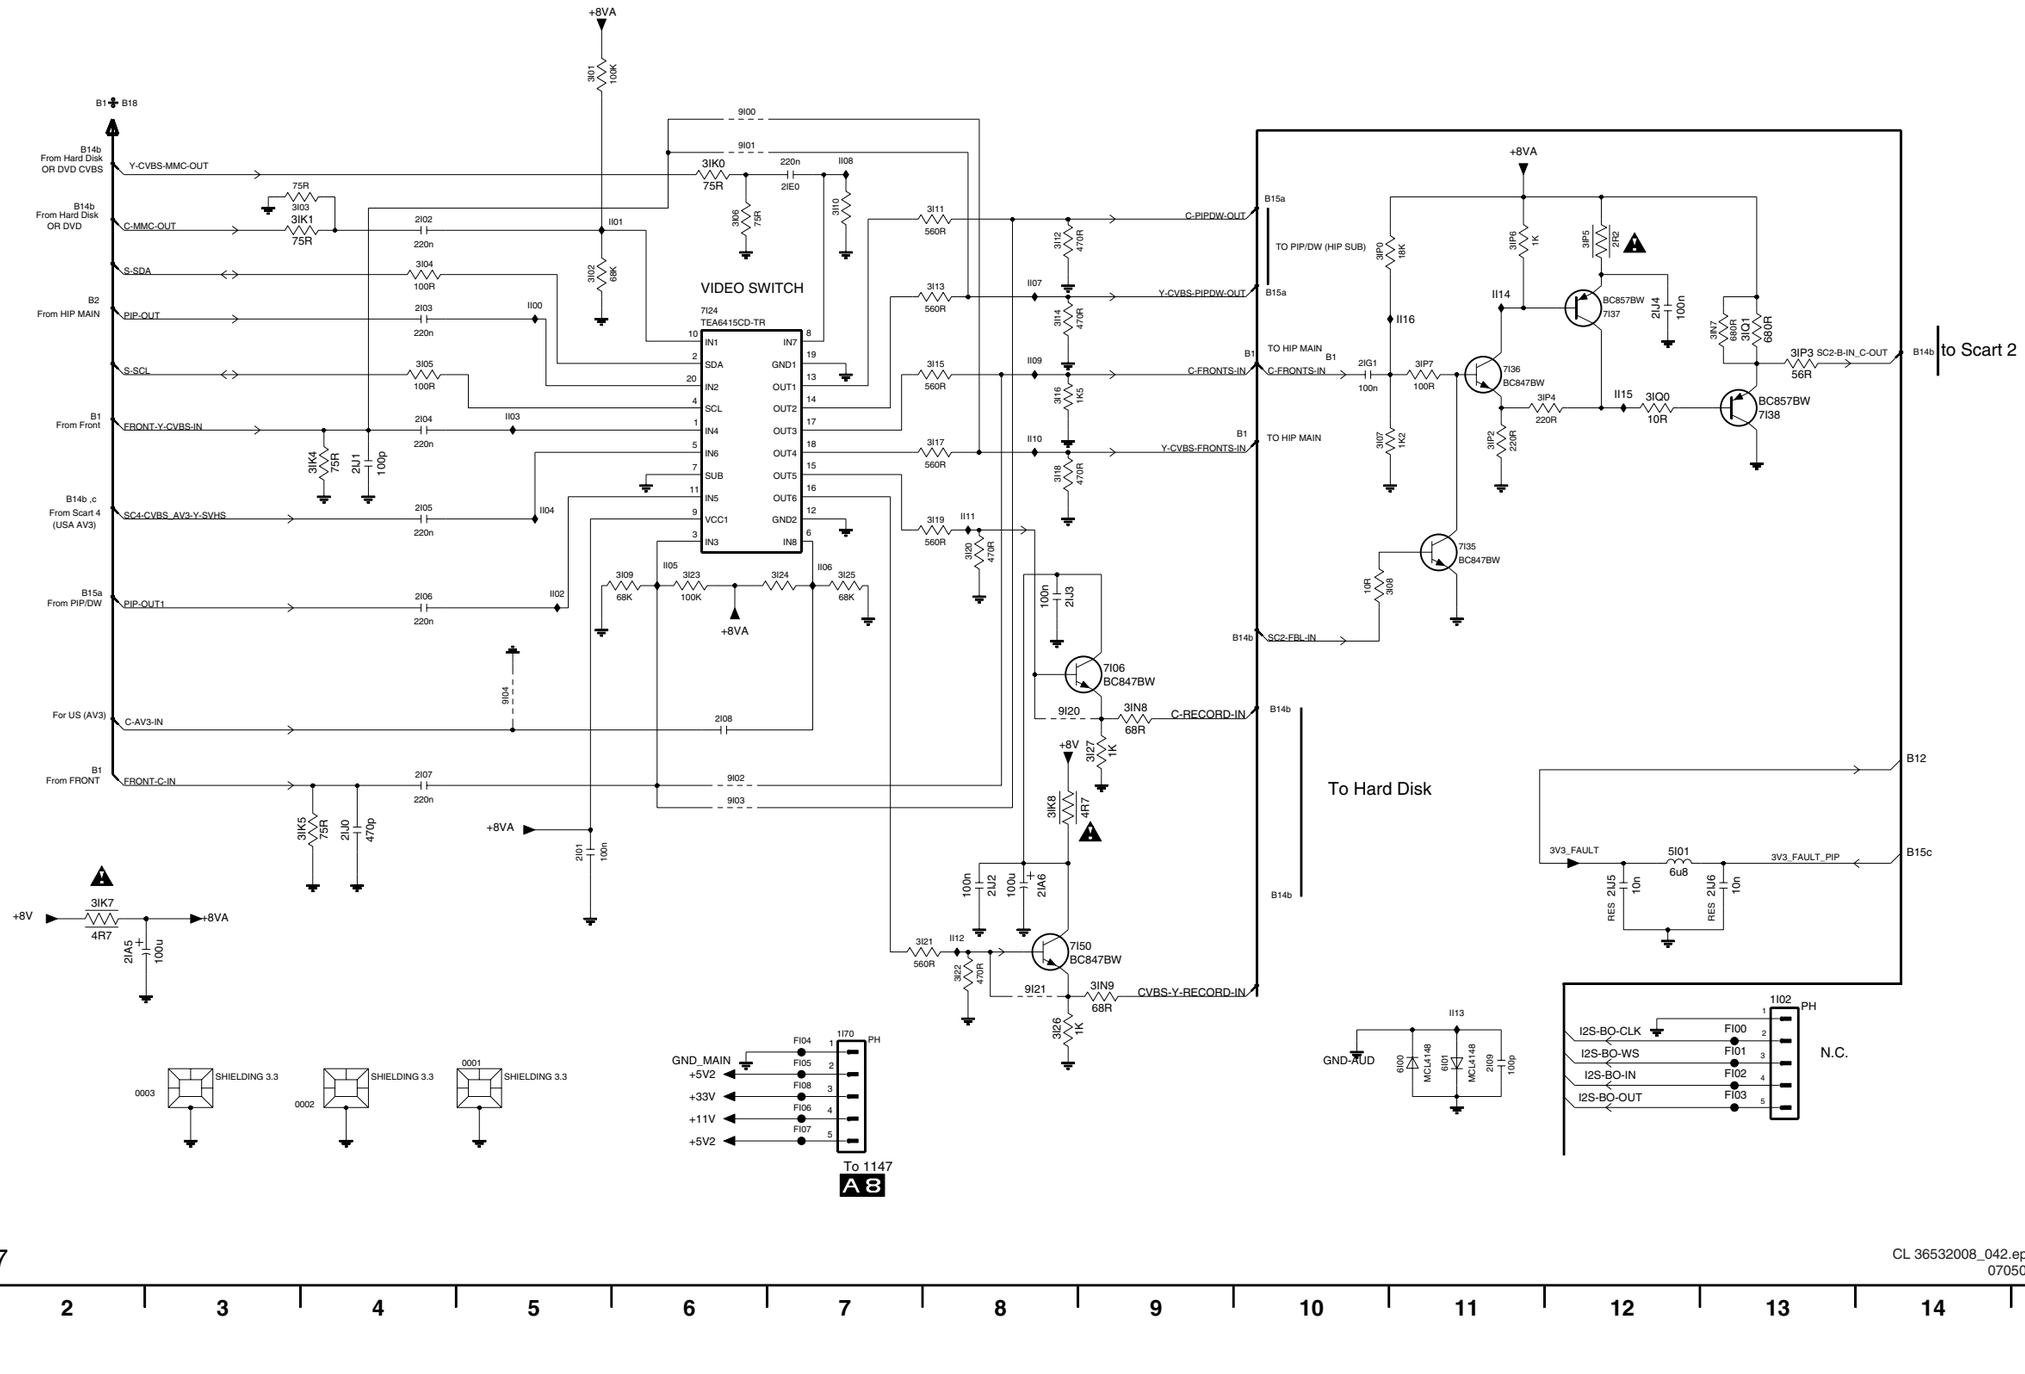


8204 000 8143.7

CL 36532008_042.eps
070503

0001 H5
0002 I3
0003 I2
1I02 H13
1I70 H7
2I01 G5
2I02 C4
2I03 D4
2I04 D4
2I05 E4
2I06 E4
2I07 G4
2I08 F6
2I09 H11
2IA5 H2
2IA6 G8
2IE0 C7
2IG1 D10
2IJ0 G4
2IJ1 E4
2IJ2 G8
2IJ3 E8
2IJ4 D12
2IJ5 G12
2IJ6 G13
3I01 B5
3I02 C5
3I03 C4
3I04 C4
3I05 D4
3I06 C6
3I07 D10
3I08 E10
3I09 E6
3I10 C7
3I11 C8
3I12 C8
3I13 C8
3I14 D8
3I15 D8
3I16 D8
3I17 D8
3I18 E8
3I19 E8
3I20 E8
3I21 H8
3I22 H8
3I23 E6
3I24 E7
3I25 E7
3I26 H8
3I27 F9
3IK0 C6
3IK1 C4
3IK4 E4
3IK5 G4
3IK7 G2
3IK8 G8
3IN7 D13
3IN8 F9
3IN9 H9
3IP0 C10
3IP2 D11
3IP3 D13
3IP4 D12
3IP5 C12
3IP6 C11
3IP7 D11
3IQ0 D12
3IQ1 D13
5I01 G12
6I00 H11
6I01 H11
7I06 F9
7I24 D6
7I35 E11
7I36 D11
7I37 D12
7I38 D13
7I50 H8
9I00 B6
9I01 C6
9I02 G6
9I03 G6
9I04 F5
9I20 F8
9I21 H8
FI00 H13
FI01 H13
FI02 H13
FI03 I13
FI04 H7
FI05 H7
FI06 I7
FI07 I7
FI08 I7
II00 D5
II01 C6
II02 E5
II03 D5
II04 E5
II05 E6
II06 E7
II07 C8
II08 C7
II09 D8
II10 D8
II11 E8
II12 H8
II13 H11
II14 C11
II15 D12
II16 D11

Small Signal Board: I/O Eur

V00 L18 V07 L20 1101-1 B4 1101-2 B9 1101-3 E21 1103 L18 1104-1 B15 1104-2 B20 1104-3 C14 1105-A F5 1105-B F5 1105-C G5 1106-1 J5 1106-2 K5 1106-3 J5 1106-4 H5 1106-5 H5 1106-6 I5 1108 L6 1111 G11 1113 I11 1114 I10 1125 B15 1126 C15 1127 C16 1128 E16 1129 B20 1130 C20 1131 C20 1132 E20 1134 B4 1135 B4 1136 C5 1137 B5 1138 B5 1139 B9 1140 B9 1141 C8 1142 D8 1143 D9 1144 D9 1145 C9 1146 B9 1147 B9 1148 F5 1149 G5 1150 H5 1151 H6 1152 I5 1153 I6 1154 I5 1155 J4 1156 J4 1157 K4 1158 G4 1171 C4 1172 C4 1173 D4 1174 E4 1175 E9 1176 E9 1180 H6 1181 M6 1182 L5 1183 M5 2110 B14 2111 C14 2112 C17 2113 B18 2114 C18 2115 C21 2116 B3 2117 B3 2118 B6 2119 B6 2120 C6 2121 B7 2122 B7 2123 B10 2124 B10 2125 C10 2126 F4 2127 G4 2128 H4 2129 I4 2130 I4 2131 I3 2132 I3 2133 J3 2134 J3 2135 K3 2136 G3 2137 K14 2138 G17 2139 G17 2140 E16 2141 G19 2142 I19 2143 I20 2144 I17 2145 H19 2146 K21 2147 M16 2IA1 L14 2IC0 F3 2IC1 F3 2IC2 H3 2IC5 L3 2IC6 L4 2IC7 M4 2IC8 M3 2IC9 D8 2H3 L16 3I34 B14 3I35 B14 3I36 C14 3I37 C14 3I38 C16 3I39 C16 3I40 E16 3I41 E16 3I42 B18 3I43 B19 3I44 C18 3I45 C19 3I46 C21 3I47 C21 3I48 E20 3I49 E21 3I50 A3 3I51 A5 3I52 B3 3I53 C5 3I54 C3 3I55 C3 3I56 C3 3I57 C4 3I58 D3 3I59 D4 3I60 D3 3I61 A5 3I62 B5 3I63 C5 3I64 C6 3I65 D6 3I66 D5 3I67 E5 3I68 D6 3I69 A7 3I70 A8 3I71 B7 3I72 B8 3I73 C7 3I74 C8 3I75 C7 3I76 D7 3I77 D8 3I78 D8 3I79 A10 3I80 B10 3I81 C10 3I82 C10 3I83 C10 3I84 D10 3I85 D10 3I86 L16 3I87 D10 3I88 E10 3I89 F3 3I90 F4 3I91 F3 3I92 F4 3I93 H3 3I94 H4 3I95 H4 3I96 H3 3I97 H4 3I98 L16 3I99 I3 3IA0 I4 3IA1 M16 3IA2 G3 3IA3 G3 3IA4 F14 3IA5 G14 3IA6 H14 3IA7 H14 3IA8 I14 3IA9 I14 3IB0 J14 3IB1 K14 3IB2 B6 3IB4 K21 3IB5 K21 3IB7 H17 3IB9 L15 3IC0 I19 3IC1 L20 3IC2 L16 3IC3 L16 3IC4 B6 3IC6 B11 3IC7 I17 3IC8 I19 3IC9 I19 3ID0 K20 3ID3 I19 3IK2 B10 3IK3 B10 3IN5 B6 3IN6 B6 3IP8 L3 3IP9 M3 3IS0 L4 3IS1 M4 3IS2 B11 3IS3 B13 3IS4 C13 3IS5 B18 3IS6 C18 3IT0 F3 3IT1 G3 3IT2 H3 3IT3 I3 3IT4 I3 3IT5 L3 3IT6 M3 6110 B14 6111 B15 6112 C14 6113 C15 6114 C16 6115 E16 6116 B19 6117 B19 6118 C19 6119 C19 6120 C20 6121 E21 6122 B4 6123 B4 6124 B4 6125 B4 6126 C4 6127 C3 6128 D3 6129 E4 6130 B5 6131 B5 6132 B5 6133 B5 6134 C6 6135 D5 6136 E5 6137 B8 6138 B8 6139 B8 6140 B8 6141 C8 6142 C8 6143 E8 6144 D8 6145 B10 6146 B10 6147 B10 6148 B10 6149 C11 6150 D10 6151 D10 6152 E10 6153 F4 6154 F5 6155 F4 6156 G5 6157 H4 6158 H5 6159 H4 6160 I5 6161 I4 6162 J5 6163 J4 6164 J4 6165 J4 6166 K4 6167 K4 6168 K4 6169 G4 6170 G4 6173 K17 6174 J17 6175 J18 6176 J20 6177 J20 6178 I18 6179 C19 6180 B8 6181 C8 6182 C8 6183 E8 6184 D8 6185 B10 6186 B10 6187 B10 6188 B10 6189 C11 6190 D10 6191 I4 6192 J5 6193 J4 6194 J4 6195 J4 6196 K4 6197 K4 6198 K4 6199 G4 6IA1 M5 6IA2 M5 6IA3 L4 6IA4 M4 6IA5 J21 6IA6 K21 6IA7 K15 6IA8 K21 7101-A F13 7101-B G13 7102-A H13 7102-B H13 7103-A I13 7103-B I13 7104-A J13 7104-B J13 7105 K13 7107 K20 7108-A H18 7108-B H18 7109 K20 7144-A L15 7144-B L15 9107 J3 9108 K9 9109 J9 9110 K10 9111 J9 9112 L10 9113 J21 9114 K13 9115 K15 9116 K19 9117 D2 9118 I3 9119 M3 9175 K10 9176 K9 9178 K9 9182 J12 9183 J9 9184 I12 9185 J12 9187 K9 9188 L3 9189 J8 9IB2 J8 F110 L11 F111 L11 F112 K10 F113 K10 F114 K10 F115 I10 F116 I10 F117 I10 F118 I10 F119 I10 F120 B14 F121 B14 F122 B15 F123 D15 F124 C16 F125 D16 F126 B19 F127 B19 F128 B20 F129 D20 F130 C20 F131 D21 F132 A4 F133 C5 F134 B4 F135 C4 F136 C4 F137 D4 F138 D4 F139 A10 F140 E4 F141 A5 F142 B5 F143 C6 F144 D5 F145 D6 F146 E5 F147 E6 F148 E6 F149 E6 F150 G11 F151 C9 F152 D8 F153 D8 F154 D9 F155 C9 F156 D10 F157 C9 F158 B10 F159 A10 F160 F5 F161 F5 F162 H5 F163 I5 F164 I5 F165 J4 F166 J4 F167 M5 F168 G4 F169 H11 F180 L19 F181 L19 F182 H2 F183 I2 F184 K19 F185 L5 F186 K5 F187 A10 F188 K4 F189 C6 F190 A6 F191 H2 F192 H2 F193 I2 F194 K10 F196 H11 F197 L18 F198 L18 F199 L19 I01 L19 I02 L19 I03 L19 I04 L19 I05 A3 I06 B3 I07 C3 I08 E3 I09 J12 I10 K5 I11 K5 I12 K6 I13 K6 I14 K6 I15 K6 I16 K6 I17 K6 I18 K6 I19 K6 I20 K6 I21 K6 I22 K6 I23 K6 I24 K6 I25 K6 I26 K6 I27 K6 I28 K6 I29 K6 I30 L4 I31 M4 I32 A7 I33 B7 I34 D10 I35 C10 I36 B10 I37 A10 I38 K20 I39 J12 I40 H19 I41 H3 I42 I3 I43 G3 I44 L13 I45 K15 I46 K21 I47 K20 I48 K20 I49 J21 I50 D3 I51 A6 I52 A6 I53 A6 IA1 L19 IA2 L19 IA3 L19 IA4 L19 IA5 L19 IA6 L5 IA8 K4 IA9 H11 IB0 H19 IB1 A6 IB2 B6 IB3 C6 IIA1 B14 IIA2 B14 IIA3 B14 IIA4 B14 IIA5 F3 IIA5 J10 IIA7 H18 IIA8 I19 IIA9 K14 IIB0 K14

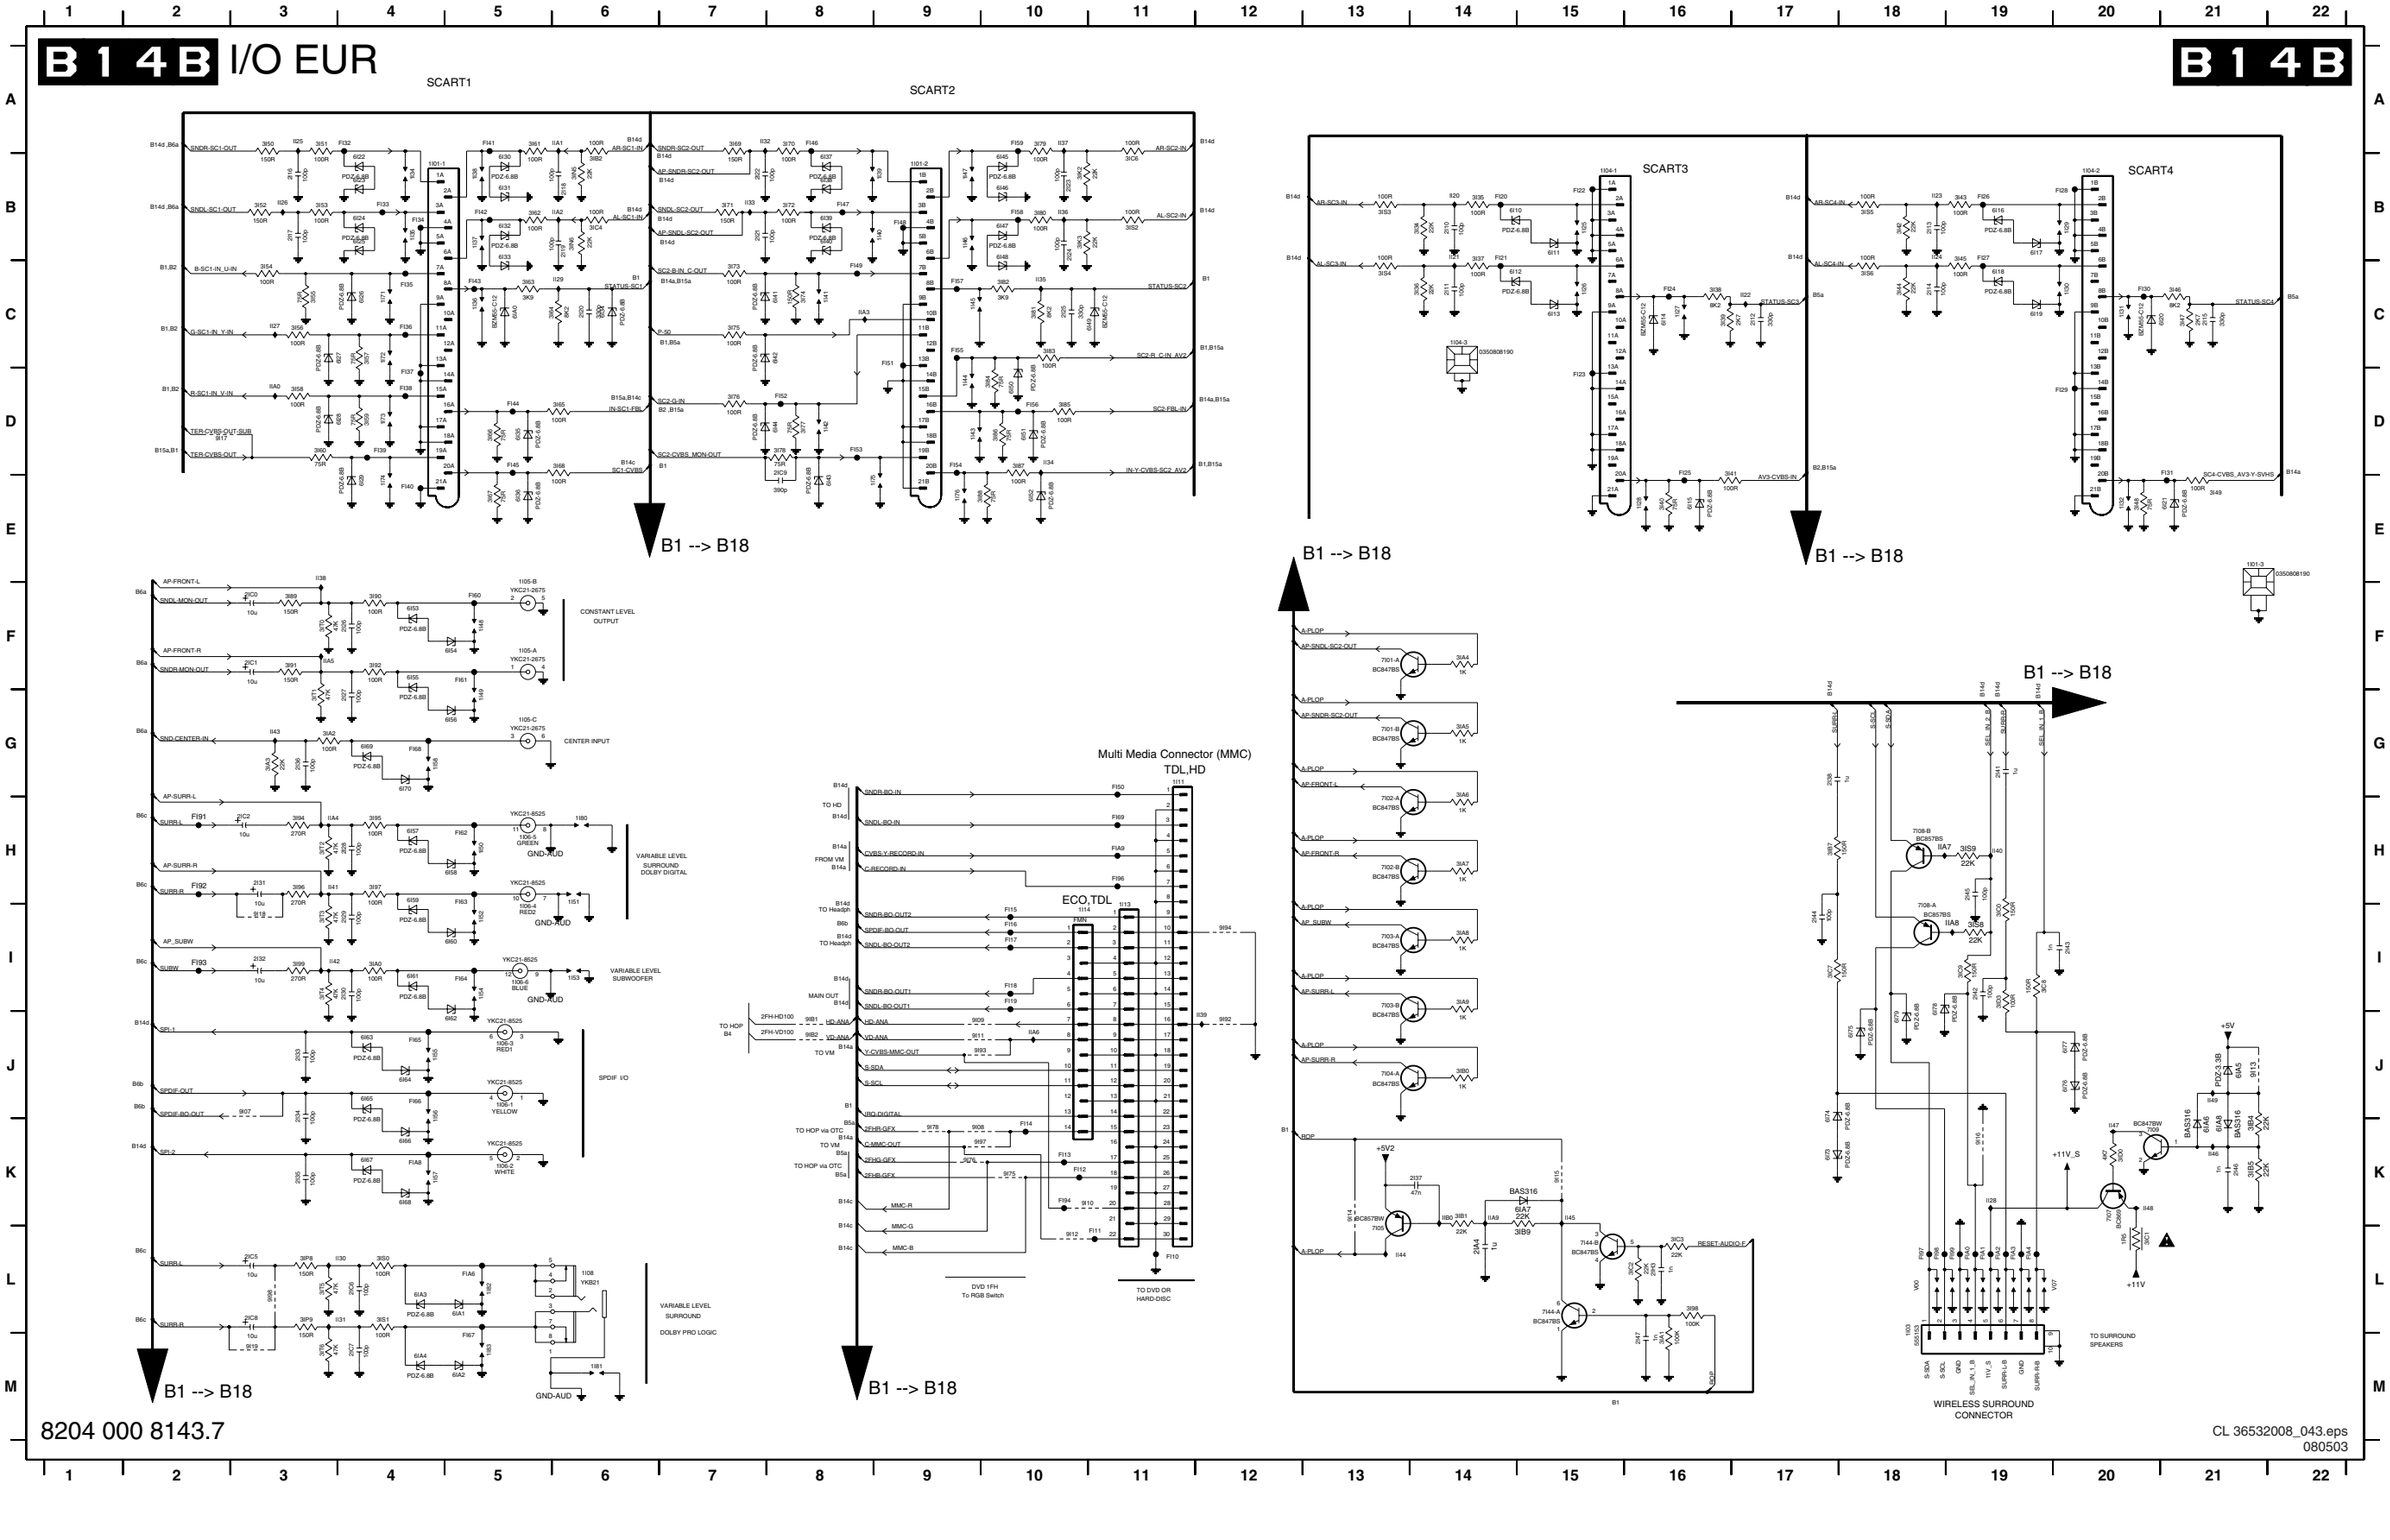

Small Signal Board: 2FH I/O

B14C 2FH I/O

B14C

B1 --> B18

TO HIP Main SMB

TO HIP MAIN SMB

SWITCH

FROM DVI

FROM HDI B16d

TO HOP

TO HDI

FOR RGB

FOR Y Pb Pr

Reserved For 2FH

Reserved for 1FHYPbPr

2FH

8204 000 8143.7


* References to B16 only for HDI-sets

CL 36532008_044.eps 070503

1I07-1 J6	6IC9 E9
1I07-2 I9	6ID0 E9
1I07-3 J7	6ID1 G8
1I07-4 I1	6ID2 H8
1I07-5 J2	6ID3 E10
1I65 I7	6ID4 E10
1I66 I8	6ID5 E10
1I67 I9	6ID6 E10
1I68 I1	6ID7 E10
1I69 I2	6ID8 E10
2I48 D11	7I13 D9
2I49 D11	7I14 C9
2I57 H1	7I15 I12
2I58 H2	7I16 I13
2I59 I1	7I25 C5
2I60 J14	7I26 B3
2I61 B8	7I27 B2
2I62 B9	7I28 C3
2I63 E9	7I29 D2
2IA9 E5	7I30 E2
2IB0 B1	7I31 E3
2IB1 C1	7I32 J4
2IB2 E1	7I40 D8
2IB3 F10	7I41 B7
2IB5 F9	7I42 E11
2IB7 F9	9I25 A4
2IC3 J4	9I26 B4
2IC4 C5	9I27 E3
2ID1 D12	9I77 D5
2ID6 E8	9I79 G4
2ID7 C7	9I80 A4
2ID8 A7	9I81 A5
2ID9 H9	9I82 A5
2IE1 D12	9I84 B4
2IE2 E12	9I85 H5
2IE3 G10	9I86 E3
2IE4 D13	9I87 I5
2IE5 E11	9I88 I4
2IE6 D11	9I89 I5
2IE7 F6	9IA2 H3
2IE8 H10	9IA3 D5
2IE9 F8	9IA4 D5
3IE2 G2	9IA5 A5
3IE3 G1	9IB0 I3
3IE4 H6	FIB0 I1
3IE5 H7	FIB1 I2
3IE6 H9	FIB2 I6
3IE7 I7	FIB3 J6
3IE8 I8	FIB4 J7
3IE9 G1	FIB5 I7
3IF0 I9	FIB6 I9
3IF1 G13	FIB7 J9
3IF2 G13	FIB8 G10
3IF5 G2	FIB9 I14
3IF6 H2	FIC0 B8
3IF7 H1	II50 H1
3IG0 A13	II51 H2
3IG3 B13	II52 A8
3IG4 B13	II53 I11
3IG7 D9	II54 I12
3IG8 D9	II55 C9
3IG9 C9	II56 D9
3IH0 C8	II57 E2
3IH1 I11	II58 E2
3IH2 I12	II59 C2
3IH3 I13	II60 C2
3IH4 J13	II88 E10
3IK9 B4	II89 E10
3IL0 A1	II90 B2
3IL1 A2	II91 A2
3IL2 A3	II92 B8
3IL3 B1	II93 C8
3IL4 B1	II94 D8
3IL5 B2	II95 E8
3IL6 B2	II96 E8
3IL7 C1	II97 E8
3IL8 C2	II98 E9
3IL9 C3	II99 E10
3IM0 D1	
3IM1 D1	
3IM2 D2	
3IM3 D2	
3IM4 E2	
3IM5 E1	
3IM6 E3	
3IM7 E2	
3IM8 F2	
3IM9 F1	
3IN0 E1	
3IN1 A8	
3IN2 B4	
3IN3 C4	
3IN4 E5	
3IO5 G4	
3IO6 G4	
3IO7 D8	
3IO8 C8	
3IO9 B8	
3IR5 D8	
5I00 D10	
6I90 I1	
6I91 I1	
6I92 I2	
6I93 I2	
6I94 I6	
6I95 I7	
6I96 I7	
6I97 I8	
6I98 I9	
6I99 I10	
6IC0 A8	
6IC1 B8	
6IC2 D7	
6IC3 E8	
6IC4 E8	
6IC5 E8	
6IC6 E8	
6IC7 E9	
6IC8 E9	

Small Signal Board: Audio I/O

B14D AUDIO I/O

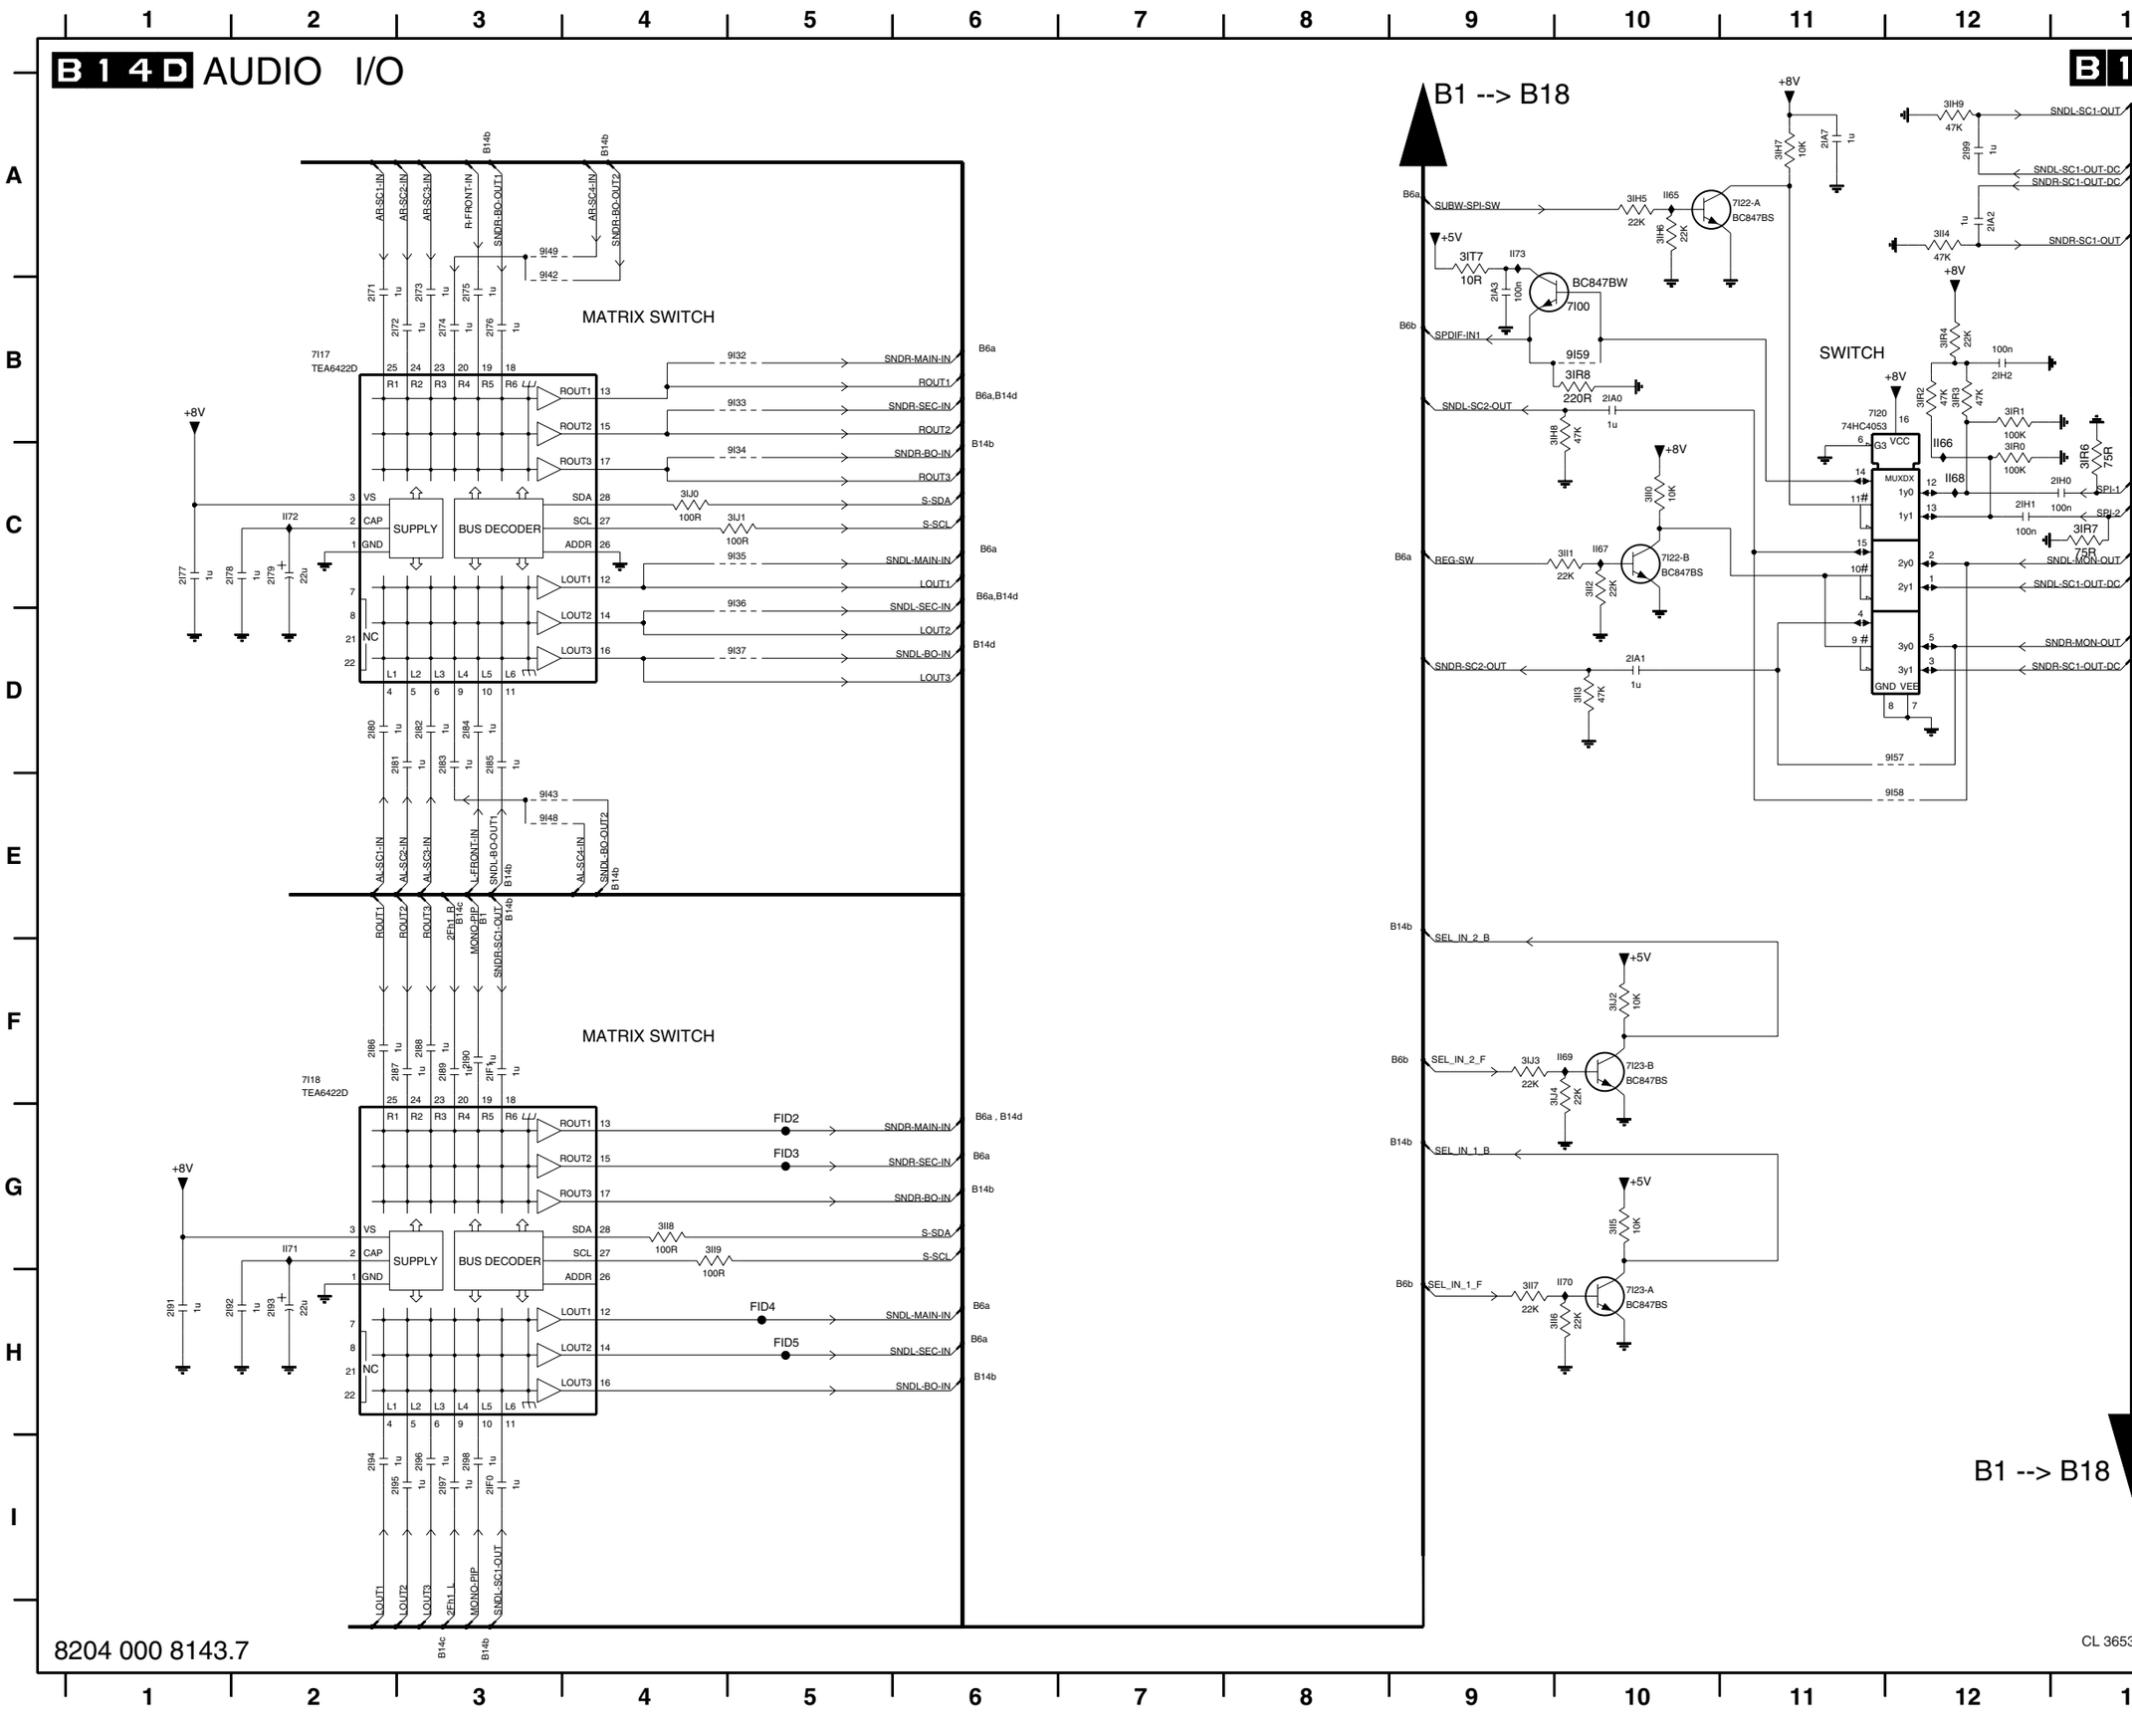


8204 000 8143.7


CL 36532008_045.eps
070503

2I71 B2
2I72 B3
2I73 B3
2I74 B3
2I75 B3
2I76 B3
2I77 C1
2I78 C2
2I79 C2
2I80 D2
2I81 D3
2I82 D3
2I83 D3
2I84 D3
2I85 D3
2I86 F2
2I87 F3
2I88 F3
2I89 F3
2I90 F3
2I91 H1
2I92 H2
2I93 H2
2I94 I2
2I95 I3
2I96 I3
2I97 I3
2I98 I3
2I99 A12
2IA0 B10
2IA1 D10
2IA2 A12
2IA3 B9
2IA7 A11
2IF0 I3
2IF1 F3
2IH0 C13
2IH1 C12
2IH2 B12
3IH5 A10
3IH6 A10
3IH7 A11
3IH8 B10
3IH9 A12
3II0 C10
3II1 C10
3II2 C10
3II3 D10
3II4 A12
3II5 G10
3II6 H10
3II7 H9
3II8 G4
3II9 G4
3IJ0 C4
3IJ1 C5
3IJ2 F10
3IJ3 F9
3IJ4 F10
3IR0 C12
3IR1 B12
3IR2 B12
3IR3 B12
3IR4 B12
3IR6 C13
3IR7 C13
3IR8 B10
3IT7 A9
7I00 B10
7I17 B2
7I18 F2
7I20 B12
7I22-A A11
7I22-B C10
7I23-A H10
7I23-B F10
9I32 B5
9I33 B5
9I34 C5
9I35 C5
9I36 C5
9I37 D5
9I42 B3
9I43 E3
9I48 E3
9I49 A3
9I57 D12
9I58 E12
9I59 B10
FID2 G5
FID3 G5
FID4 H5
FID5 H5
II65 A10
II66 C12
II67 C10
II68 C12
II69 F10
II70 H10
II71 G2
II72 C2
II73 A9

Small Signal Board: PIP-HIP

B15A PIP-HIP




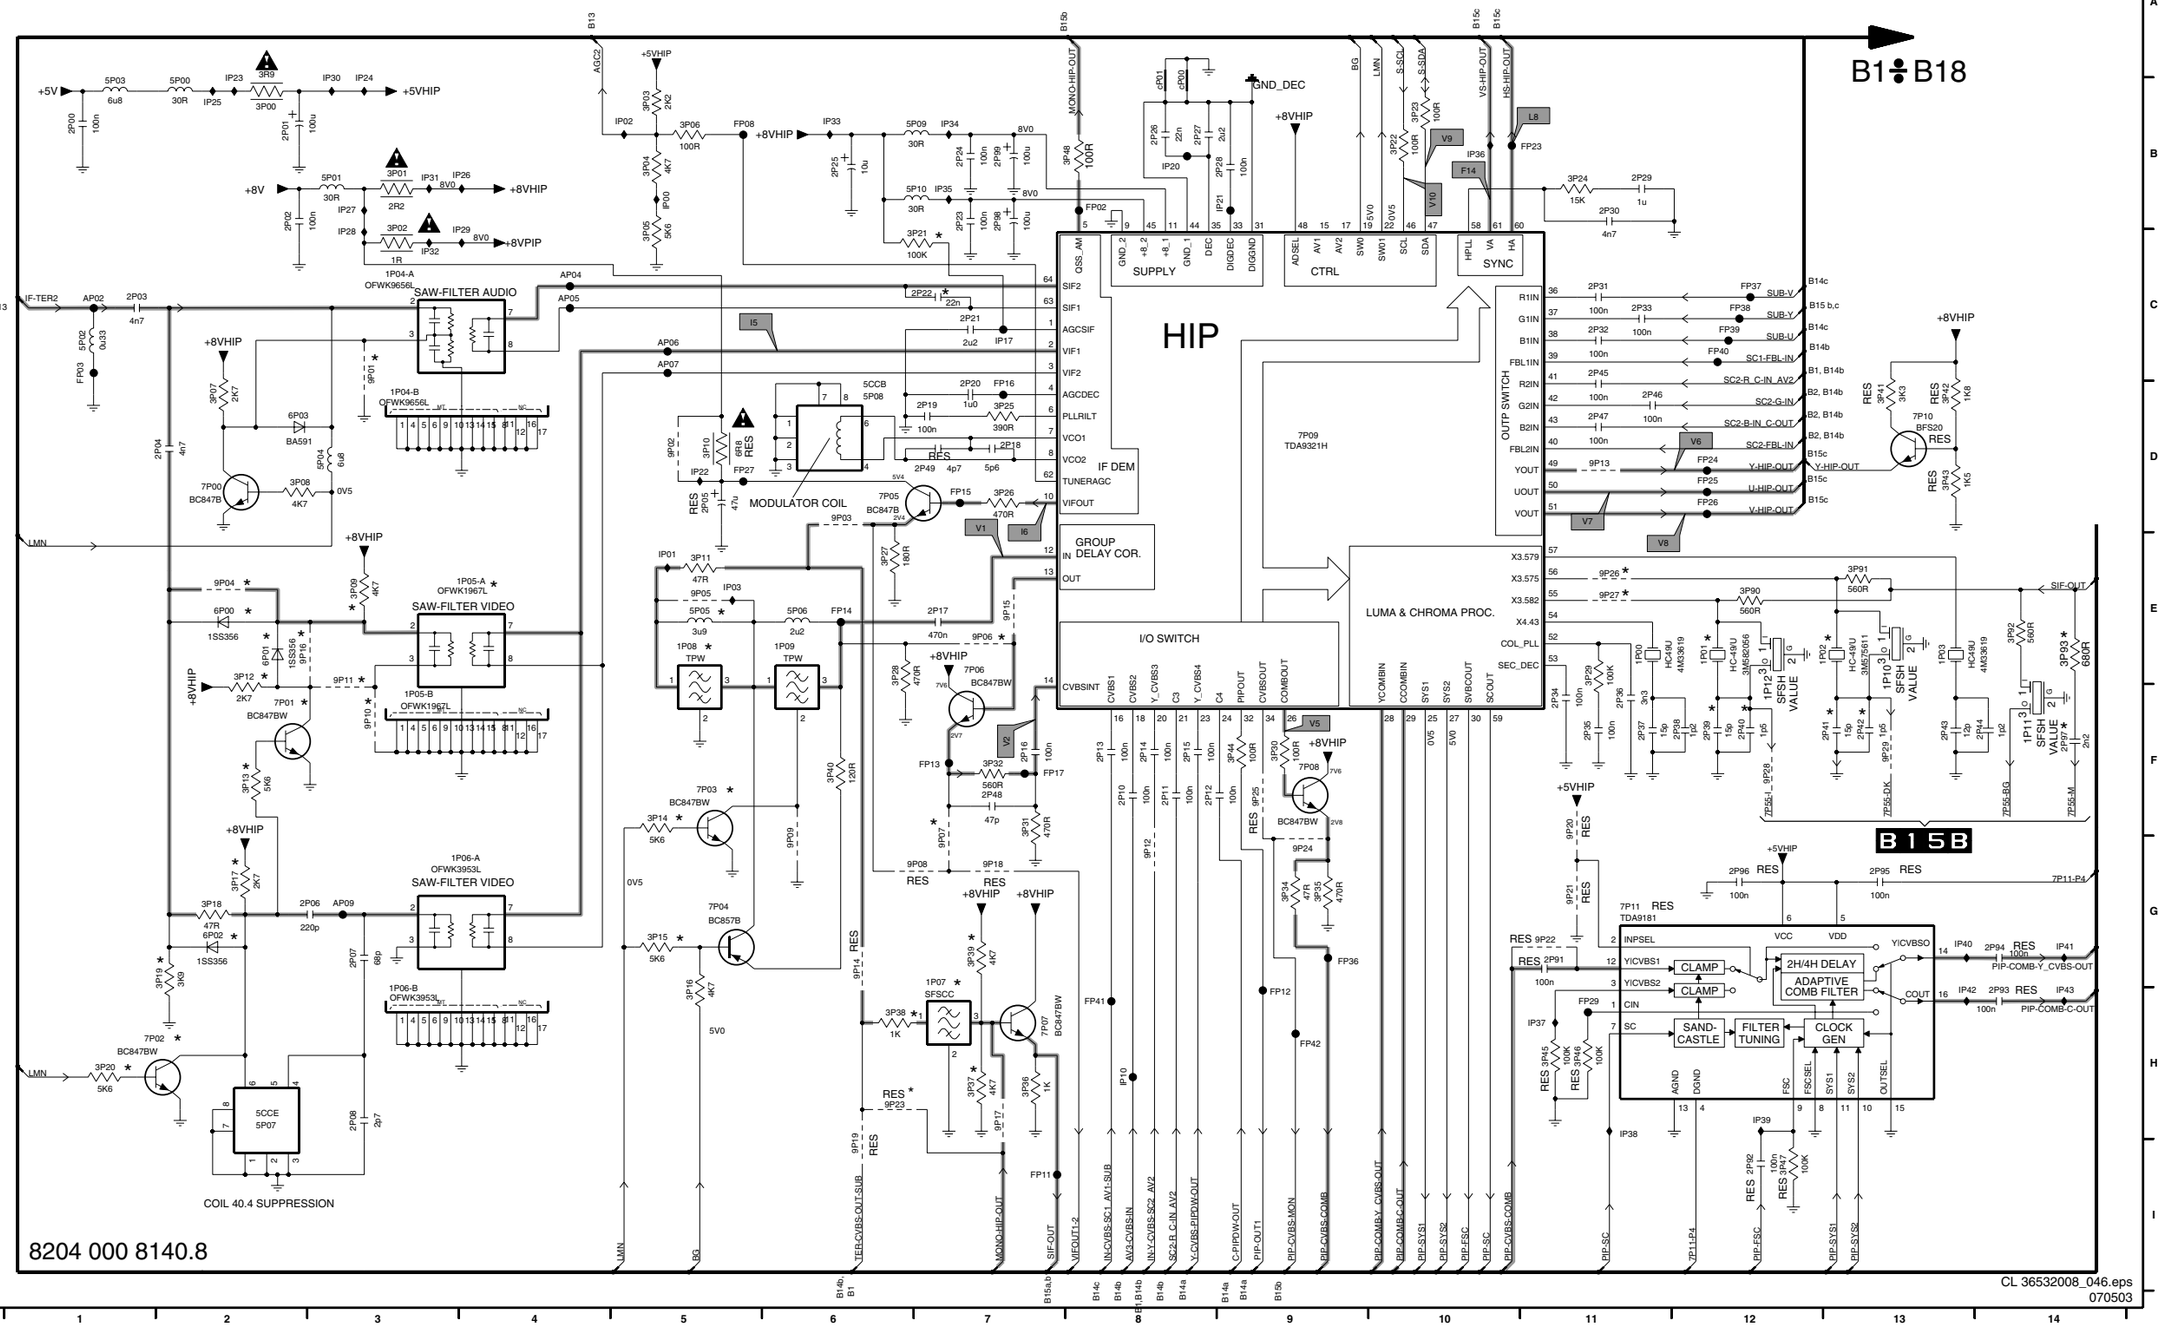

1000-A E1	3P12 E2	9P20 F11
1P00 E11	3P13 F2	9P21 G11
1P01 E12	3P14 F5	9P22 G11
1P02 E13	3P15 G5	9P23 I6
1P03 E13	3P16 H5	9P24 G9
1P04-A C3	3P17 G2	9P25 F9
1P04-B D3	3P18 G2	9P26 E11
1P05-A E4	3P19 G2	9P27 E11
1P05-B F3	3P20 H1	9P28 F12
1P06-A G4	3P21 C7	9P29 F13
1P06-B H3	3P22 B10	AP02 C1
1P07 G7	3P23 B10	AP04 C4
1P08 E5	3P24 B11	AP05 C4
1P09 E6	3P25 D7	AP06 C5
1P10 E13	3P26 D7	AP07 C5
1P11 F14	3P27 E6	AP09 G3
1P12 E12	3P28 E6	FP02 B8
2P00 B1	3P29 E11	FP03 C1
2P01 B2	3P30 F9	FP08 B5
2P02 B2	3P31 F7	FP11 I7
2P03 C1	3P32 F7	FP12 H9
2P04 D2	3P34 G9	FP13 F7
2P05 D5	3P35 G9	FP14 E6
2P06 G3	3P36 H7	FP15 D7
2P07 G3	3P37 H7	FP16 D7
2P08 H3	3P38 H6	FP17 F7
2P10 F8	3P39 G7	FP23 B11
2P11 F8	3P40 F6	FP24 D12
2P12 F8	3P41 D13	FP25 D12
2P13 F8	3P42 D13	FP26 D12
2P14 F8	3P43 D13	FP27 D5
2P15 F8	3P44 F9	FP29 H11
2P16 F7	3P45 H11	FP36 G9
2P17 E7	3P46 H11	FP37 C12
2P18 D7	3P47 I12	FP38 C12
2P19 D7	3P48 B7	FP39 C12
2P20 D7	3P90 E12	FP40 C12
2P21 C7	3P91 E13	FP41 H8
2P22 C7	3P92 E14	FP42 H9
2P23 B7	3P93 E14	IP00 B5
2P24 B7	5P00 B2	IP01 E5
2P25 B6	5P01 B3	IP02 B5
2P26 B8	5P02 C1	IP03 E5
2P27 B8	5P03 B1	IP10 H8
2P28 B9	5P04 D3	IP17 C7
2P29 B11	5P05 E5	IP20 B8
2P30 B11	5P06 E6	IP21 B9
2P31 C11	5P07 H2	IP22 D5
2P32 C11	5P08 D6	IP23 B2
2P33 C11	5P09 B7	IP24 B3
2P34 F11	5P10 B7	IP25 B2
2P35 F11	6P00 E2	IP26 B4
2P36 F11	6P01 E2	IP27 B3
2P37 F11	6P02 G2	IP28 C3
2P38 F12	6P03 D2	IP29 C4
2P39 F12	7P00 D2	IP30 B3
2P40 F12	7P01 F2	IP31 B3
2P41 F13	7P02 H1	IP32 C3
2P42 F13	7P03 F5	IP33 B6
2P43 F13	7P04 G5	IP34 B7
2P44 F14	7P05 D6	IP35 B7
2P45 C11	7P06 E7	IP36 B10
2P46 D11	7P07 H7	IP37 H11
2P47 D11	7P08 F9	IP38 H11
2P48 F7	7P09 D9	IP39 H12
2P49 D7	7P10 D13	IP40 G13
2P91 G11	7P11 G11	IP41 G14
2P92 I12	9P00 B4	IP42 H13
2P93 H14	9P01 C3	IP43 H14
2P94 G14	9P02 D5	cP00 B8
2P95 G13	9P03 D6	
2P96 G12	9P04 E2	
2P97 F14	9P05 E5	
2P98 B7	9P06 E7	
2P99 B7	9P07 G7	
3P00 B2	9P08 G7	
3P01 B3	9P09 G6	
3P02 C3	9P10 F3	
3P03 B5	9P11 E3	
3P04 B5	9P12 G8	
3P05 C5	9P13 D11	
3P06 B5	9P14 G6	
3P07 D2	9P15 E7	
3P08 D2	9P16 E2	
3P09 E3	9P17 H7	
3P10 D5	9P18 G7	
3P11 E5	9P19 I6	


Small Signal Board: PIP-I/O

1P50 D2	2P53 E2	2P57 G5	2P61 E6	2P65 G9	2P69 H9	2P73 D8	2P77 D4	2P81 E14	2P85 F10	2P90 D5	3P53 E2	3P57 G5	3P61 D7	3P65 G15	3P69 E14	3P75 E5	3P79 C4	3P85 F14	5P50 D4	7P52 F4	7P56 F13	9P54 H5	9P58 D11	9P64 B9	9P71 H13	FP53 F10	FP57 G6	IP51 D3	IP55 G5	IP59 B8
2P50 D4	2P54 F2	2P58 F5	2P62 F5	2P66 H9	2P70 D6	2P74 C6	2P78 E12	2P82 G10	2P86 A4	3P50 D1	3P54 F2	3P58 G5	3P62 G9	3P66 G15	3P70 E14	3P76 F4	3P80 C2	3P86 B9	5P51 E15	7P53 G4	7P57 A12	9P55 C12	9P59 C9	9P65 C10	9P50 D15	FP54 D12	FP59 F15	IP52 F5	IP56 D14	IP60 C6
2P51 E1	2P55 F2	2P59 E5	2P63 F10	2P67 H9	2P71 D15	2P75 A8	2P79 E12	2P83 G10	2P87 C2	3P51 D1	3P55 H5	3P59 F5	3P63 F9	3P67 F14	3P72 E14	3P77 B3	3P81 D4	3P87 B9	7P50 A3	7P54 E6	9P52 F4	9P56 C12	9P60 C8	9P69 H13	FP51 G10	FP55 E15	FP60 G10	IP53 D2	IP57 D7	IP61 D8
2P52 E2	2P56 G5	2P60 E5	2P64 F10	2P68 H9	2P72 D6	2P76 D1	2P80 E14	2P84 F10	2P88 C1	3P52 D4	3P56 G4	3P60 F5	3P64 F9	3P68 F14	3P74 D15	3P78 B4	3P82 C2	3P88 D5	7P51 C3	7P55 B6	9P53 G4	9P57 D12	9P63 B9	9P70 H13	FP52 F10	FP56 B8	IP50 C2	IP54 D2	IP58 D6	IP62 C14

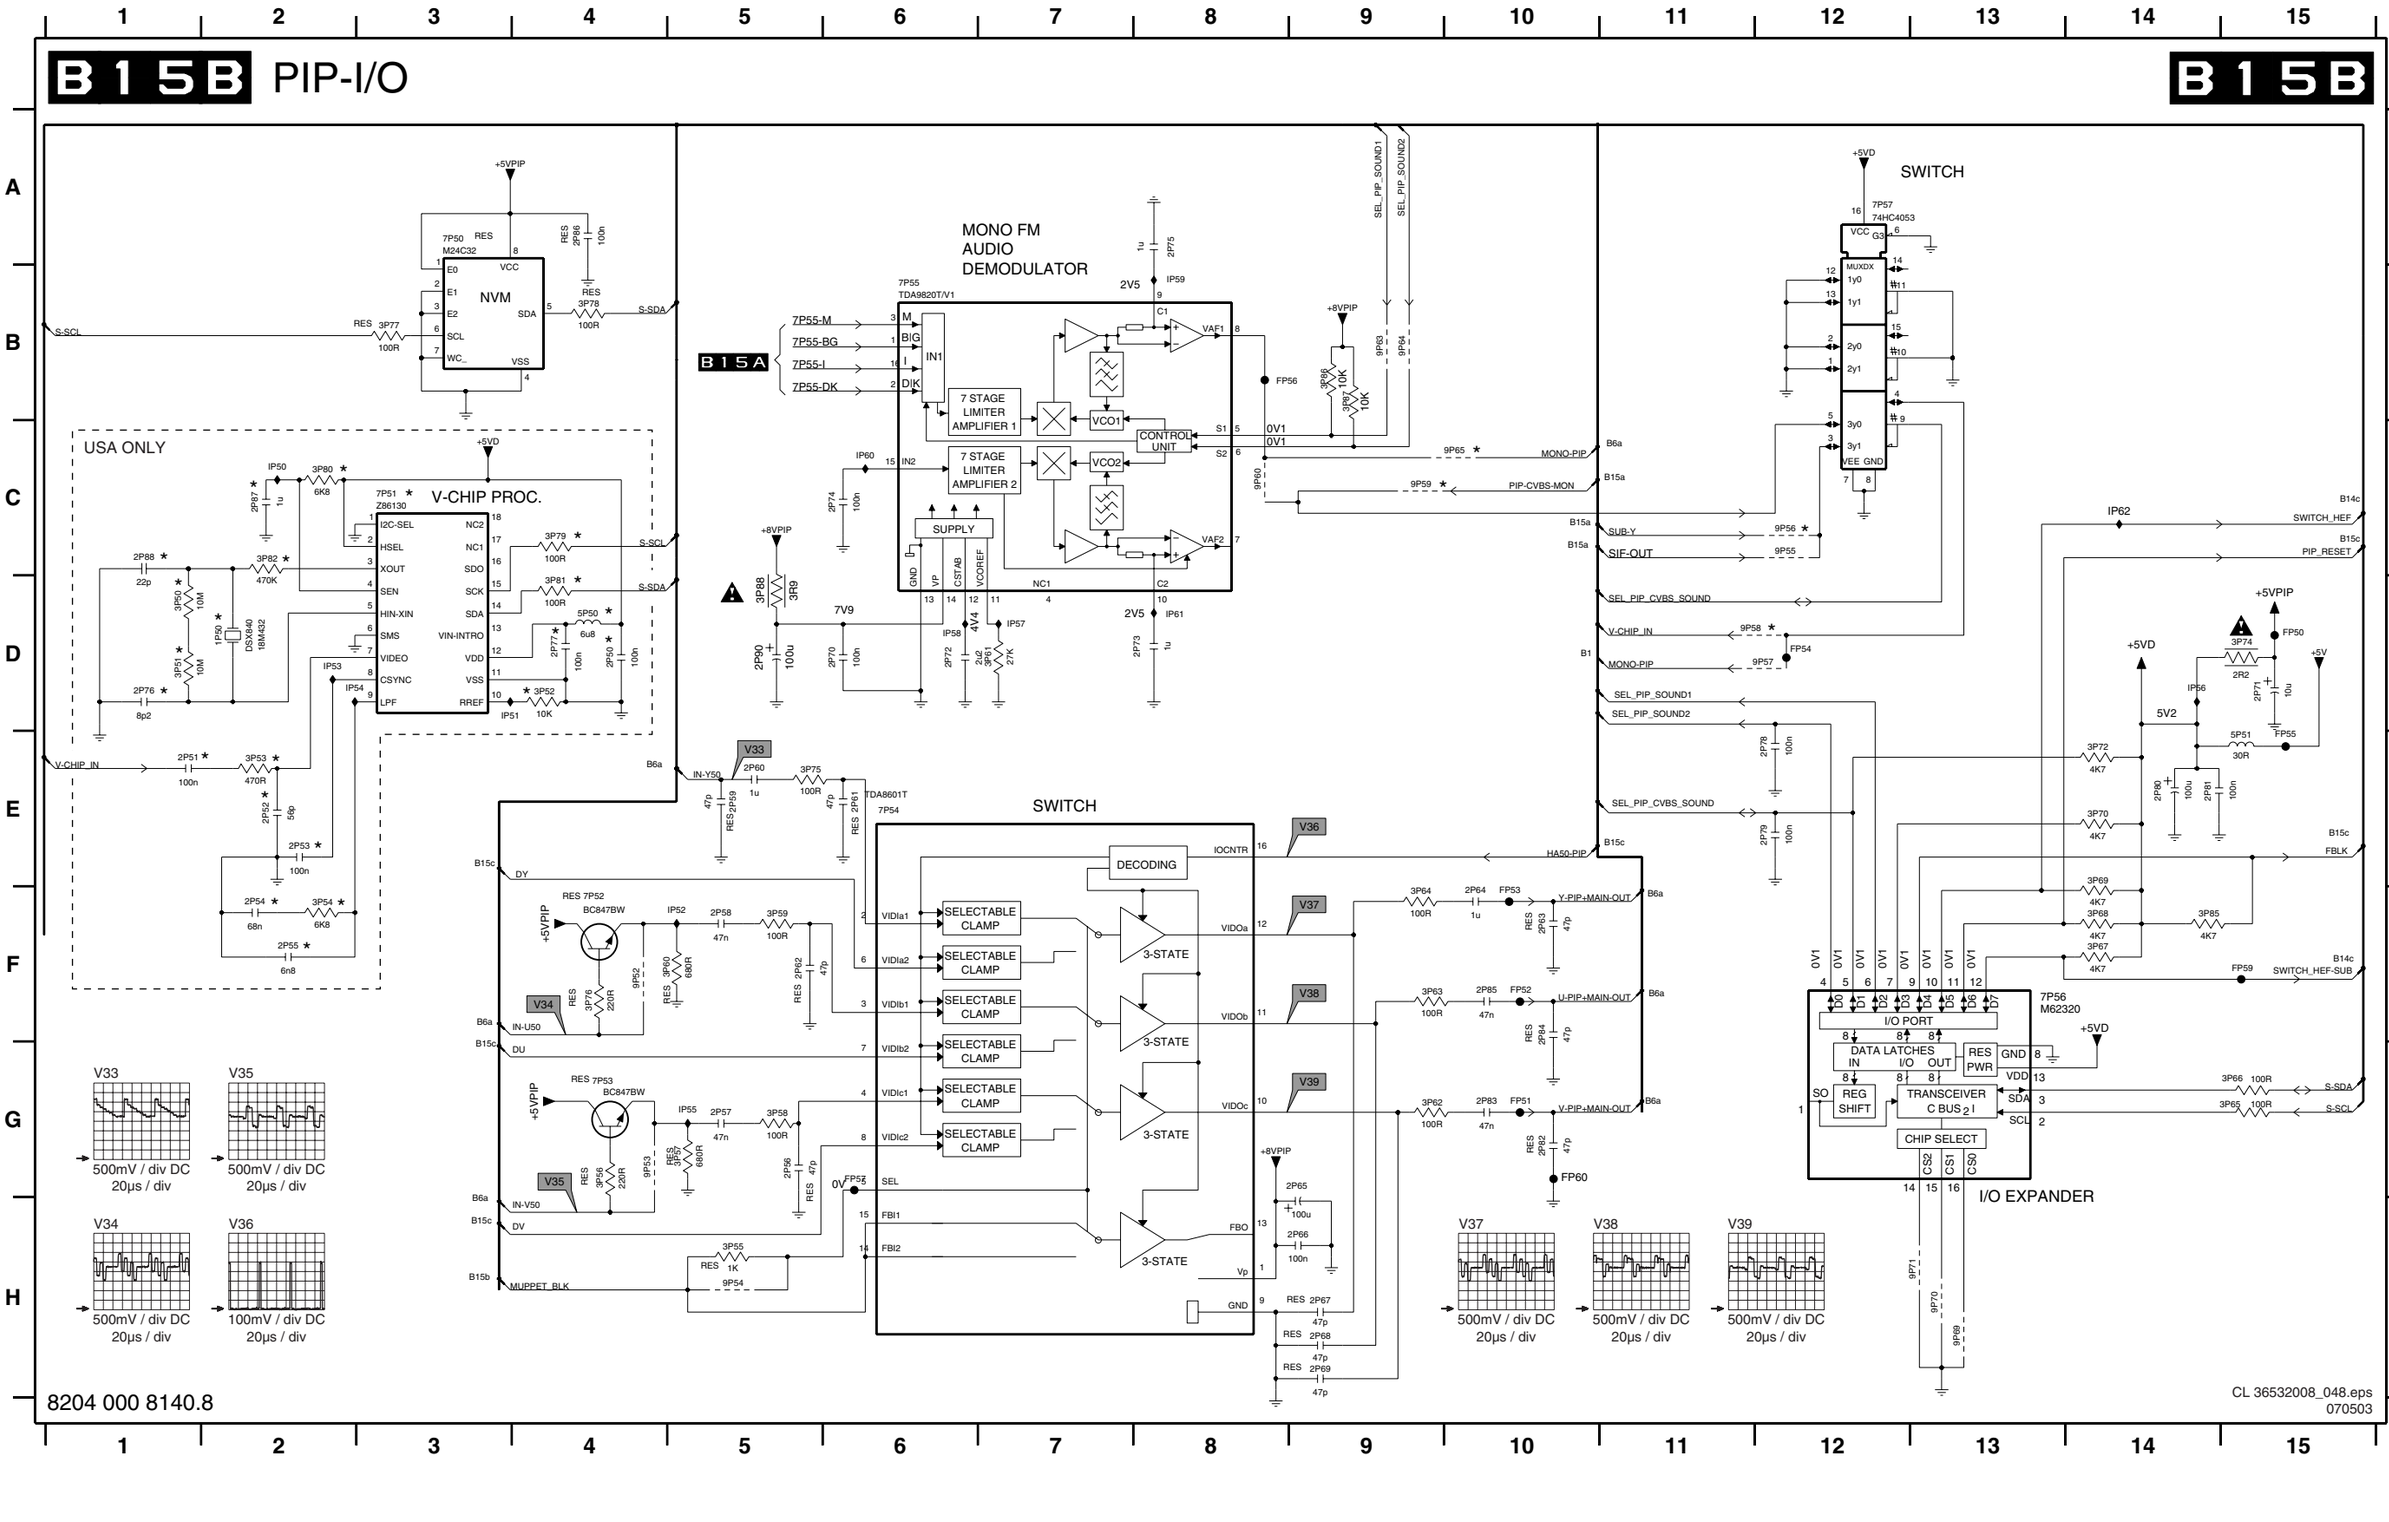


Small Signal Board: PIP (Muppet)

2PA0 A4 2PA1 A4 2PA2 B4 2PA3 B4 2PA4 B4 2PA5 B5 2PA6 D5
2PA7 C4 2PA8 E1 2PA9 E5 2PB0 F3 2PB1 F4 2PB2 F4 2PB3 F5
2PB4 G4 2PB5 G1 2PB6 G5 2PB7 G4 2PB8 A6 2PB9 B6 2PC0 A6
2PC1 B6 2PC2 B7 2PC3 B7 2PC4 B7 2PC5 B7 2PC6 B8 2PC7 B8
2PC8 B8 2PC9 B8 2PD0 A9 2PD1 B9 2PD2 A9 2PD3 B9 2PD4 A10
2PD5 A10 2PD6 B10 2PD7 B10 2PD8 B10 2PD9 B10 2PE0 B11 2PE1 D13
2PE2 E13 2PE3 E13 2PE4 F11 2PE5 F12 2PE6 G13 2PE7 E13 2PE8 D13
2PE9 D13 2PF1 C12 2PF2 C13 2PF3 F3 2PF4 C13 2PF5 C14 2PF6 D14
2PF7 C4
2PF8 G5 2PF9 F12 3PA0 A2 3PA1 A4 3PA2 A4 3PA3 B4 3PA4 B4
3PA5 H12 3PA6 C4 3PA7 B4 3PA8 B2 3PB0 C3 3PB1 D2
3PB2 D1 3PB3 D3 3PB4 D2 3PB5 D4 3PB6 D4 3PB7 E2 3PB8 E3
3PB9 E2 3PC0 E3 3PC1 E3 3PC2 F3 3PC3 F3 3PC4 F1 3PC5 E4
3PC6 F4 3PC7 G2 3PC8 F2 3PC9 G3 3PD0 G3 3PD1 G4 3PD2 H4
3PD3 H4 3PD4 H5 3PD5 H4 3PD6 H4 3PD7 H6 3PD8 H6 3PD9 D5
3PE0 A11 3PE1 A12 3PE2 B12 3PE3 A13 3PE4 A13 3PE5 B14 3PE9 E11
3PF0 E11 3PF1 F14 3PF2 E11 3PF4 F12 3PF5 E4 3PF6 D12
3PF7 D12 3PF8 E12 3PF9 E12 3PG0 E12 3PG1 E12 3PG2 A3 3PG3 B2
3PG4 C3 3PG5 F2 3PG6 F2 3PH1 A6 3PH2 A6 3PH3 A7 3PH4 A8
3PH5 A8 3PH6 A9 3PH7 A10 3PH8 A10 3PH9 A11 5PA0 A6 5PA1 A6
5PA2 A7 5PA3 A7 5PA4 A8 5PA5 A9 5PA6 A9 5PA7 A10 5PA8 A10
5PA9 C13 5PB0 C13 6PA0 D4 6PA1 E1 6PB1 A5 6PB2 A6
6PB3 A7 6PB4 A8 6PB5 A8 6PB6 A9 6PB7 A9 6PB8 A10 6PB9 A11
7PA0 A3 7PA1 B3 7PA2 D2 7PA3 D3 7PA4 D4 7PA5 E2 7PA6 C5
7PA7 F2 7PA8 G2 7PA9 G3 7PB0 H5 7PB1 G12 7PB2 B12 7PB3 B13
7PB4 A14 7PB5 E4 7PB6 A3 9PA0 B2 9PA1 D5 9PA2 D4 9PA3 E3
9PA4 F2 9PA5 F2 9PA6 H3 9PA7 H4 9PA8 H5 9PB1 B13 9PB2 C12
9PB3 A3 9PB4 D3 9PB5 A12 FPA0 E5 FPA1 D5 FPA2 F5 FPA3 F5
FPA4 G5 FPA5 G5 FPA6 B14 FPA7 D14 FPA8 D14 FPA9 E14 FPB0 C14
FPB1 F5 FPB2 E5 IPA1 C14 IPA3 C14 IPA5 F11 IPA6 F11 IPA7 C5
IPA8 D5 IPA9 F5 IPB0 F5 IPB1 A13 IPB2 D2 IPB3 D4 IPB4 A4
IPB5 F3

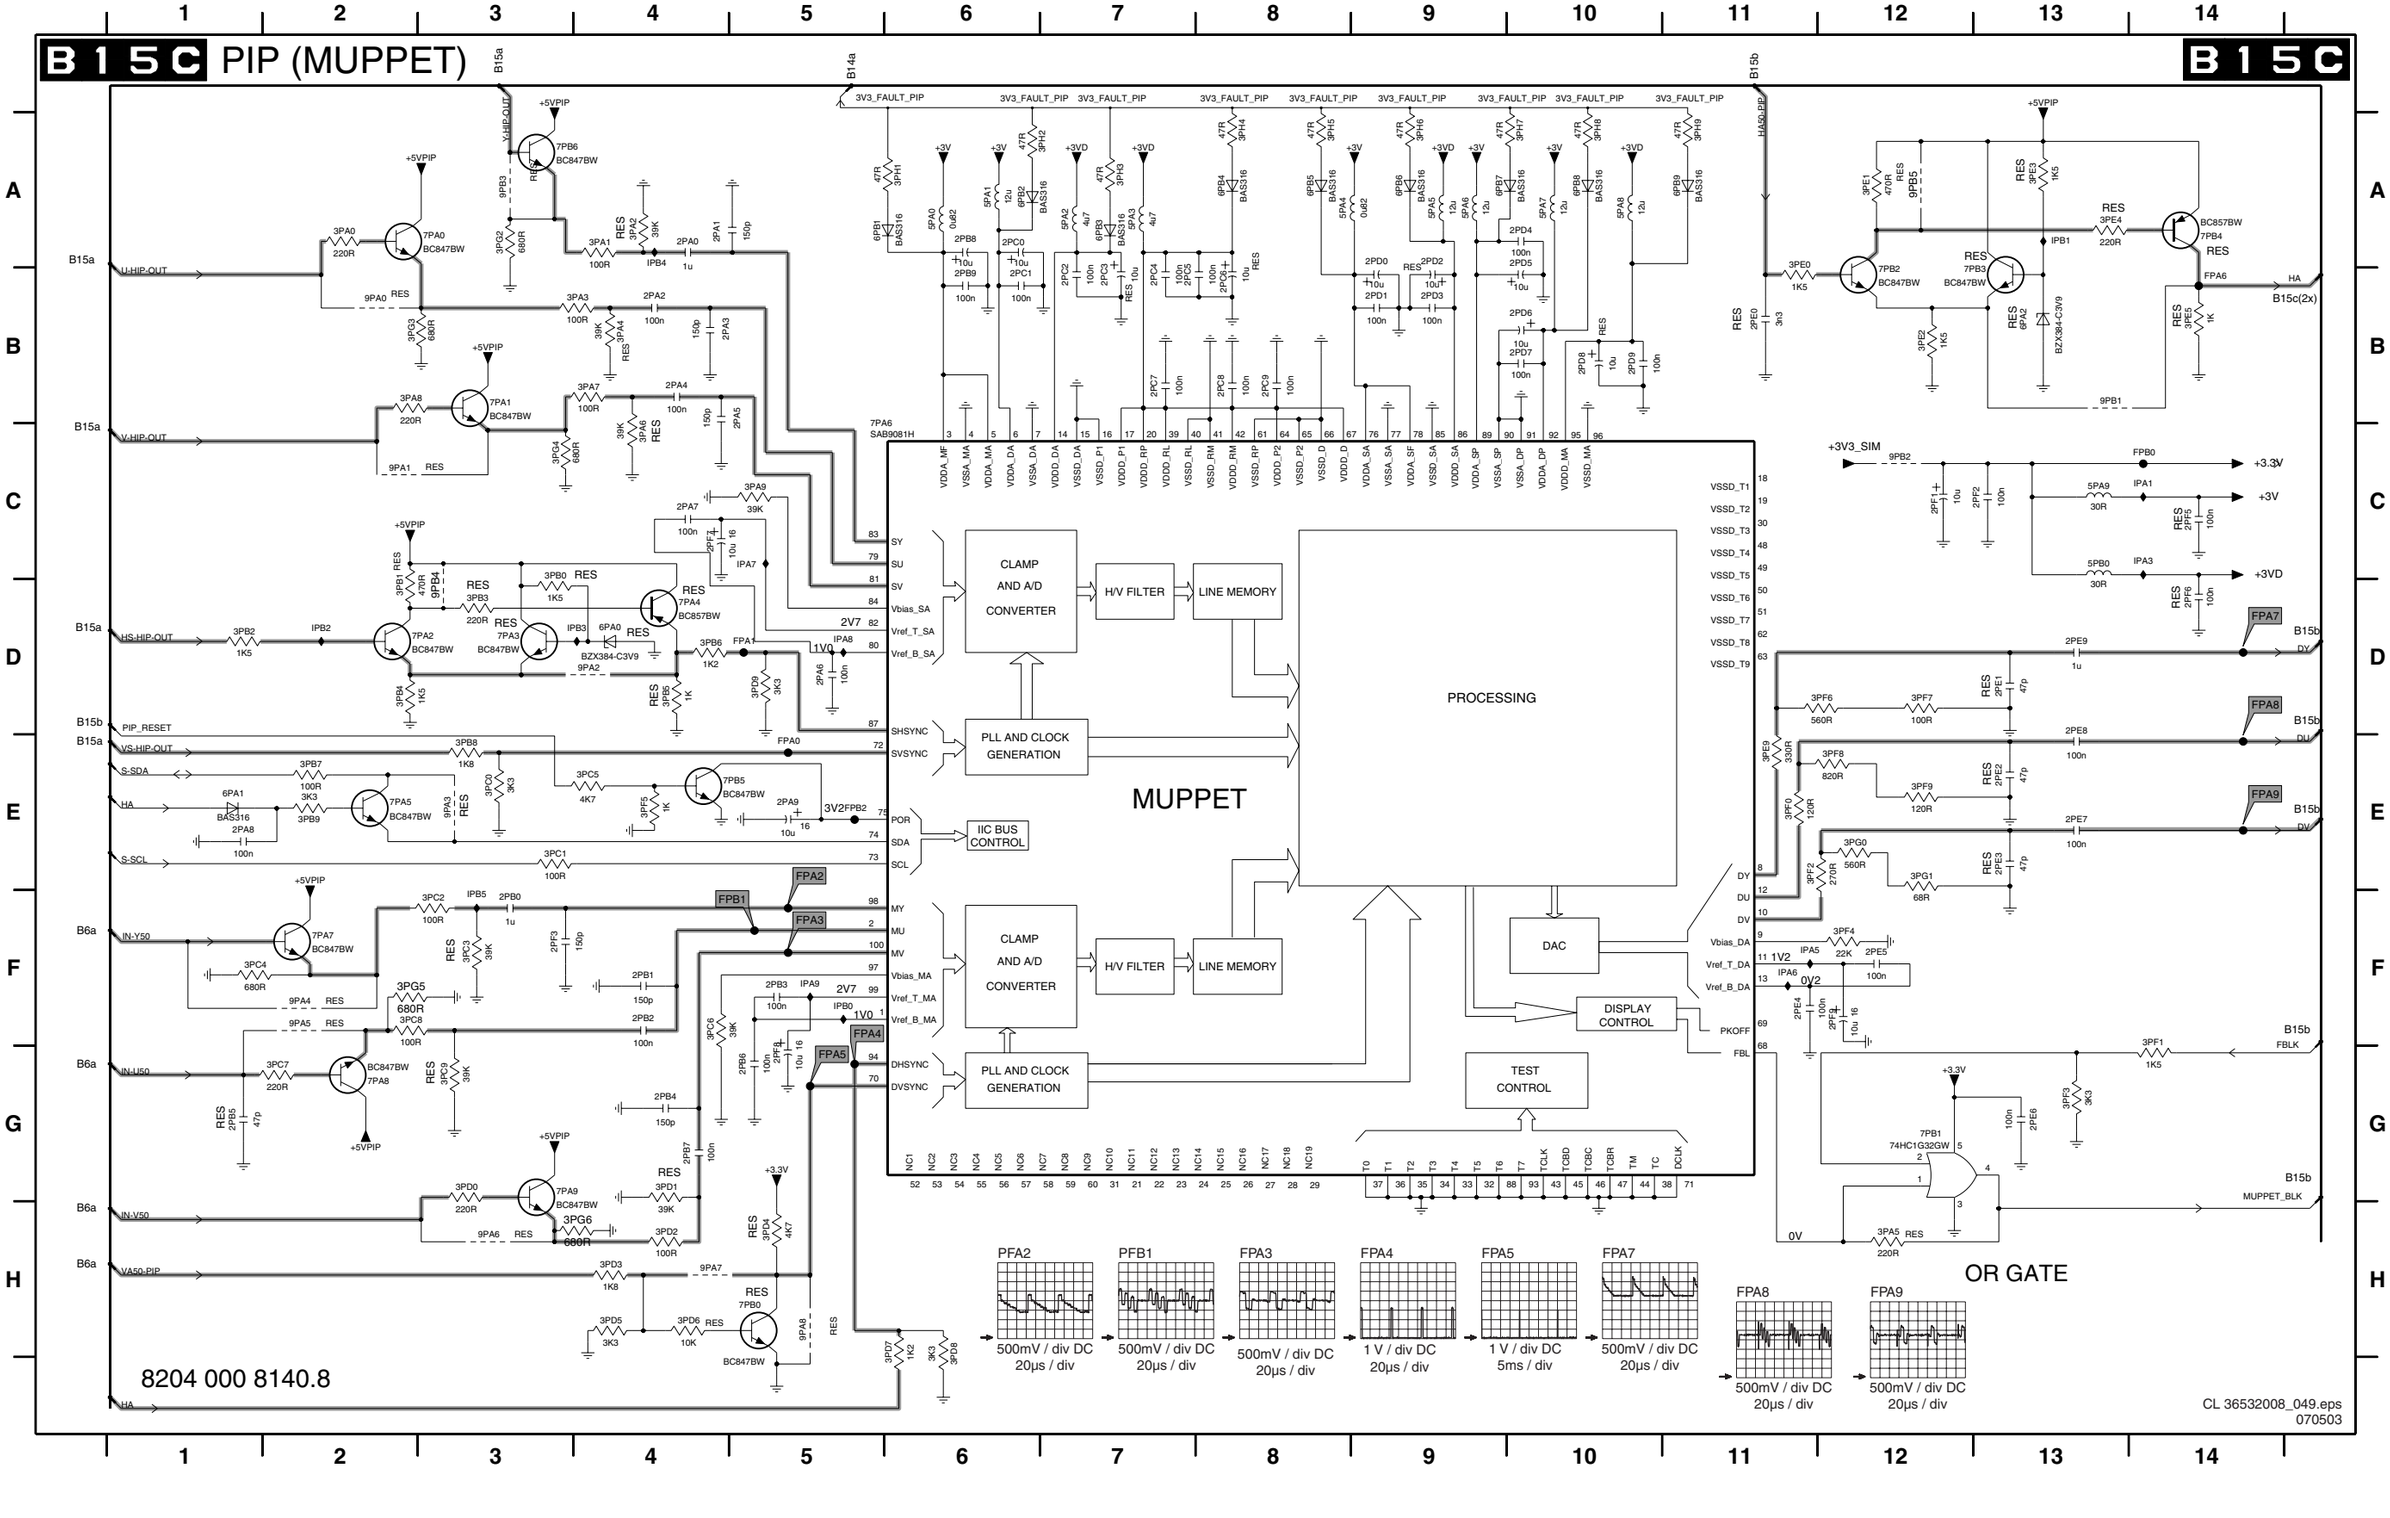


Layout Small Signal Board (Overview Top Side)


1001	C7
1304	A6
1305	C5
1306	C5
1307	B5
1308	C5
1401	B6
1402	A7
1403	B4
1408	B5
1701	D6
1702	D6
1F01	D7
1I01	A6
1I02	F3
1I03	A2
1I04	A4
1I05	A8
1I06	A7
1I07	A7
1I08	A2
1I11	B3
1I13	B3
1I14	B3
1I70	F5
1P00	D2
1P01	D2
1P02	C2
1P03	D2
1P06	C2
1P10	C2
1P11	C2
1P12	D2
1S02	E1
1S15	C1
1T01	A2
1T02	B1
1U01	F6
1U02	F6
2002	C7
2004	C7
2005	C7
2006	C7
2007	C7
2008	C7
2009	D6
2011	D6
2012	C6
2014	C7
2016	B7
2018	C7
2020	D7
2025	B6
2027	D6
2028	C6
2029	D6
2031	B6
2034	B6
2035	C5
2037	B6
2039	C6
2058	B7
2059	B7
2067	C6
2070	D6
2071	D6
2073	D6
2301	D5
2305	C4
2314	C5
2315	C5
2316	C5
2317	C5
2318	C5
2322	C5
2324	D4
2327	B5
2329	D5
2330	D5
2331	D5
2332	C5
2333	D5
2334	D5
2336	D5
2339	B5
2340	D5
2344	B6
2347	B6
2348	B5
2349	B5
2350	C4
2351	C4
2352	C4
2353	C4
2355	B5
2356	C5
2357	C5
2358	C5
2359	C5
2360	C5
2361	C5
2362	C5
2363	C5
2364	B5
2365	B4
2367	C4
2368	C4
2373	C4
2376	C5
2377	C5
2379	B5
2380	B5
2381	B5
2382	B5
2383	B5
2388	C4
2389	C4
2391	B4
2393	C4
2394	C5
2395	C5
2396	C5
2397	C5
2398	D5
2401	C5
2403	C4
2404	B5
2405	B5
2406	B5
2407	B5
2408	B5
2409	B5
2410	D4
2411	B5
2412	B5
2413	B4
2414	D4
2415	C4
2417	B4
2425	D4
2427	B5
2428	B5
2429	D5
2432	C5
2433	C4
2709	C8
2710	C7
2711	C7
2716	C7
2718	D6
2719	D6
2720	D6
2721	E5
2722	D5
2729	E7
2735	B7
2740	E6
2741	E6
2742	E6
2743	E6
2744	E6
2745	E6
2752	E6
2754	B8
2758	E6
2759	E6
2763	E7
2764	E6
2767	E7
2770	D6
2771	D6
2772	D6
2774	B8
2776	D8
2780	E7
2782	D7
2783	B7
2790	D7
2791	D7
2792	D7
2793	D7
2794	D7
2796	D8
2797	D7
2798	D8
2803	C7
2804	C7
2805	C8
2806	B7
2807	B8
2808	B8
2809	C8
2811	C8
2813	C8
2814	B7
2817	C8
2819	C8
2823	E5
2825	C8
2829	C7
2831	E6
2838	D7
2840	C7
2843	C7
2845	C8
2846	C8
2848	C8
2855	C7
2859	B7
2860	B7
2861	C8
2866	B7
2867	C7
2870	F6
2874	E7
2877	F5
2878	F5
2881	E6
2882	F6
2883	F6
2884	B8
2886	C7
2887	C7
2888	C7
2889	C7
2890	C7
2891	B7
2892	B7
2893	C7
2894	B7
2895	B7
2896	C7
2897	C7
2898	C7
2A00	F4
2A02	E5
2A03	F4
2A04	F4
2A06	D4
2A08	D4
2A09	E5
2A10	E4
2A11	E4
2A12	F5
2A13	F5
2A14	E5
2A15	D5
2A16	E5
2A17	D4
2A18	D4
2A20	E5
2A21	D5
2A22	E4
2A23	E4
2A25	E4
2A26	E4
2A27	E5
2A29	E5
2A30	E4
2A31	E4
2A32	E5
2A33	E5
2A35	E5
2A36	E4
2A37	E5
2A39	E5
2A40	E5
2A41	E5
2A42	D5
2A43	E5
2A44	E5
2A45	F5
2A46	E5
2A47	F5
2A48	E4
2A49	E5
2A50	E5
2A51	F5
2A52	E4
2A53	E5
2A54	E5
2A55	E4
2A56	E5
2A57	F4
2A58	E4
2A59	E5
2A60	F4
2A61	F5
2A62	E5
2A63	F5
2A65	D4
2A66	E4
2A67	E5
2A68	E4
2A71	E5
2A73	E4
2A76	E4
2A77	E4
2A78	F5
2A82	E4
2A87	F5
2A95	F4
2AA0	E4
2AA1	E4
2AA6	E5
2AA7	E5
2AA8	E4
2AB2	E5
2AB5	D5
2AB6	E5
2AB7	E5
2AB9	E4
2AC0	E4
2AC1	F3
2AC2	E3
2AC3	E3
2AC4	E3
2AC5	E3
2AC6	E3
2AC7	E3
2AD0	E4
2AD1	E3
2AD3	F3
2AD4	E3
2AD5	F3
2AD6	E3
2AD7	F5
2AD9	F5
2AE2	E3
2AE3	E3
2AE5	E3
2AF2	D4
2AF3	F3
2AF4	F3
2AK0	F5
2AK1	F5
2AK2	E5
2AK3	E5
2AK4	E5
2AK5	E5
2AK6	F5
2AK7	F5
2AK9	F5
2AL0	E4
2AL1	E5
2AL2	E5
2AL3	E5
2AL4	E5
2AL5	F5
2AL6	F5
2AL8	F4
2AL9	F4
2ALA	E5
2AM0	E4
2AM1	E4
2AM2	F4
2AM3	E5
2AM5	E4
2AM6	F4
2AM7	E5
2AM8	F5
2AM9	F4
2AN0	E4
2AN1	E4
2AN7	E5
2AN9	E5
2C01	B5
2H01	E1
2H02	E1
2H03	E1
2H04	E1
2H05	E1
2H06	E1
2H07	E2
2H08	E1
2H09	E1
2H10	E1
2H18	E2
2H21	E2
2H25	F2
2H26	F2
2H27	F2
2H28	F2
2H29	F2
2H30	F2
2H31	F2
2H32	F1
2H33	F2
2H34	F1
2H35	F2
2H38	E2
2H40	F2
2H42	F2
2H43	E2
2H44	F2
2H45	E2
2H46	E3
2H51	E2
2H52	E2
2H53	E2
2H54	E2
2H55	E2
2H56	E2
2H57	E3
2H58	E2
2H59	E2
2H60	E2
2H82	E2
2H88	E1
2H95	E1
2I01	B2
2I02	B3
2I03	B3
2I05	B3
2I09	A7
2I28	A8
2I32	A8
2I41	A2
2I42	A2
2I45	A2
2I48	B8
2I49	B8
2I59	B8
2I60	B8
2I61	A7
2I62	A7
2I63	A8
2I71	A3
2I72	A3
2I73	A3
2I74	A3
2I75	A3
2I76	B3
2I77	A2
2I78	A2
2I80	A2
2I81	A2
2I82	A2
2I83	A2
2I84	B2
2I85	B2
2I86	B2
2I87	B2
2I88	B2
2I89	B2
2I90	B2
2I91	A2
2I92	B2
2I94	A2
2I95	A2
2I96	A2
2I97	A2
2I98	A2
2IA6	C3
2IA9	B4
2IB0	B5
2IB2	B5
2IB5	A8
2IB7	A8
2IC2	A8
2IC7	A3
2IC8	A3
2IE0	B2
2IE5	A8
2IE6	B8
2IF0	A2
2IG1	B3
2IJ4	C2
2IJ5	C2
2IJ6	C2
2P00	C1
2P02	C1
2P03	C2
2P04	C2
2P05	C1
2P06	C2
2P07	C2
2P08	C2
2P10	C1
2P13	C1
2P17	C2
2P19	C2
2P20	C2
2P21	C2
2P22	C2
2P26	D1
2P27	D1
2P28	D1
2P34	D2
2P35	D2
2P36	D2
2P37	D2
2P38	D2
2P39	D2
2P40	D2
2P41	C2
2P42	C2
2P44	D2
2P50	C2
2P80	C3
2P81	C3
2P86	D2
2P90	C3
2P98	D2
2P99	D2
2PA4	D3
2PA5	D3
2PA6	D3
2PA7	D3
2PA8	D2
2PB3	D3
2PB4	D3
2PB5	C3
2PB6	D3
2PB7	D3
2PB8	C3
2PB9	D3
2PC0	D3
2PC1	D3
2PC2	C3
2PC3	C3
2PC4	C3
2PC5	C3
2PC6	C3
2PC7	C2
2PC8	C2
2PC9	C3
2PD1	D3
2PD2	D3
2PD3	D3
2PD4	D3
2PD5	D3
2PD6	D3
2PD7	D3
2PD8	D3
2PD9	D3
2PE0	D3
2PE1	D3
2PE2	D3
2PE3	D3
2PE4	C3
2PE5	D3
2PE6	C2
2PE7	D3
2PE8	D3
2PF1	C3
2PF3	D3
2PF8	D3
2PF9	D3
2S03	D4
2S04	D4
2S05	D4
2T12	B2
2U03	F8
2U04	F8
2U05	F8
2U07	F8
2U09	F7
2U11	F7
2U12	F7
2U13	F7
2U14	F8
2U15	F7
2U16	F8
2U17	F7
2U18	F8
2U20	F6
2U21	F8
2U23	F8
2U31	F8
2U32	F8
3003	C7
3006	B2
3011	D6
3012	C6
3018	D6
3019	D6
3020	D6
3021	D6
3024	D6
3025	D7
3026	D7
3027	D6
3033	D7
3035	C5
3039	D7
3047	B7
3058	D6
3059	D6
3065	B6
3066	B6
3068	D6
3073	D6
3074	D6
3075	D6
3076	D6
3077	D6
3078	D6
3080	D6
3084	B6
3089	B6
3090	D6
3091	B6
3099	D6
3301	C4
3302	D5
3304	D5
3306	D4
3317	C4
3318	C5
3320	C5
3321	C5
3322	D4
3329	D4
3330	D5
3332	C5
3335	C5
3336	D4
3340	C4
3341	C4
3342	C4
3343	D4
3344	D4
3345	D4
3346	D4
3347	D4
3348	D4
3349	C5
3353	D4
3361	D5
3363	C5
3370	C4
3371	C4
3372	C4
3373	B5
3374	B5
3375	B5
3376	C5
3377	C5
3379	B5
3381	B5
3387	C5
3388	D4
3390	D4
3393	C5
3394	C5
3395	D5
3396	C5
3397	C5
3398	C5
3399	D4
3400	C5
3402	C4
3404	B4
3406	B5
3409	B5
3411	B5
3412	D5
3416	B4
3418	B5
3423	B4
3433	B5
3436	B4
3437	B5
3439	B4
3442	C4
3443	C4
3444	C4
3447	C4
3448	C4
3449	C5
3460	C5
3461	C5
3462	C5
3472	D4
3473	C5
3474	C4
3475	C4
3476	C4
3713	D5
3714	D6
3715	D5
3716	D6
3717	D6
3718	D5
3719	E6
3720	E6
3725	E6
3726	E5
3727	E6
3728	E5
3730	E5
3736	E6
3737	E6
3738	E6
3739	E6
3740	E7
3741	E7
3742	E7
3743	E7
3744	E6
3745	E6
3746	E7
3747	E6
3748	E6
3749	E6
3750	E7
3751	E6
3752	E6
3753	E6
3754	E6
3755	E6
3756	E6
3760	E6
3762	E7
3763	E7
3772	C8
3773	E7
3774	E7
3781	E7
3782	E7
3783	E7
3793	E6
3800	C7
3801	B7
3802	B7
3803	C7
3811	C7
3812	C7
3814	C7
3815	C7
3817	B7
3818	C7
3819	B7
3820	C7
3821	C7
3822	C7
3823	C7
3824	C7
3825	C7
3826	B7
3827	B7
3829	C8
3833	E6
3835	F6
3836	E7
3838	D8
3839	E7
3840	D7
3841	C8
3842	C7
3843	D6
3844	E6
3A00	D5
3A01	E5
3A02	E5
3A03	D4
3A05	F5
3A06	F5
3A08	E5
3A09	D5
3A11	E5
3A12	E5
3A13	E4
3A14	E4
3A15	E5
3A16	E5
3A18	E4
3A20	E4
3A21	E4
3A22	E4
3A23	E4
3A25	E4
3A26	E4
3A27	E4
3A28	E4
3A29	E4
3A31	E5
3A32	E4
3A33	E4
3A34	F4
3A36	F4
3A37	F5
3A39	F5
3A3A	F5
3A3B	F5
3A3C	E4
3A3D	E4
3A3E	E4
3A3F	E4
3A40	E4
3A41	E4
3A42	E4
3A43	F5
3A44	F5
3A50	D4
3A54	E4
3A66	E4
3A70	F5
3A71	F5
3A74	E3
3A81	F3
3A82	F3
3A83	F3
3AA0	E5
3AA1	E5
3AA4	E4
3AA5	F4
3AA6	E5
3AA7	F4
3AA9	F4
3AB0	F4
3AB2	E4
3AB3	F4
3AB5	F4
3AB6	E4
3AB7	F4
3AB8	E4
3AB9	E4
3AC8	E5
3C01	B6
3C03	B6
3C06	B6
3C07	B5
3C08	B6
3C09	D6
3H06	E1
3H07	F2
3H20	E2
3H21	E2
3H23	E2
3H25	F2
3H27	F1
3H28	F2
3H29	F1
3H30	F2
3H31	F1
3H32	F1
3H33	F1
3H36	F2
3H37	E2
3H38	E2
3H39	E2
3H41	E2
3H48	E1
3H49	E1
3H68	E3
3H69	E2
3H70	E2
3H75	E2
3H76	E2
3H80	E2
3H81	E2
3H83	E2
3H84	E2
3H85	E2
3H92	E2
3H93	E3
3H94	E2
3H95	E2
3H96	F2
3H98	E2
3HA1	E1
3HA2	E1
3HA3	E1
3HA4	E1
3HA5	E1
3HA6	E1
3HA7	E1
3HA8	E2
3HA9	E1
3HB1	E1
3HB2	E1
3HB3	E2
3HB4	E1
3HB5	E2
3HB6	E2
3HB7	E2
3HB9	E2
3HE1	E2
3HE2	E2
3HE3	E2
3HE4	E2
3HE5	E2
3HE6	E2
3HE7	E2
3HE8	E2
3HE9	E2
3HF1	E2
3HF2	E2
3HF3	E3
3HF4	E2
3HF5	E3
3HF6	E3
3HF7	E3
3HF8	E3
3HF9	E2
3HG1	E2
3HG2	E2
3HH1	E1
3HH2	E2
3HH5	F2
3HH6	F2
3HH7	F2
3HH8	F2
3HH9	F2
3HI1	F2
3HI2	F2
3I01	B3
3I02	B3
3I04	B3
3I05	B3
3I06	B2
3I08	C3
3I09	B3
3I10	B3
3I11	B3
3I12	B3
3I15	B3
3I16	B3
3I17	B3
3I18	B3
3I21	B3
3I22	B3
3I23	B3
3I24	B3
3I25	B3
3I94	A8
3I95	A8
3I99	A8
3IA4	A5
3IA5	A5
3IA6	A8
3IA7	A8
3IA8	A8
3IA9	A8
3IB0	A8
3IC0	A2
3IC9	A2
3ID3	A2
3IG7	A8
3IG8	A7
3IG9	A7
3IH0	A7
3IH1	B8
3IH2	B8
3IH3	B8
3IH4	B8
3II8	B2
3II9	B2
3IJ0	A3
3IJ1	A3
3IK0	B2
3IK8	B3
3IL0	B4
3IL1	B4
3IL2	B4
3IL3	B5
3IL4	B5
3IL5	B4
3IL6	B4
3IM4	B5
3IM5	B5
3IM6	B5
3IM7	B5
3IM8	B5
3IM9	B5
3IN0	B5
3IN4	A4
3IN7	A5
3IP0	B3
3IP2	C2
3IP3	A5
3IP4	C2
3IP5	B3
3IP6	B3
3IP7	B3
3IP9	A3
3IQ0	A5
3IQ1	A5
3IS0	A3
3IS1	A3
3IS8	A2
3IS9	A2
3IT1	A8
3IT3	A8
3IT4	A8
3IT5	A3
3IT6	A3
3P00	C1
3P01	D2
3P02	D2
3P07	C2
3P08	C2
3P10	C1
3P17	C2
3P18	C2
3P19	C2
3P20	C2
3P25	C2
3P26	C2
3P27	C2
3P28	C1
3P29	D2
3P30	D1
3P34	D1
3P35	D1
3P41	D2
3P42	D2
3P43	D2
3P44	D1
3P61	C3
3P77	D2
3P78	D2
3P90	C2
3P91	C2
3P93	C3
3PA0	D3
3PA1	D2
3PA2	D2
3PA3	D3
3PA4	D3
3PA5	C2
3PA6	D3
3PA7	D3
3PA8	D3
3PA9	D3
3PB0	D2
3PB1	D2
3PB2	D2
3PB3	D3
3PB4	D2
3PB5	D3
3PB6	D3
3PB7	D2
3PB8	C2
3PB9	D2
3PC1	D3
3PC2	D3
3PC3	D3
3PC4	D3
3PC6	D3
3PC7	C3
3PC8	D3
3PC9	D3
3PD0	D3
3PD1	D3
3PD2	D3
3PD3	C2
3PD4	C2
3PD5	C3
3PD6	C2
3PD8	D2
3PD9	D3
3PE0	D2
3PE1	D2
3PE2	D3
3PE3	D2
3PE4	D2
3PE5	D2
3PE9	D3
3PF0	D3
3PF1	C2
3PF2	D3
3PF3	C2
3PF4	D3
3PF6	D3
3PF7	D3
3PF8	D3
3PF9	D3
3PG0	D3
3PG2	D2
3PG3	D3
3PG4	D3
3PG5	C3
3PG6	D3
3PH2	D3
3PH3	C3
3PH4	C2
3PH8	D3
3S01	D4
3S02	D4
3S03	D4
3S04	D4
3S05	D4
3S06	D4
3S07	D4
3S08	D4
3S09	D4
3S10	D4
3T05	B2
3T06	B2
3U01	F7
3U02	F8
3U03	F8
3U04	F8
3U05	F8
3U06	F7
3U07	F7
3U08	F7
3U09	F8
3U10	F7
3U11	F8
3U13	F7
3U14	F8
3U15	F7
3U16	F7
3U17	F7
3U18	F7
3U19	F7
3U20	F7
3U21	F6
3U22	F7
3U23	F7
3U25	F6
3U26	F6
3U28	F7
3U29	F8
3U30	F8
3U31	F8
3U34	F6
3U46	F7
3U51	F8
5301	C5
5302	C5
5303	B6
5306	B6
5307	B6
5309	B5
5310	B5
5311	B5
5316	B4
5317	B4
5403	B5
5405	C5
5406	B4
5411	B5
5416	B4
5705	B7
5706	E7
5710	E5
5716	E7
5718	D7
5719	D7
5721	C8
5722	C7
5723	C8
5724	C7
5725	C7
5727	C8
5728	B8
5731	E7
5733	F5
5736	E6
5737	E7
5742	D6
5743	B8
5744	F5
5745	D6
5746	F6
5747	F6
5748	C8
5749	C8
5750	C7
5751	C7
5752	B8
5753	D8
5754	E5
5756	F6
5757	B8
5759	F6
5A00	D5
5A01	F4
5A03	D4
5A06	F4
5A16	E4
5A17	E4
5A18	E4
5A19	E5
5A23	E4
5A24	E4
5A37	D4
5A38	F3
5A39	F3
5A40	E3
5A41	E3
5A60	E4
5A61	F5
5A62	F4
5A63	F4
5A67	E5
5H12	E1
5H13	E2
5H16	E2
5H17	E3
5H18	E1
5I00	A8
5I01	C2
5P00	C1
5P01	C1
5P02	C2
5P03	C1
5P04	C2
5P06	C1
5P07	C2
5P51	C2
5PA0	C3
5PA1	C3
5PA2	C3
5PA3	C3
5PA4	D3
5PA5	D3
5PA6	D3
5PA7	D3
5PA8	D3
5PB0	C3
5S01	D4
5T02	B2
5U01	F8
5U02	F7
5U03	F7
5U04	F7
5U05	F8
5U06	F8
6001	D7
6003	D7
6301	C4
6309	D5
6310	D4
6311	D4
6316	D4
6319	D5
6404	B5
6833	E6
6835	F6
6836	E7
6838	D8
6839	E7
6840	D7
6841	C8
6842	C7
6843	D6
6844	E6
6A00	D4
6H10	E2
6H11	E2
6I00	A7
6I01	A7
6I10	A3
6I11	A3
6I12	A4
6I13	A4
6I14	A4
6I15	A4
6I16	A3
6I17	A3
6I18	A4
6I19	A4
6I20	A4
6I21	A4
6I22	A5
6I23	A5
6I24	A5
6I25	A5
6I26	A6
6I27	A6
6I28	A6
6I29	A6
6I32	A5
6I33	A5
6I35	A6
6I36	A6
6I37	A5
6I38	A5
6I41	A5
6I42	A6
6I43	A6
6I44	A6
6I45	A5
6I46	A5
6I47	A5
6I48	A6
6I50	A6
6I51	A6
6I75	A2
6I76	A2
6I77	A2
6I78	A2
6I79	A2
6IA0	A5
6IA1	A3
6IA2	A3
6IA3	A3
6IA4	A3
6ID4	B8
6ID5	A8
6ID7	B8
6ID8	A8
6P02	C2
6P03	C2
6PA0	D3
6PA1	D2
6PA2	D3
6PB2	D3
6PB3	C3
6PB4	C2
6PB8	D3
6U01	F7
6U03	F8
6U04	F8
6U05	F8
6U06	F7
6U07	F7
6U08	F7
6U09	F7
7001	C6
7005	B7
7006	B6
7008	D7
7009	D7
7010	D7
7013	C6
7014	B6
7017	B6
7018	B6
7019	B6
7304	C5
7320	C4
7323	C4
7340	D4
7361	D5
7362	D5
7402	B4
7405	B5
7408	C4
7409	C4
7411	B4
7413	C5
7414	C5
7415	C4
7706	E8
7707	E6
7708	E6
7709	E6
7710	E7
7711	E6
7715	E6
7717	E8
7719	D8
7720	B8
7723	C7
7725	E6
7727	D7
7734	E6
7735	E6
7A00	E5
7A01	D5
7A02	E5
7A03	E4
7A08	E4
7A09	E4
7A10	D4
7A61	E4
7A62	E4
7A63	F5
7H40	E2
7H41	E1
7H42	E1
7H43	E1
7H60	E2
7H61	E2
7H62	E2
7H63	E2
7H64	E1
7H77	E2
7H78	E2
7H79	F1
7H80	F1
7H83	F2
7H84	F2
7H96	E2
7H97	F1
7I01	A5
7I02	A8
7I03	A8
7I04	A8
7I08	A2
7I13	A8
7I14	A8
7I15	B8
7I16	A8
7I17	A3
7I18	B2
7I24	B3
7I26	B4
7I27	B5
7I30	B5
7I31	B5
7I35	C3
7I36	C3
7I37	C3
7I38	A5
7P00	C2
7P02	C2
7P05	C2
7P08	D1
7P09	D2
7P10	D2
7P50	D2
7P57	C3
7PA0	D3
7PA1	D3
7PA2	D2
7PA3	D2
7PA4	D3
7PA5	D2
7PA6	C3
7PA7	D3
7PA8	C3
7PA9	D3
7PB0	C2
7PB1	C2
7PB2	D3
7PB3	D2
7PB4	D2
7PB6	D2
7T01	B2
7U01	F8
7U02	F8
7U03	F7
7U04	F7
7U05	F7
7U06	F7
7U08	F7
7U09	F7
7U10	F6
7U11	F6
7U12	F7
9016	D6
9017	B7
9018	B7
9302	D5
9303	D5
9304	D5
9305	D5
9314	C5
9315	C5
9322	C4
9408	B4
9412	B4
9414	B4
9416	B4
9417	B4
9419	B4
9422	B4
9700	E6
9703	E6
9705	E7
9706	E7
9714	E7
9715	E7
9718	C8
9719	C8
9720	E7
9721	D8
9727	D8
9728	D8
9729	E7
9730	E5
9731	E5
9736	E6
9737	E6
9738	E6
9740	E7
9741	E7
9744	B8
9745	B8
9746	B8
9747	B8
9750	E7
9762	C8
9763	C8
9764	C7
9765	D7
9766	B7
9A04	D5
9A05	D5
9A06	D5
9A38	F3
9A60	E5
9A61	E5
9A65	E4
9C00	B6
9I08	C3
9I10	B2
9I12	C3
9I14	A5
9I17	C3
9I19	A3
9I26	B5
9I27	B5
9I32	B2
9I33	B3
9I34	B2
9I35	B2
9I36	B2
9I37	B2
9I42	A3
9I43	B2
9I49	A3
9I75	B5
9I76	B5
9I78	B5
9I80	B5
9I84	B5
9I86	B5
9I97	C3
9P01	C2
9P02	C2
9P03	C2
9P06	C1
9P08	C1
9P13	D2
9P14	C1
9P15	C2
9P19	C1
9P26	C2
9P27	C2
9P29	C2
9P70	C3
9PA0	D3
9PA1	D3
9PA2	D3
9PA3	D2
9PA4	D3
9PA5	C3
9PA6	D3
9PA7	C2
9PA8	C3
9PB1	D2
9PB2	C3
9PB3	D2
9PB4	D3
9PB5	D2
9S01	C4
9S02	C4
9S03	C4
9S04	C4
9S05	C4
9S06	C4
9S07	B4
9S08	B4
9S09	C4
9S10	C4
9S11	B4
9S12	D4
9S13	D4
9S14	D4
9S15	D4
9S16	C4
9S17	B4
9S18	C4
9S19	C4
9S20	C4
9S21	C4
9S22	C4
9S23	C4
9S24	C4
9S25	C4
9S26	C4
9S27	C4
9S28	C4
9S29	D4
9S30	B4
9S66	F1
9S67	F1
9S68	E1
9S69	E1
9T07	B2
9T08	A2
9T11	B2
9T12	B2
9T13	A2
9U01	F6
9U02	F6
9U03	F6
9U04	F6
9U05	F6
9U06	F6
9U07	F6
9U08	F6

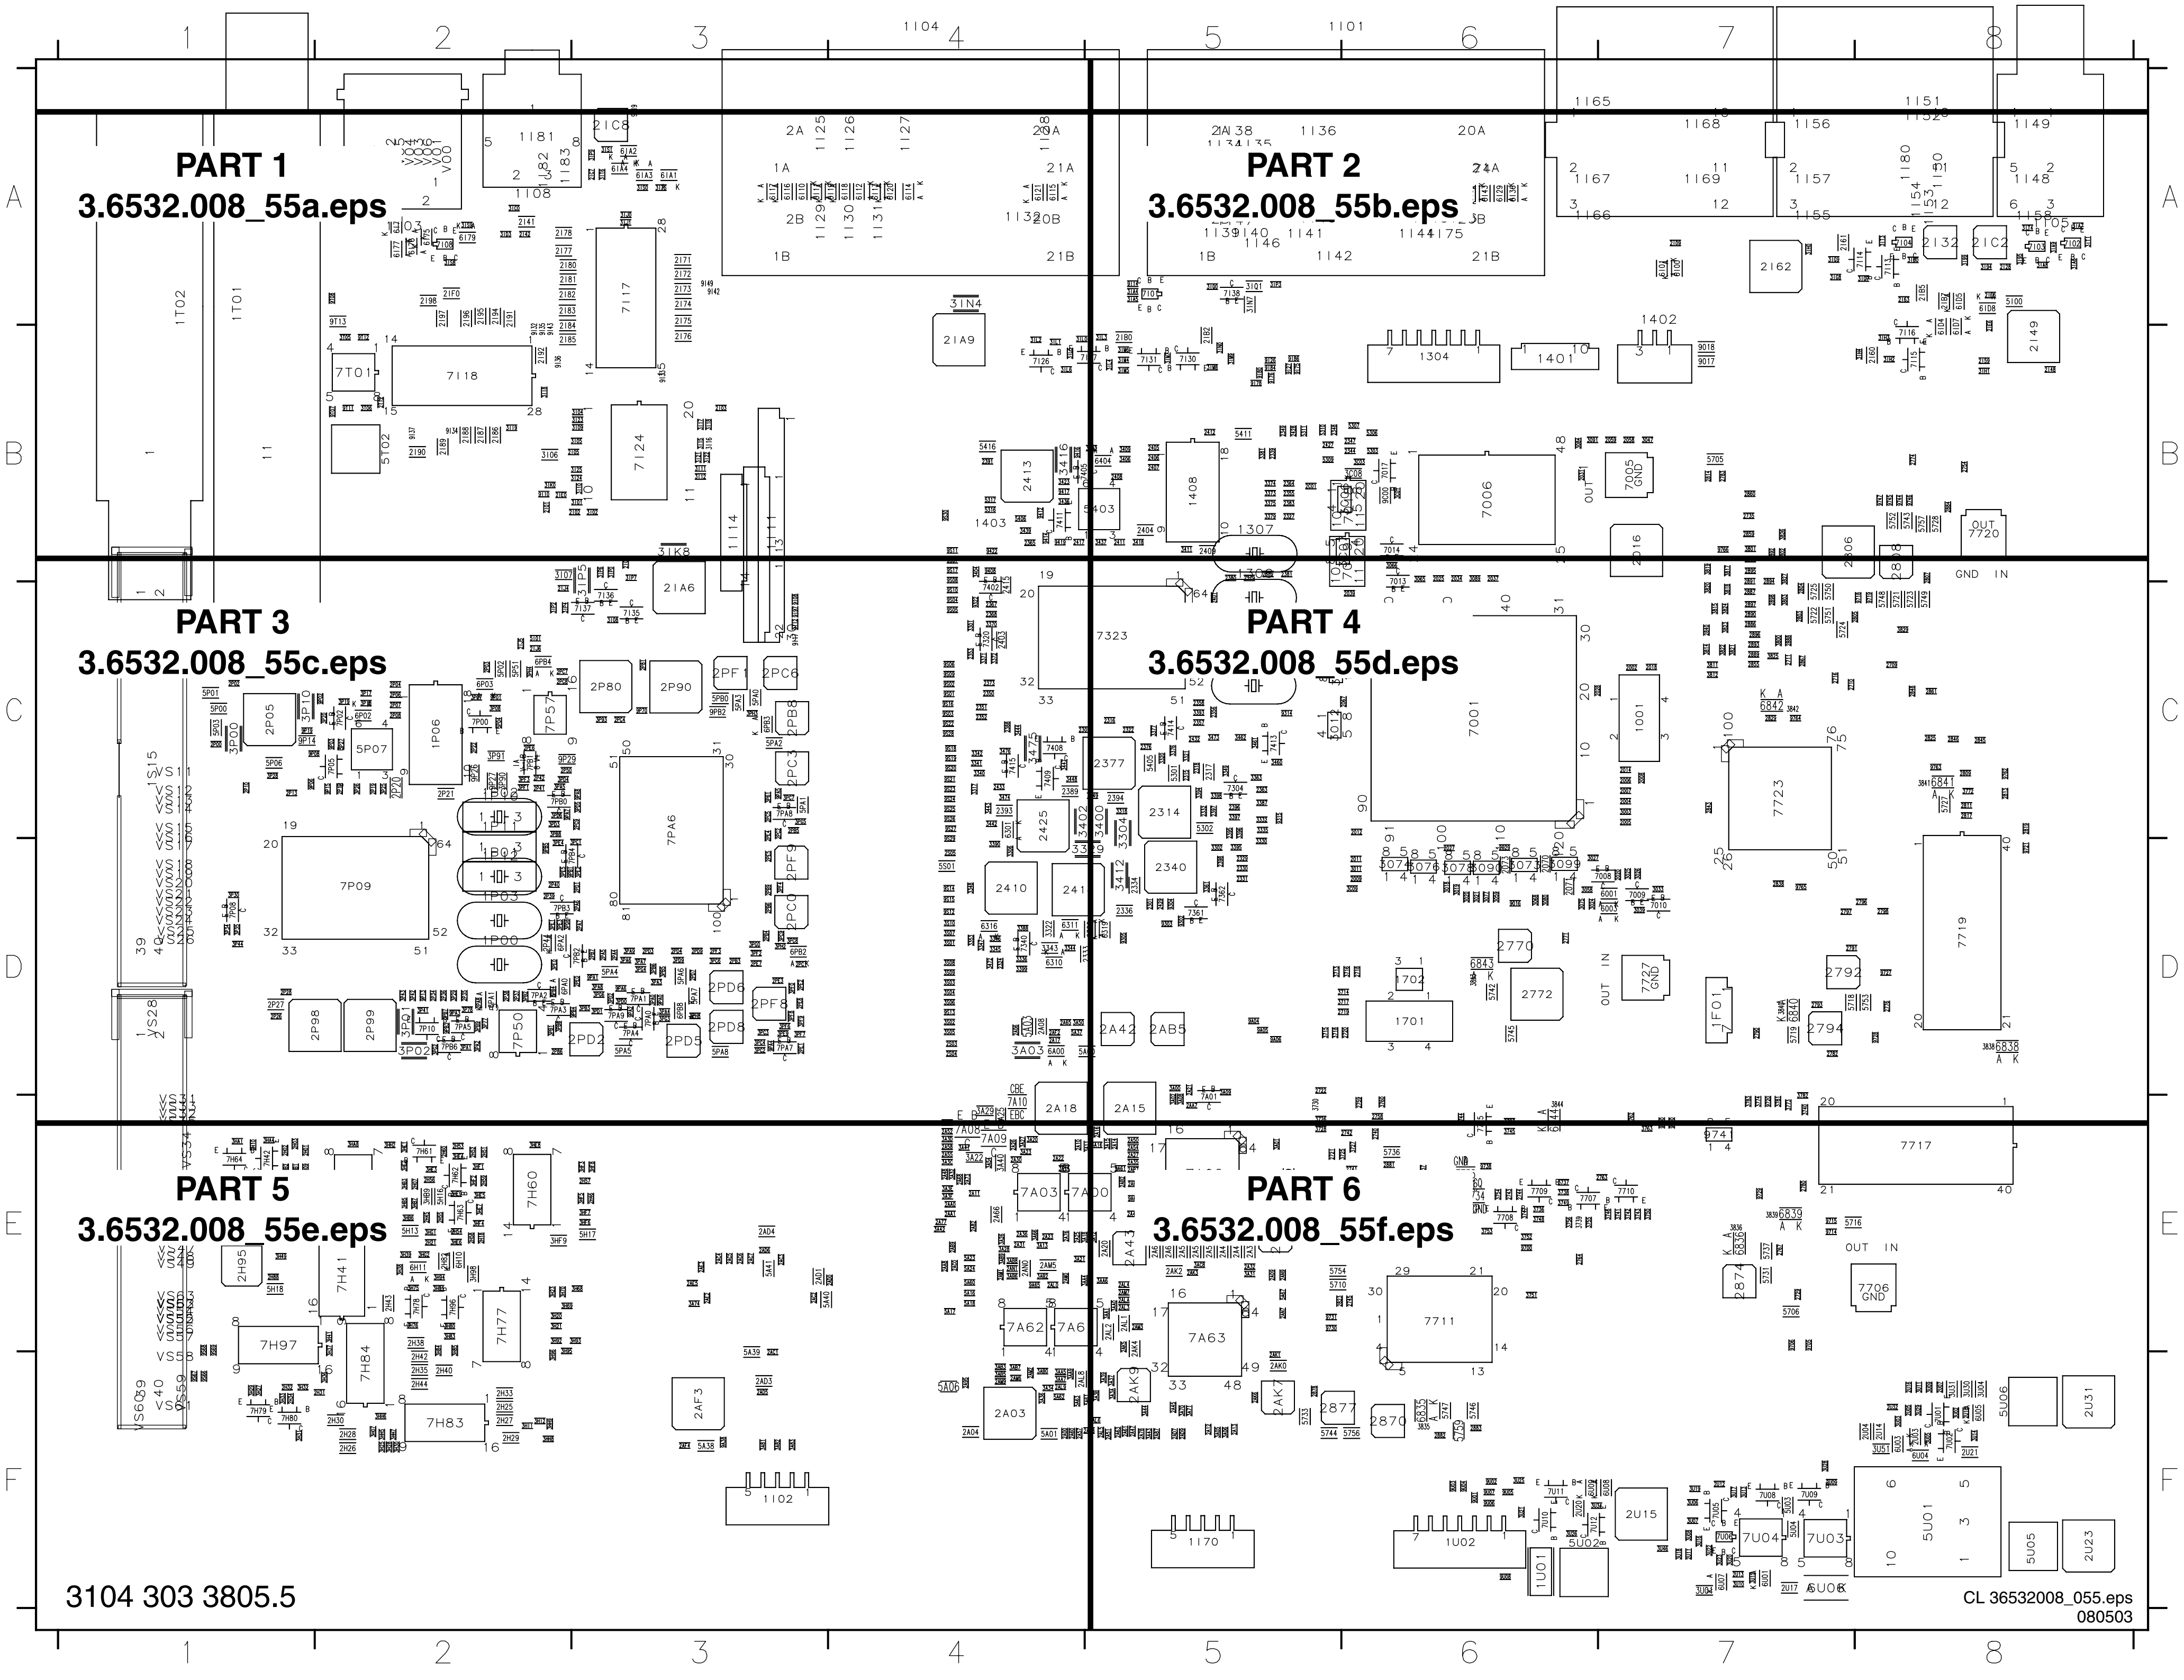

Layout Small Signal Board (Part 1 Top Side)

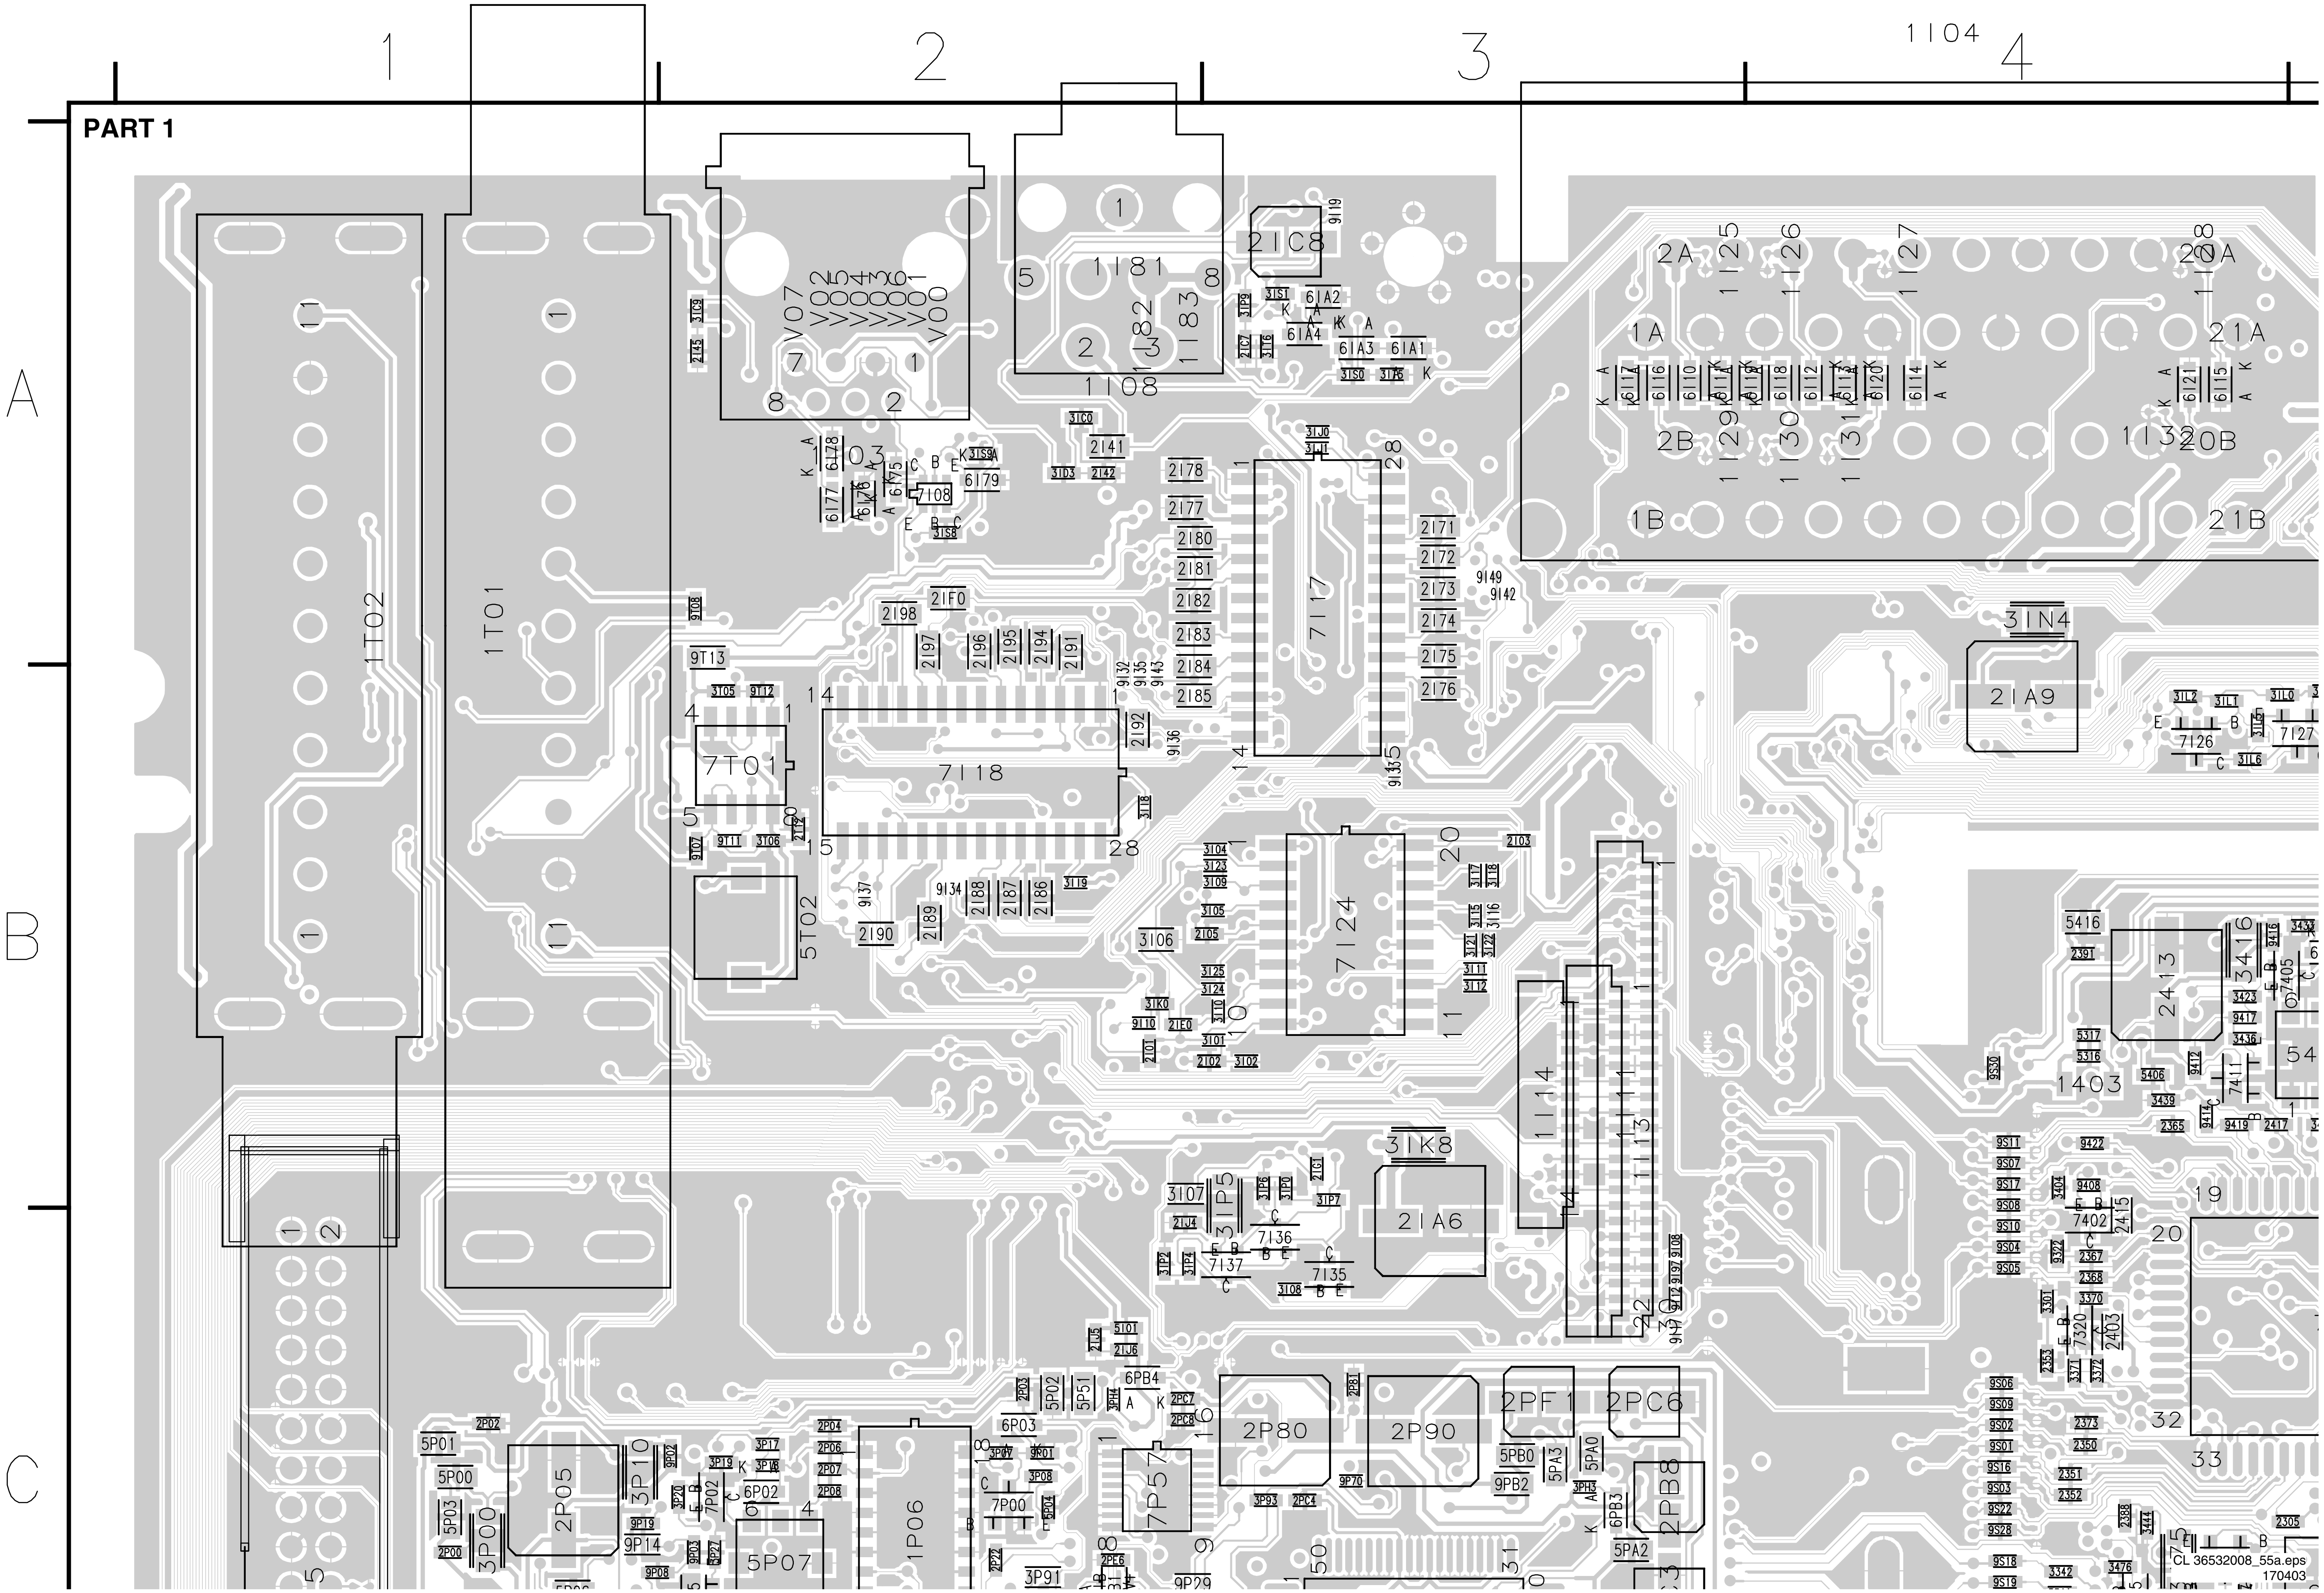


Layout Small Signal Board (Part 2 Top Side)

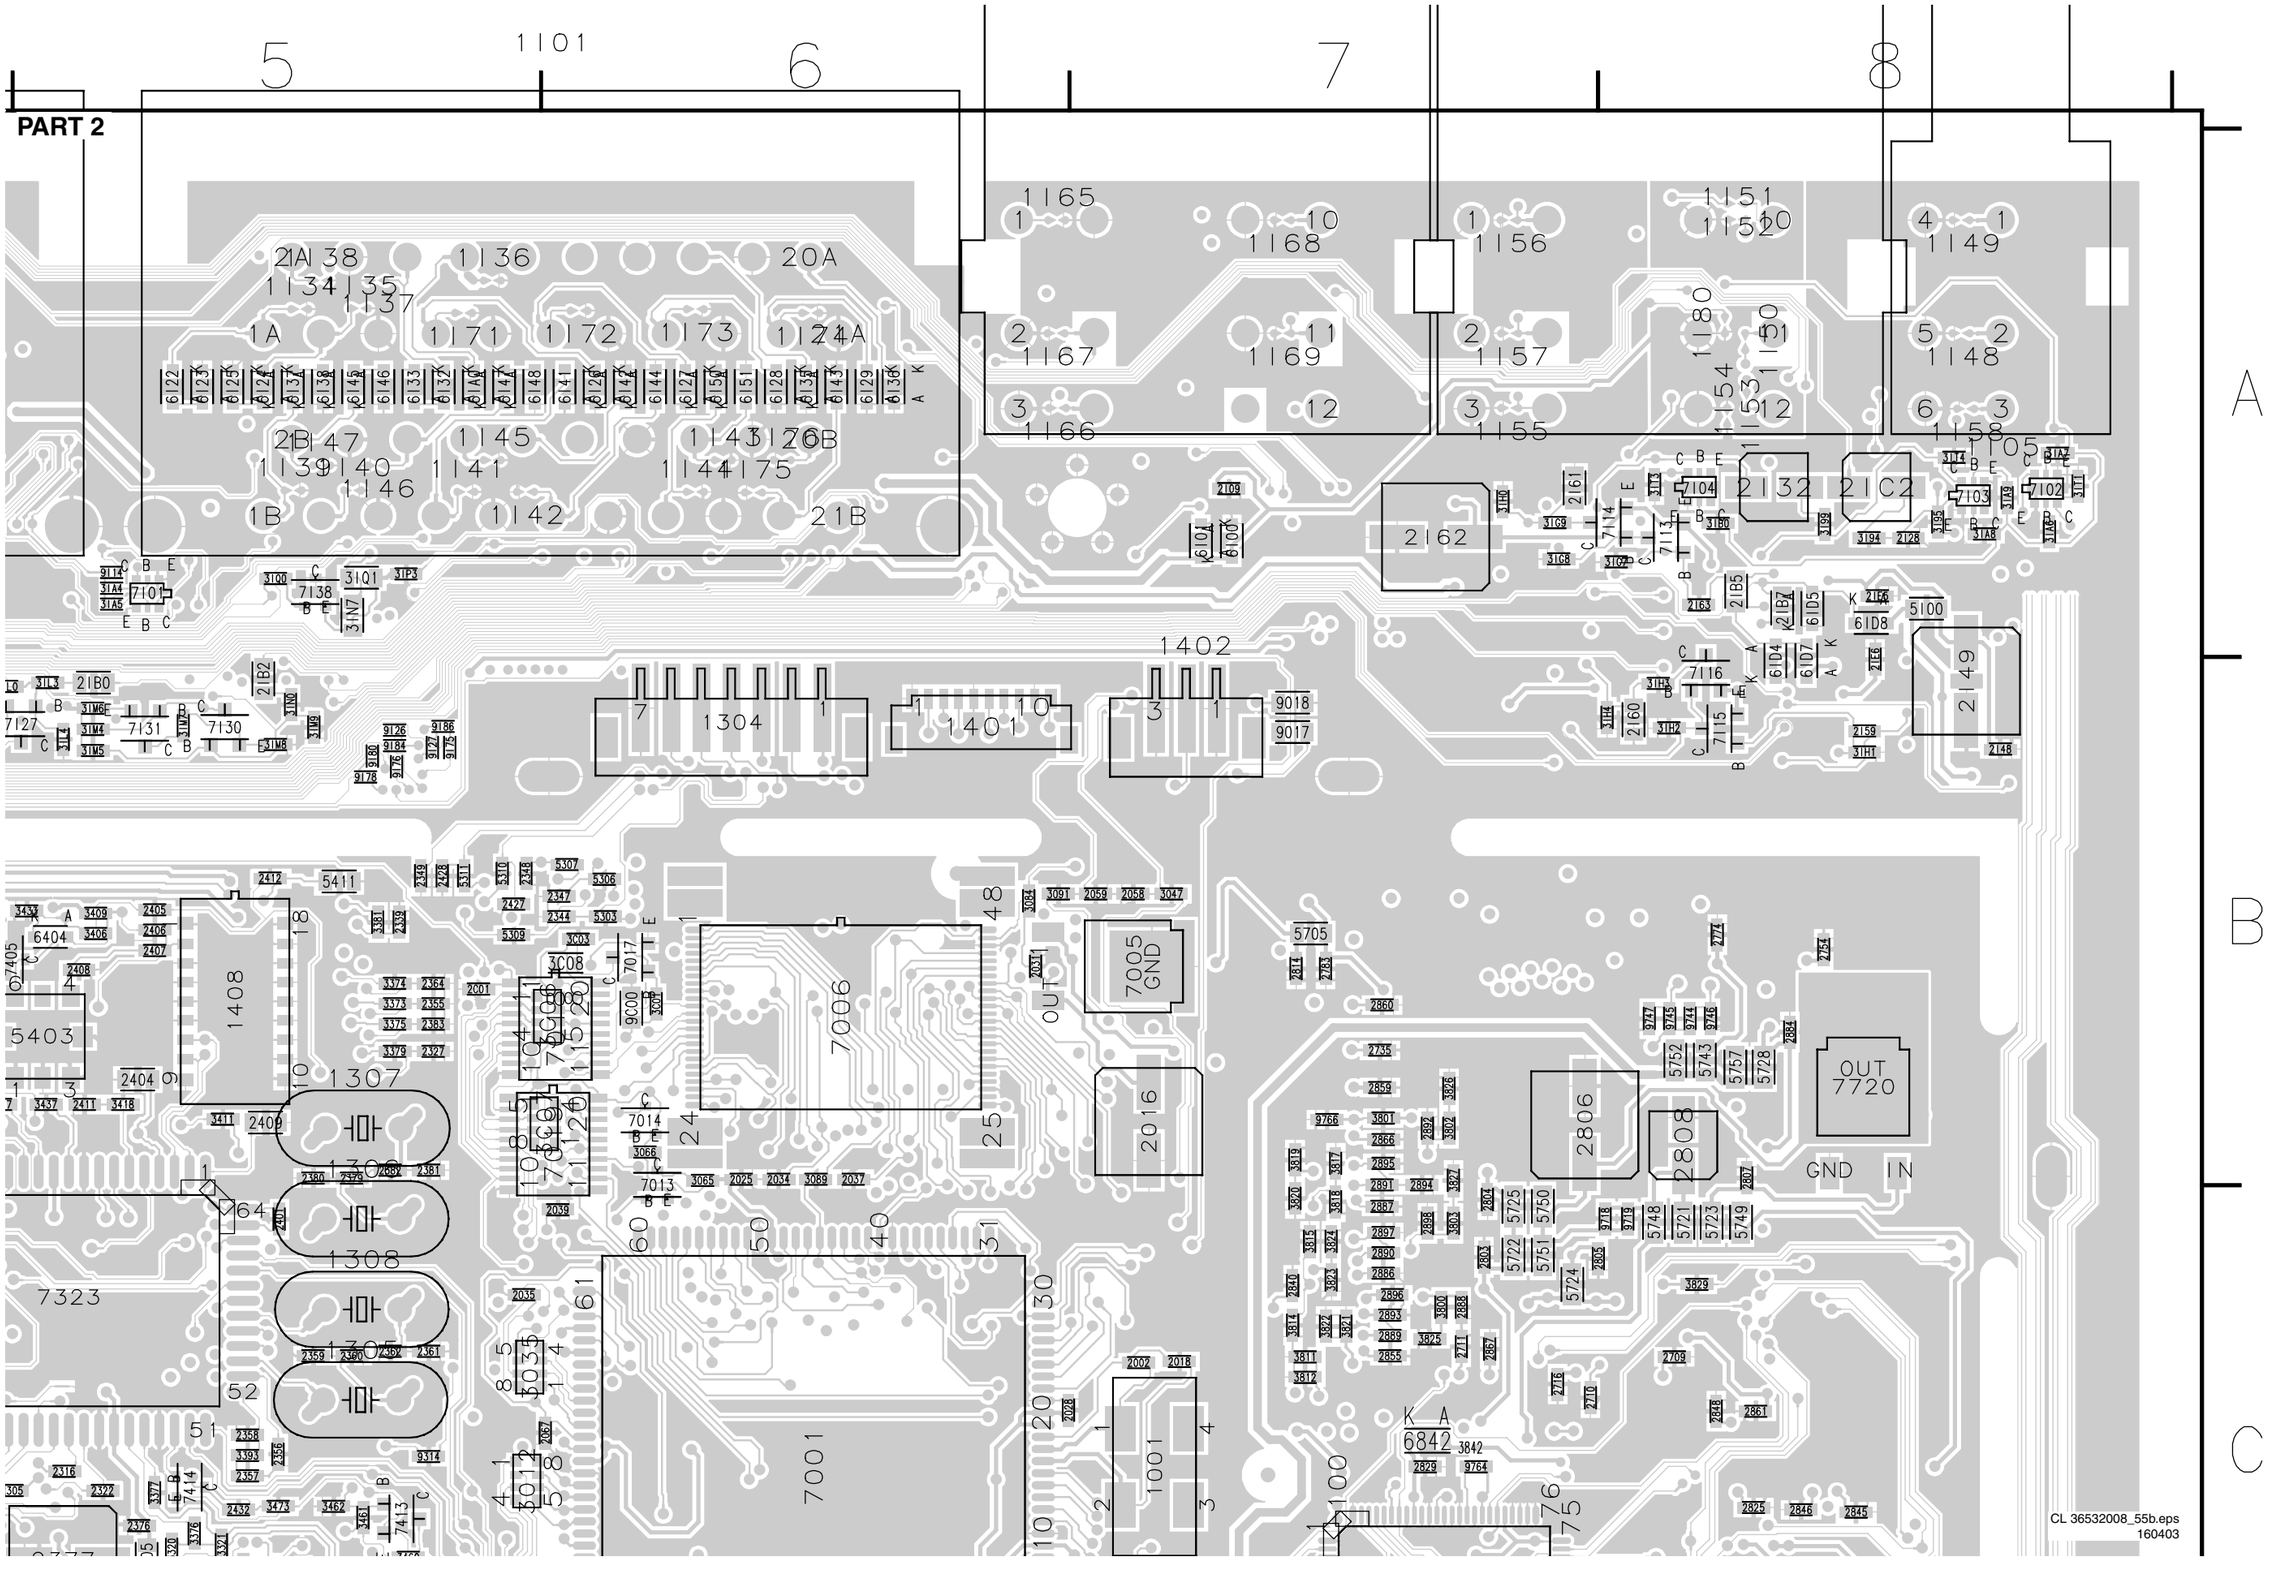


CL 36532008_55b.eps
160403

Layout Small Signal Board (Part 3 Top Side)

PART 3

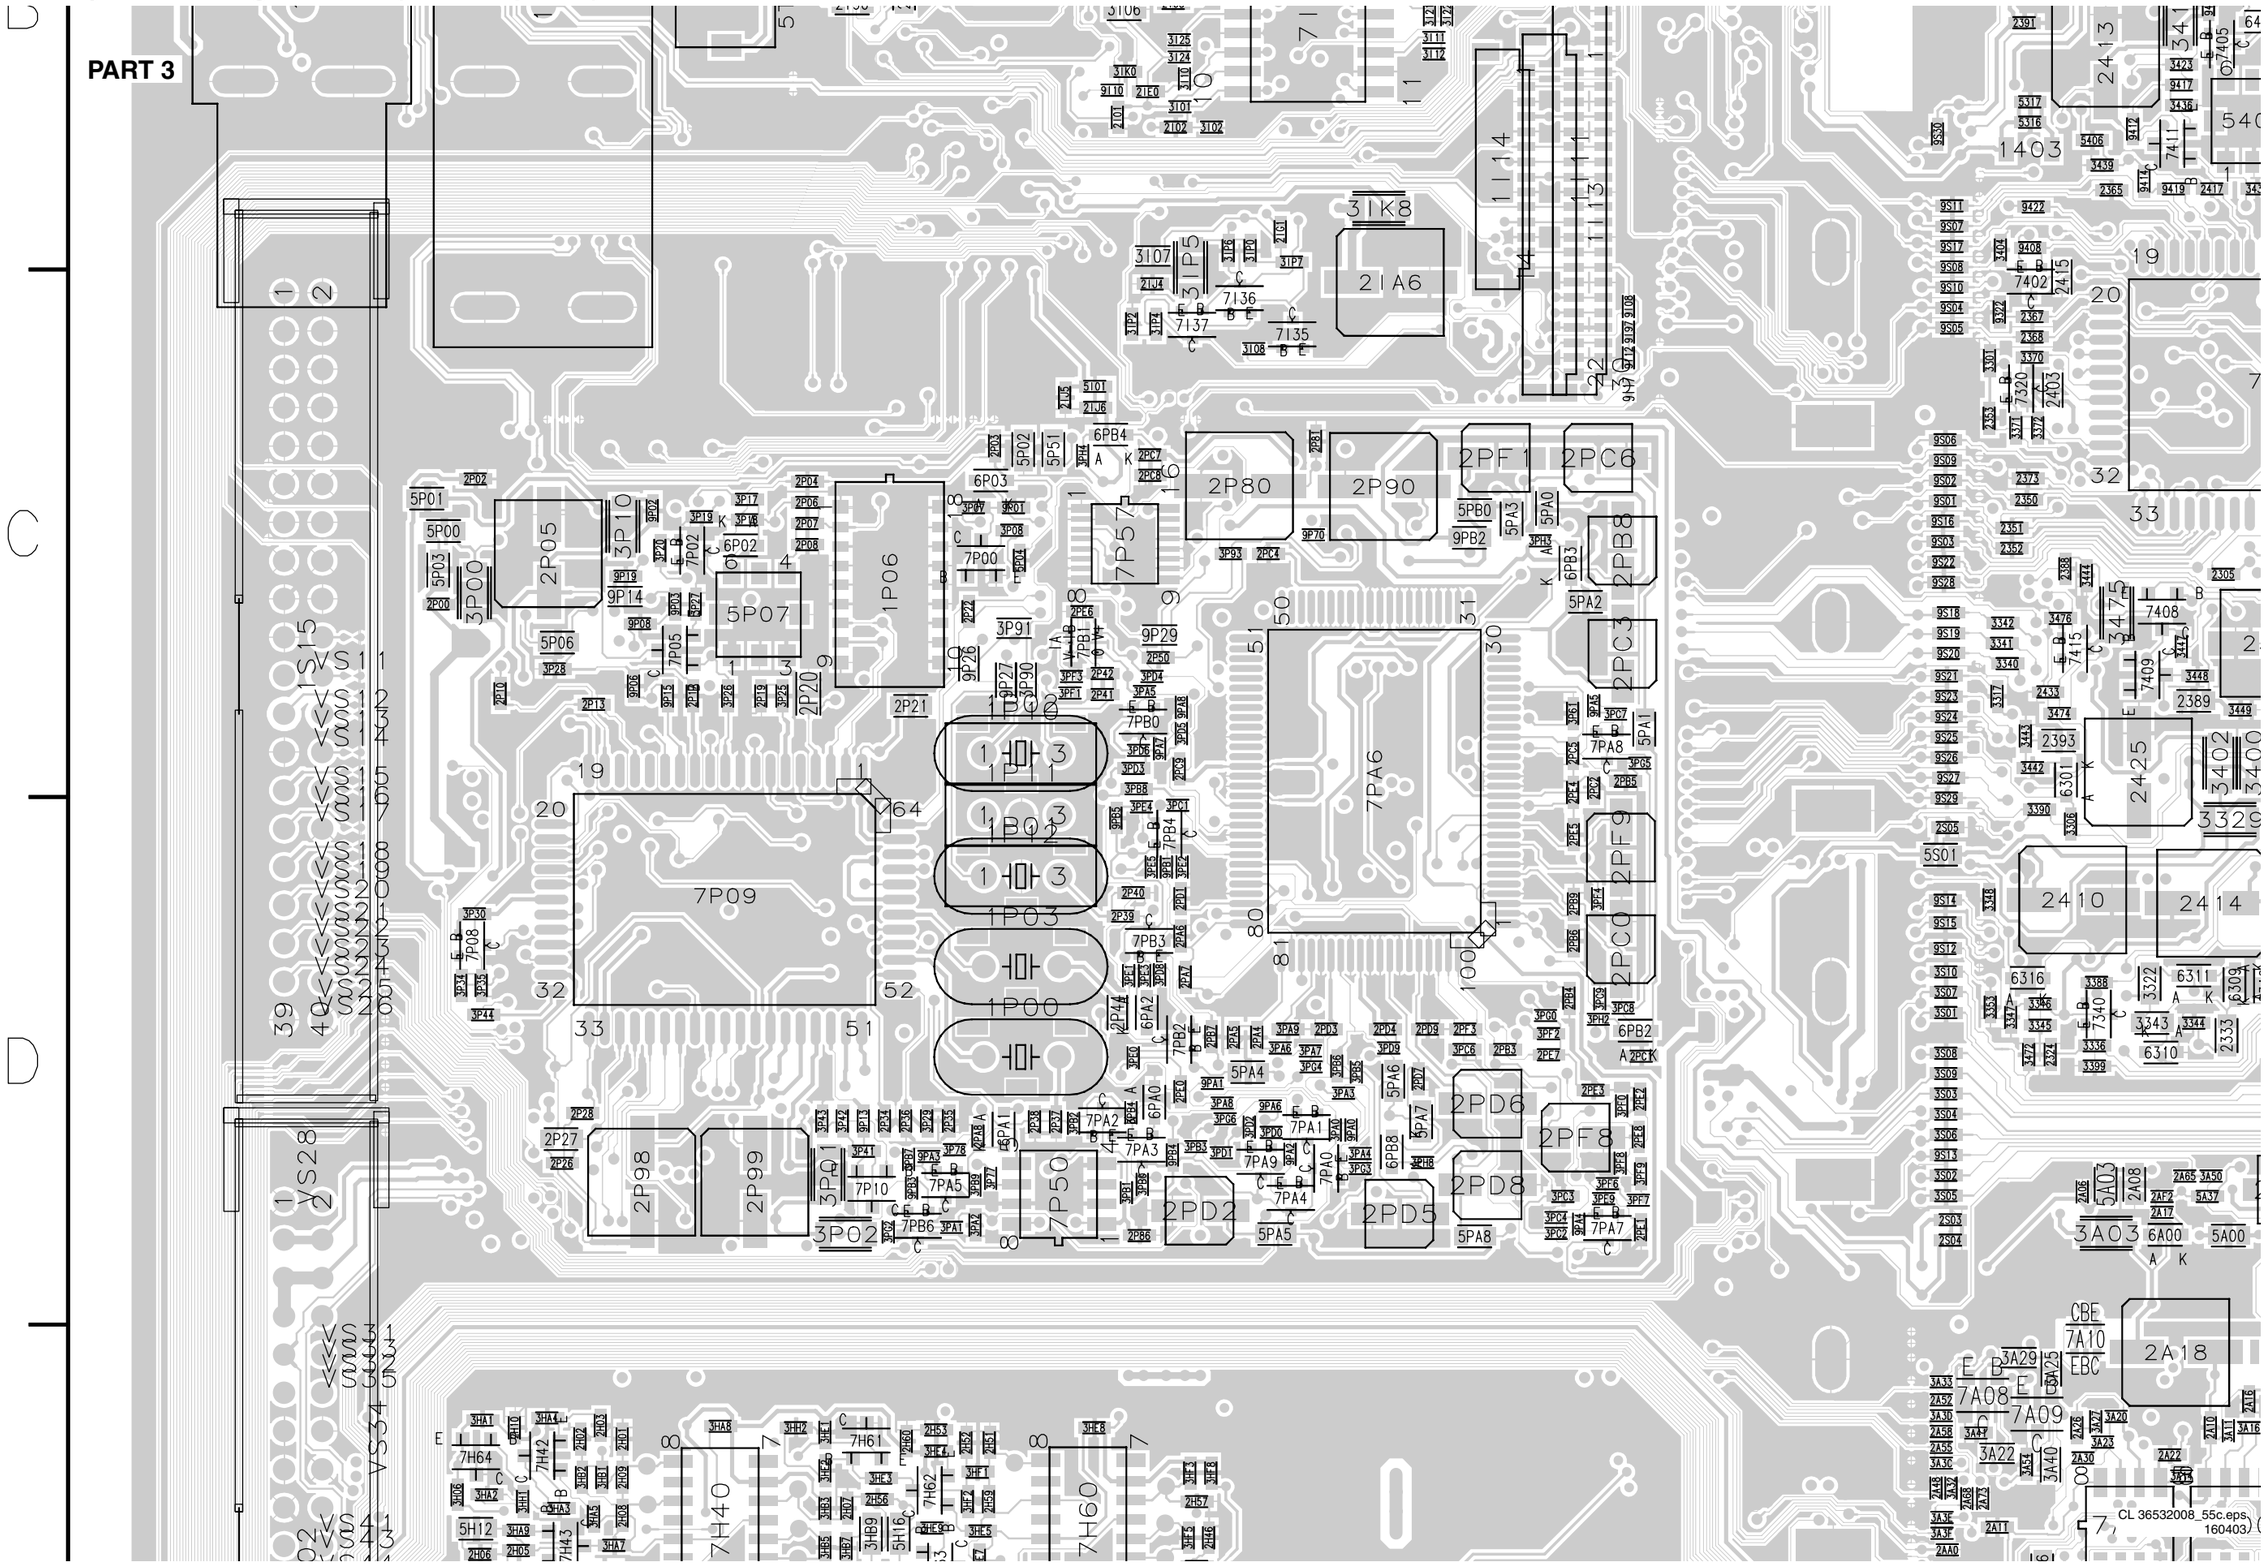

Layout Small Signal Board (Part 4 Top Side)

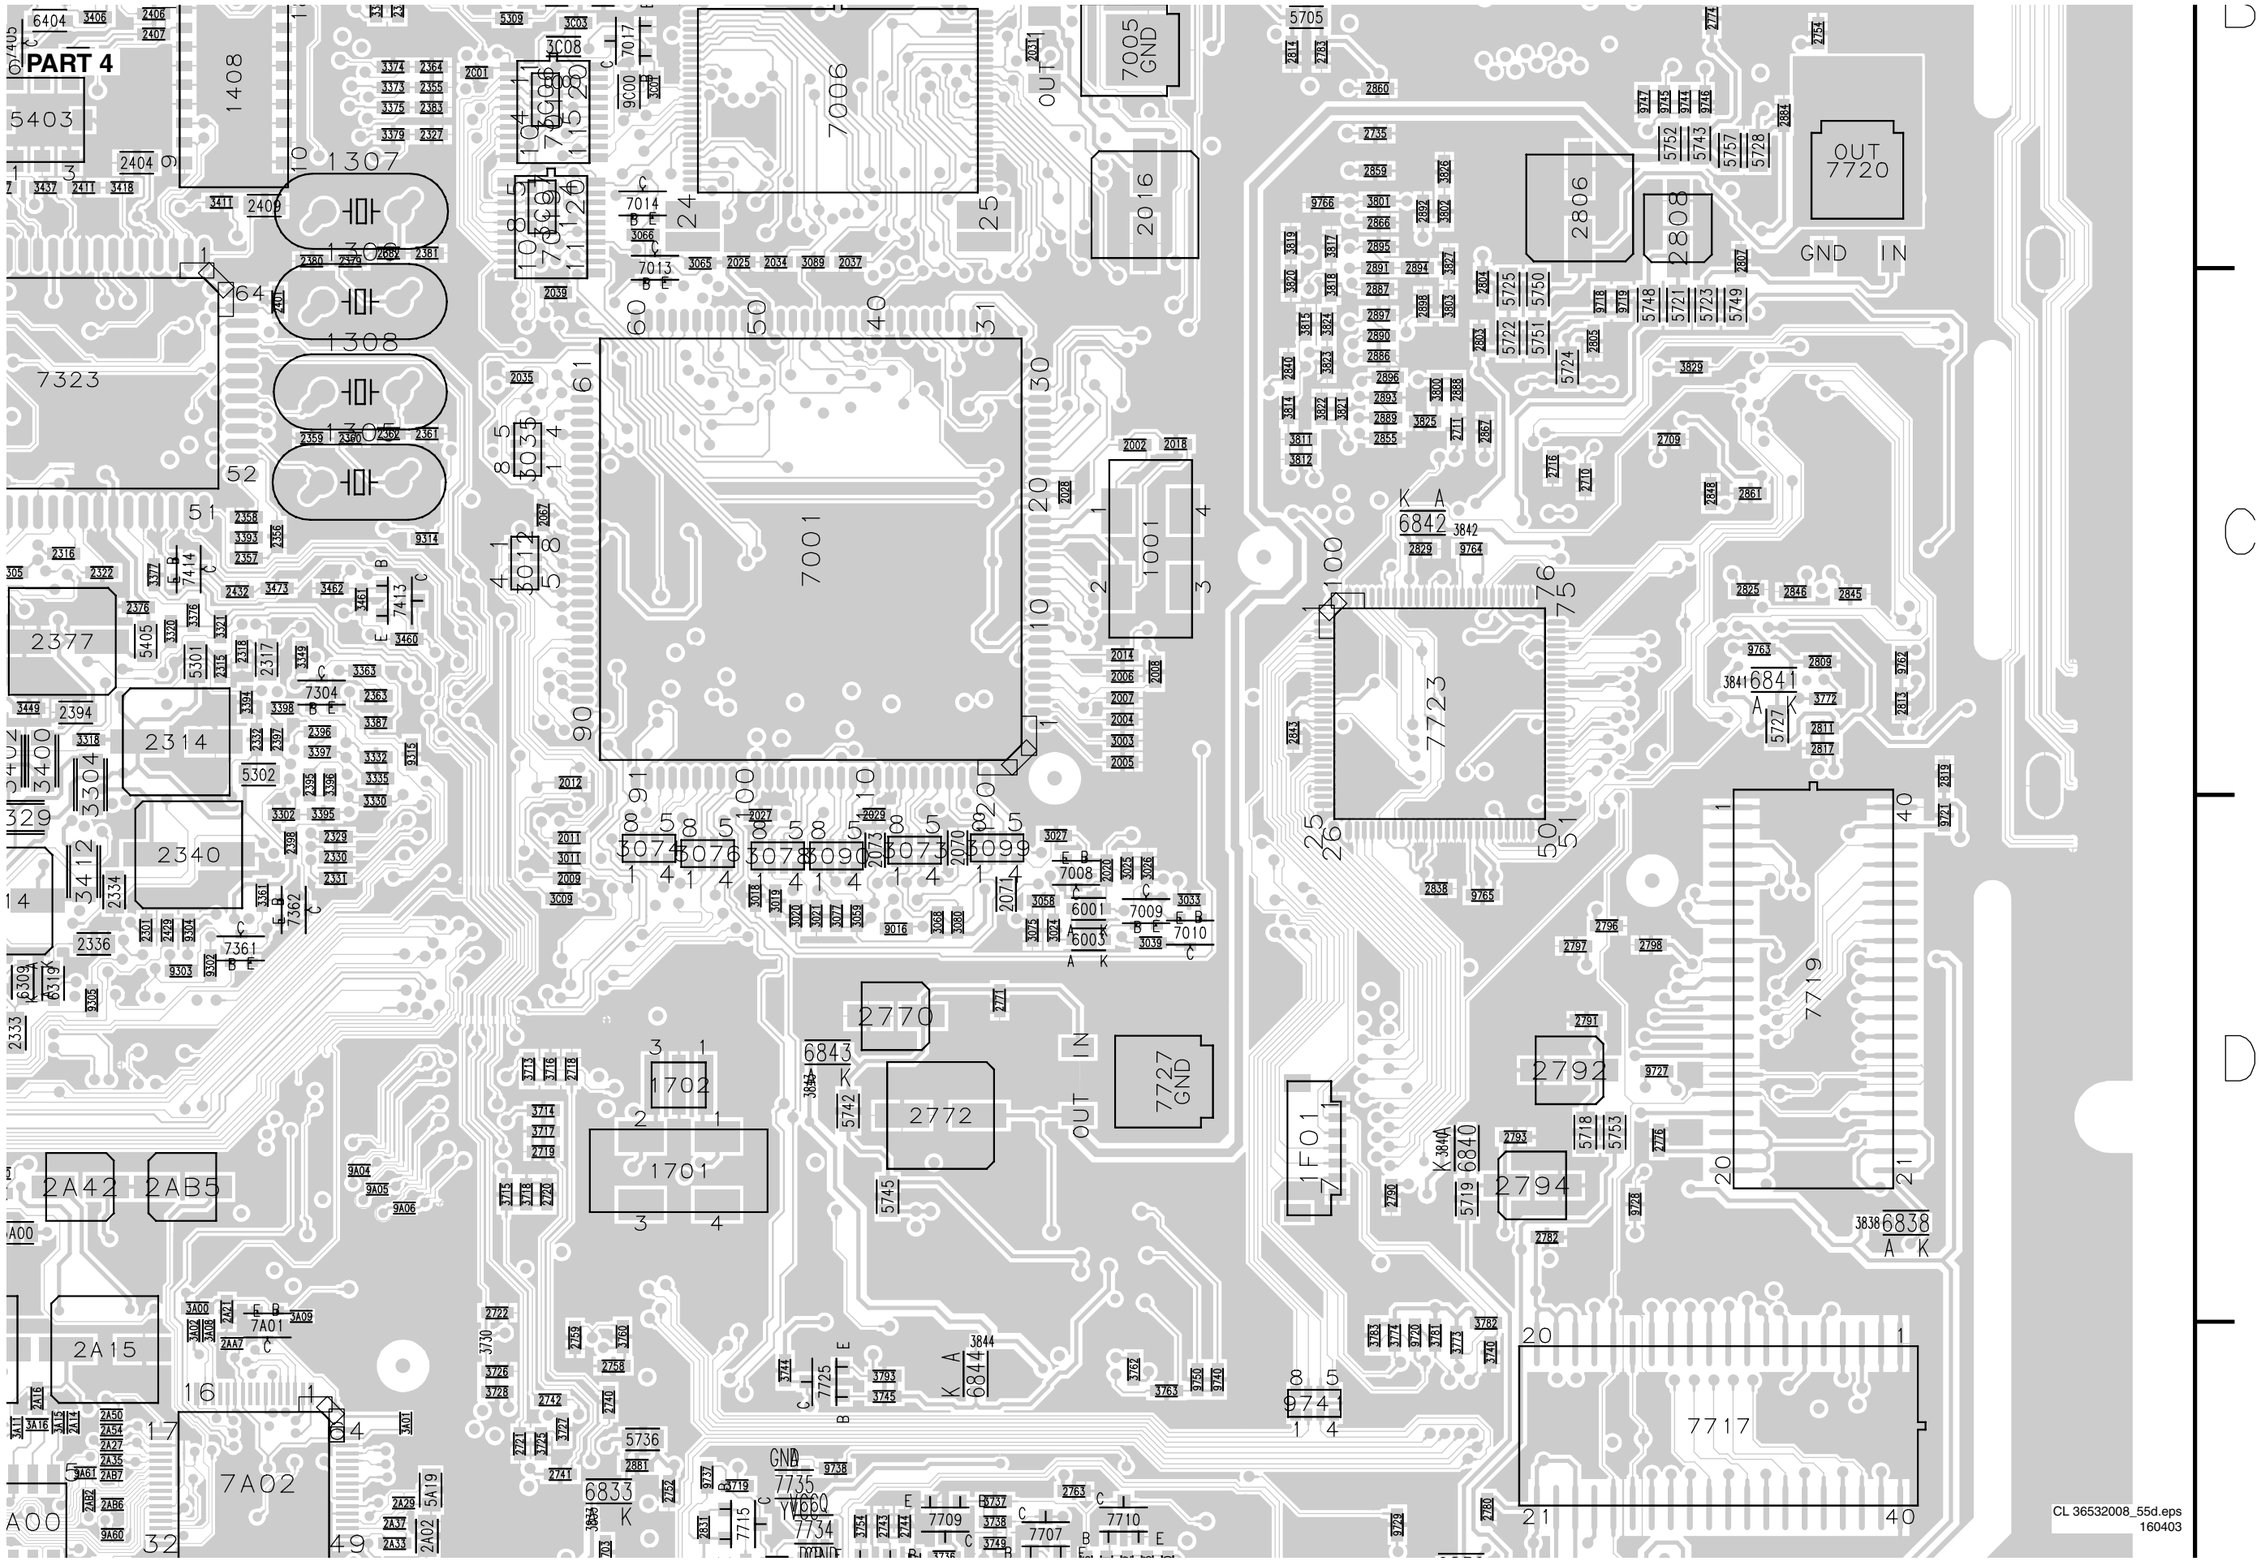


Layout Small Signal Board (Part 5 Top Side)

PART 5



CL 36532008_55e.eps
160403

Layout Small Signal Board (Part 6 Top Side)

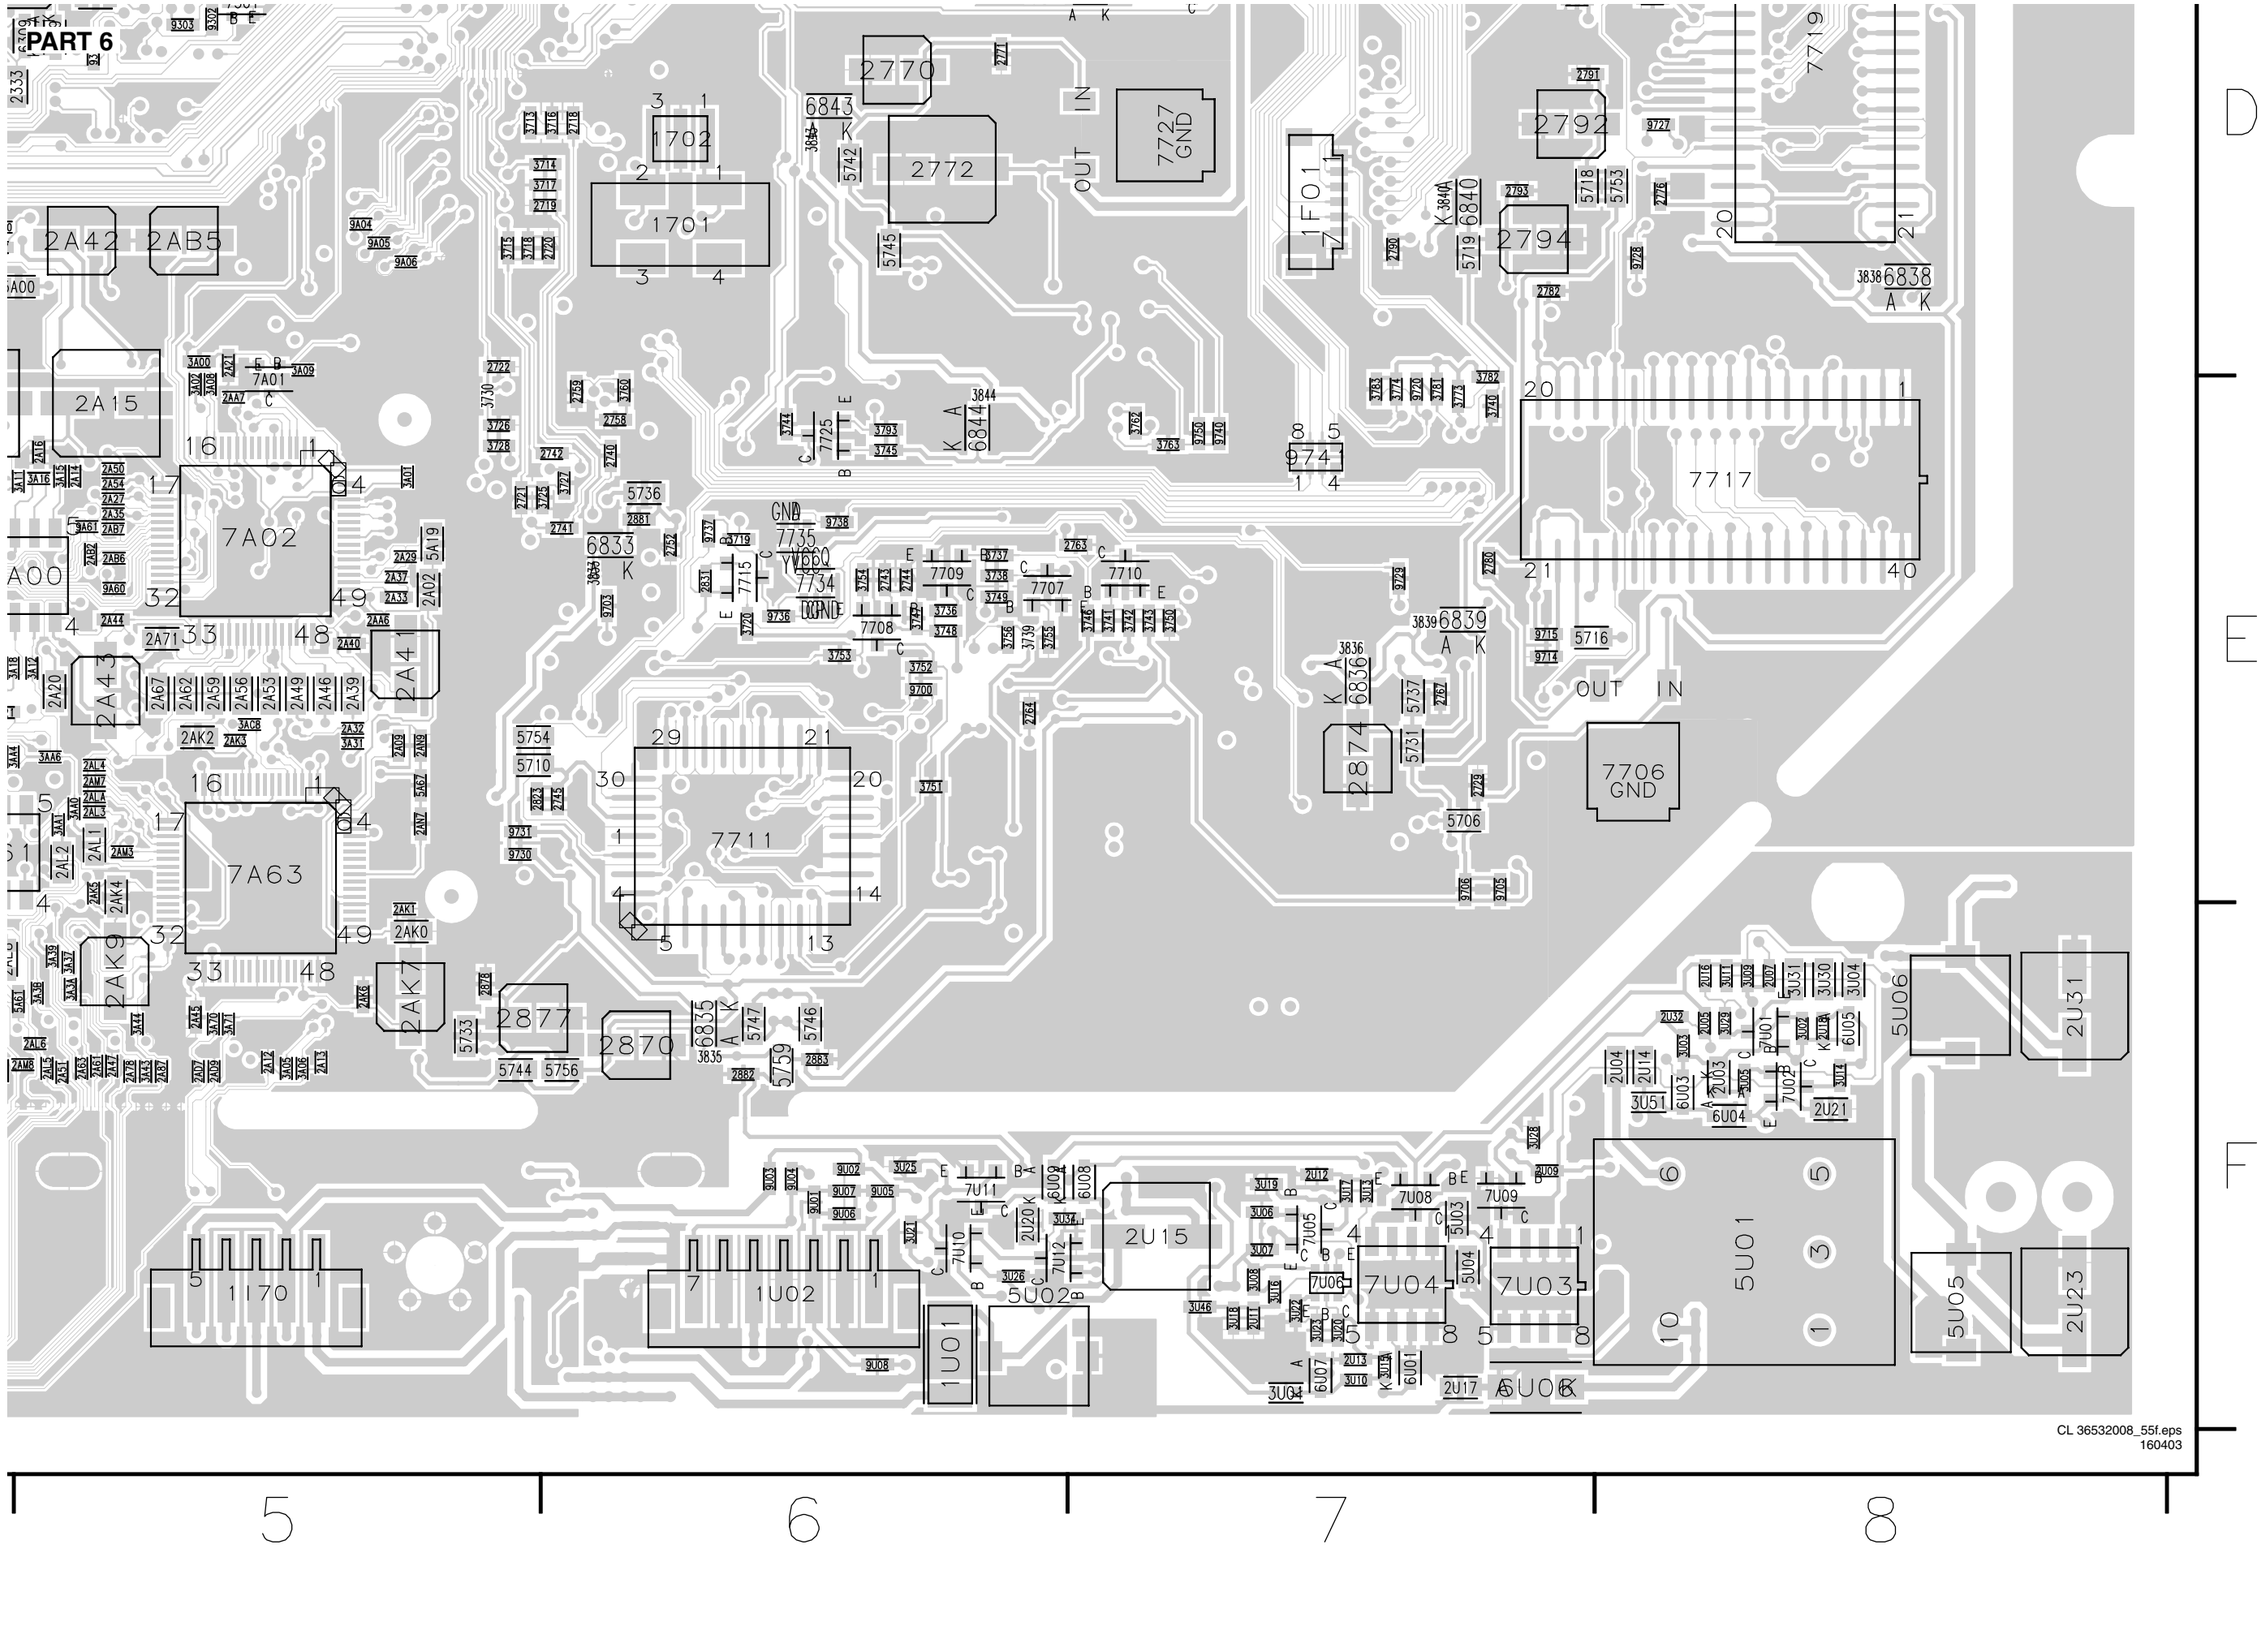

Layout Small Signal Board (Overview Bottom Side)

1301	C4
1305	C4
1306	B4
1307	B4
1308	C4
1406	B5
1407	B5
1409	B4
1410	B4
1411	C4
1A00	D4
1P04	C7
1P05	C7
1P07	D7
1P08	C8
1P09	C8
1P50	C7
2003	C2
2010	D4
2013	B3
2017	C4
2019	B3
2022	D3

2023	C3
2024	C3
2026	C3
2033	B3
2036	B3
2038	B3
2040	C3
2041	C4
2052	B2
2053	B2
2054	B2
2055	B2
2056	B2
2057	B2
2060	B2
2061	B2
2062	C3
2063	D3
2064	C3
2065	C3
2066	C3
2068	D3
2069	D2

2072	D3
2074	D3
2302	C5
2303	C5
2304	C4
2306	C5
2307	C4
2308	C4
2309	C4
2310	C4
2311	C4
2312	C4
2313	C4
2319	D5
2320	C4
2321	C4
2323	C4
2325	C4
2326	C5
2328	D4
2335	D5
2337	D4
2338	D4

2341	C4
2342	D5
2343	D5
2345	B4
2346	B3
2354	C5
2366	B5
2369	C5
2370	D5
2371	C4
2372	C4
2374	C5
2375	C5
2378	B4
2384	B5
2385	C5
2386	D5
2390	B5
2399	B5
2402	B5
2418	C4
2419	C4
2420	C5

2421	C5
2422	B5
2423	C5
2424	C5
2426	B4
2431	C4
2700	D3
2701	D3
2702	D3
2703	D3
2704	D3
2705	D3
2706	D4
2707	D4
2708	D4
2712	C1
2713	E3
2714	E4
2717	C2
2723	F3
2724	E4
2725	C2
2726	C2

2727	C2
2728	E1
2730	E1
2731	B1
2732	B1
2733	B1
2734	B2
2736	C2
2737	B2
2738	B2
2739	B2
2746	F3
2747	C1
2748	E3
2749	D3
2750	D3
2751	D3
2753	E3
2755	E3
2756	E3
2757	E3
2760	D3
2761	D3

2762	E2
2765	E3
2766	E3
2768	C1
2769	F2
2773	E2
2775	E2
2777	E2
2778	E2
2779	E2
2781	E2
2784	E1
2785	E1
2786	E1
2787	E2
2788	E2
2789	D2
2795	D2
2799	D1
2800	D1
2801	D1
2802	D1
2810	C1

2812	C2
2815	C2
2816	C2
2818	B2
2820	C1
2821	C1
2822	C1
2824	F3
2826	C2
2827	C2
2828	C2
2830	B2
2832	C2
2833	C2
2835	C2
2839	C2
2841	B2
2847	B1
2851	B1
2853	B2
2854	B2
2857	B2
2864	B1

2865	B2
2871	D3
2872	D3
2875	F3
2876	F3
2880	F3
2885	C2
2899	D1
2A01	E5
2A05	D4
2A07	D5
2A19	D5
2A28	E5
2A34	E5
2A38	E5
2A64	E4
2A69	E5
2A70	E5
2A72	E5
2A74	E5
2A75	E5
2A79	D4
2A80	D4

2A81	D4
2A83	E5
2A84	F4
2A85	F4
2A86	F4
2A88	E5
2A89	E4
2A90	D4
2A91	D4
2A92	E4
2A93	F5
2A94	F4
2A96	F4
2A97	F4
2A98	F4
2A99	D4
2AA5	D4
2AA9	E4
2AB0	E4
2AB3	E4
2AB4	E4
2AB8	E5
2AD8	E5

2AE0	E5
2AE1	E5
2AE4	F6
2AE6	F5
2AE8	F6
2AF0	E6
2AK8	E4
2AM4	E5
2AN2	F5
2AN3	F5
2AN4	F5
2AN5	F4
2AN6	F5
2AN8	F5
2C00	B3
2C02	B4
2H11	E6
2H12	E6
2H13	E7
2H14	E7
2H15	E7
2H16	E7
2H17	E7

2H19	E7
2H20	E7
2H22	E8
2H23	E7
2H24	E6
2H36	F8
2H37	F8
2H39	F8
2H41	E7
2H47	E7
2H50	E7
2H61	E7
2H62	F7
2H63	F7
2H64	F7
2H65	F7
2H66	F7
2H67	F7
2H68	F8
2H79	E8
2H80	E8
2H81	E7
2H83	E6

2H84	E7
2H85	E6
2H86	F6
2H87	E6
2H89	E6
2H90	F7
2H91	E7
2H96	F7
2H97	F8
2H98	E8
2I04	B6
2I06	B6
2I07	B6
2I08	B6
2I10	A6
2I11	A6
2I12	A6
2I13	A6
2I14	A6
2I15	A6
2I16	A4
2I17	A4
2I18	A4

2I19	A4
2I20	A4
2I21	A4
2I22	A4
2I23	A4
2I24	A4
2I25	A4
2I26	A1
2I27	A1
2I29	A1
2I30	A1
2I31	A1
2I33	A2
2I34	A1
2I35	A1
2I36	A1
2I37	A5
2I38	A7
2I43	B7
2I44	A7
2I46	A7
2I47	A5
2I57	A2

2I58	A2
2I79	A6
2I93	B7
2I99	B6
2IA0	B7
2IA1	B6
2IA2	B6
2IA3	A6
2IA4	A5
2IA5	B6
2IA7	B7
2IB1	B4
2IB3	B1
2IC0	A1
2IC1	A1
2IC3	A2
2IC4	B4
2IC5	A6
2IC6	A6
2IC9	A3
2ID1	A2
2ID6	A2
2ID7	A2

2ID8	A2
2ID9	B1
2IE1	A2
2IE2	A2
2IE3	B2
2IE4	B2
2IE7	B1
2IE8	B1
2IE9	B1
2IF1	B7
2IH0	B7
2IH1	B7
2IH2	B7
2IH3	A4
2IJ0	B6
2IJ1	B6
2IJ2	B6
2IJ3	B6
2P01	D7
2P11	C8
2P12	D8
2P14	C8
2P15	D8

2P16	C8
2P18	D7
2P23	D7
2P24	C7
2P25	C8
2P29	D7
2P30	D7
2P31	D8
2P32	D7
2P33	D8
2P43	D7
2P45	D7
2P46	D7
2P47	D7
2P48	C8
2P49	D7
2P51	C7
2P52	C6
2P53	C6
2P54	C6
2P55	C6
2P56	D6
2P57	D6

2P58	D6
2P59	D6
2P60	D6
2P61	D6
2P62	D6
2P63	D6
2P64	D6
2P65	D7
2P66	D6
2P67	D6
2P68	D6
2P69	D6
2P70	C6
2P71	C6
2P72	C6
2P73	C6
2P74	D6
2P75	C6
2P76	C7
2P77	D6
2P78	C6
2P79	C6
2P82	D6

2P83	D6
2P84	D6
2P85	D6
2P87	C7
2P88	C7
2P91	D8
2P92	D8
2P93	D8
2P94	D8
2P95	D7
2P96	D7
2P97	C6
2PA0	D6
2PA1	D6
2PA2	D6
2PA3	D6
2PA9	D6
2PB0	D6
2PB1	D6
2PB2	D6
2PD0	D7
2PE9	D6
2PF2	C6

2PF5	C6
2PF6	C6
2PF7	D6
2S01	C5
2S02	D5
2S06	D5
2S07	D5
2S08	D5
2S09	D5
2S10	D5
2S11	D5
2S12	D5
2S13	D5
2S14	D5
2S15	D5
2S16	D5
2S17	C5
2S18	C5
2S19	C5
2S20	C5
2S21	D5
2S22	D5
2S23	B5

2S25	D5
2S26	C5
2S27	C5
2S28	B5
2S29	B5
2S30	D5
2S31	C5
2S32	C5
2S33	C5
2S34	C5
2S35	C5
2S36	C5
2S37	C5
2S38	C5
2S39	C5
2S40	C5
2S41	C5
2S42	C5
2S43	C5
2S44	C5
2S45	B5
2S46	B5
2T01	A7

2T02	A8
2T03	B7
2T04	B8
2T05	B7
2T06	A8
2T07	B8
2T09	B8
2T10	B8
2T13	A8
2T14	B8
2T15	A8
2T16	A8
2T17	A8
2T18	B8
2U01	F1
2U02	F1
2U06	F2
2U08	F1
2U10	F2
2U19	F2
2U22	F3
2U24	F3
2U25	F3

2U26	F3
2U27	F1
2U28	F1
2U30	F1
3001	C3
3002	C3
3004	B3
3005	C3
3007	C2
3008	C3
3009	C3
3010	B3
3013	B4
3014	B4
3015	C4
3016	C4
3017	C3
3022	D3
3023	C3
3028	C3
3029	C3
3030	C3
3031	C3
3032	C3
3034	C3
3036	D3
3037	C3
3038	D3
3040	C4
3041	C4
3042	D3
3043	D3
3044	C3
3045	B2
3046	B2
3048	C3
3049	C3
3050	C3
3051	C3
3052	C3
3053	D3
3054	C3
3055	B3
3056	C2
3057	C2
3060	C3
3061	C3
3062	C3
3063	C3
3064	C3
3067	C3
3069	C3
3070	D3
3071	D3
3072	C3
3079	C3
3081	B2
3082	C3
3083	C2
3085	C3
3086	C3
3087	C3
3088	C3
3092	C3
3093	C3
3094	C3
3095	C3
3096	D3
3097	B2
3098	B2
3100	C3
3101	C3
3102	C3
3103	C2
3303	C5
3305	D4
3307	C4
3308	C5
3310	C4
3311	C4
3312	C5
3313	C5
3314	C4
3315	C5
3316	C5
3319	C5
3323	C4
3324	C4
3325	D5
3326	C4
3327	C4
3328	C4
3331	C4
3333	C4
3334	C4
3337	D4
3338	D5
3339	D4
3350	D5
3351	D5
3352	D5
3354	D5
3355	D5
3356	C5
3357	D5
3358	D4
3359	D5
3360	D5
3362	D5
3364	D5
3365	D5
3366	C4
3367	C4
3368	D4
3369	D4
3378	C4
3380	C4
3382	B5
3383	D5
3384	D4

3385	B5
3386	D5
3389	D5
3391	D5
3401	B4
3403	B5
3405	C5
3407	B4
3408	C4
3410	B4
3414	C4
3415	C4
3417	B4
3419	B5
3420	C4
3421	B4
3434	B4
3435	B5
3441	C4
3445	B5
3450	B5
3451	C5
3452	C5
3453	D4
3454	D4
3455	D4
3456	C4
3457	C4
3459	D5
3463	C4
3465	D5
3467	D5
3468	C5
3470	D5
3471	D5
3703	D3
3704	D3
3705	D4
3706	D3
3707	D3
3708	E4
3709	E3
3710	E3
3711	C2
3712	D3
3721	E4
3722	E4
3729	F3
3731	F3
3733	F3
3734	E3
3735	E4
3757	C1
3758	E3
3759	E3
3764	E3
3765	E3
3766	E1
3767	E2
3768	E2
3769	E2
3770	E2
3771	C2
3775	E2
3776	E2
3785	C2
3786	C2
3787	B2
3788	C2
3789	C2
3790	B2
3791	C2
3792	B1
3804	B1
3805	B2
3806	B2
3807	C2
3808	C2
3809	B2
3810	C2
3813	C2
3816	B2
3828	D2
3830	E4
3831	D3
3832	D3
3834	D3
3837	E2
3845	E1
3A17	E4
3A19	E4
3A30	D5
3A35	E5
3A38	D5
3A45	E4
3A46	D4
3A47	E4
3A48	E4
3A49	D4
3A51	E4
3A52	D4
3A53	E4
3A55	D4
3A56	D4
3A72	F6
3A73	F5
3A75	F5
3A76	F5
3A77	E6
3A78	F6
3A84	F6
3AA2	F5
3C00	B4
3C04	B4
3C05	B4
3H00	F7
3H01	E7
3H02	F7
3H04	F7
3H05	F7

3H08	E7
3H18	F7
3H26	F8
3H34	F8
3H35	F8
3H45	E7
3H46	E7
3H50	E7
3H51	E7
3H52	F6
3H53	E7
3H54	F6
3H55	E7
3H56	E7
3H57	E7
3H59	E6
3H60	F6
3H62	E7
3H63	E7
3H64	E8
3H65	E7
3H66	E8
3H67	F7
3H71	E8
3H72	E7
3H73	E8
3H74	E7
3H77	E7
3H78	E7
3H79	E7
3H82	E7
3H86	E7
3H87	E7
3H88	E6
3H89	F7
3H90	F7
3H91	E7
3H97	E7
3H99	E7
3HB8	E8
3HC1	E7
3HC2	E7
3HC3	E7
3HC4	E7
3HC5	E7
3HC6	E7
3HC7	E7
3HC8	E7
3HC9	E7
3HD1	E6
3HD2	E6
3HD3	E7
3HD4	E7
3HD5	E7
3HD6	E7
3HD7	E7
3HD8	E7
3HD9	E7
3HH3	E7
3I03	B6
3I13	B6
3I14	B6
3I19	B6
3I20	B6
3I26	B6
3I27	B6
3I34	A6
3I35	A6
3I36	A6
3I37	A6
3I38	A6
3I39	A6
3I40	A5
3I41	A5
3I42	A6
3I43	A6
3I44	A6
3I45	A6
3I46	A6
3I47	A6
3I48	A5
3I49	A5
3I50	A4
3I51	A4
3I52	A4
3I53	A4
3I54	A3
3I55	A3
3I56	A3
3I57	A3
3I58	A3
3I59	A3
3I60	A3
3I61	A4
3I62	A4
3I63	A4
3I64	A4
3I65	A3
3I66	A3
3I67	A3
3I68	A3
3I69	A4
3I70	A4
3I71	A4
3I72	A4
3I73	A4
3I74	A4
3I75	A3
3I76	A3
3I77	A3
3I78	A3
3I79	A4
3I80	A4
3I81	A4
3I82	A4
3I83	A3
3I84	A3
3I85	A3
3I86	A3
3I87	A3


3I88	A3
3I89	A1
3I90	A1
3I91	A1
3I92	A1
3I96	A1
3I97	A1
3I98	A5
3IA0	A1
3IA1	A5
3IA2	A1
3IA3	A1
3IB1	A5
3IB2	A4
3IB4	A7
3IB5	A7
3IB7	A7
3IB9	A5
3IC1	A7
3IC2	A4
3IC3	A4
3IC4	A4
3IC6	A4
3IC7	A7
3IC8	A7
3ID0	A7
3IE2	A2
3IE3	A2
3IE4	A2
3IE5	A2
3IE6	A2
3IE7	A2
3IE8	A2
3IE9	A2
3IF0	A2
3IF1	B2
3IF2	B2
3IF5	A2
3IF6	A2
3IF7	A2
3IG0	A2
3IG3	A2
3IG4	A2
3IH5	B7
3IH6	B7
3IH7	B7
3IH8	B7
3IH9	B6
3II0	B7
3II1	B7
3II2	B7
3II3	B6
3II4	B6
3II5	B7
3II6	B7
3II7	B7
3IJ2	B7
3IJ3	B7
3IJ4	B7
3IK1	B6
3IK2	A4
3IK3	A4
3IK4	B6
3IK5	B6
3IK7	B7
3IK9	B5
3IL7	B4
3IL8	B4
3IL9	B4
3IM0	B4
3IM1	B4
3IM2	B4
3IM3	B4
3IN1	A2
3IN2	B4
3IN3	B4
3IN5	A4
3IN6	A4
3IN8	B6
3IN9	B6
3IO5	A2
3IO6	A2
3IO7	A2
3IO8	A2
3IO9	B2
3IP8	A6
3IR0	B7
3IR1	B7
3IR2	B7
3IR3	B7
3IR4	B7
3IR5	A2
3IR6	B7
3IR7	B7
3IR8	B6
3IS2	A4
3IS3	A6
3IS4	A6
3IS5	A6
3IS6	A6
3IT0	B1
3IT2	A1
3IT7	A6
3P03	D7
3P04	C7
3P05	D7
3P06	C7
3P09	C7
3P11	C7
3P12	C7
3P13	C7
3P14	C7
3P15	C7
3P16	C8
3P21	C7
3P22	D7
3P23	D7
3P24	D7
3P31	C8
3P32	C8

3P36	C8
3P37	D7
3P38	D7
3P39	C7
3P40	C7
3P45	D7
3P46	D7
3P47	D8
3P48	D7
3P50	C7
3P51	C7
3P52	D6
3P53	C7
3P54	C6
3P55	D6
3P56	D6
3P57	D6
3P58	D6
3P59	D6
3P60	D6
3P62	D6
3P63	D6
3P64	D6
3P65	C6
3P66	C6
3P67	C6
3P68	C6
3P69	C6
3P70	C6
3P72	C6
3P74	C6
3P75	D6
3P76	D6
3P79	C7
3P80	C7
3P81	D6
3P82	C7
3P85	C6
3P86	C6
3P87	C6
3P88	C6
3P92	D7
3PC0	D7
3PC5	C6
3PD7	D6
3PF5	C6
3PG1	D6
3PH1	C6
3PH5	D6
3PH6	D6
3PH7	D6
3PH9	D6
3T03	A8
3T04	B8
3U12	F3
3U24	F3
3U27	F3
3U32	F1
3U33	F2
3U35	F3
3U36	F3
3U37	F3
3U38	F3
3U39	F3
3U40	F3
3U41	F3
3U42	F3
3U43	F3
3U44	F1
3U45	F1
3U47	F3
3U48	F3
3U49	F3
3U50	F3
5304	B3
5305	B3
5308	B4
5312	C5
5313	D4
5314	D5
5315	D4
5401	C4
5402	B5
5404	B4
5408	B4
5415	B5
5700	D3
5701	D3
5702	D4
5711	F3
5712	E3
5713	D3
5714	D3
5717	D1
5726	C2
5729	D3
5738	F3
5739	C2
5740	C2
5741	B2
5755	F3
5A04	F5
5A05	F5
5A10	F4
5A11	F4
5A12	F4
5A13	F4
5A14	F4
5A15	F4
5A20	E5
5A21	E5
5A31	E5
5A32	E5
5A33	E5
5A64	F5
5A65	F5
5A66	F5
5H14	E7
5H15	E7
5H19	F7

5P05	C8
5P08	C7
5P09	D7
5P10	D7
5P50	D6
5PA9	C6
5S02	D5
5S03	D5
5S04	C5
5S05	D5
5T03	A8
6002	B2
6004	D3
6005	B2
6006	C2
6007	C3
6303	C5
6304	C5
6306	C4
6307	C4
6308	D4
6312	C4
6313	C5
6314	C5
6317	C5
6334	C4
6402	B4
6403	B4
6405	B4
6830	E4
6831	D3
6832	D3
6834	D3
6837	E2
6845	E1
6A01	E5
6A02	D5
6H12	E7
6I30	A4
6I31	A4
6I34	A4
6I39	A4
6I40	A4
6I49	A4
6I52	A3
6I53	A1
6I54	A1
6I55	A1
6I56	A1
6I57	A1
6I58	A1
6I59	A1
6I60	A1
6I61	A1
6I62	A1
6I63	A2
6I64	A1
6I65	A1
6I66	A2
6I67	A1
6I68	A2
6I69	A1
6I70	A1
6I73	A7
6I74	A7
6I90	A2
6I91	A2
6I92	A2
6I93	A2
6I94	A2
6I95	A2
6I96	A2
6I97	A2
6I98	A2
6I99	A2
6IA5	A7
6IA6	A7
6IA7	A5
6IA8	A7
6IC0	B2
6IC1	A2
6IC2	A2
6IC3	A1
6IC4	B1
6IC5	B1
6IC6	B1
6IC7	A1
6IC8	A1
6IC9	A1
6ID0	A1
6ID1	B1
6ID2	B1
6ID3	A1
6ID6	A1
6P00	C7
6P01	C7
6PB1	C6
6PB5	D6
6PB6	D6
6PB7	D6
6PB9	D6
6T01	A8
6T02	B8
6T03	A8
6T04	B8
6T06	A8
6T07	A8
6T08	B8
6U02	F1
6U10	F1
6U11	F3
7002	B4
7003	C4
7004	C3
7007	B3
7011	C3
7012	C3
7015	C4
7016	C3
7020	D3


7021	C3
7022	C3
7023	D3
7301	D4
7302	D4
7303	C5
7305	D5
7306	D5
7307	C5
7309	D5
7310	C5
7312	C4
7313	D5
7314	D5
7315	D5
7316	D5
7317	D5
7318	C5
7319	D5
7322	B5
7375	D5
7401	B4
7403	C4
7406	B4
7407	B4
7410	C5
7412	C5
7703	F3
7712	F3
7713	E2
7714	E2
7718	D2
7722	C1
7724	B2
7726	F2
7728	C2
7729	C2
7730	B2
7731	C2
7732	C2
7733	B2
7A06	E4
7A07	D4
7A30	E5
7A31	F6
7H50	E7
7H51	E7
7H52	E7
7H53	E7
7H72	F7
7H73	E7
7H74	E7
7H75	E8
7H95	F7
7H98	E7
7I00	B6
7I05	A5
7I06	B6
7I07	A7
7I09	A7
7I20	B7
7I22	B7
7I23	B7
7I25	B4
7I28	B4
7I29	B4
7I32	A2
7I40	A2
7I41	A2
7I42	B1
7I44	A4
7I50	B6
7P01	C7
7P03	C7
7P04	C7
7P06	C7
7P07	D7
7P11	D8
7P51	D6
7P52	D6
7P53	D6
7P54	D6
7P55	C6
7P56	C6
7PB5	C6
7U07	F3
7U13	F3
7U14	F3
7U15	F3
9001	C4
9002	D3
9003	D3
9004	C3
9005	B2
9006	B2
9007	B2
9008	C3
9009	C3
9010	C3
9011	C3
9012	C3
9013	C3
9014	C4
9015	D3
9308	C4
9309	C4
9310	C4
9311	C4
9312	C4
9313	D5
9318	C5
9319	C5
9401	B4
9402	B4
9403	B4
9405	B4
9406	B5
9407	C4
9410	C4
9413	B5

9415	B4
9418	B5
9420	B5
9421	D5
9701	E3
9702	E3
9704	D3
9707	D2
9708	D2
9709	D2
9710	D2
9711	D2
9712	E1
9713	E1
9716	E2
9717	E2
9722	D1
9723	D1
9724	D1
9725	F3
9726	E4
9732	F3
9733	F3
9734	E3
9735	E3
9753	C2
9754	C1
9760	E2
9761	E2
9767	D4
9768	D4
9769	D4
9A00	E4
9A01	E4
9A02	E4
9A03	E4
9A08	D4
9A09	D4
9I00	B6
9I01	B6
9I02	B6
9I03	B6
9I04	B6
9I07	A1
9I09	B6
9I11	B6
9I13	A7
9I15	A4
9I16	A7
9I18	A1
9I20	B6
9I21	B6
9I25	B4
9I48	B7
9I57	B7
9I58	B7
9I59	B7
9I77	B4
9I79	A2
9I81	B4
9I82	B5
9I85	A2
9I87	A3
9I88	A2
9I89	A2
9I92	B6
9I93	B6
9I94	B7
9I98	A6
9IA2	A3
9IA3	B4
9IA4	B4
9IA5	B5
9IB0	A4
9IB1	B6
9IB2	B6
9P04	C7
9P05	C7
9P07	C7
9P09	C8
9P10	C7
9P11	C7
9P12	C8
9P16	C7
9P17	D7
9P18	C7
9P20	D7
9P21	D7
9P22	D8
9P23	D7
9P24	D8
9P25	D8
9P28	D7
9P52	D6
9P53	D6
9P54	D6
9P55	D7
9P56	D7
9P57	C7
9P58	C7
9P59	D8
9P60	C7
9P63	C6
9P64	C6
9P65	C7
9P69	C6
9P71	C6
9S65	B5
9T01	A8
9T02	B8
9T03	B8
9T04	A8
9T05	A8
9T06	B8
9T09	B8
9T10	B8
9T14	B8
9T15	B8
9T16	A8

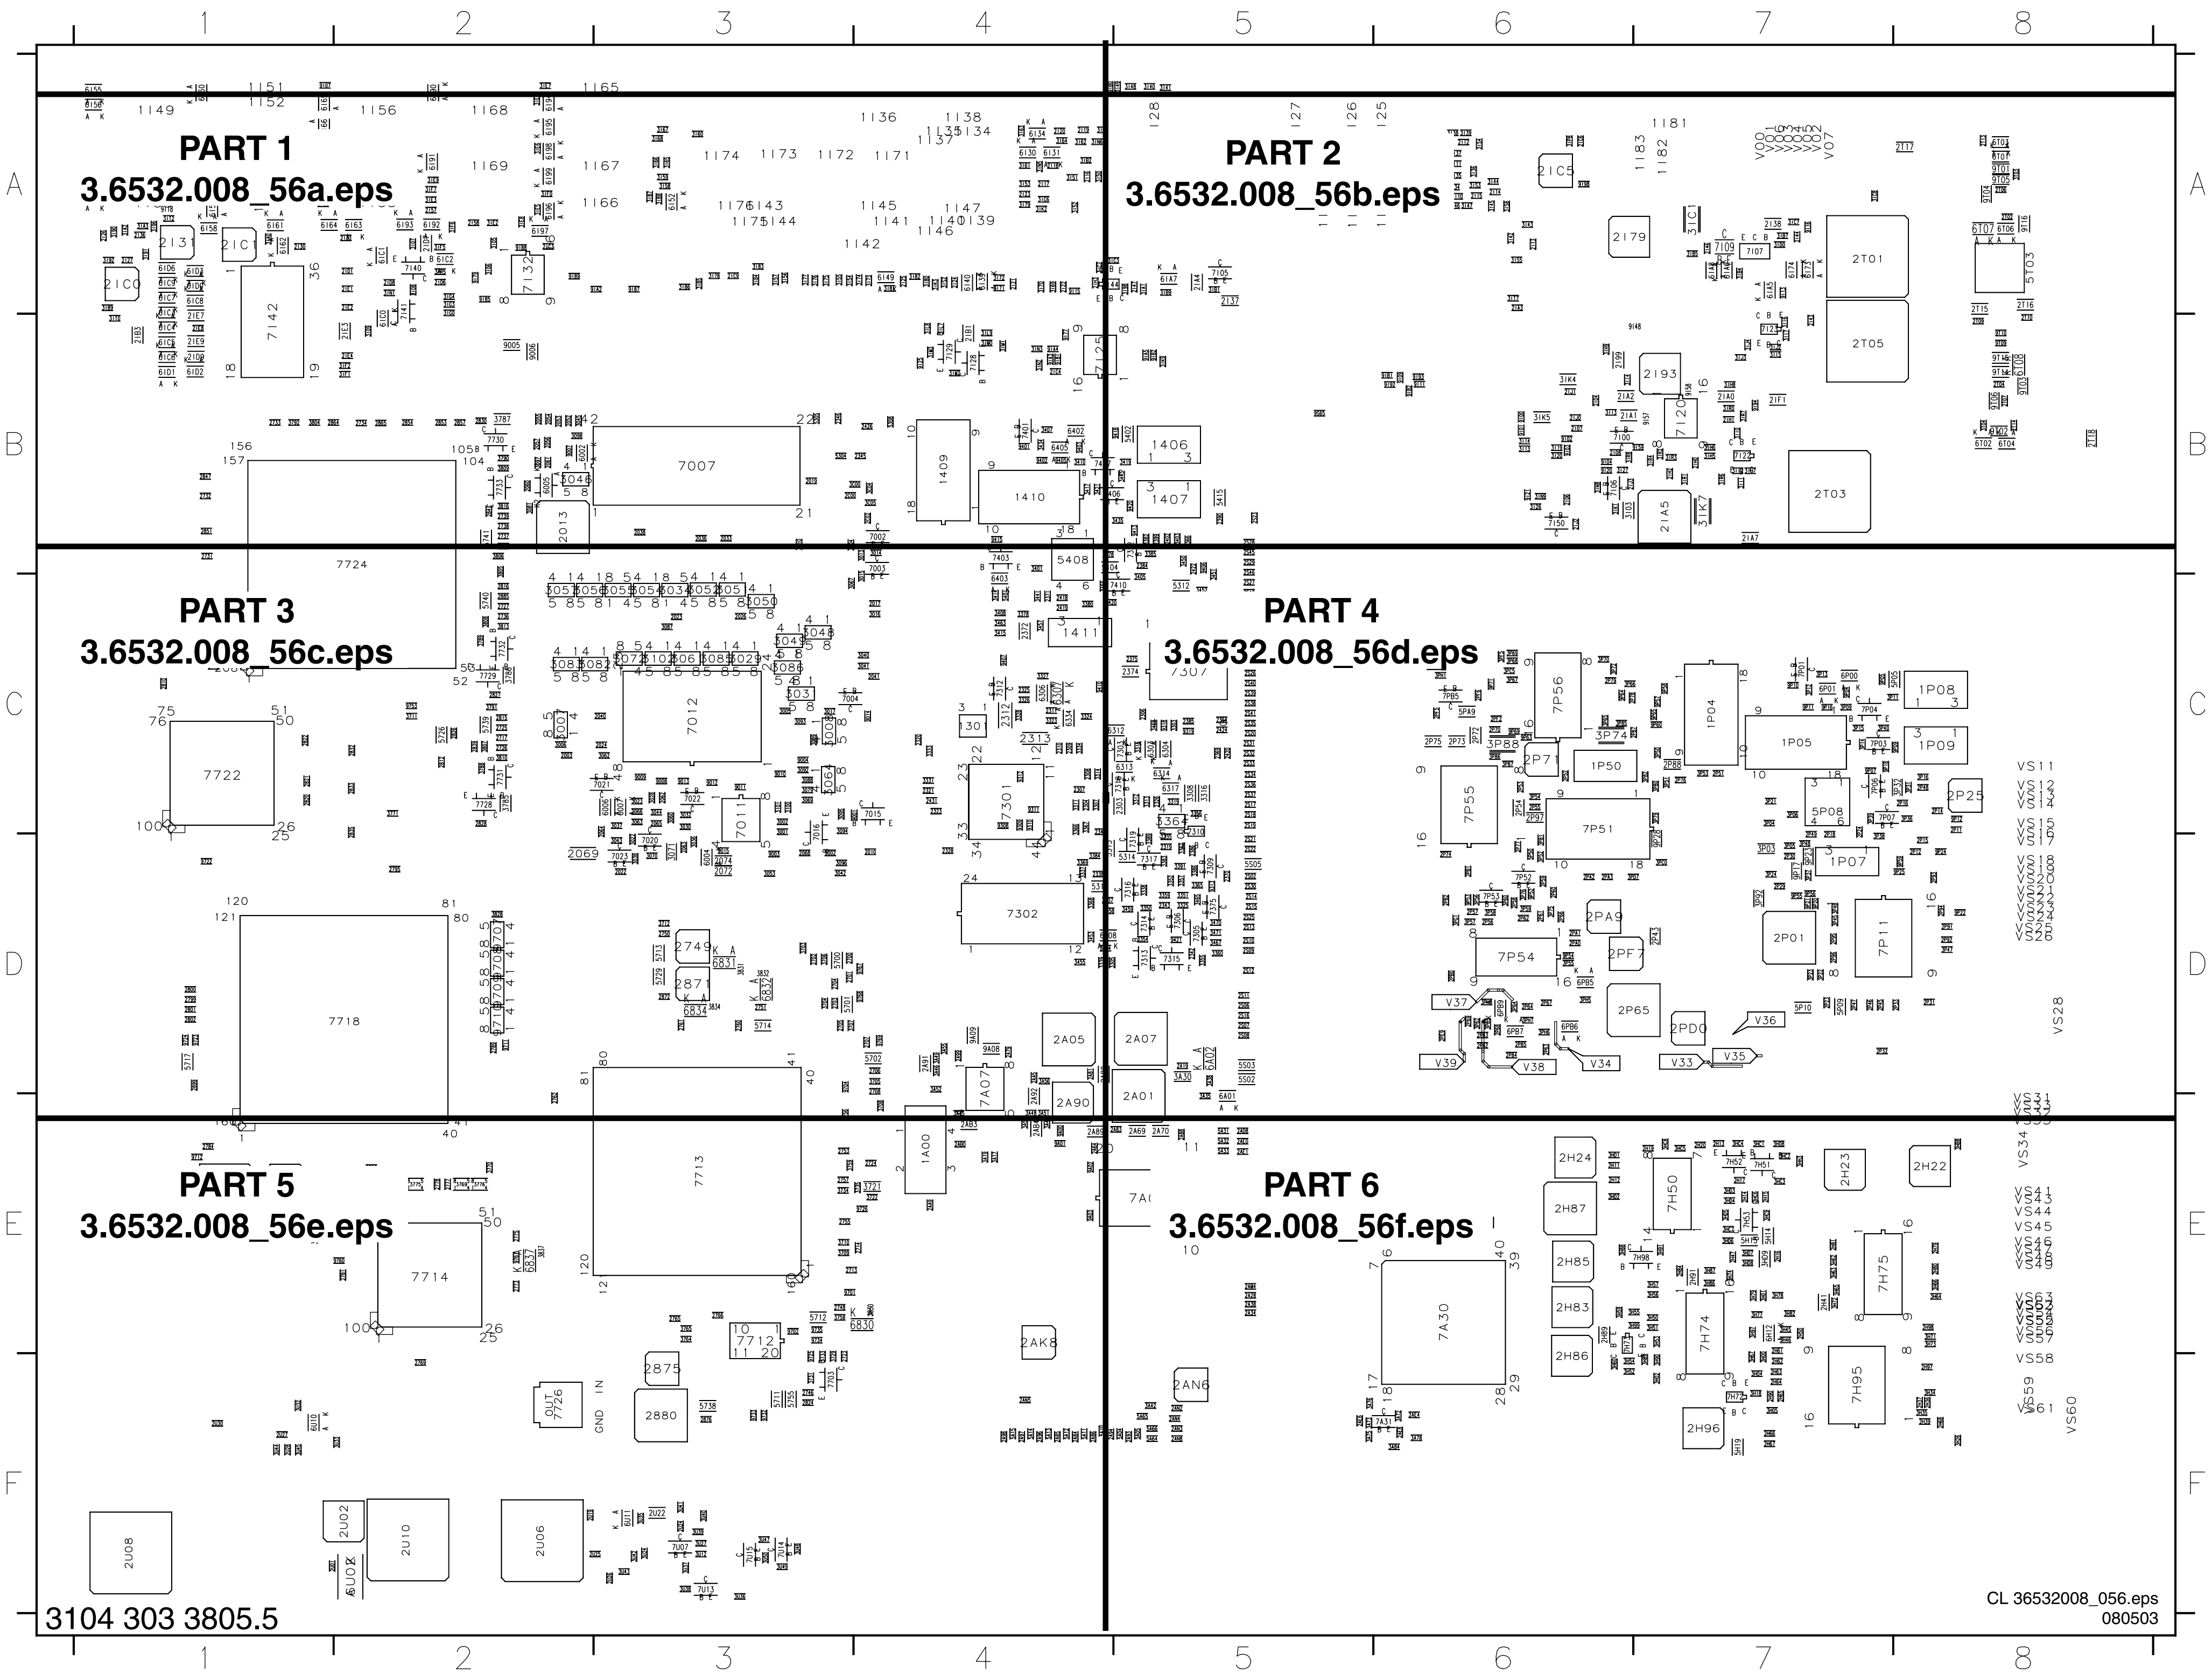


Layout Small Signal Board (Part 1 Bottom Side)

PART 1

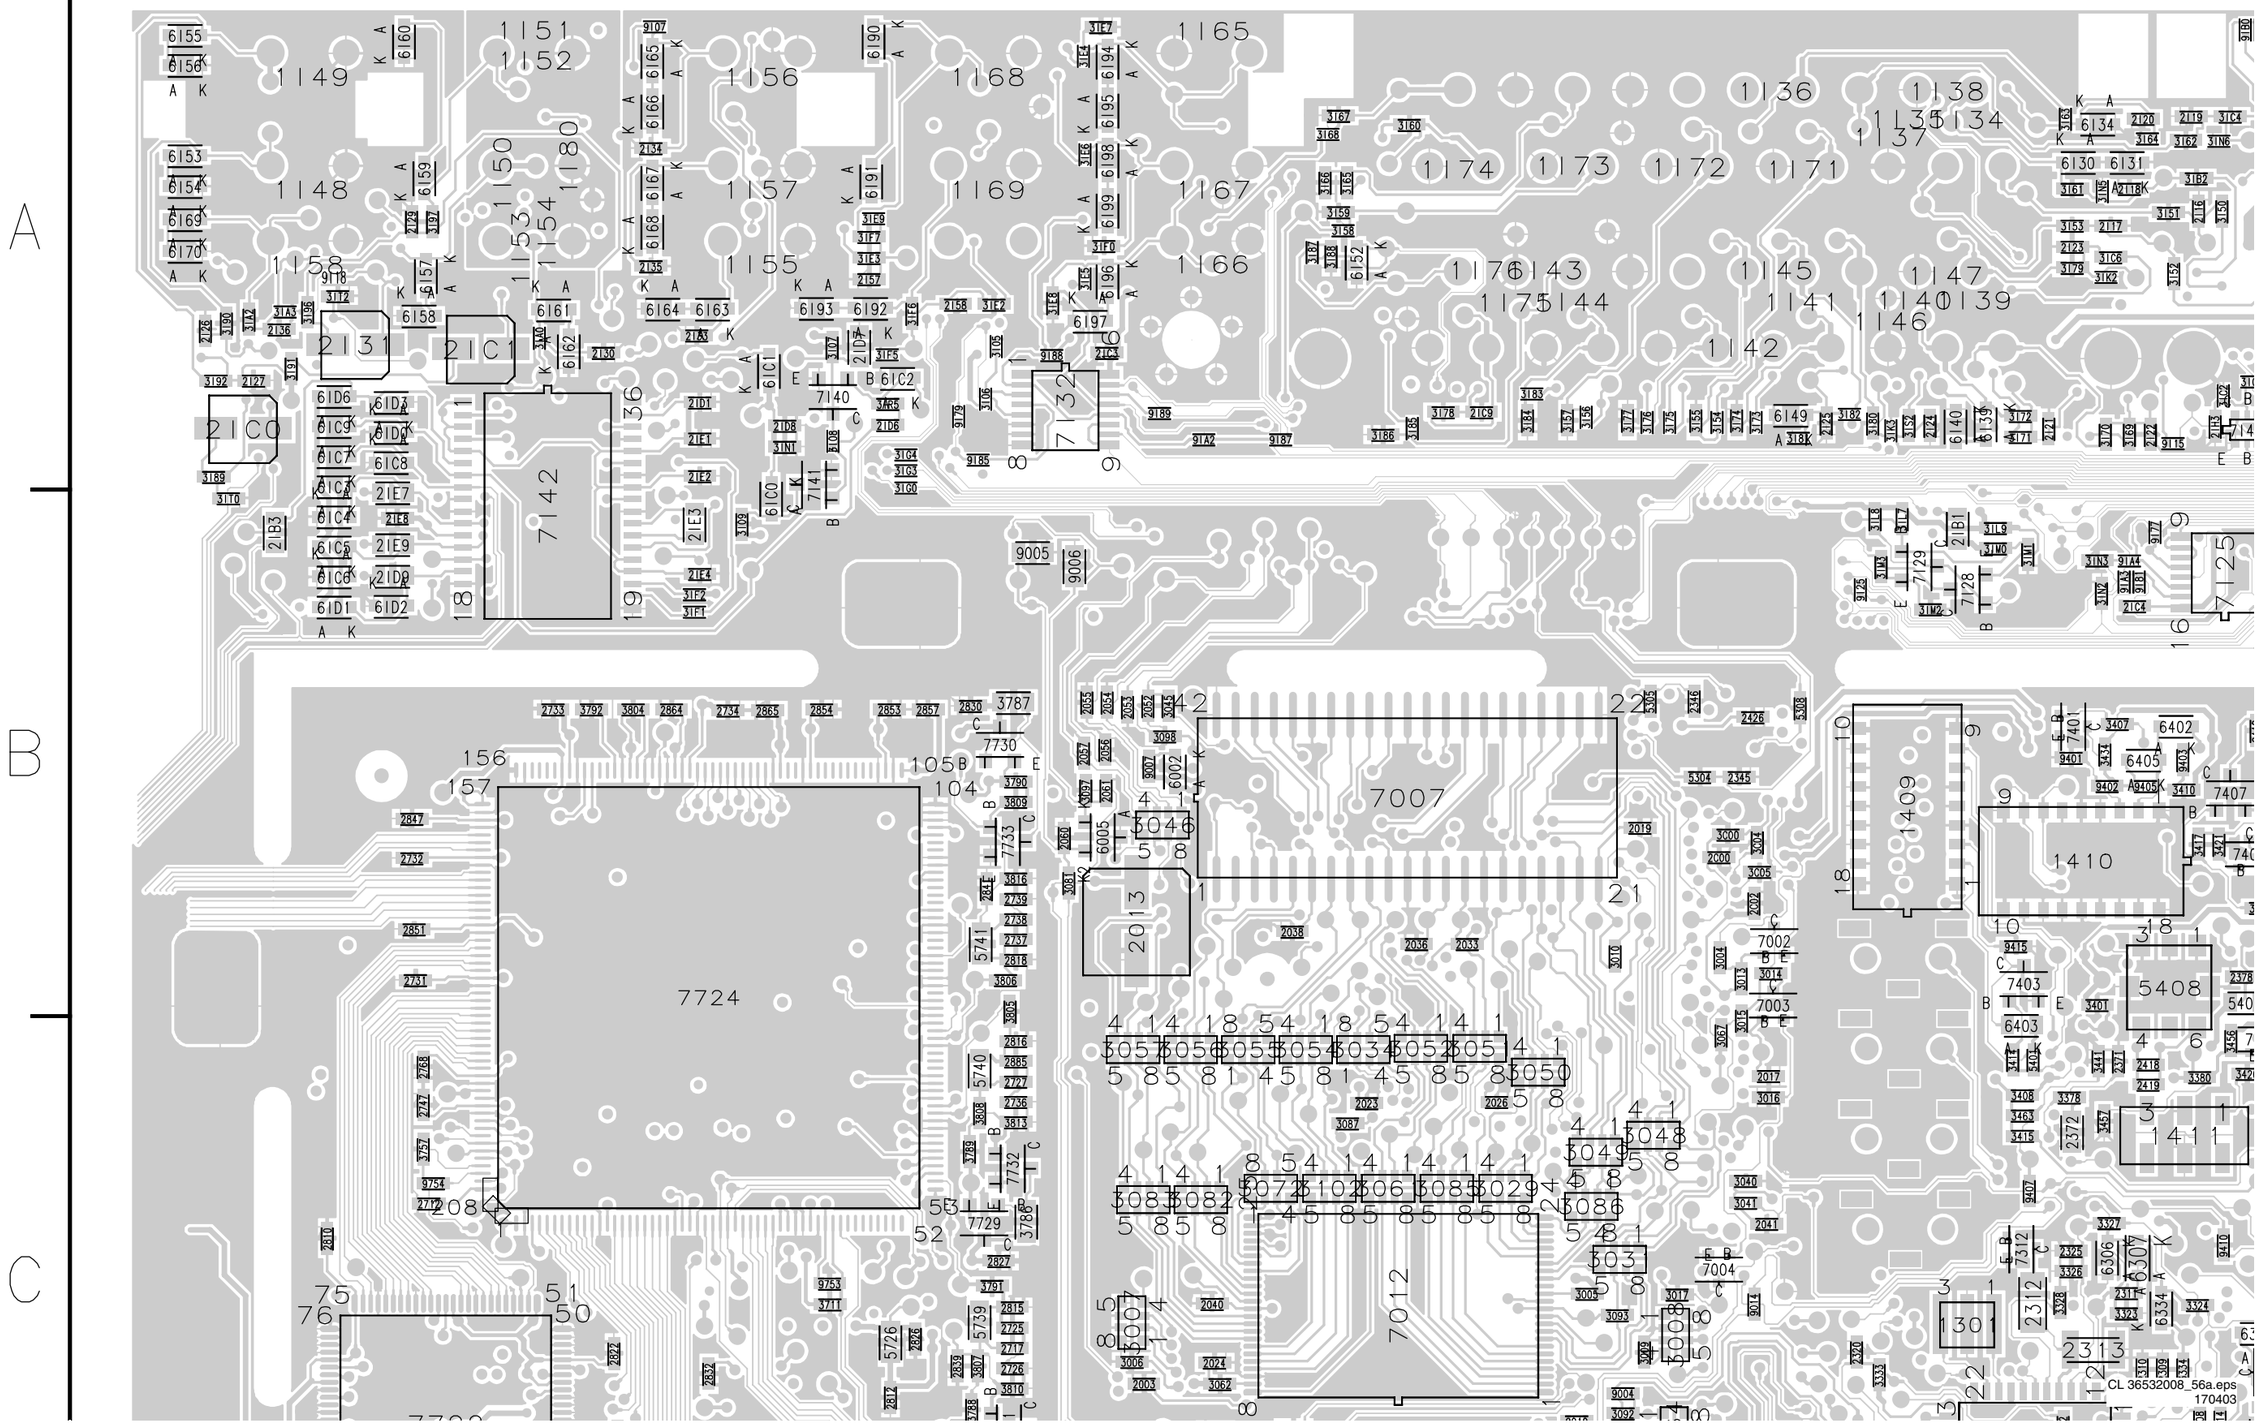


Layout Small Signal Board (Part 2 Bottom Side)

PART 2

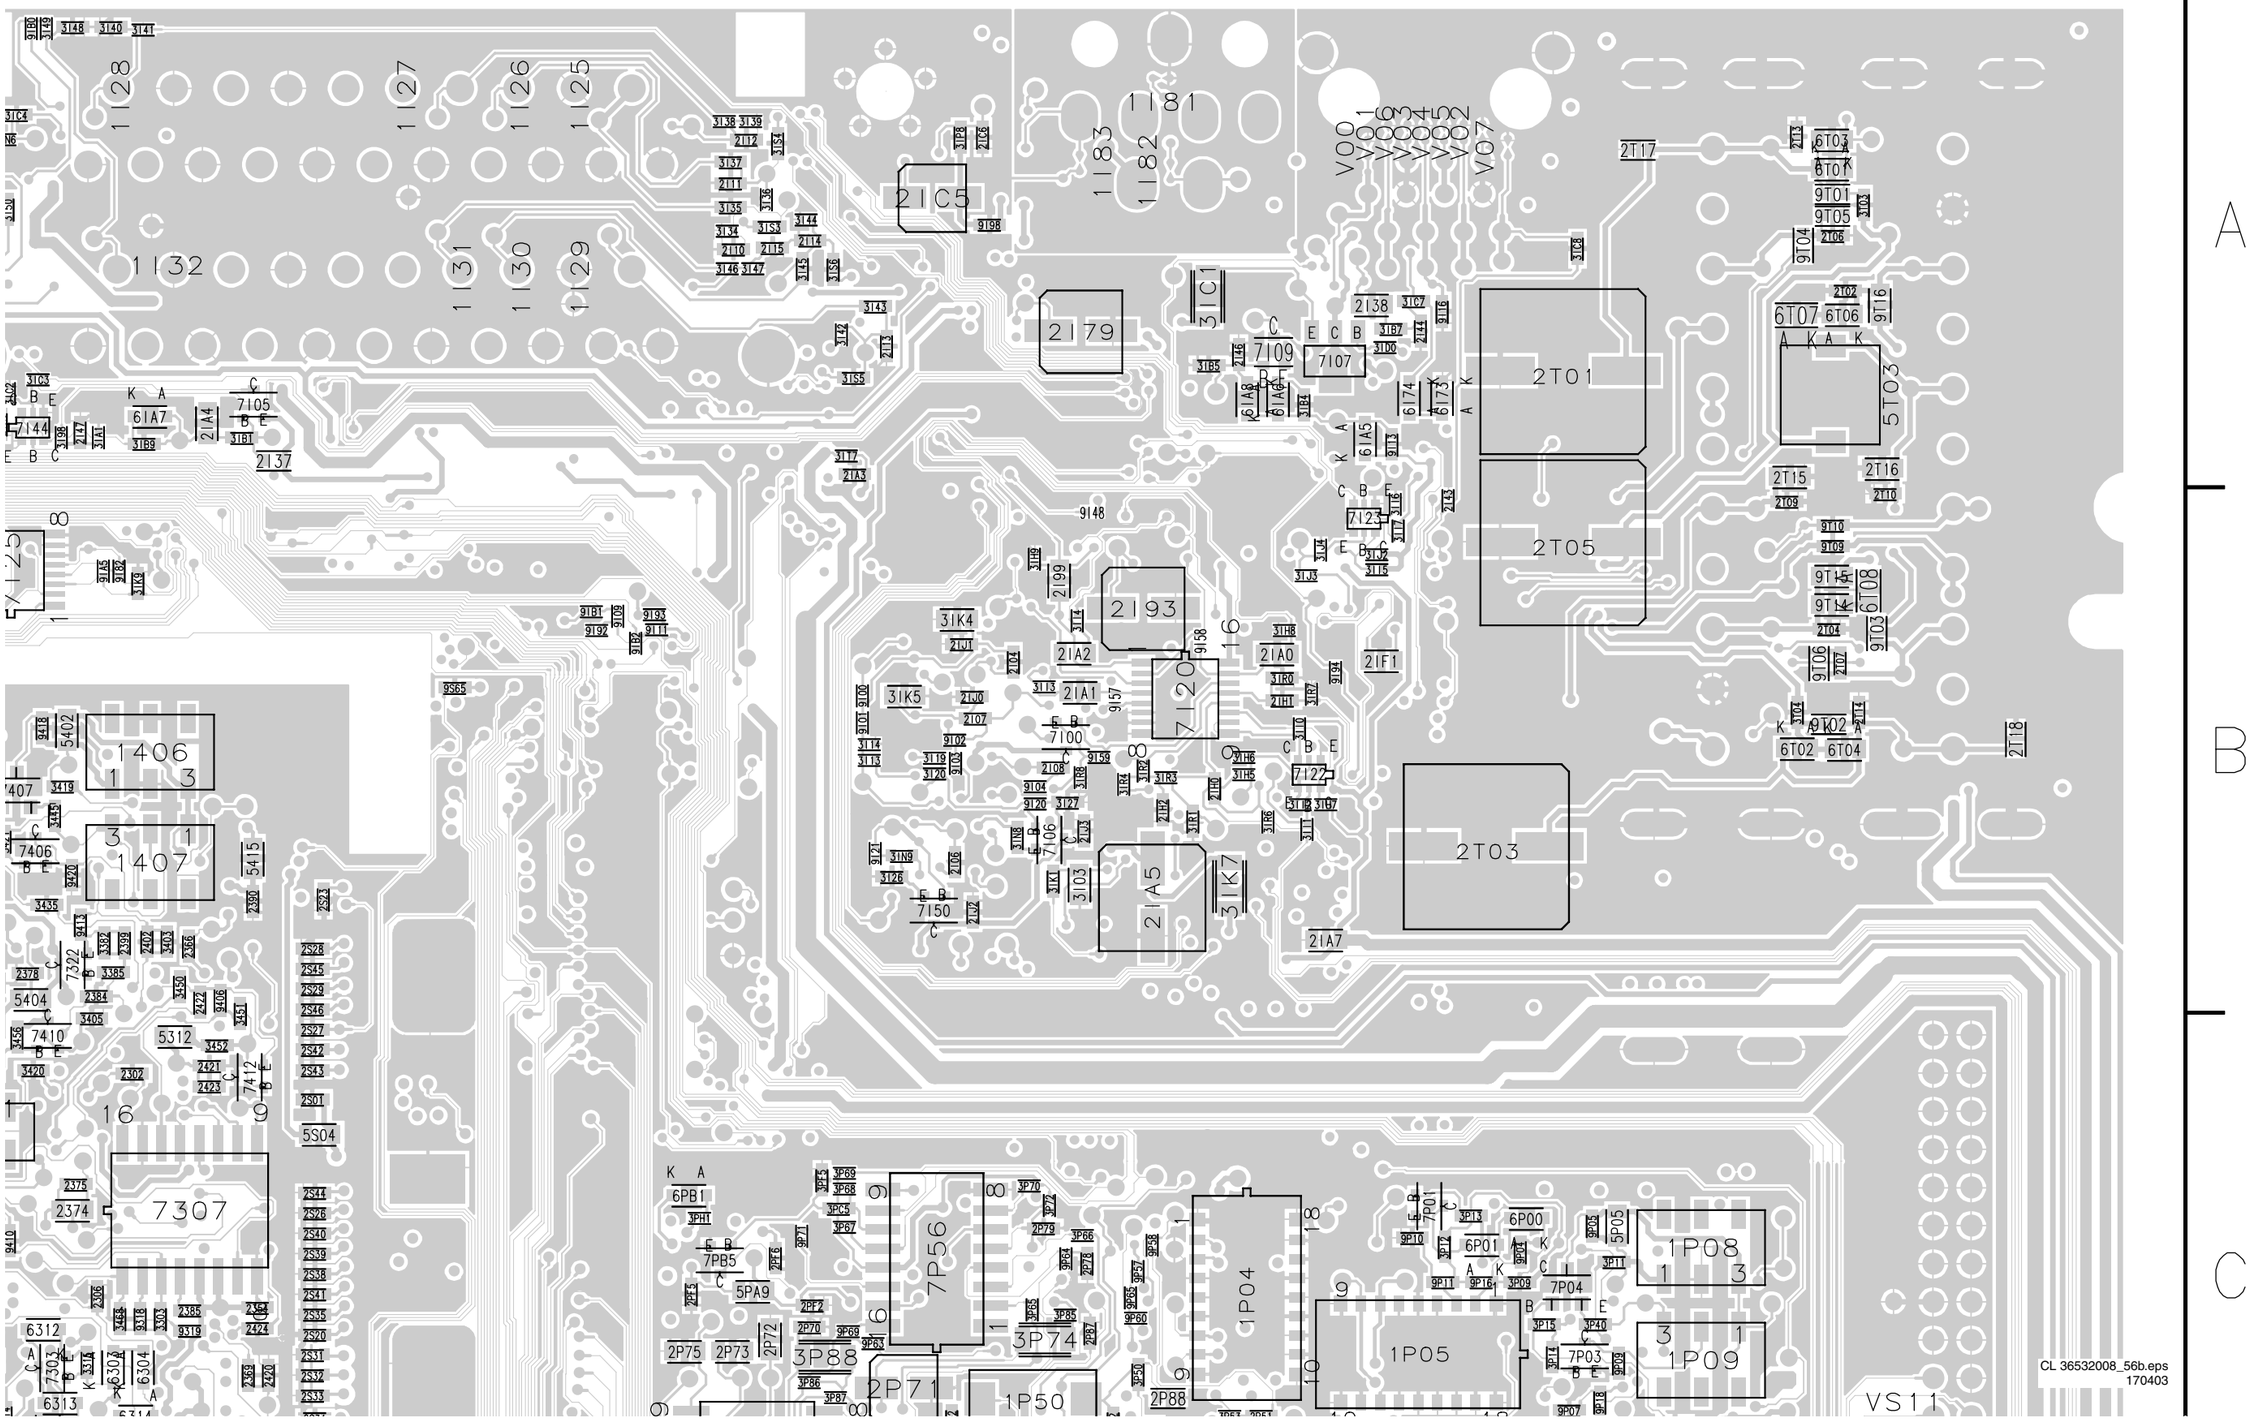


Layout Small Signal Board (Part 3 Bottom Side)

PART 3

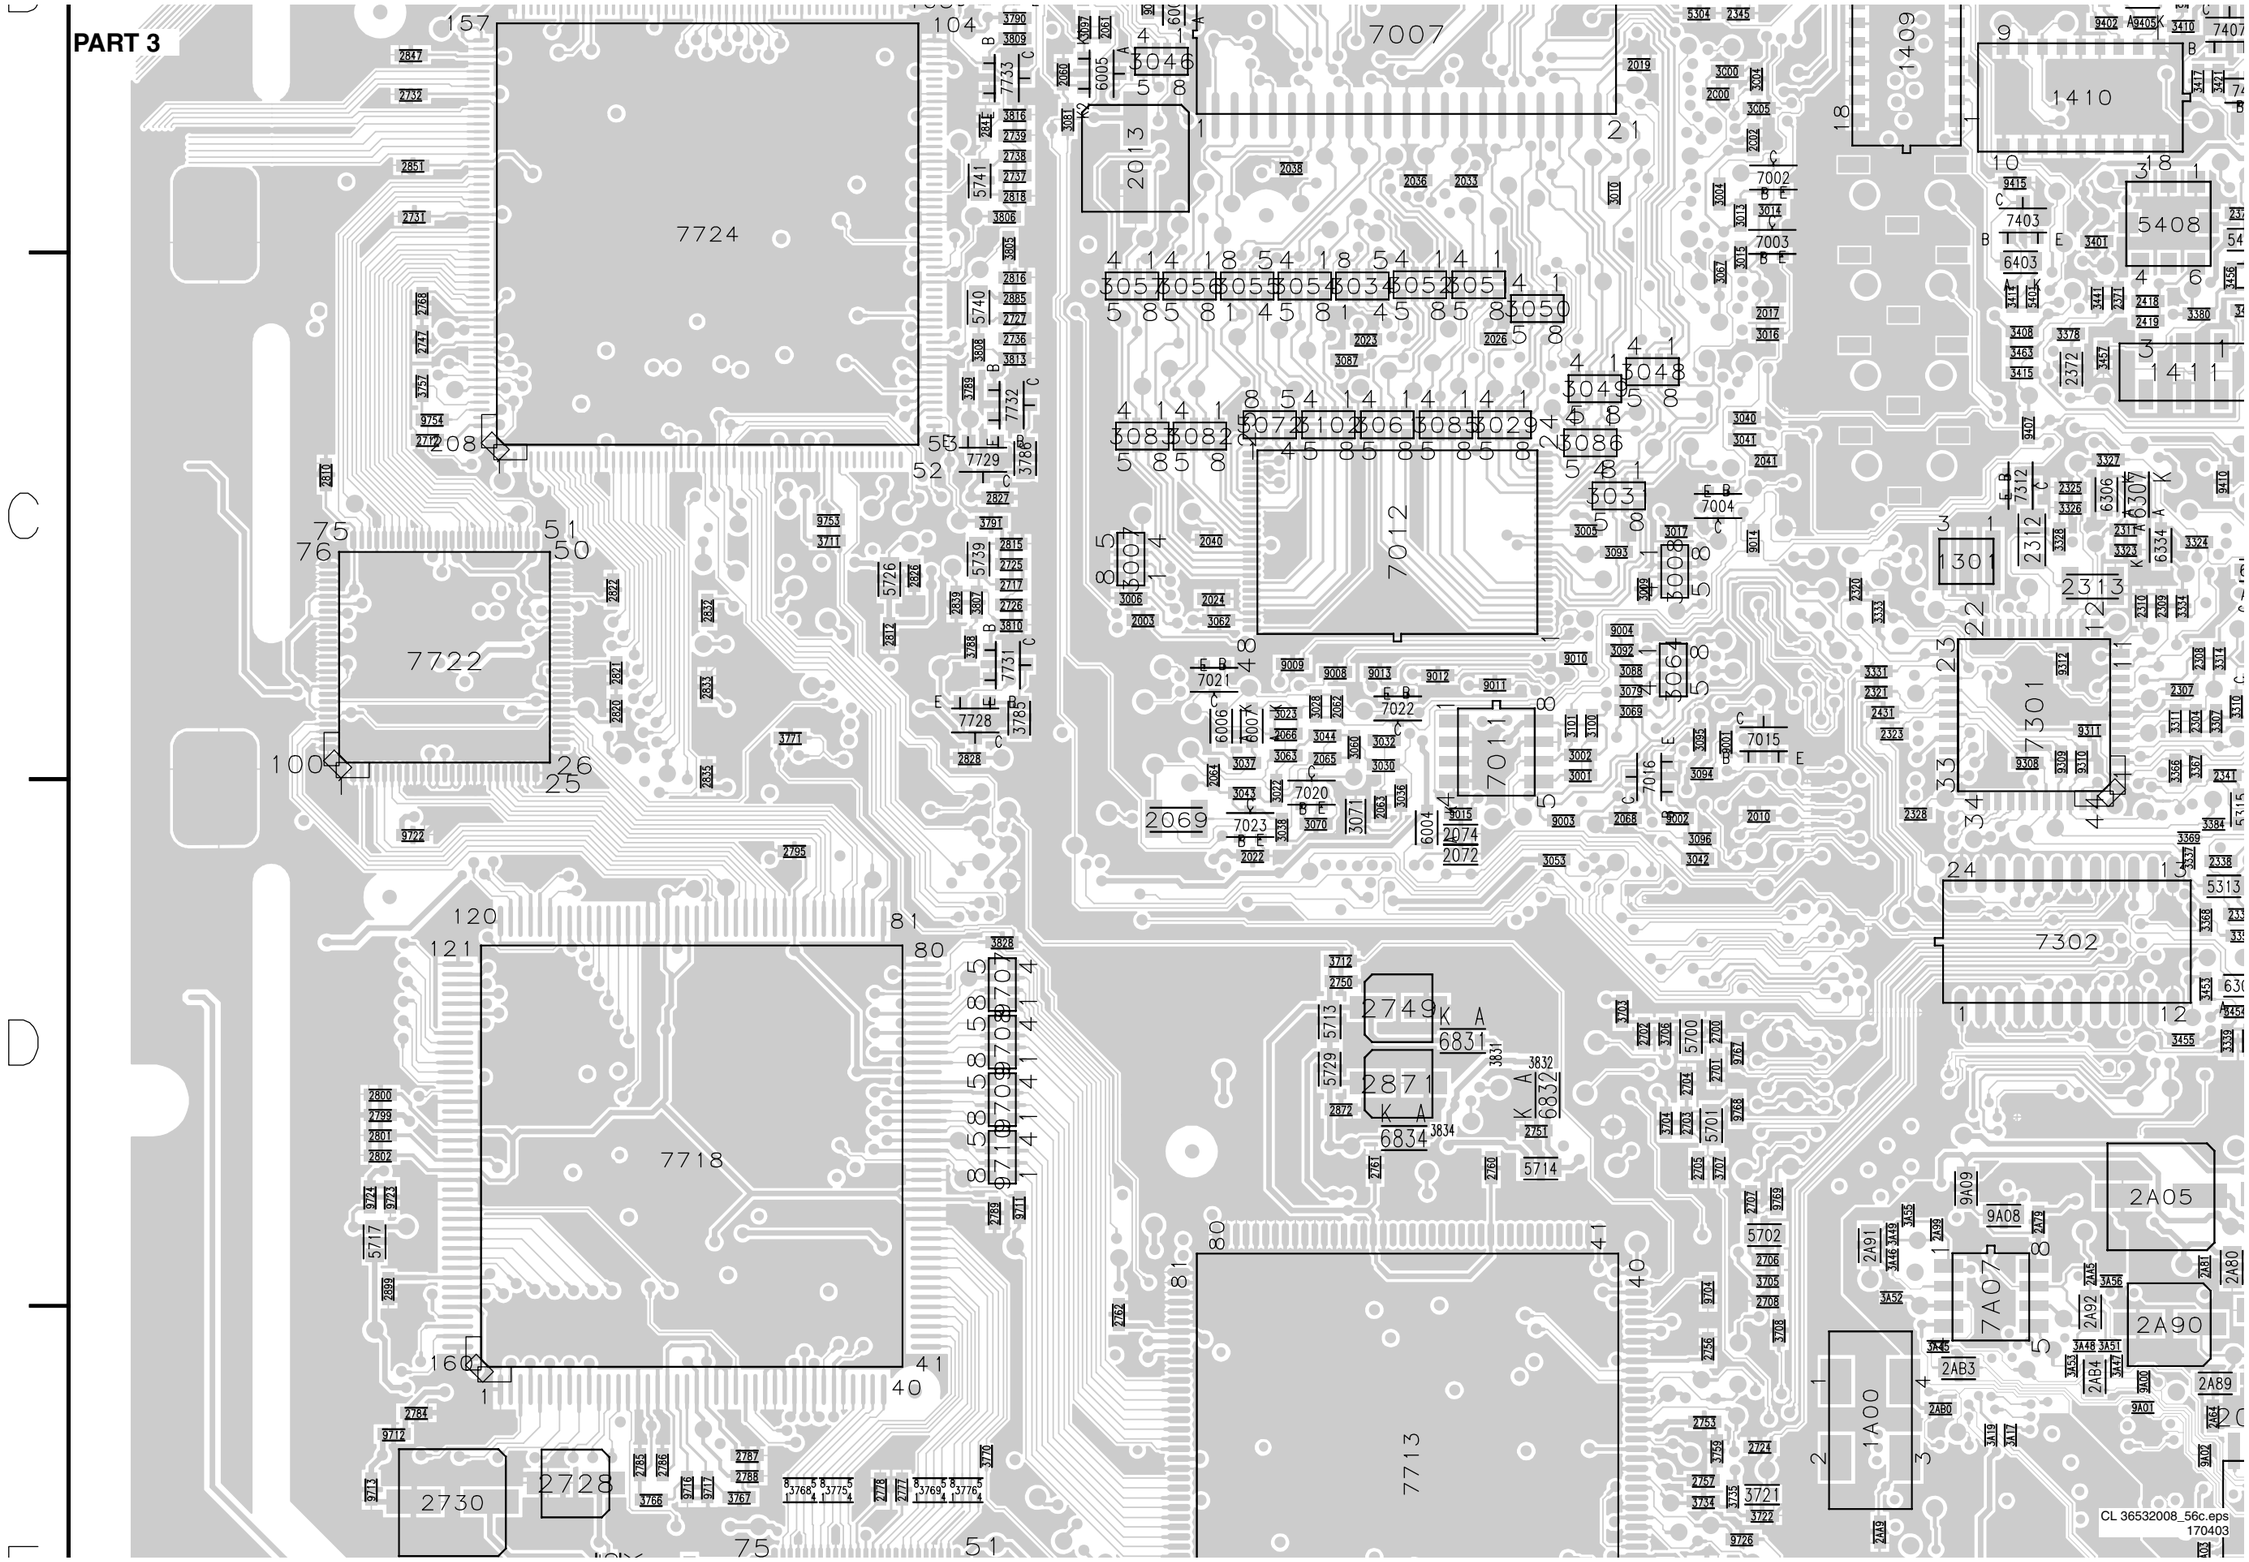


Layout Small Signal Board (Part 4 Bottom Side)

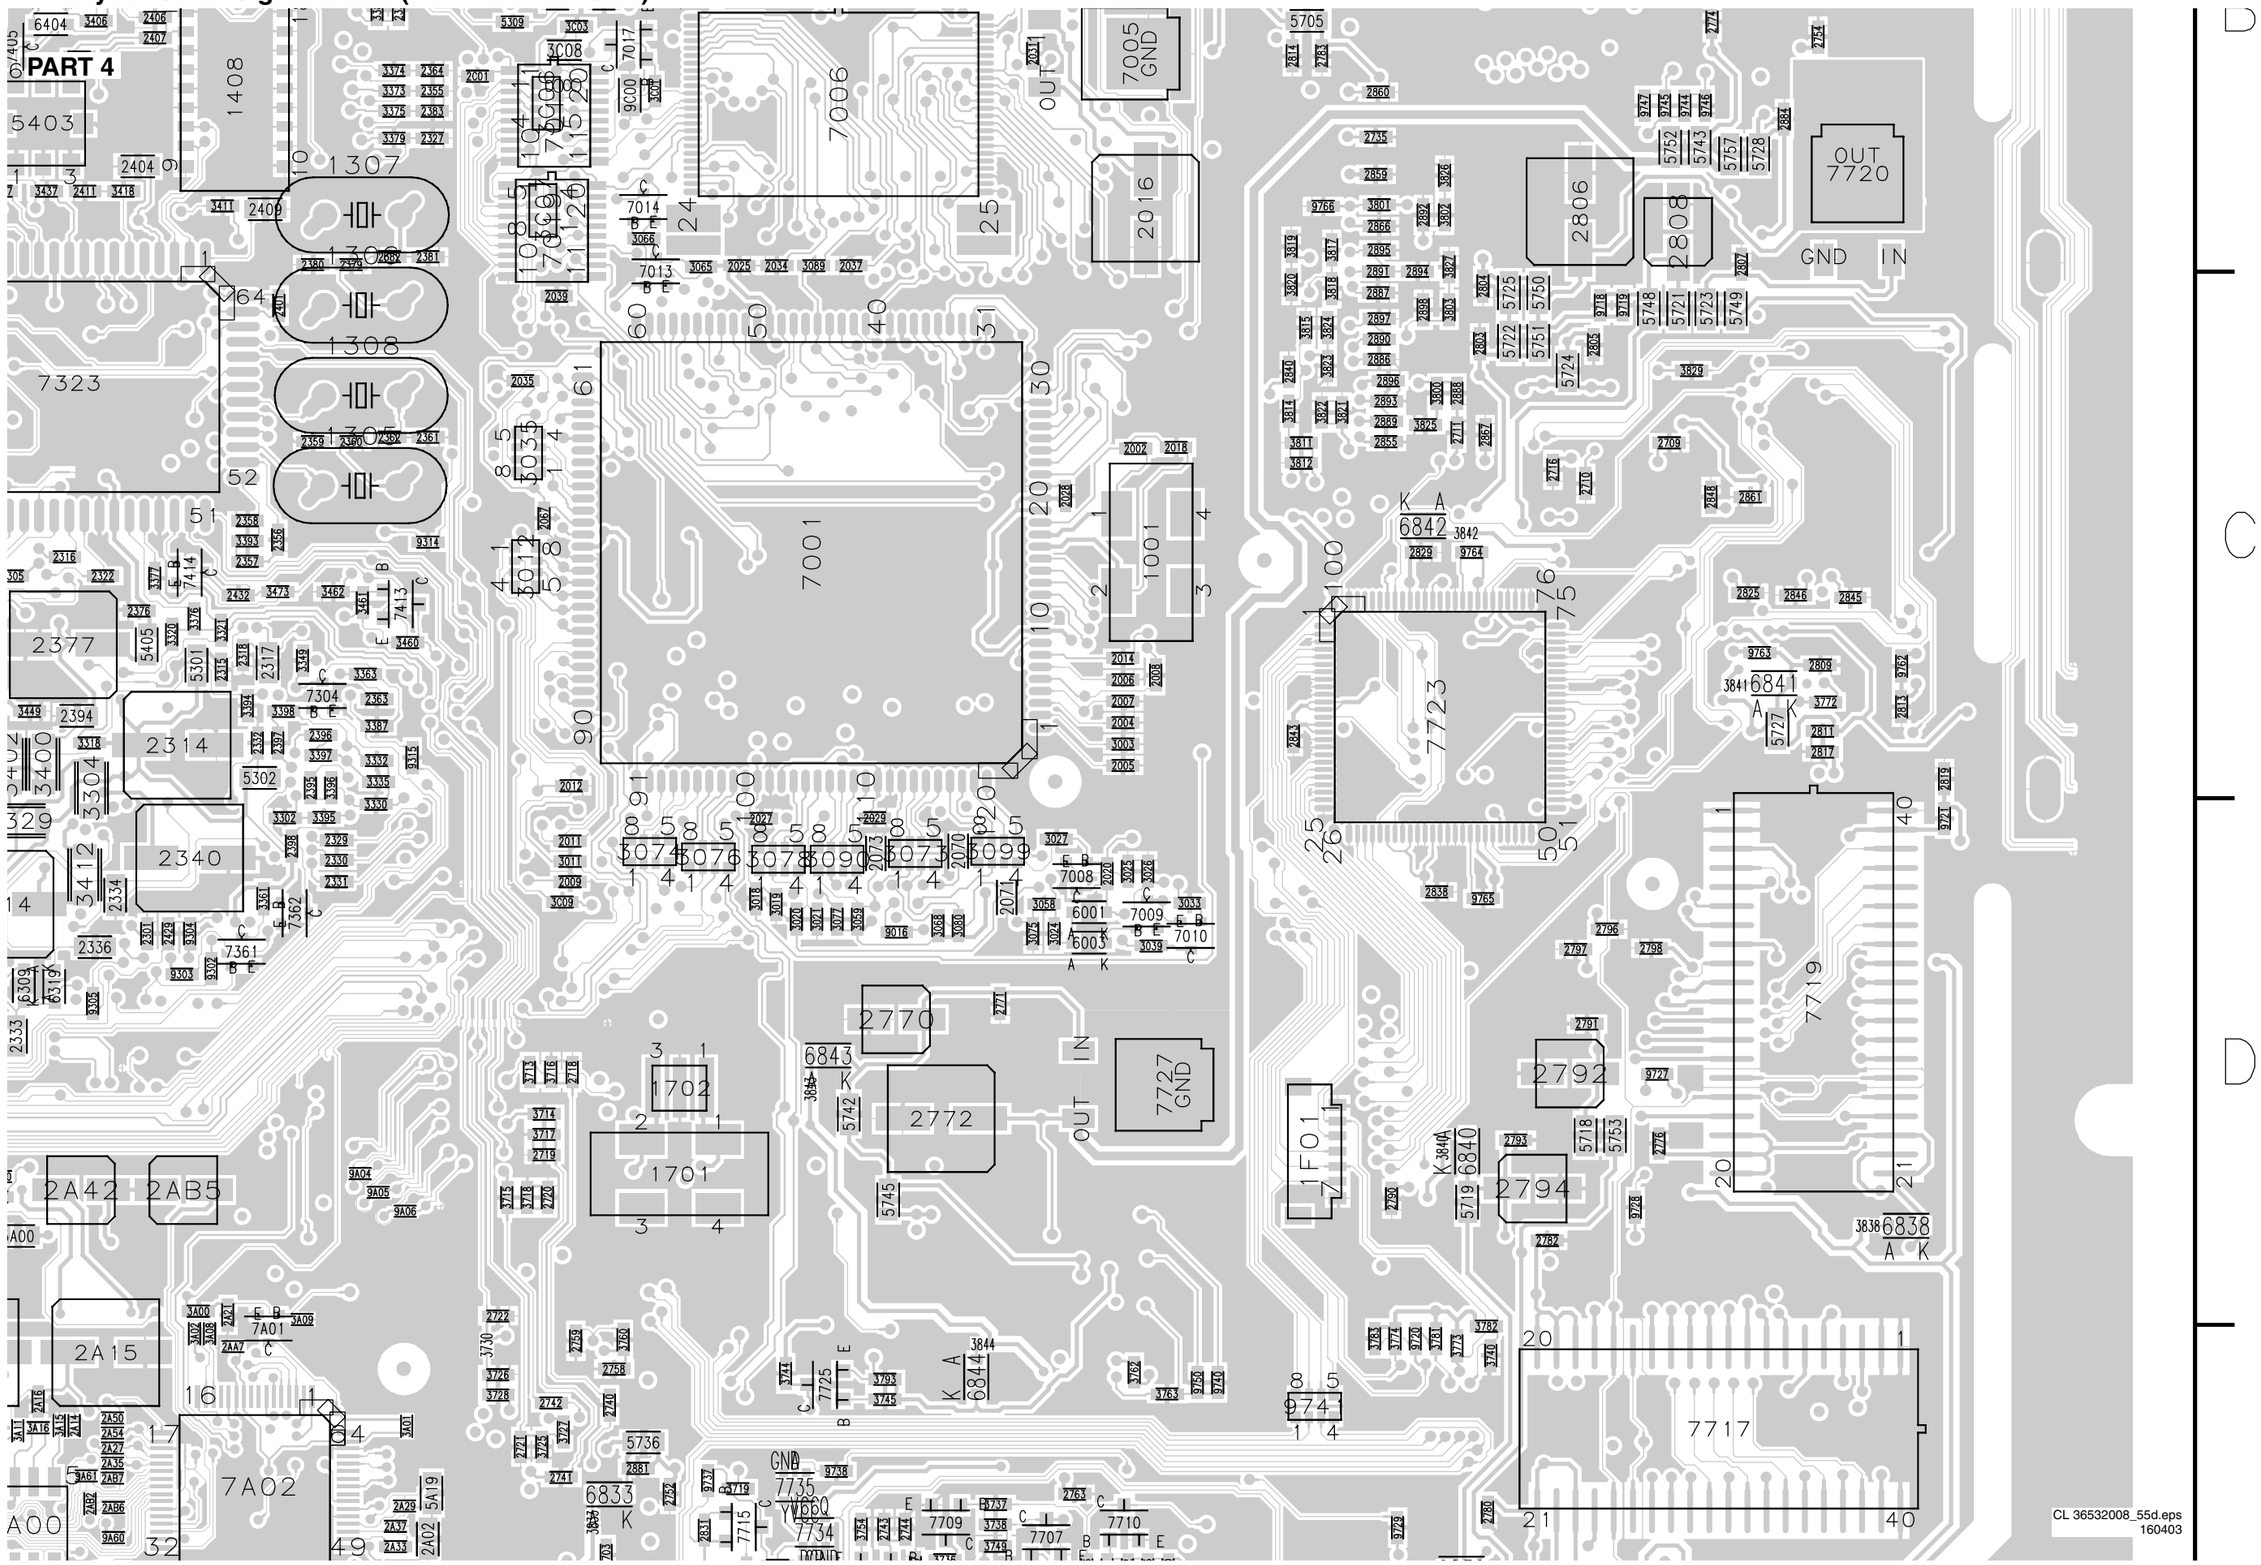

Layout Small Signal Board (Part 5 Bottom Side)

PART 5

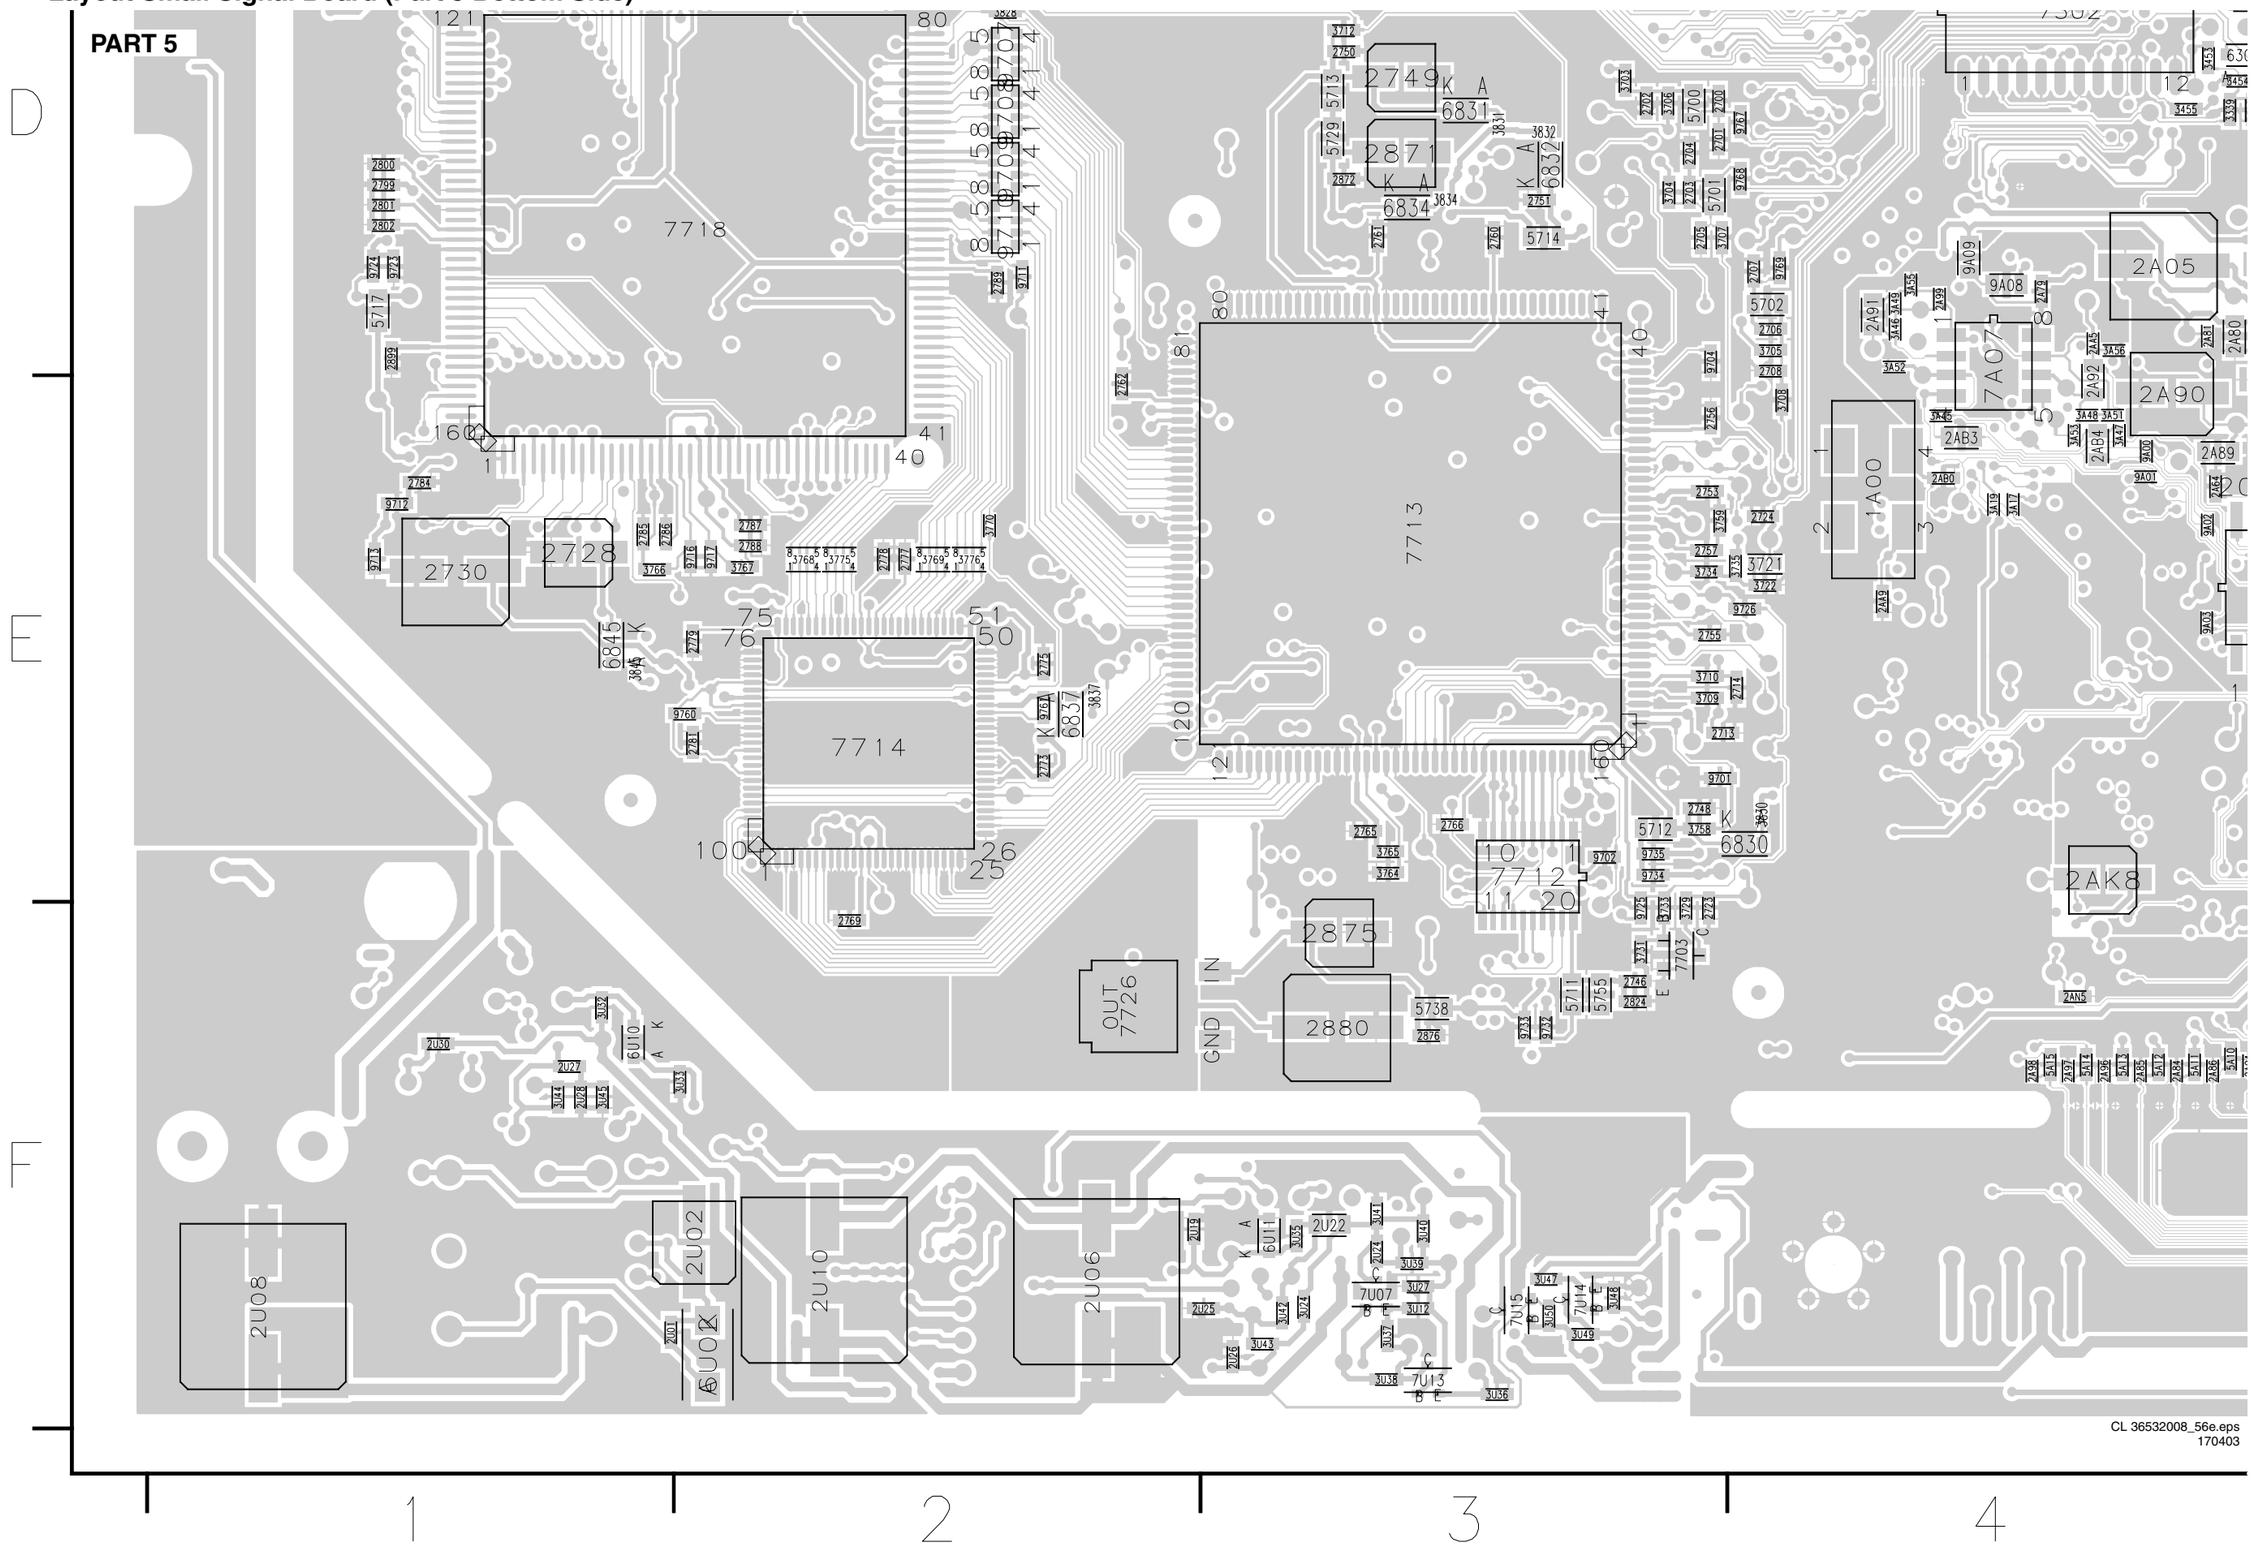

Layout Small Signal Board (Part 6 Bottom Side)



Mains Switch Panel

MAINS SWITCH PANEL

*BLUE LED FUNCTION

TO 1946 **A10**

0241
50Hz/60Hz 1 0V F001
ON/OFF LED 2 0V F002
RC5 3 3V F003
5V-STANDBY 4 5V3 F004
IR-LED 5 3V5 F005
GND KEYBOARD 6 0V F006
KEYBOARD 7 3V3 F007
LIGHT SENSOR 8 0V5 F009
+8V6 9 F008

ON_OFF_LED
RC5
5V-STANDBY
LIGHT_SENSOR
8V6

EH-S 0245
GND KEYBOARD 1 0V
KEYBOARD 2 3V3
GND KEYBOARD 3 0V

FROM/TO 0345 OF **P** TOP CONTROL

EH-S 0248
GND KEYBOARD 1
KEYBOARD 2
GND KEYBOARD 3
BACKLIGHT TC 4

TO 1245 **L** LCD BOARD (ONLY FOR SETS WITH LCD DISPLAY)

9096

ON_OFF_LED → 3060* 10K → I011 → 7060* BC847B

5V-STANDBY → 3061* 330R → I009 → 3062* 100R → I010 → BLUE

6061* 1N4148 → I013 → 3063* 10K → I014 → 7061* BC847B → I021

TLDR5400 6060* 3 1 2060* 22u

100R 3064* → 8V6

3053 560R
3052* 330R
3051 330R
5V-STANDBY

9055 → 3054 100R → 9053
9054 → 6050* TLDR5400 → I012
9052* → I020 → 9051*
I022

6051 TLUV5300
GREEN 2 RED
I006
3050 1K0
9050*

BLUE_LED_KEYB
ON_OFF_LED

8V6 → 3080 10K BLUE_LED_KEYB
8V6 → 3081 10K → I004
8V6 → 3082 150R, 3083 150R → I005 7080

7081 BC847B I001
BC337-25 I025
2080 100n

RC5

5V-STANDBY → 3040 330R → I007

1040 RC5-RECEIVER
INP, CTRL CIRCUIT, AGC, BAND PASS, DEM, PIN, VS, OUT, GND, M1, M2
4V8, 3V, 0V
9041 9043 9042
I024 I023
3042 6K8
I008 3043 470R
3041 10K
2040 100u

ROHM RECEIVER
MG

LIGHT_SENSOR

2070 470n
3071 4M7
I015
3074 10K
I016
7070-A LM358N
0V2
8V6
7070-B LM358N
I017
I018
I019
1V9
3075 4K7
6070 BPW46 LIGHT SENSOR
3070 4M7
2071 10u
3079 3K3
3073 3K3
3072 1K
3078 3K3

HOT MAINS SWITCH

MAINS AC IN
0201
F011 107V
F010 107V
SDDF 1051
F013 107V
F012 107V
0202
FROM/TO 1505 OF **A 1** TO LSP Line deflection
OR **B** Top supply
3066 3M3
I002
3M3 3057
I003

COLD


F014 3998 1K F015
9099
9098
9097

8204 000 6627.1

CL 36532008_061.eps
080503


0201 B8
0202 A10
0241 A1
0245 C1
0248 D1
1040 E5
1051 A9
2040 F4
2060 B4
2070 D8
2071 F8
2080 E3
3040 D6
3041 F6
3042 E6
3043 F7
3050 C7
3051 B7
3052 B7
3053 B6
3054 B6
3057 B8
3060 B3
3061 A3
3062 B3
3063 B5
3064 A6
3066 B8
3070 F8
3071 E8
3072 F9
3073 F9
3074 E9
3075 E10
3078 F10
3079 F9
3080 D2
3081 D3
3082 D3
3083 D4
3998 C9
6050 B6
6051 C7
6060 B4
6061 B4
6070 F7
7060 B4
7061 A5
7070-A E8
7070-B E9
7080 E3
7081 E3
9040 F6
9041 E6
9042 F6
9043 E6
9050 C7
9051 C6
9052 B6
9053 B6
9054 B6
9055 B6
9096 E1
9097 C9
9098 C9
9099 C9
F001 A2
F002 A2
F003 B2
F004 B2
F005 B2
F006 B2
F007 B2
F008 B1
F009 B2
F010 A8
F011 A8
F012 A9
F013 A9
F014 C9
F015 C10
I001 E2
I002 B8
I003 B8
I004 E3
I005 D3
I006 C7
I007 E5
I008 F6
I009 B3
I010 B3
I011 B3
I012 B7
I013 B4
I014 B4
I015 B5
I016 E9
I017 E8
I018 F8
I019 F10
I020 B6
I021 A5
I022 B7
I023 E6
I024 E6
I025 E3

Layout Mains Switch Panel (Top Side)

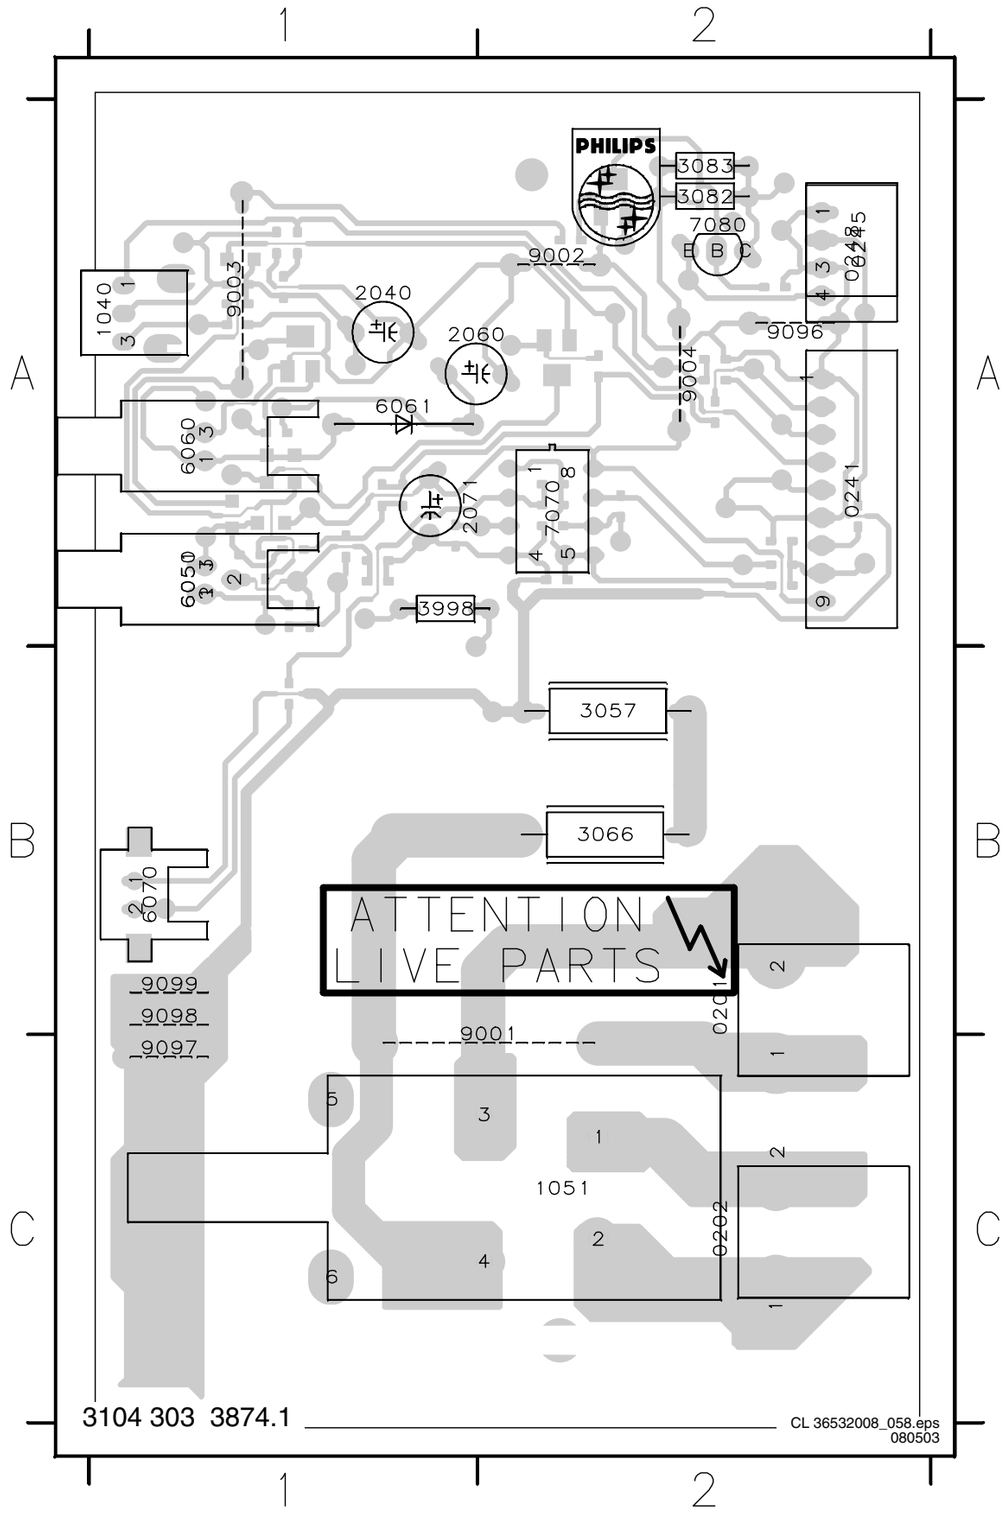

0201 B2
0202 C2
0241 A2
0245 A2
0248 A2
1040 A1
1051 C2
2040 A1
2060 A1
2071 A1
3057 B2
3066 B2
3082 A2
3083 A2
3998 A1
6050 A1
6051 A1
6060 A1
6061 A1
6070 B1
7070 A2
7080 A2
9001 B2
9002 A2
9003 A1
9004 A2
9096 A2
9097 C1
9098 B1
9099 B1


Layout Mains Switch Panel (Bottom Side)

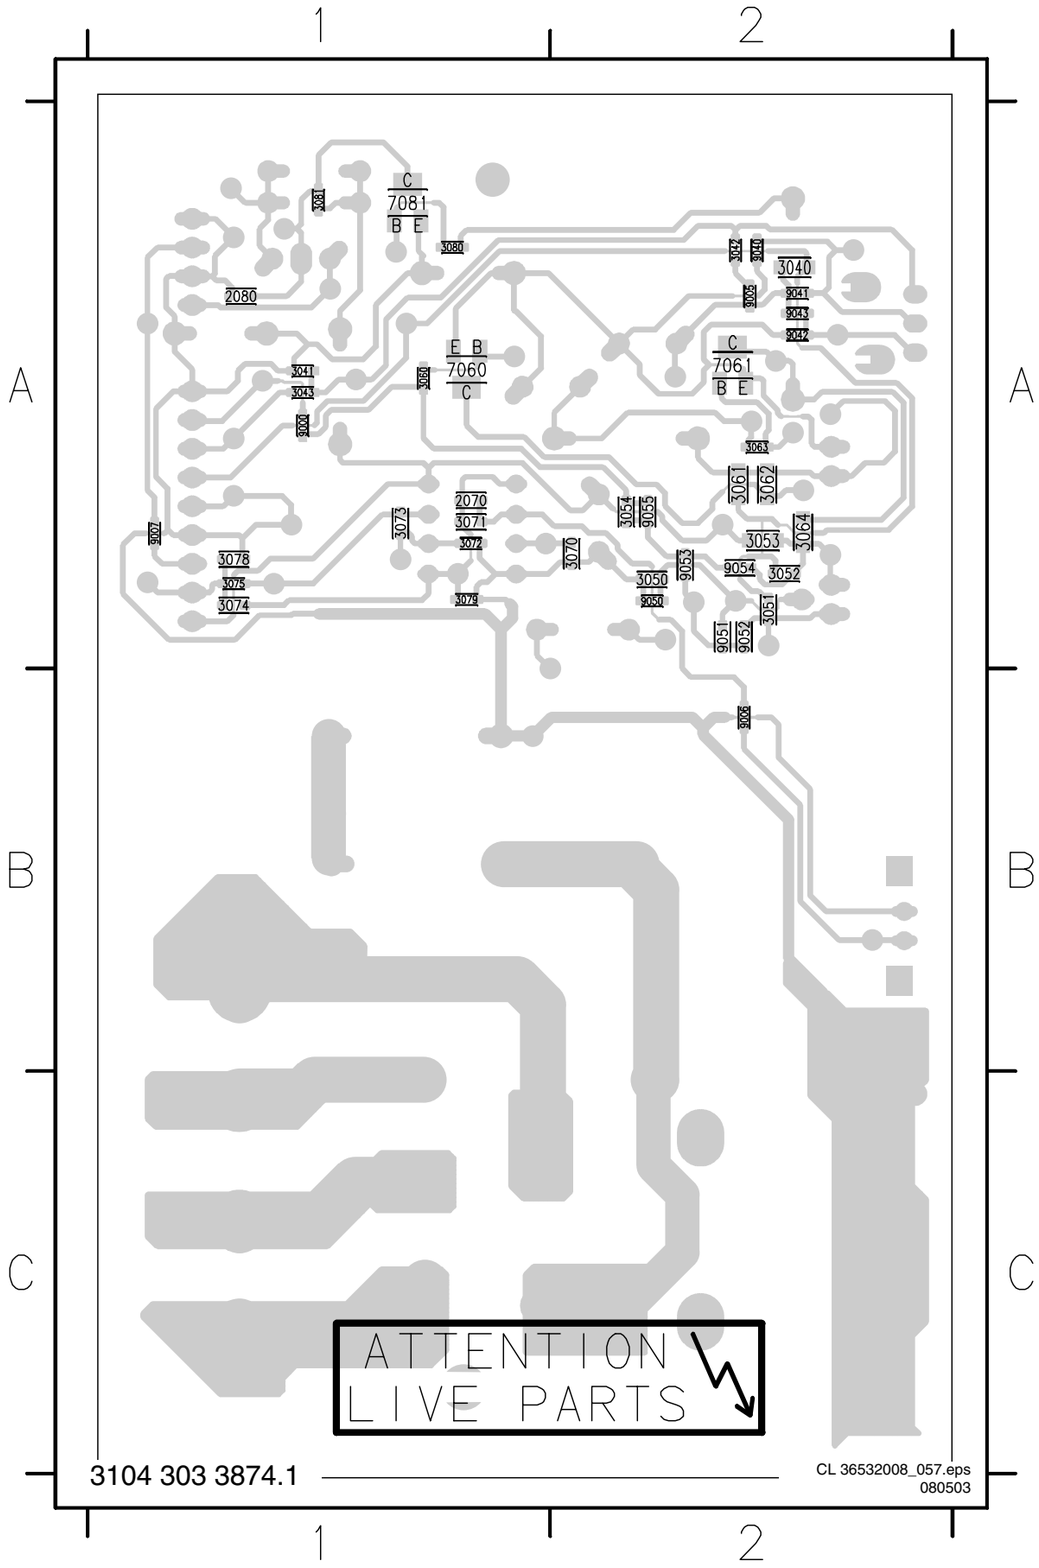


2070 A1
2080 A1
3040 A2
3041 A1
3042 A2
3043 A1
3050 A2
3051 A2
3052 A2
3053 A2
3054 A2
3060 A1
3061 A2
3062 A2
3063 A2
3064 A2
3070 A2
3071 A1
3072 A1
3073 A1
3074 A1
3075 A1
3078 A1
3079 A1
3080 A1
3081 A1
7060 A1
7061 A2
7081 A1
9000 A1
9005 A2
9006 B2
9007 A1
9040 A2
9041 A2
9042 A2
9043 A2
9050 A2
9051 A2
9052 A2
9053 A2
9054 A2
9055 A2

CRT Panel


0031 B7	1237-I D11	1298-K F14	2318 G12	2357 H10	2503 C3	3305 A12	3350 D9	3505 A3	3516 B8	3527 E4	3538 A2	5303 B12	6302 D10	6422 E8	7350 E6	9301 F10	9315 A12	9501 A4	F021 H14	F114 F10	F126 D1	I208 D3	I225 G5	I238 E9	I253 G2	I270 A2	I281 C5	I292 D10
0033 D7	1298-A F14	1424 H2	2319 G9	2358 B13	2504 D4	3334 G12	3351 E9	3506 B4	3517 B9	3528 F4	3539 B3	5304 F9	6303 D9	6426 F9	7500 A2	9302 G11	9320 H5	9502 C4	F101 B2	F115 H14	F127 D1	I209 D3	I226 G5	I239 B9	I254 G9	I271 B2	I282 E2	I293 F11
0035 A7	1298-B F13	1434 H15	2320 G9	2359 B13	2505 E3	3338 E10	3352 E9	3507 A4	3518 C10	3529 E5	3540 C2	5305 C2	6305 C9	6427 F9	7501 A4	9303 A5	9321 H5	9503 E4	F102 B2	F116 A13	F128 E1	I210 C4	I227 H5	I240 B9	I258 B1	I272 B4	I283 F2	I294 F8
1237-A F14	1298-C D11	1435 C11	2324 H14	2403 H8	2506 F4	3339 E10	3401 G5	3508 B4	3519 C5	3530 E5	3541 D2	5308 A12	6306 D9	6428 E9	7502 A4	9304 A6	9322 B2	9504 B14	F103 C1	F117 D1	F129 E1	I211 E9	I229 G6	I241 B9	I260 A6	I273 B5	I284 F4	I295 G11
1237-B G11	1298-D F13	1940 A1	2338 A7	2404 H8	2510 E8	3340 D10	3402 G3	3509 A5	3520 C5	3531 C3	3542 E2	5309 H4	6307 D9	6430 F8	7503 D2	9305 A7	9323 B4	9505 B15	F104 B1	F118 D1	I201 B3	I212 F9	I231 G5	I244 A12	I261 A6	I274 A5	I285 E4	
1237-C F13	1298-E E11	2301 A4	2339 B7	2405 G7	2511 F8	3341 H4	3403 G4	3510 A5	3521 F2	5532 D4	3543 F2	5310 H4	6400 H7	6500 B2	7504 D4	9306 C6	9324 D4	9506 G10	F105 B1	F119 B1	I202 B3	I213 F9	I232 H5	I245 A12	I263 C6	I275 A5	I286 F5	
1237-D E11	1298-F F11	2302 C4	2340 D7	2407 A15	2512 H2	3345 G8	3404 G4	3511 D2	3522 F2	5533 C4	3544 F7	5400 G5	6405 G7	6501 D2	7505 C4	9307 C6	9325 F4	9507 H8	F109 D5	F120 C2	I203 A4	I214 G13	I233 D10	I246 A12	I264 C6	I276 A5	I287 E5	
1237-E F14	1298-G F11	2303 E4	2341 F5	2408 G1	2514 C1	3346 G11	3501 B2	5512 D3	3523 F3	5534 D4	3545 B2	5500 A3	6406 B9	6502 F2	7506 E2	9308 E6	9401 G7	F017 E10	F110 H3	F121 B2	I204 C7	I215 F3	I234 E10	I248 G12	I266 E6	I277 D2	I288 E5	
1237-F E11	1298-H D11	2312 F8	2342 B9	2409 H3	3301 H5	3347 H14	3502 B2	5513 D3	3524 F3	5535 A2	3546 C2	5501 D3	6407 B9	6503 H13	7507 E4	9309 E6	9402 A14	F018 E10	F111 H3	F123 C1	I205 A2	I216 F3	I235 E10	I249 G13	I267 E6	I278 D4	I289 H4	
1237-G F11	1298-I F11	2313 H5	2343 A13	2503 D1	3303 D1	3348 G13	3503 B3	5514 D3	3525 E3	5536 C2	3547 E2	5502 F3	6420 F8	7330 A6	7508 E4	9310 D1	9403 B14	F019 D10	F112 H4	F124 C11	I206 C2	I222 G3	I236 D9	I250 G13	I268 E7	I279 D5	I290 D9	
1237-H H11	1298-J G11	2317 H14	2348 A13	2502 B4	3304 E1	3349 G12	3504 B3	3515 B8	3526 F4	5537 E2	3999 D1	6301 E9	6421 F8	7340 C6	9300 A14	9314 C7	9404 H13	F020 F10	F113 G1	F125 H3	I207 E2	I223 G4	I237 E9	I251 H14	I269 A7	I280 C5	I291 D9	

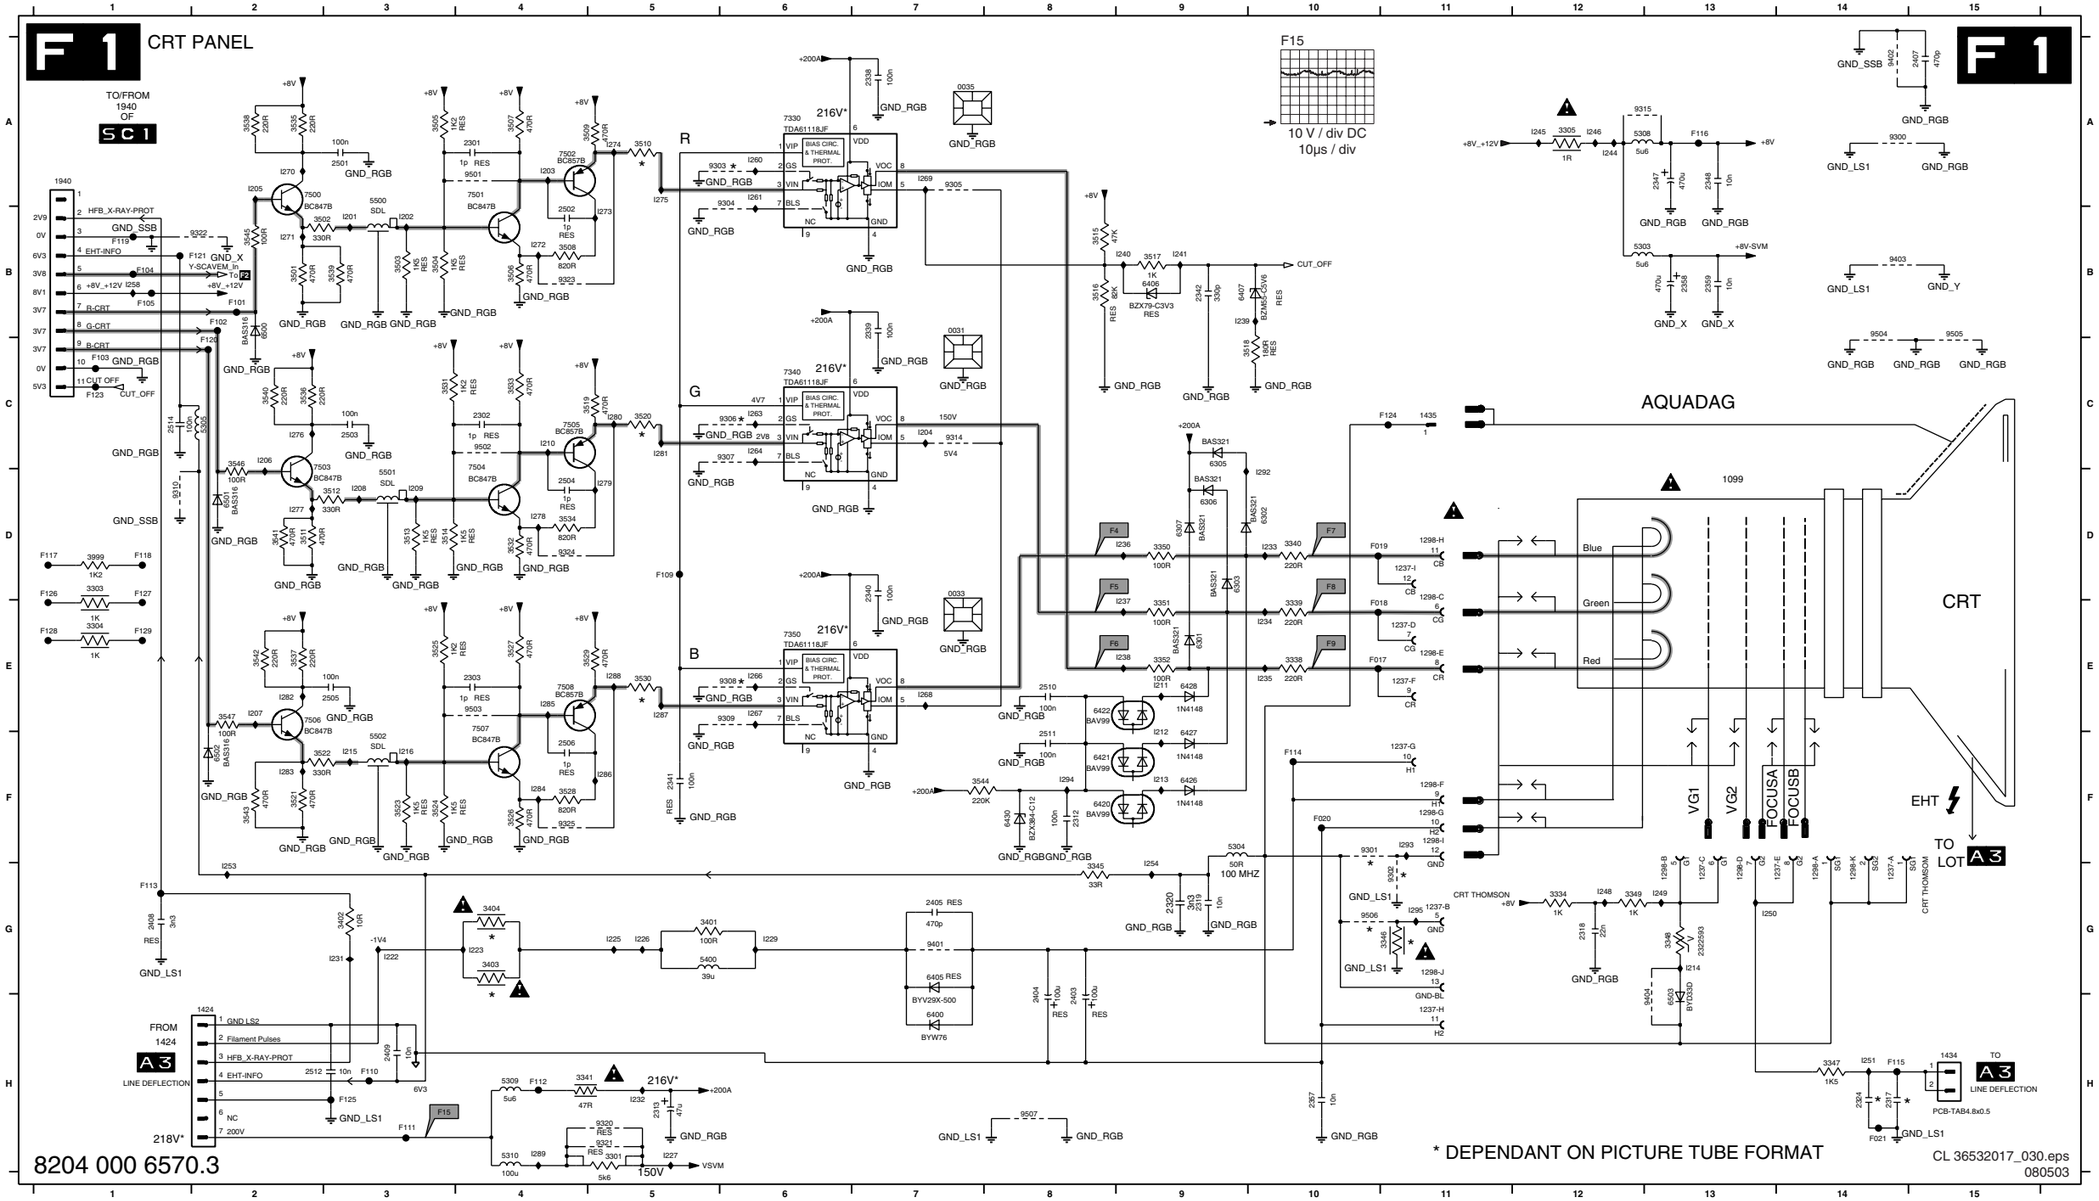

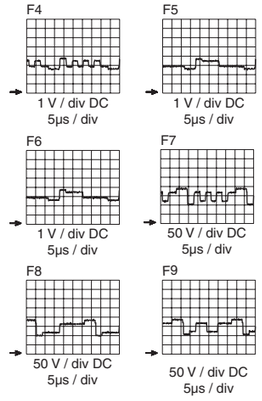


CRT/ Auto SCAVEM Panel

1483 C9	2430 C1	2438 B4	3410 A5	3417 C6	3448 B6	3456 B3	3471 C6	3489 C3	6402 E7	7414 A7	7429 C7	9407 E1	I128 C8	I133 B2	I138 C6	I143 D7	I149 B3	I155 E1	I163 E7	I179 A5	I184 B4	I189 E1
2410 C2	2431 C2	2439 B6	3411 B5	3422 D4	3449 C6	3458 B5	3473 A7	3492 B4	6403 C7	7415 D7	7430 C7	9408 E1	I129 D8	I134 C6	I139 B5	I144 C6	I150 A7	I157 E4	I167 D7	I180 B3	I185 C3	I190 D8
2411 B2	2435 D7	2445 C8	3412 D5	3423 B4	3451 C2	3459 B2	3474 D3	5300 D8	6404 C7	7422 B2	9311 D8	9409 C3	I130 A7	I135 C3	I140 D3	I145 D6	I151 A7	I158 B4	I175 C7	I181 B3	I186 C3	
2420 B4	2436 A5	3310 C9	3413 E5	3424 B4	3453 B3	3460 D5	3478 E7	5301 C8	6431 C1	7427 B3	9312 C8	9410 E1	I131 B7	I136 A5	I141 D5	I147 E5	I152 E7	I161 A7	I177 B3	I182 B3	I187 C3	
2428 D6	2437 D4	3356 C8	3416 C6	3425 B4	3454 D6	3465 C7	3488 C3	6401 B7	6432 B1	7428 C3	9406 C8	I127 E1	I132 B6	I137 B1	I142 C5	I148 C8	I153 E7	I162 E7	I178 C3	I183 B4	I188 D1	

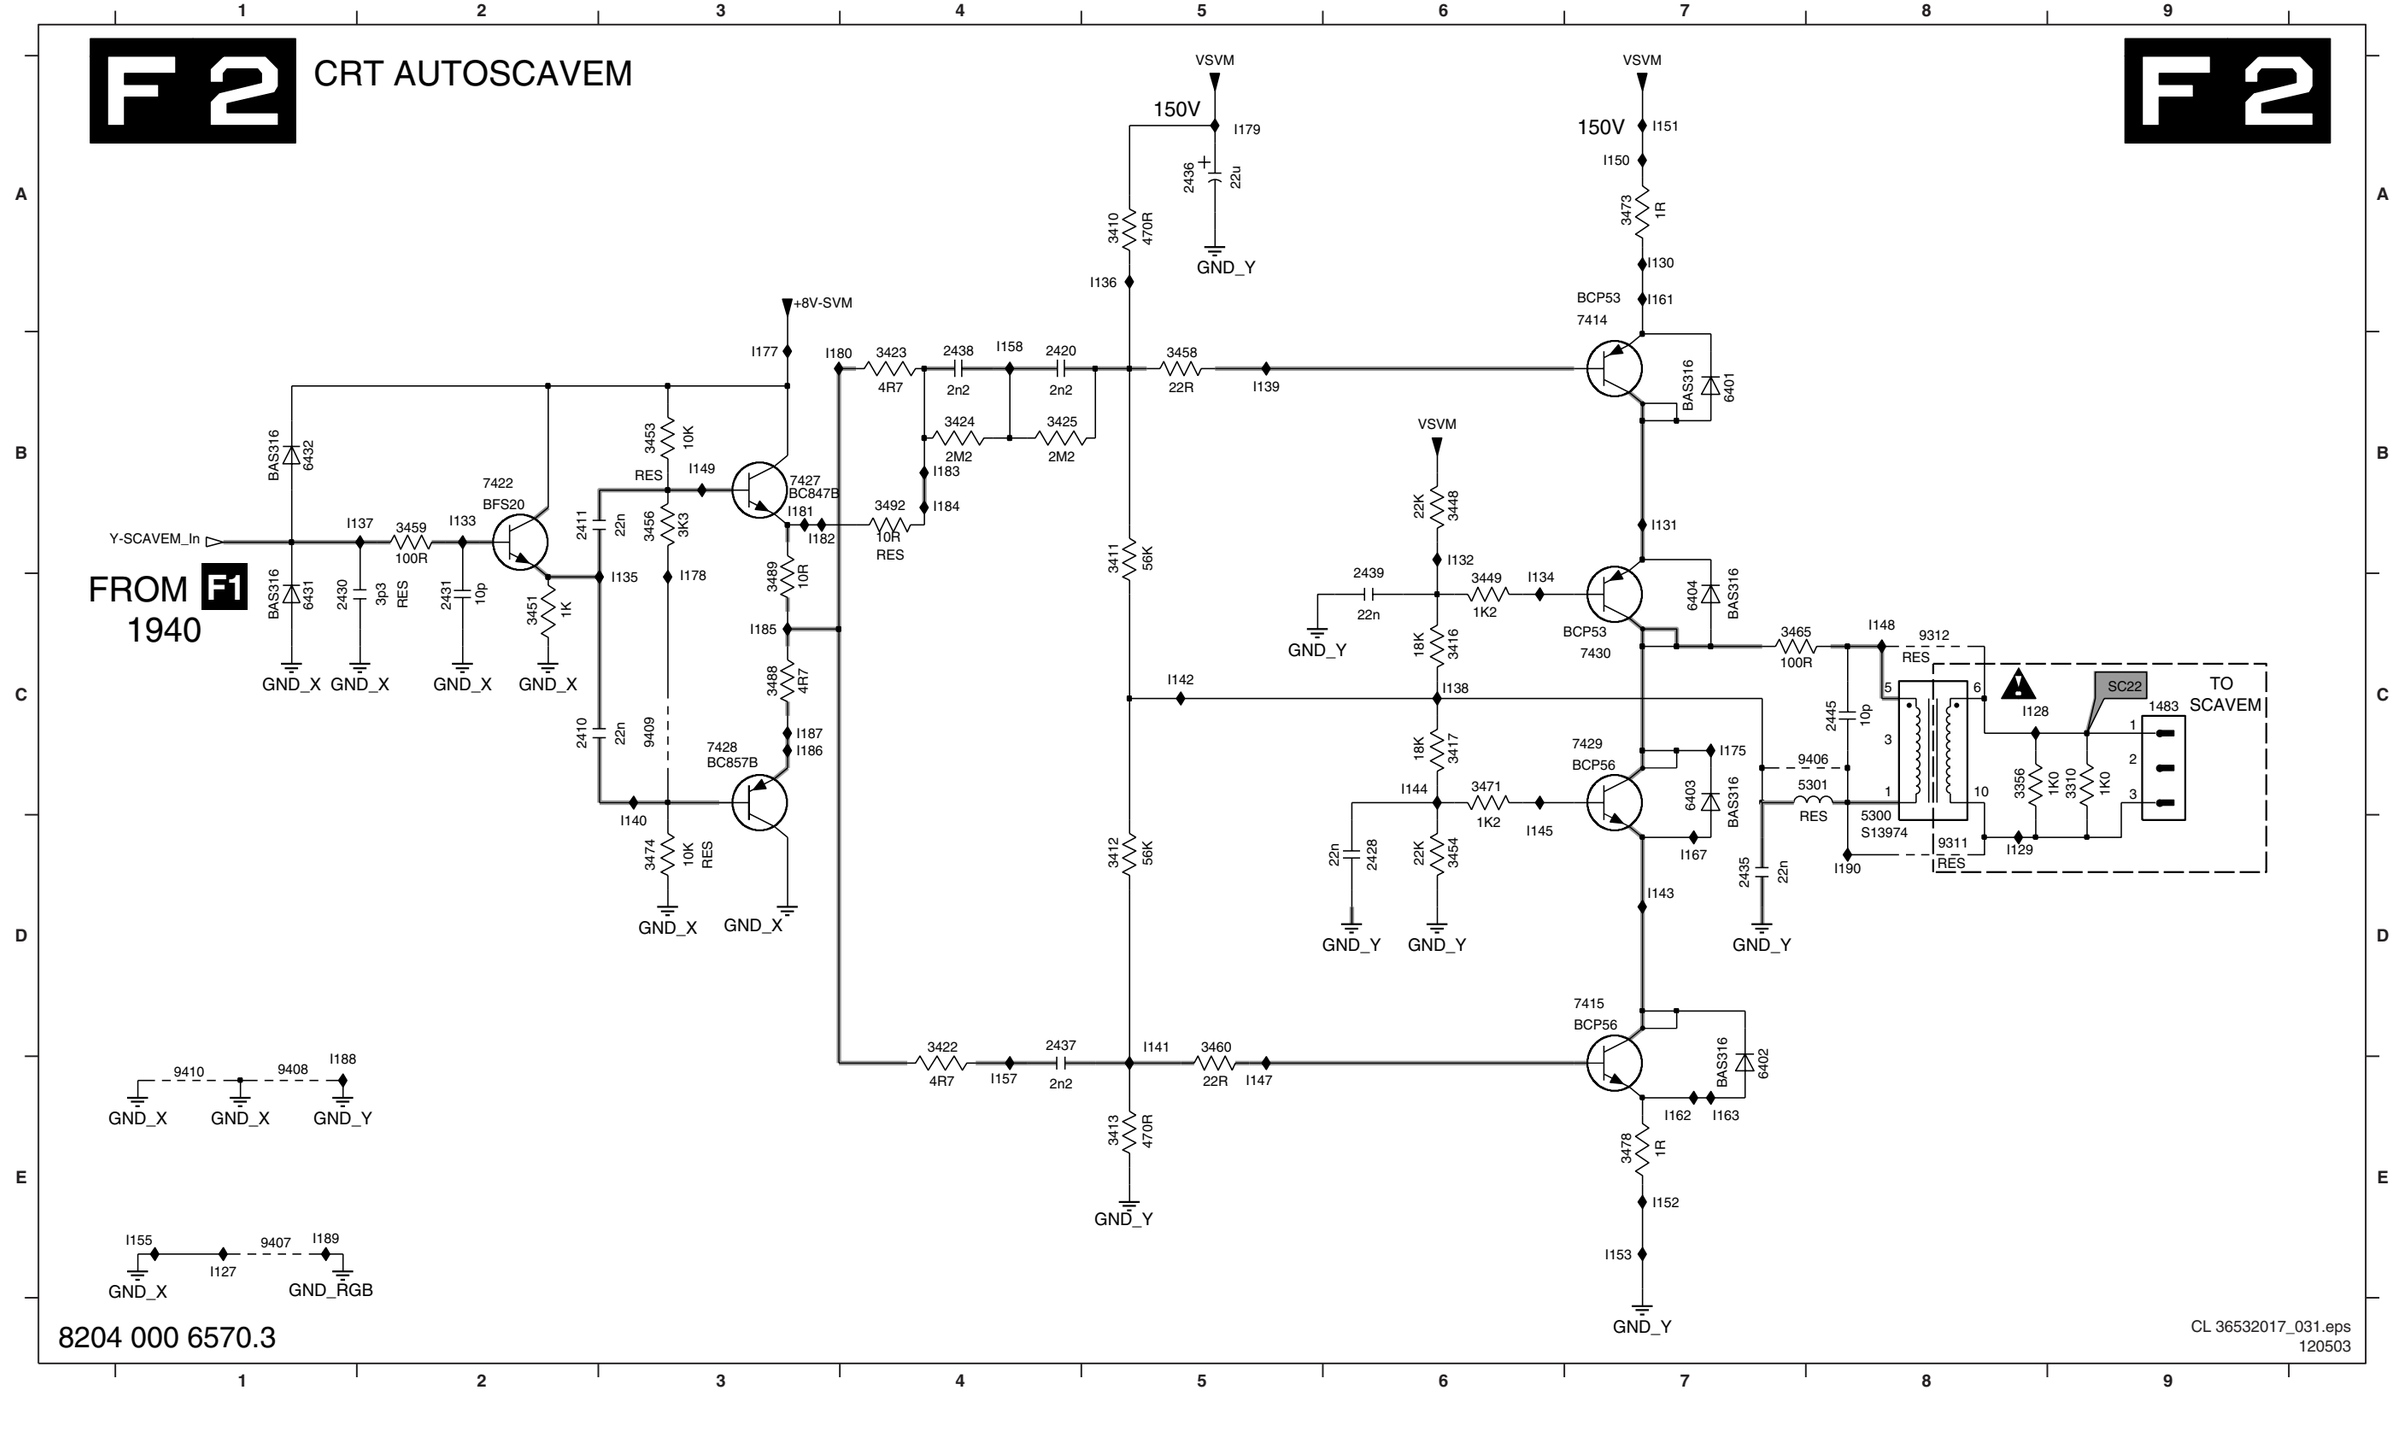


Layout CRT / Auto SCAVEM Panel (Top Side)

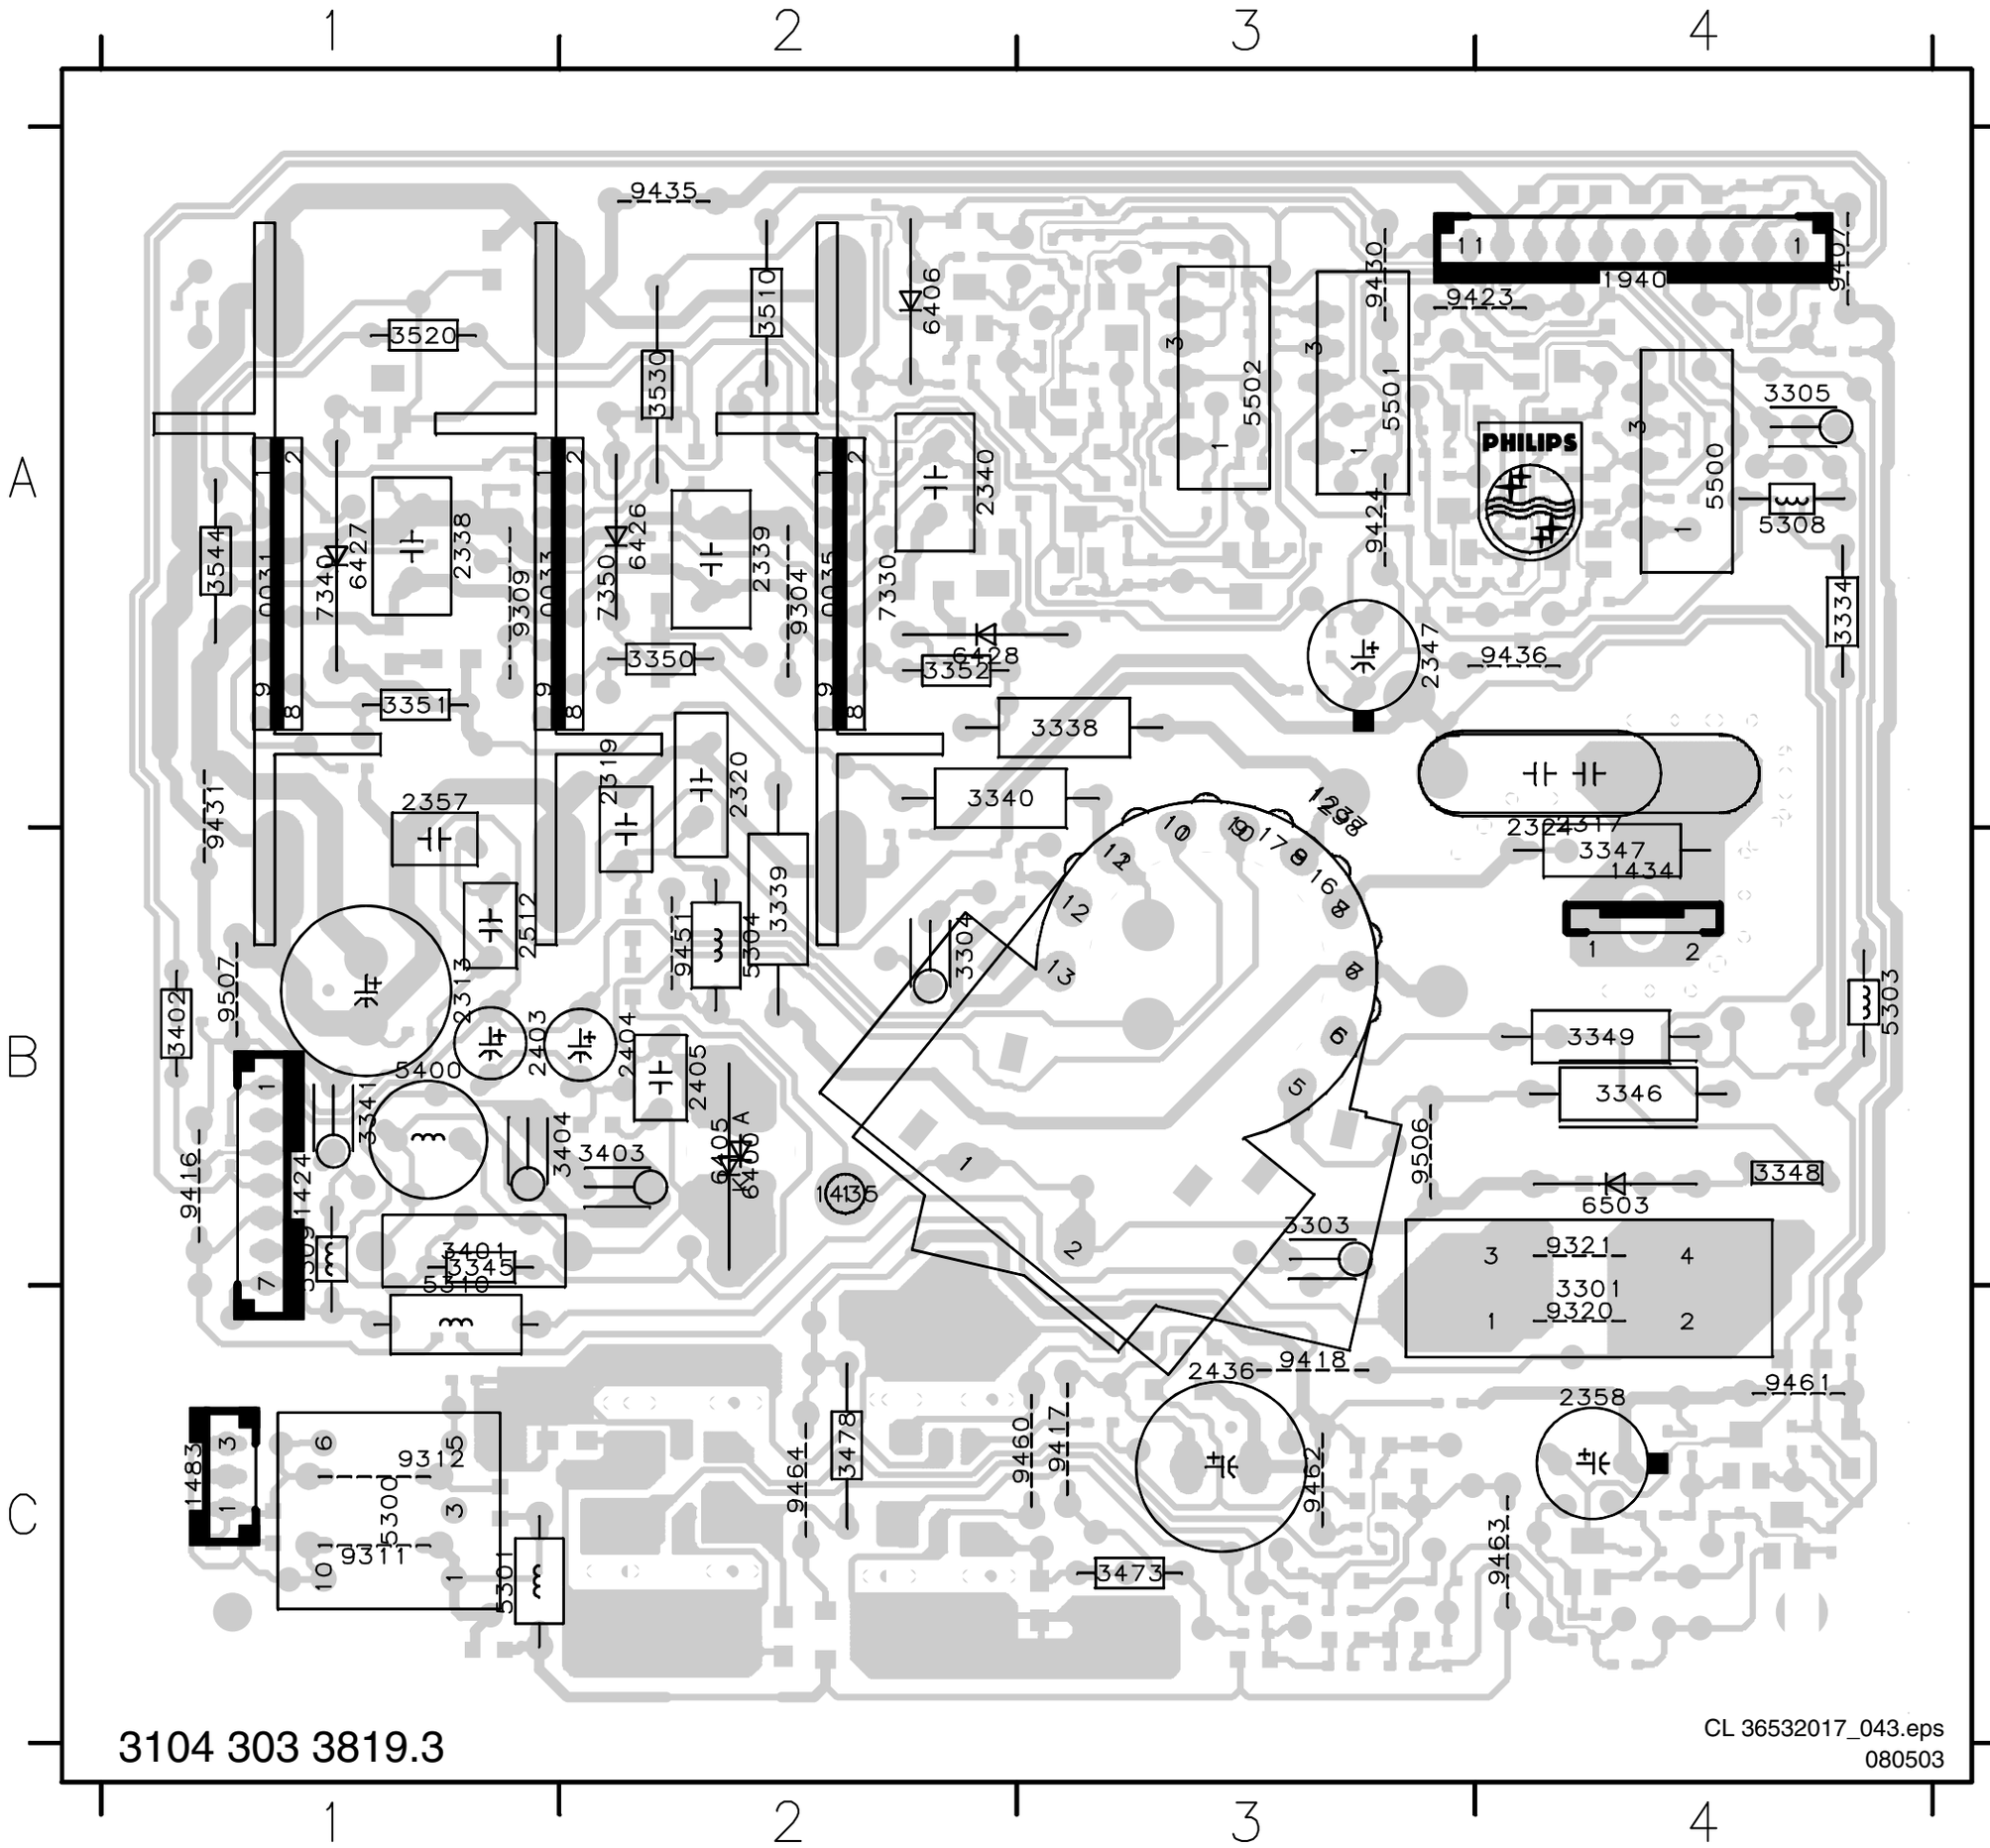

0031	A1	5301	C2
0033	A1	5303	B4
0035	A2	5304	B2
1237	A3	5308	A4
1298	C3	5309	C1
1424	B1	5310	C1
1434	B4	5400	B1
1435	B2	5500	A4
1483	C1	5501	A3
1940	A4	5502	A3
2313	B1	6400	B2
2317	A4	6405	B2
2319	B2	6406	A2
2320	A2	6426	A2
2324	A4	6427	A1
2338	A1	6428	A2
2339	A2	6503	B4
2340	A2	7330	A2
2347	A3	7340	A1
2357	A1	7350	A2
2358	C4	9304	A2
2403	B1	9309	A1
2404	B2	9311	C1
2405	B2	9312	C1
2436	C3	9320	C4
2512	B1	9321	B4
3301	C4	9407	A4
3303	C3	9416	B1
3304	B2	9417	C3
3305	A4	9418	C3
3334	A4	9423	A4
3338	A3	9424	A3
3339	B2	9430	A3
3340	B2	9431	A1
3341	B1	9435	A2
3345	B1	9436	A4
3346	B4	9451	B2
3347	B4	9460	C2
3348	B4	9461	C4
3349	B4	9462	C3
3350	A2	9463	C4
3351	A1	9464	C2
3352	A2	9506	B3
3401	B2	9507	B1
3402	B1		
3403	B2		
3404	B1		
3473	C3		
3478	C2		
3510	A2		
3520	A1		
3530	A2		
3544	A1		
5300	C1		

Layout CRT / Auto SCAVEM Panel (Bottom Side)

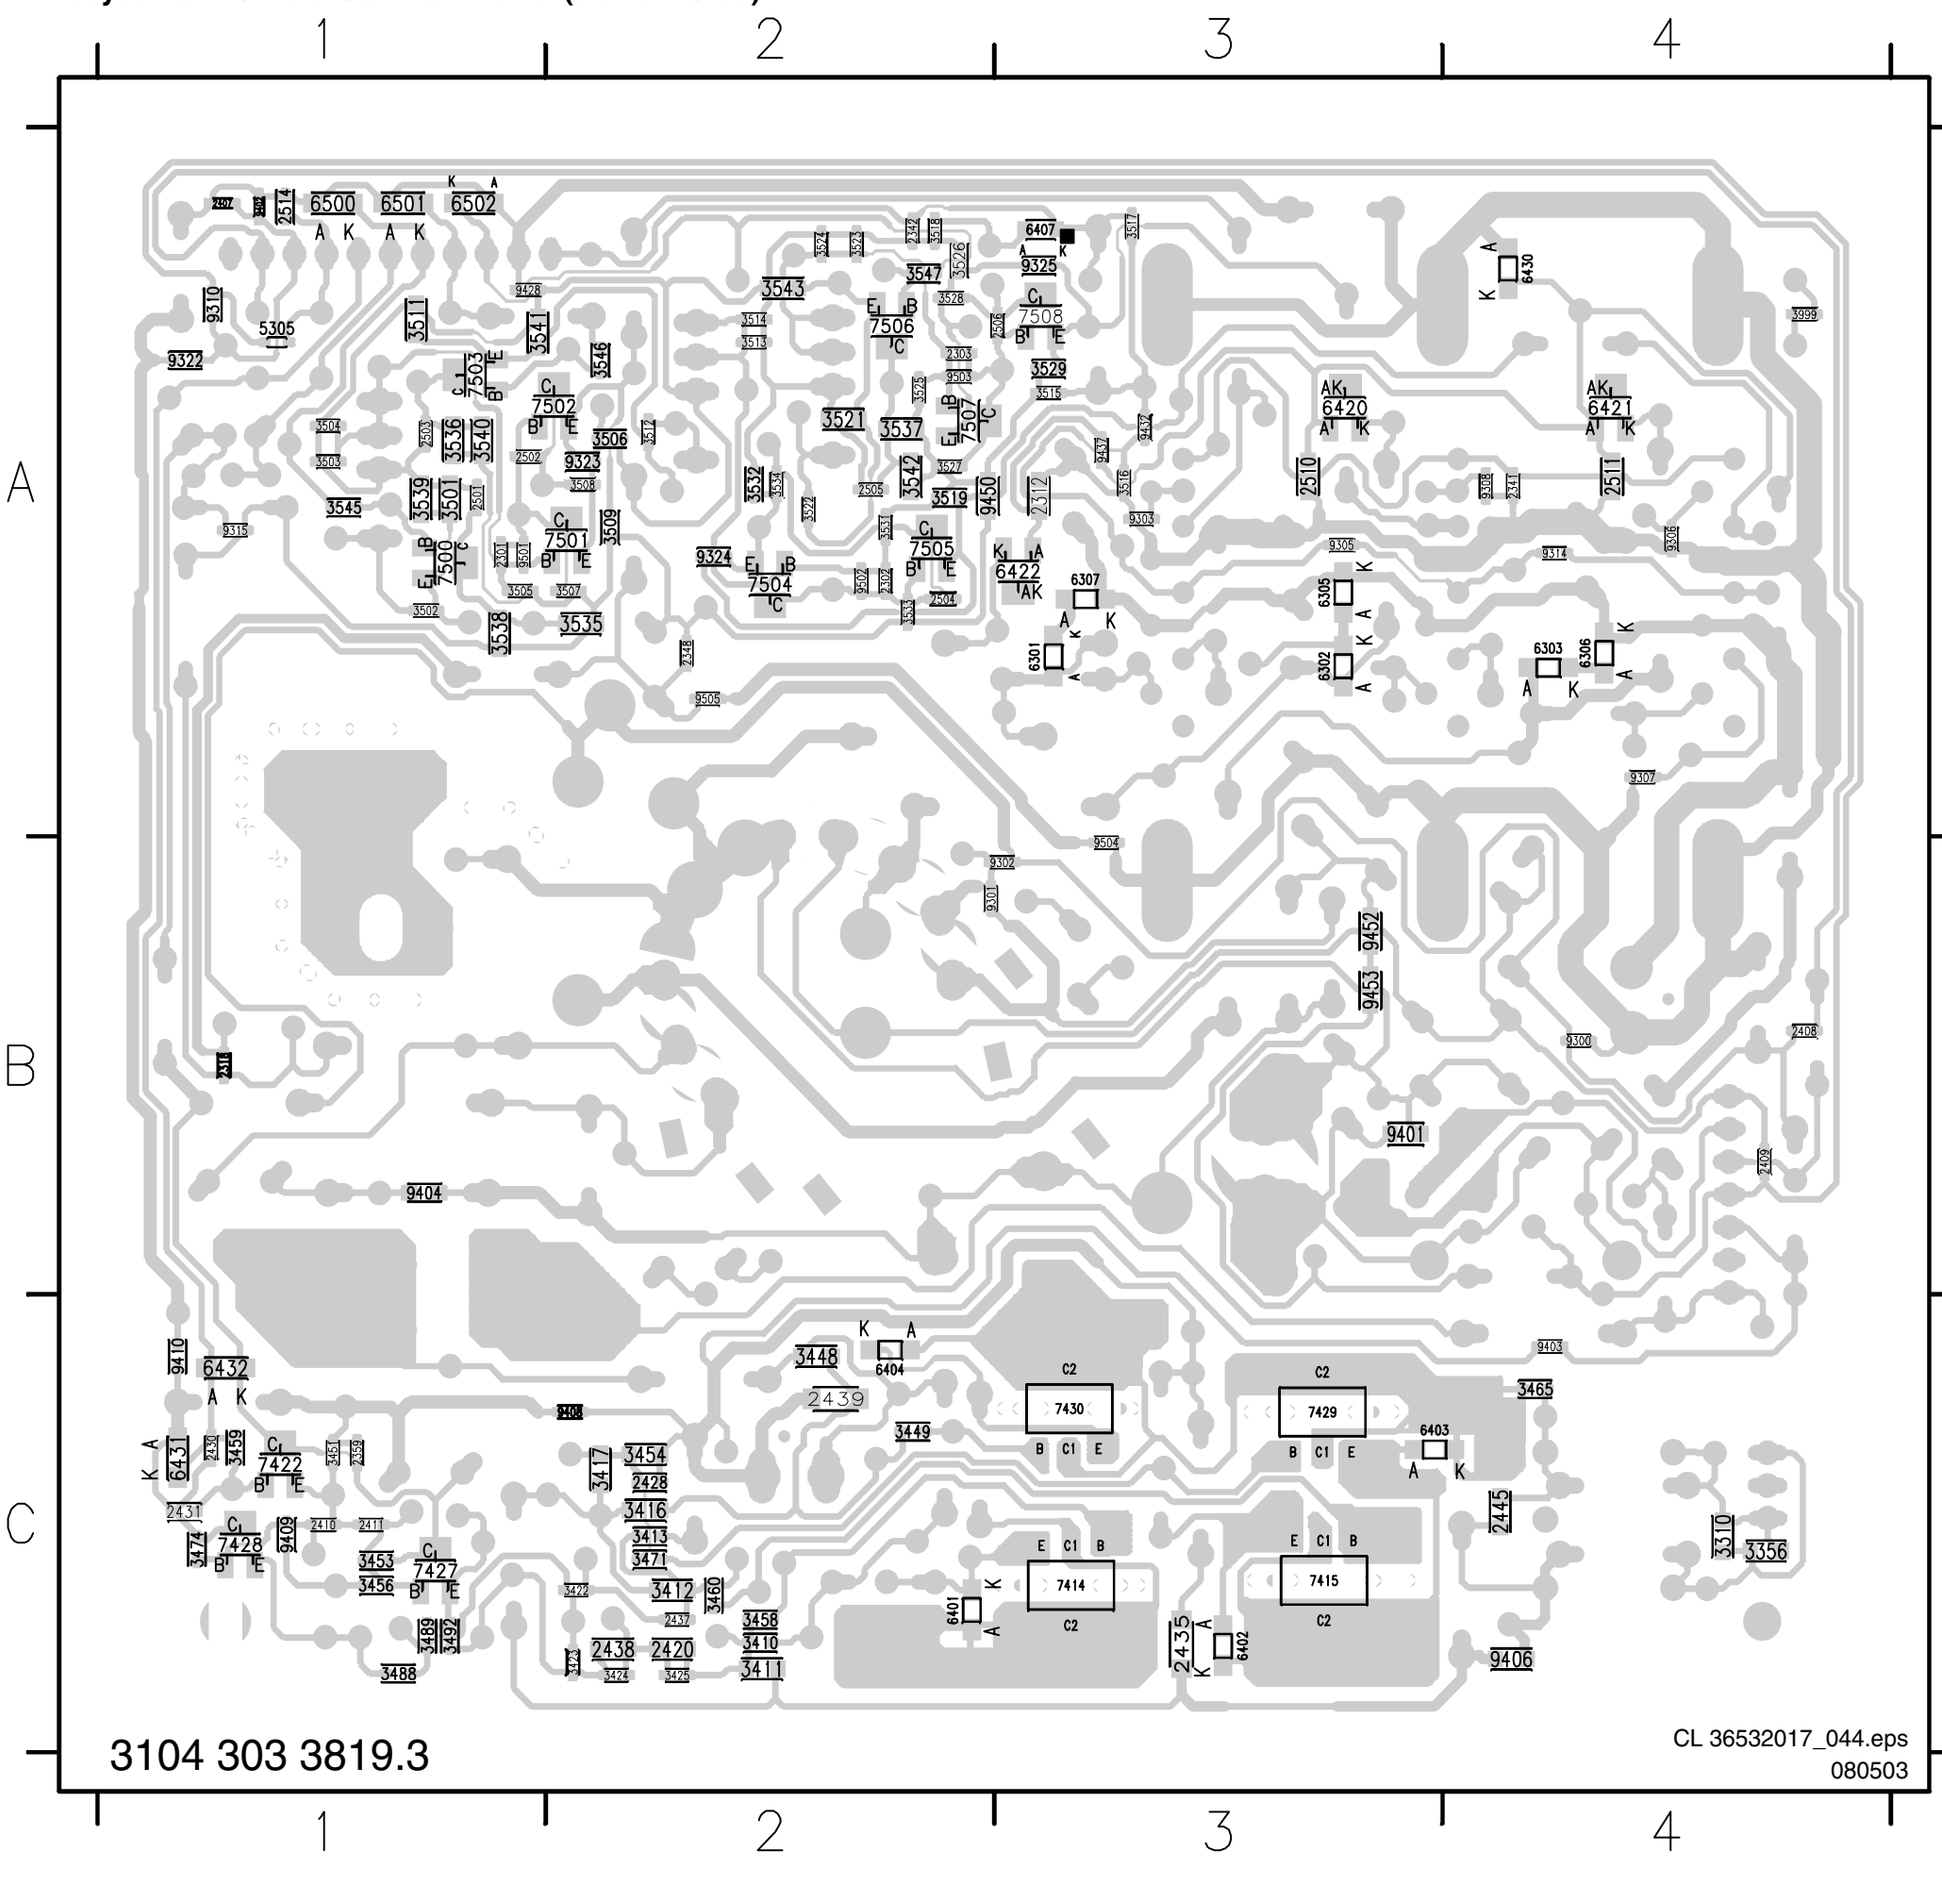


3104 303 3819.3

CL 36532017_044.eps
080503


2301	A1	3501	A1	6430	A4
2302	A2	3502	A1	6431	C1
2303	A2	3503	A1	6432	C1
2312	A3	3504	A1	6500	A1
2318	B1	3505	A1	6501	A1
2341	A4	3506	A2	6502	A1
2342	A2	3507	A2	7414	C3
2348	A2	3508	A2	7415	C3
2359	C1	3509	A2	7422	C1
2407	A1	3511	A1	7427	C1
2408	B4	3512	A2	7428	C1
2409	B4	3513	A2	7429	C3
2410	C1	3514	A2	7430	C2
2411	C1	3515	A3	7500	A1
2420	C2	3516	A3	7501	A2
2428	C2	3517	A3	7502	A1
2430	C1	3518	A2	7503	A1
2431	C1	3519	A2	7504	A2
2435	C3	3521	A2	7505	A2
2437	C2	3522	A2	7506	A2
2438	C2	3523	A2	7507	A3
2439	C2	3524	A2	7508	A3
2445	C4	3525	A2	9300	B4
2501	A1	3526	A2	9301	B2
2502	A1	3527	A2	9302	B3
2503	A1	3528	A2	9303	A3
2504	A2	3529	A3	9305	A3
2505	A2	3531	A2	9306	A4
2506	A3	3532	A2	9307	A4
2510	A3	3533	A2	9308	A4
2511	A4	3534	A2	9310	A1
2514	A1	3535	A2	9314	A4
3310	C4	3536	A1	9315	A1
3356	C4	3537	A2	9322	A1
3410	C2	3538	A1	9323	A2
3411	C2	3539	A1	9324	A2
3412	C2	3540	A1	9325	A3
3413	C2	3541	A1	9401	B3
3416	C2	3542	A2	9402	A1
3417	C2	3543	A2	9403	C4
3422	C2	3545	A1	9404	B1
3423	C2	3546	A2	9406	C4
3424	C2	3547	A2	9408	C2
3425	C2	3999	A4	9409	C1
3448	C2	5305	A1	9410	C1
3449	C2	6301	A3	9428	A1
3451	C1	6302	A3	9432	A3
3453	C1	6303	A4	9437	A3
3454	C2	6305	A3	9450	A2
3456	C1	6306	A4	9452	B3
3458	C2	6307	A3	9453	B3
3459	C1	6401	C2	9501	A1
3460	C2	6402	C3	9502	A2
3465	C4	6403	C4	9503	A2
3471	C2	6404	C2	9504	B3
3474	C1	6407	A3	9505	A2
3488	C1	6420	A3		
3489	C1	6421	A4		
3492	C1	6422	A2		

DC Shift Panel

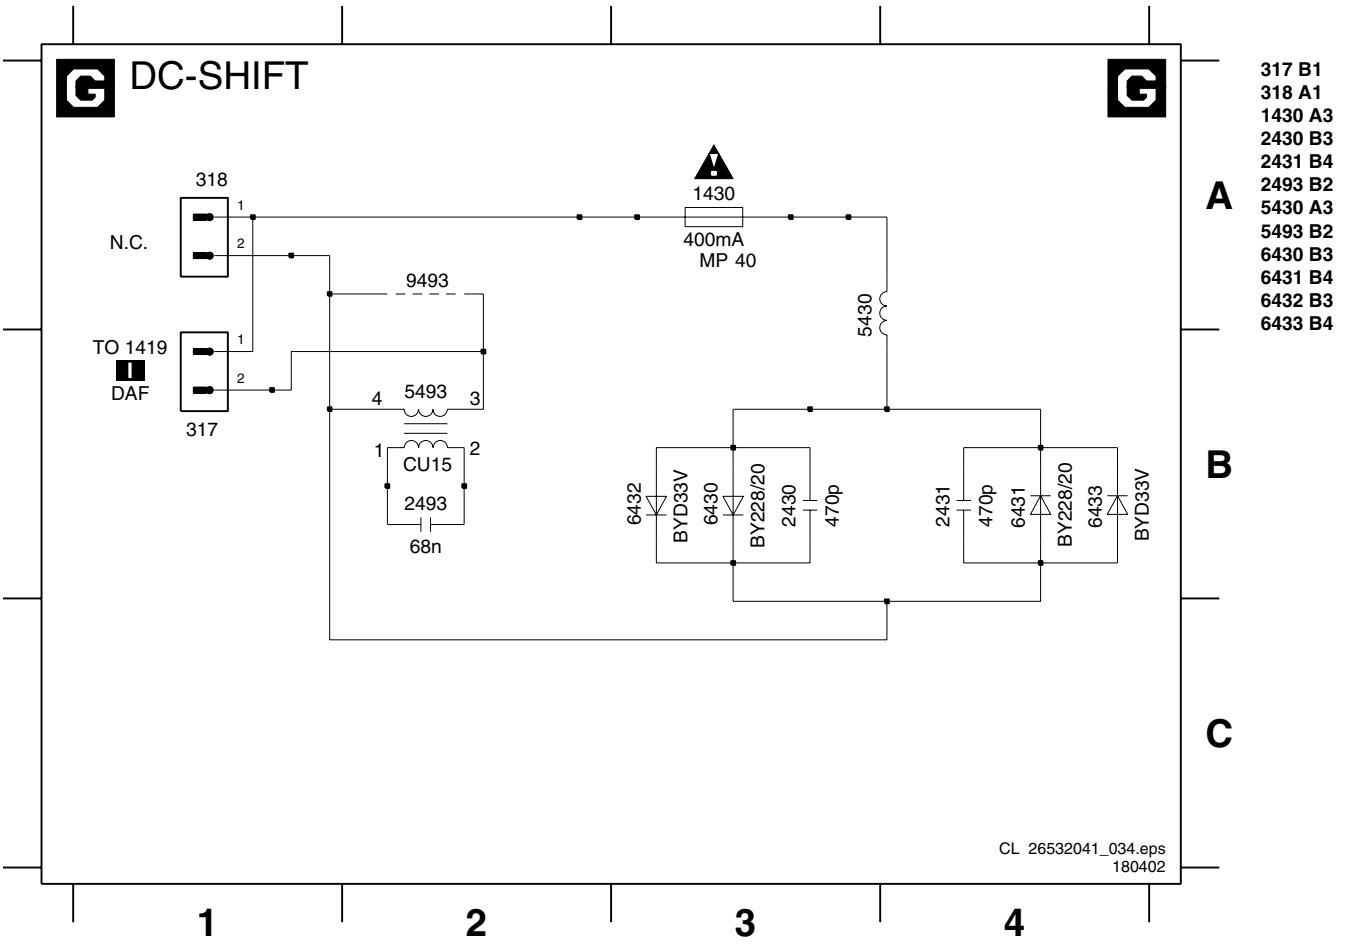


Layout DC Shift Panel

317 A3	2430 A2	5430 A1	6431 A2	9493 A3
318 A2	2431 A1	5493 A3	6432 A2	
1430 A2	2493 A3	6430 A2	6433 A2	

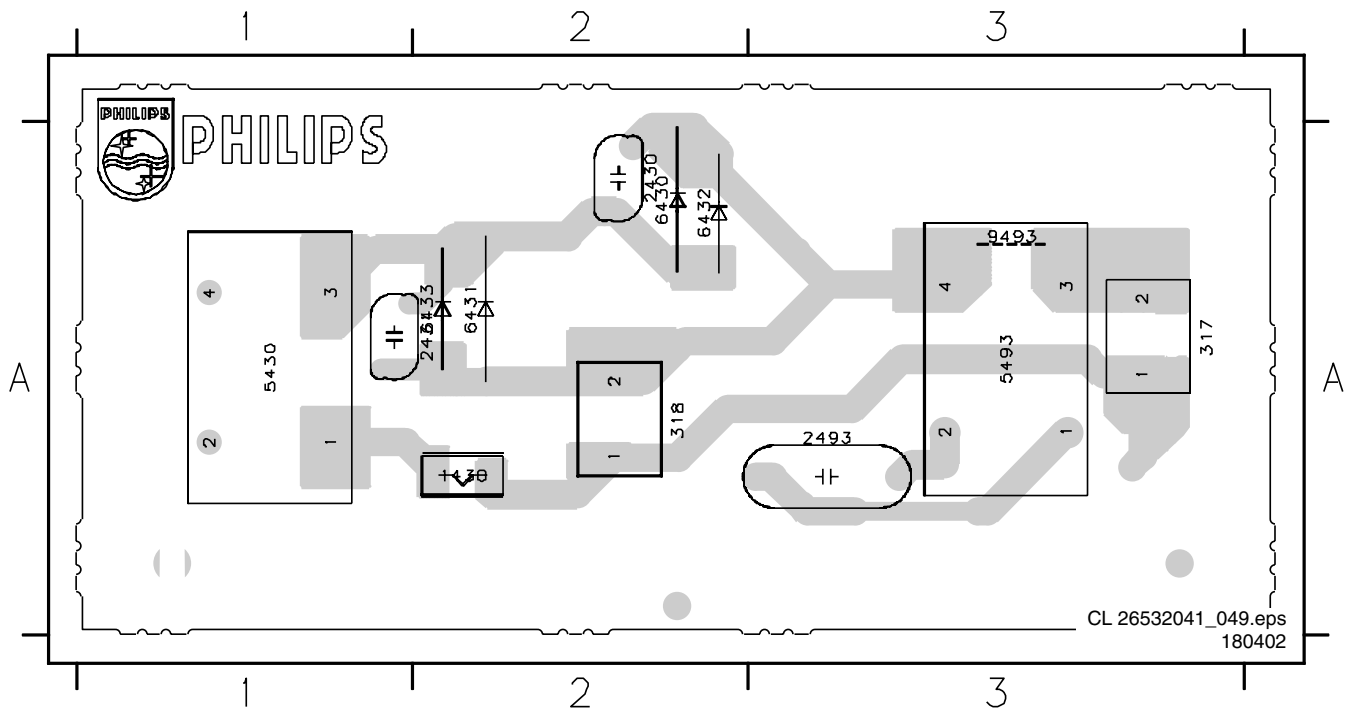

VDAF Panel + 2nd Orders

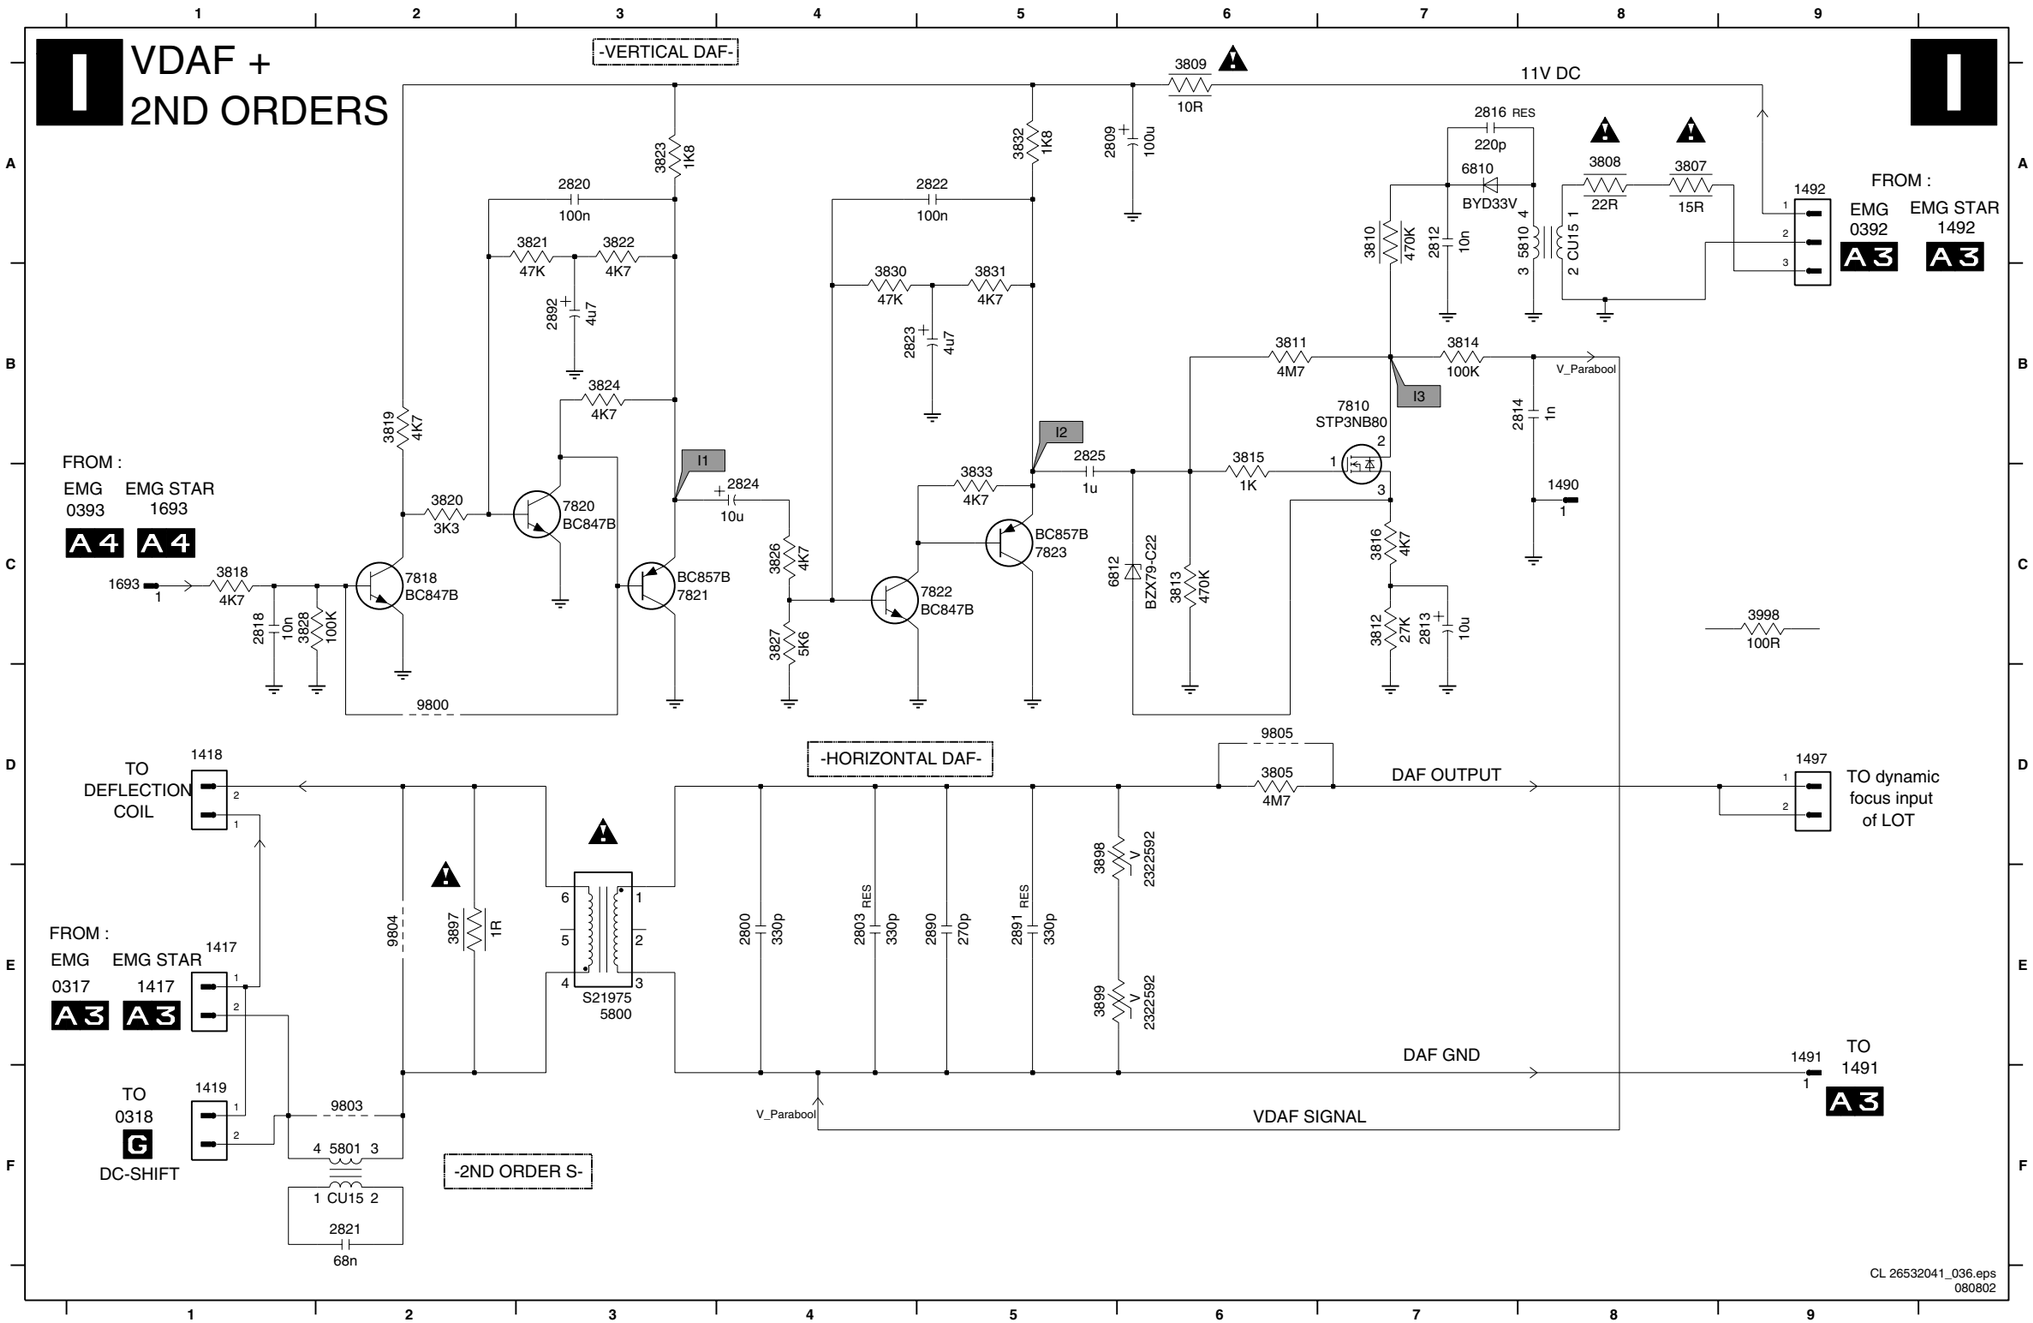


1417 E1	7818 C2
1418 D1	7820 C3
1419 F1	7821 C3
1490 C8	7822 C5
1491 E9	7823 C5
1492 A9	9800 D2
1497 D9	9803 F2
1693 C1	9804 E2
2800 E4	9805 D6
2803 E4	
2809 A5	
2812 A7	
2813 C7	
2814 B8	
2816 A7	
2818 C1	
2820 A3	
2821 F2	
2822 A5	
2823 B4	
2824 C4	
2825 B5	
2890 E5	
2891 E5	
2892 B3	
3805 D6	
3807 A8	
3808 A8	
3809 A6	
3810 A7	
3811 B6	
3812 C7	
3813 C6	
3814 B7	
3815 B6	
3816 C7	
3818 C1	
3819 B2	
3820 C2	
3821 A3	
3822 A3	
3823 A3	
3824 B3	
3826 C4	
3827 C4	
3828 C1	
3830 B4	
3831 B5	
3832 A5	
3833 C5	
3897 E2	
3898 D5	
3899 E5	
3998 C9	
5800 E3	
5801 F2	
5810 A8	
6810 A7	
6812 C6	
7810 B7	

[I] VDAF+2ND ORDER S


Item	29RF	28RF/32RF	34RF/38RF	36RF	Description
1492	X		X	X	3p
1693	X		X	X	1p
2800	X				330pF
2800		X	X		470pF
2800				X	390pF
2809	X		X	X	100uF
2812	X		X	X	10nF
2813	X		X	X	10uF
2814	X		X	X	1nF
2821	X	X			68nF
2822	X		X	X	4nF
2824	X		X	X	10uF
2825	X		X	X	1uF
2890	X				270pF
2890		X			220pF
2890			X		470pF
2890				X	390pF
3807	X		X	X	15R
3808	X		X	X	15R
3809	X		X	X	10R
3810	X		X	X	470kR
3811	X		X	X	4.7MR
3812	X		X	X	27kR
3813	X		X	X	470kR
3814	X		X	X	100kR
3815	X		X	X	1kR
3816	X		X		4.7kR
3816				X	2.2kR
3818	X		X	X	33kR
3820	X		X	X	Jumper
3821	X		X	X	Jumper
3822	X		X	X	Jumper
3823	X		X	X	1.5kR
3824	X		X	X	33kR
3826	X		X	X	3.3kR
3827	X		X	X	5.6kR
3828	X		X	X	100kR
3830	X		X	X	47kR
3831	X		X	X	4.7kR
3832	X		X	X	1.8kR
3833	X		X	X	4.7kR
5801	X	X			Transformer
5810	X		X	X	Bridge coil
6810	X		X	X	BYD33V
6812	X		X	X	BZX79-C22
7810	X		X	X	STP3NB80FP
7818	X		X	X	BC847B
7822	X		X	X	BC847B
7823	X		X	X	BC857B
9800	X		X	X	Wire
9803			X	X	Wire

Layout VDAF Panel (Top Side)

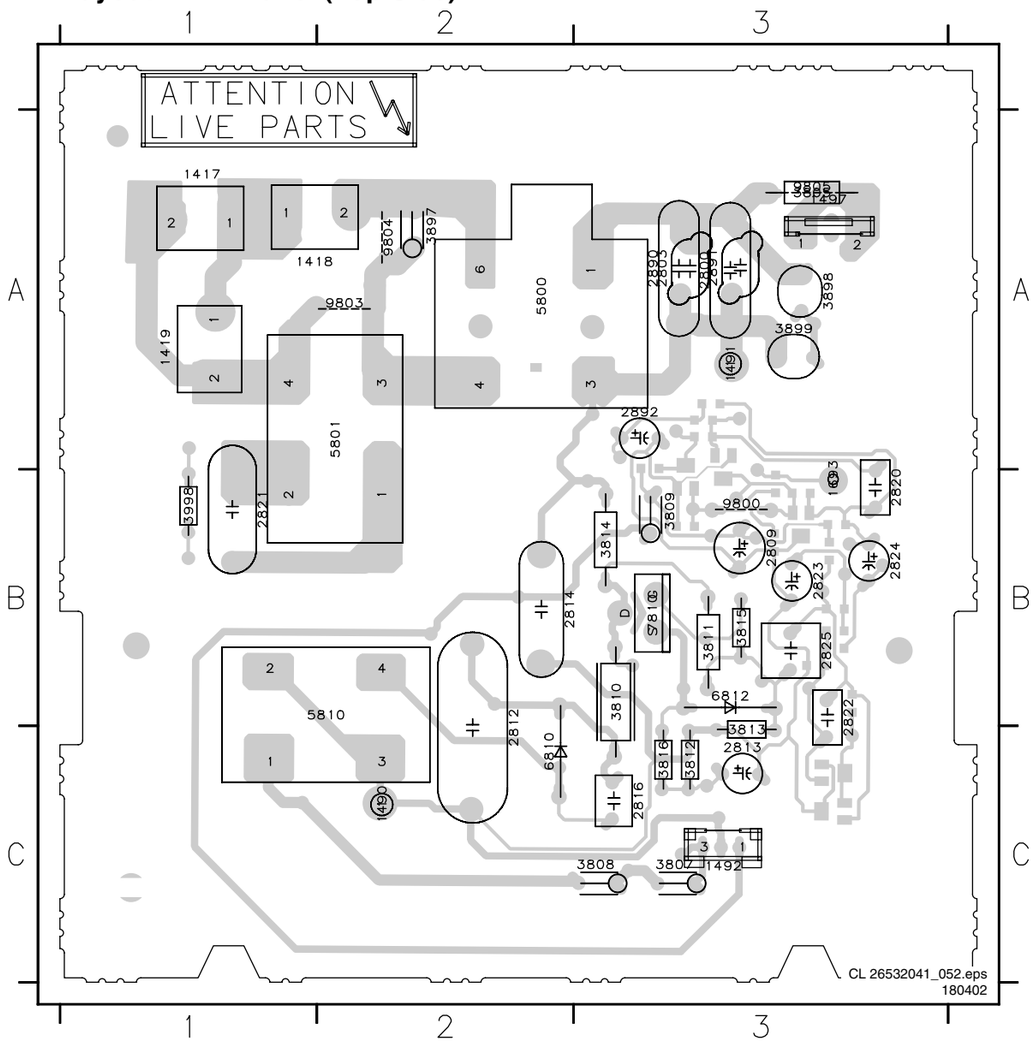


1417 A1
1418 A1
1419 A1
1490 C1
1491 A1
1492 C1
1497 A1
1693 B1
2800 A1
2803 A1
2809 B1
2812 C1
2813 C1
2814 B1
2816 C1
2820 B1
2821 B1
2822 B1
2823 B1
2824 B1
2825 B1
2890 A1
2891 A1
2892 A1
3805 A1
3807 C1
3808 C1
3809 B1
3810 B1
3811 B1
3812 C1
3813 C1
3814 B1
3815 B1
3816 C1
3897 A1
3898 A1
3899 A1
3998 B1
5800 A1
5801 A1
5810 B1
6810 C1
6812 B1
7810 B1
9800 B1
9803 A1
9804 A1
9805 A1

Layout VDAF Panel (Bottom Side)

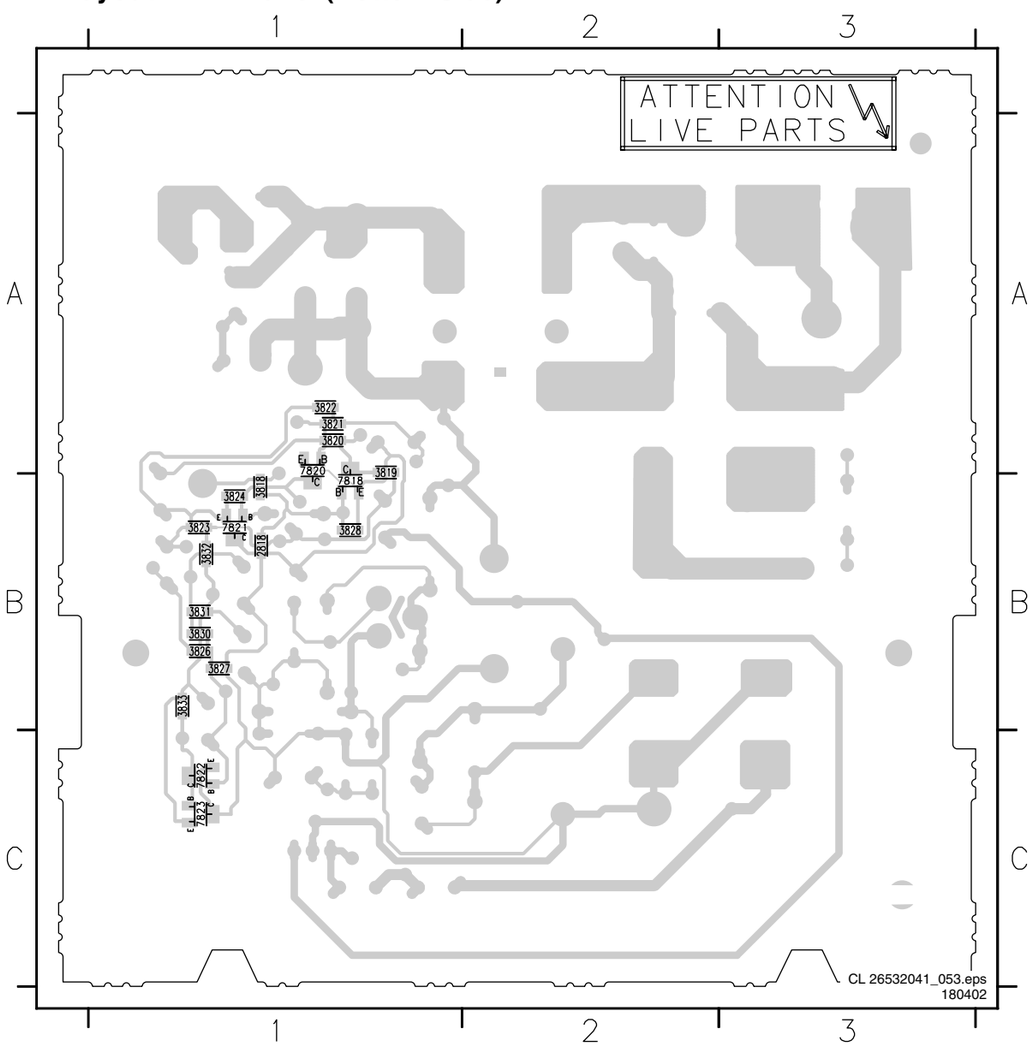


2818 B1
3818 B1
3819 A1
3820 A1
3821 A1
3822 A1
3823 B1
3824 B1
3826 B1
3827 B1
3828 B1
3830 B1
3831 B1
3832 B1
3833 B1
7818 B1
7820 A1
7821 B1
7822 C1
7823 C1

Eject Button

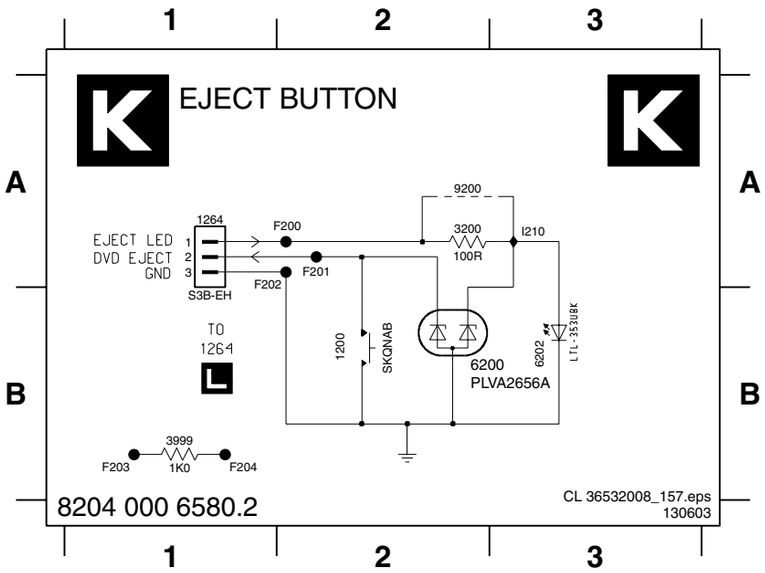


1200 B2
1264 A1
3200 A2
3999 B1
6200 B2
6202 B3
9200 A2
F200 A2
F201 A2
F202 B1
F203 B1
F204 B1
I210 A3

Eject Button (Top Side)

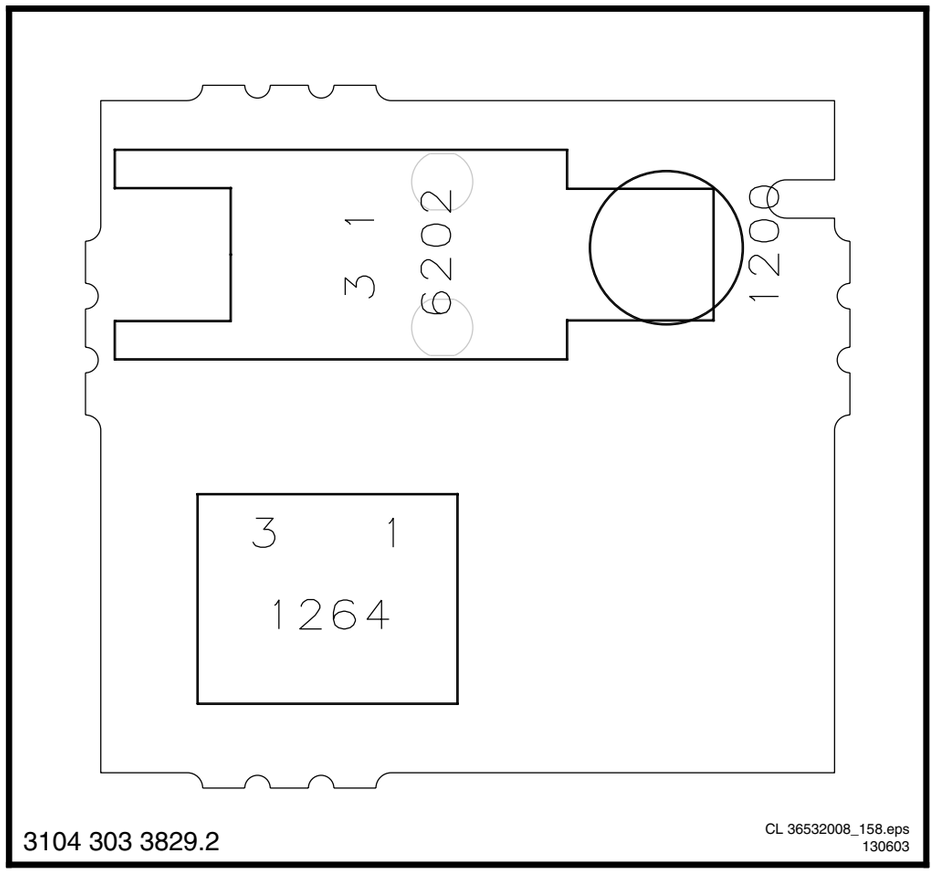

1200
1264
6202


Eject Button (Bottom Side)

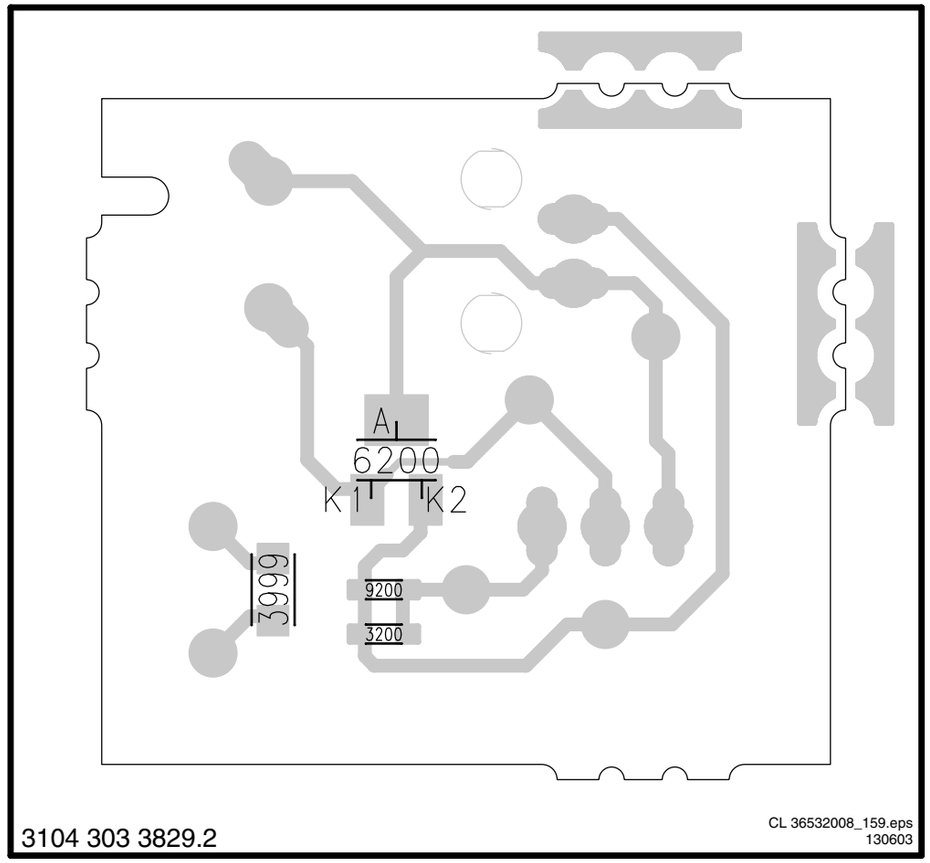

3200
3999
6200
9200

LCD Board

LCD BOARD

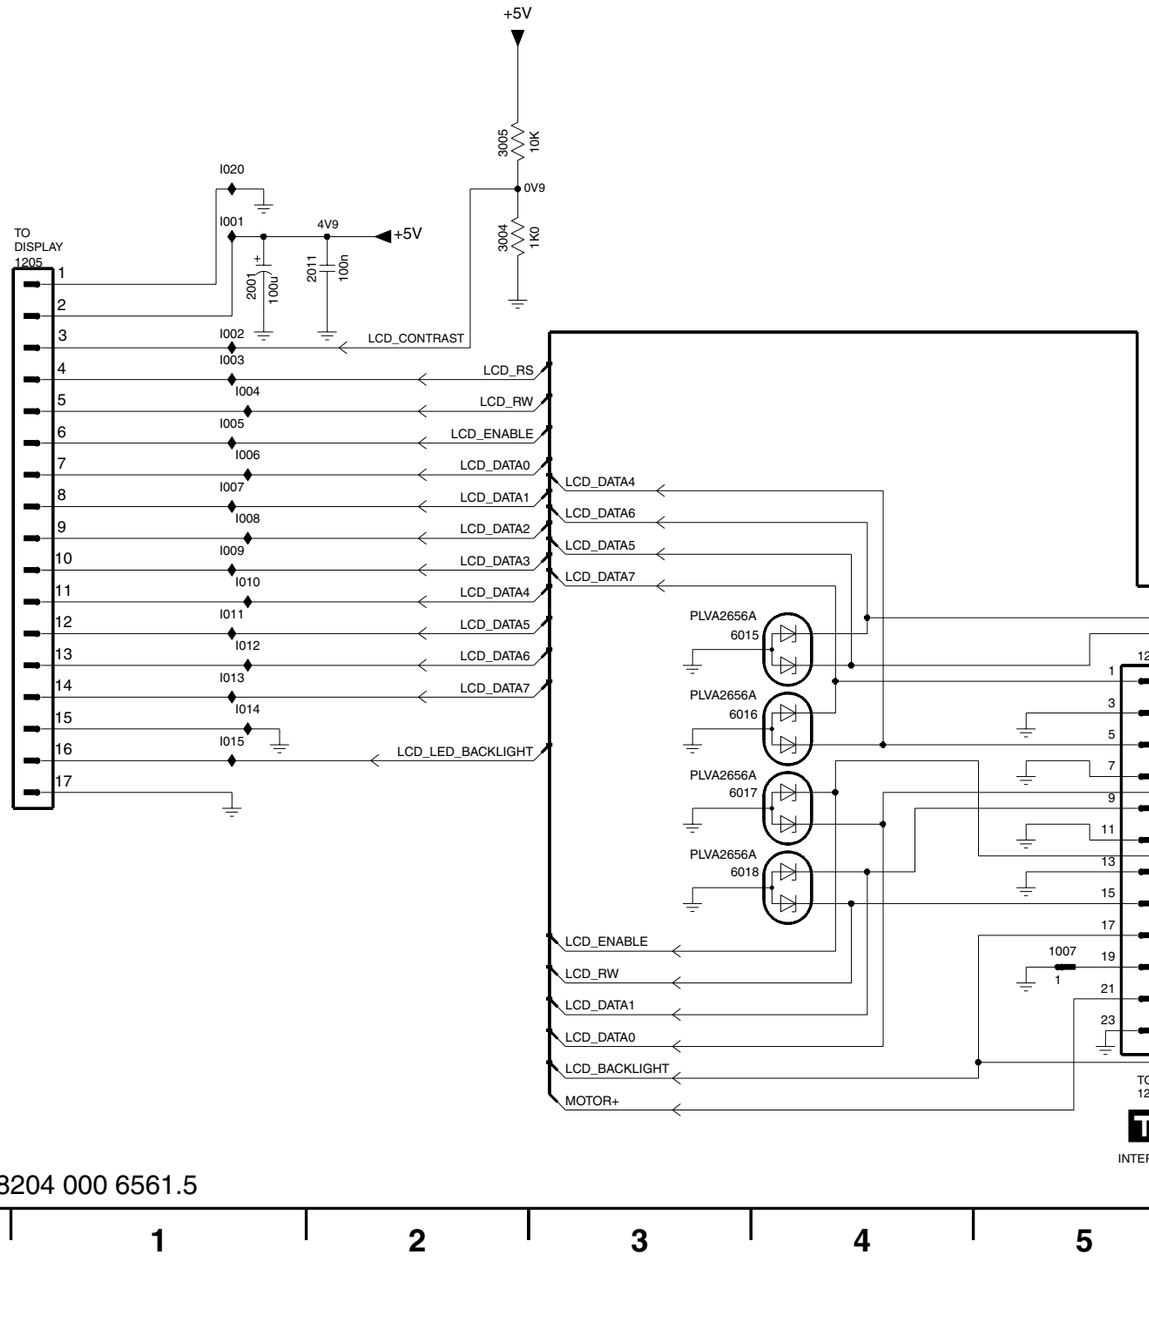


8204 000 6561.5

CL 36532008_160.eps 130603

1007 E5
1201 C9
1203 C9
1204 D9
1205 B1
1207 C6
1245 B9
1260 D5
1264 B6
2001 B1
2003 B6
2004 B9
2005 C9
2006 C9
2007 F9
2008 E8
2011 B2
3002 E8
3003 B6
3004 B2
3005 B2
3006 D8
3007 D8
3008 E9
3009 D8
3010 D8
3011 E8
3999 F8
6015 D4
6016 D4
6017 E4
6018 E4
6019 D6
6020 E6
6021 F6
6022 E9
7000 F8
9000 B7
F001 F7
F002 F8
I001 B1
I002 C1
I003 C1
I004 C1
I005 C1
I006 C1
I007 C1
I008 C1
I009 D1
I010 D1
I011 D1
I012 D1
I013 D1
I014 D1
I015 D1
I016 B7
I017 B6
I018 B6
I020 B1
I021 B8
I022 B8
I023 C9
I024 C9
I025 C9
I026 D9
I027 D9
I028 D9
I029 C7
I030 E9
I031 E9
I032 E8
I033 B7


Layout LCD Board (Top Side)

1007 A1 1201 A2 1203 A2 1204 A1
1205 A2 1207 A2 1245 A2 1260 A1
1264 A1 2001 A2 2007 A2 9005 A1
9006 A2 9008 A2 9009 A2 9010 A2
9011 A2 9016 A1 9022 A2 9024 A1
9025 A1 9026 A1 9027 A1 9028 A1
9029 A2 9030 A2 9032 A1

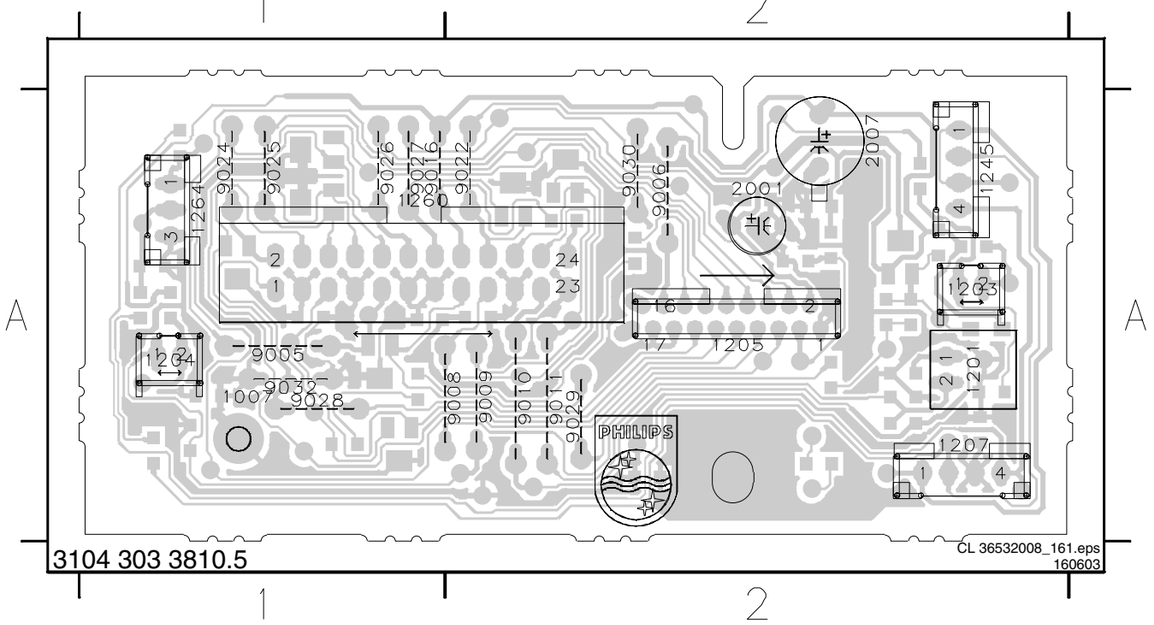


Layout LCD Board (Bottom Side)

1007 A2 1201 A1 1203 A1 1204 A2 1205 A1
1207 A1 1245 A1 1260 A2 1264 A2 2001 A1
2003 A2 2004 A1 2005 A1 2006 A1 2007 A1
2008 A1 2011 A1 3002 A1 3003 A2 3004 A1
3005 A1 3006 A1 3007 A2 3008 A1 3009 A1
3010 A2 3011 A1 3999 A1 6015 A2 6016 A2
6017 A2 6018 A2 6019 A2 6020 A1 6021 A1
6022 A1 7000 A1 9000 A2 9005 A2 9006 A1
9007 A1 9008 A1 9009 A1 9010 A1 9011 A1
9012 A2 9013 A1 9014 A2 9015 A1 9016 A1
9017 A1 9018 A2 9019 A2 9020 A1 9021 A1
9022 A1 9023 A2 9024 A2 9025 A2 9026 A2
9027 A2 9028 A2 9029 A1 9030 A1 9032 A2
9033 A1 9034 A2

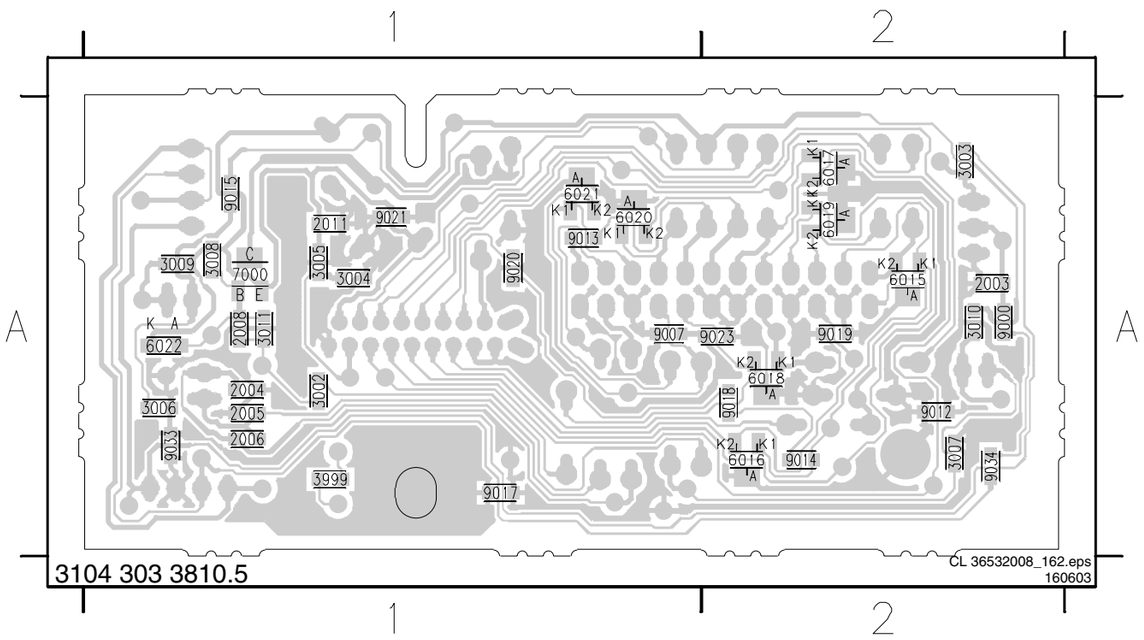


Side I/O Panel

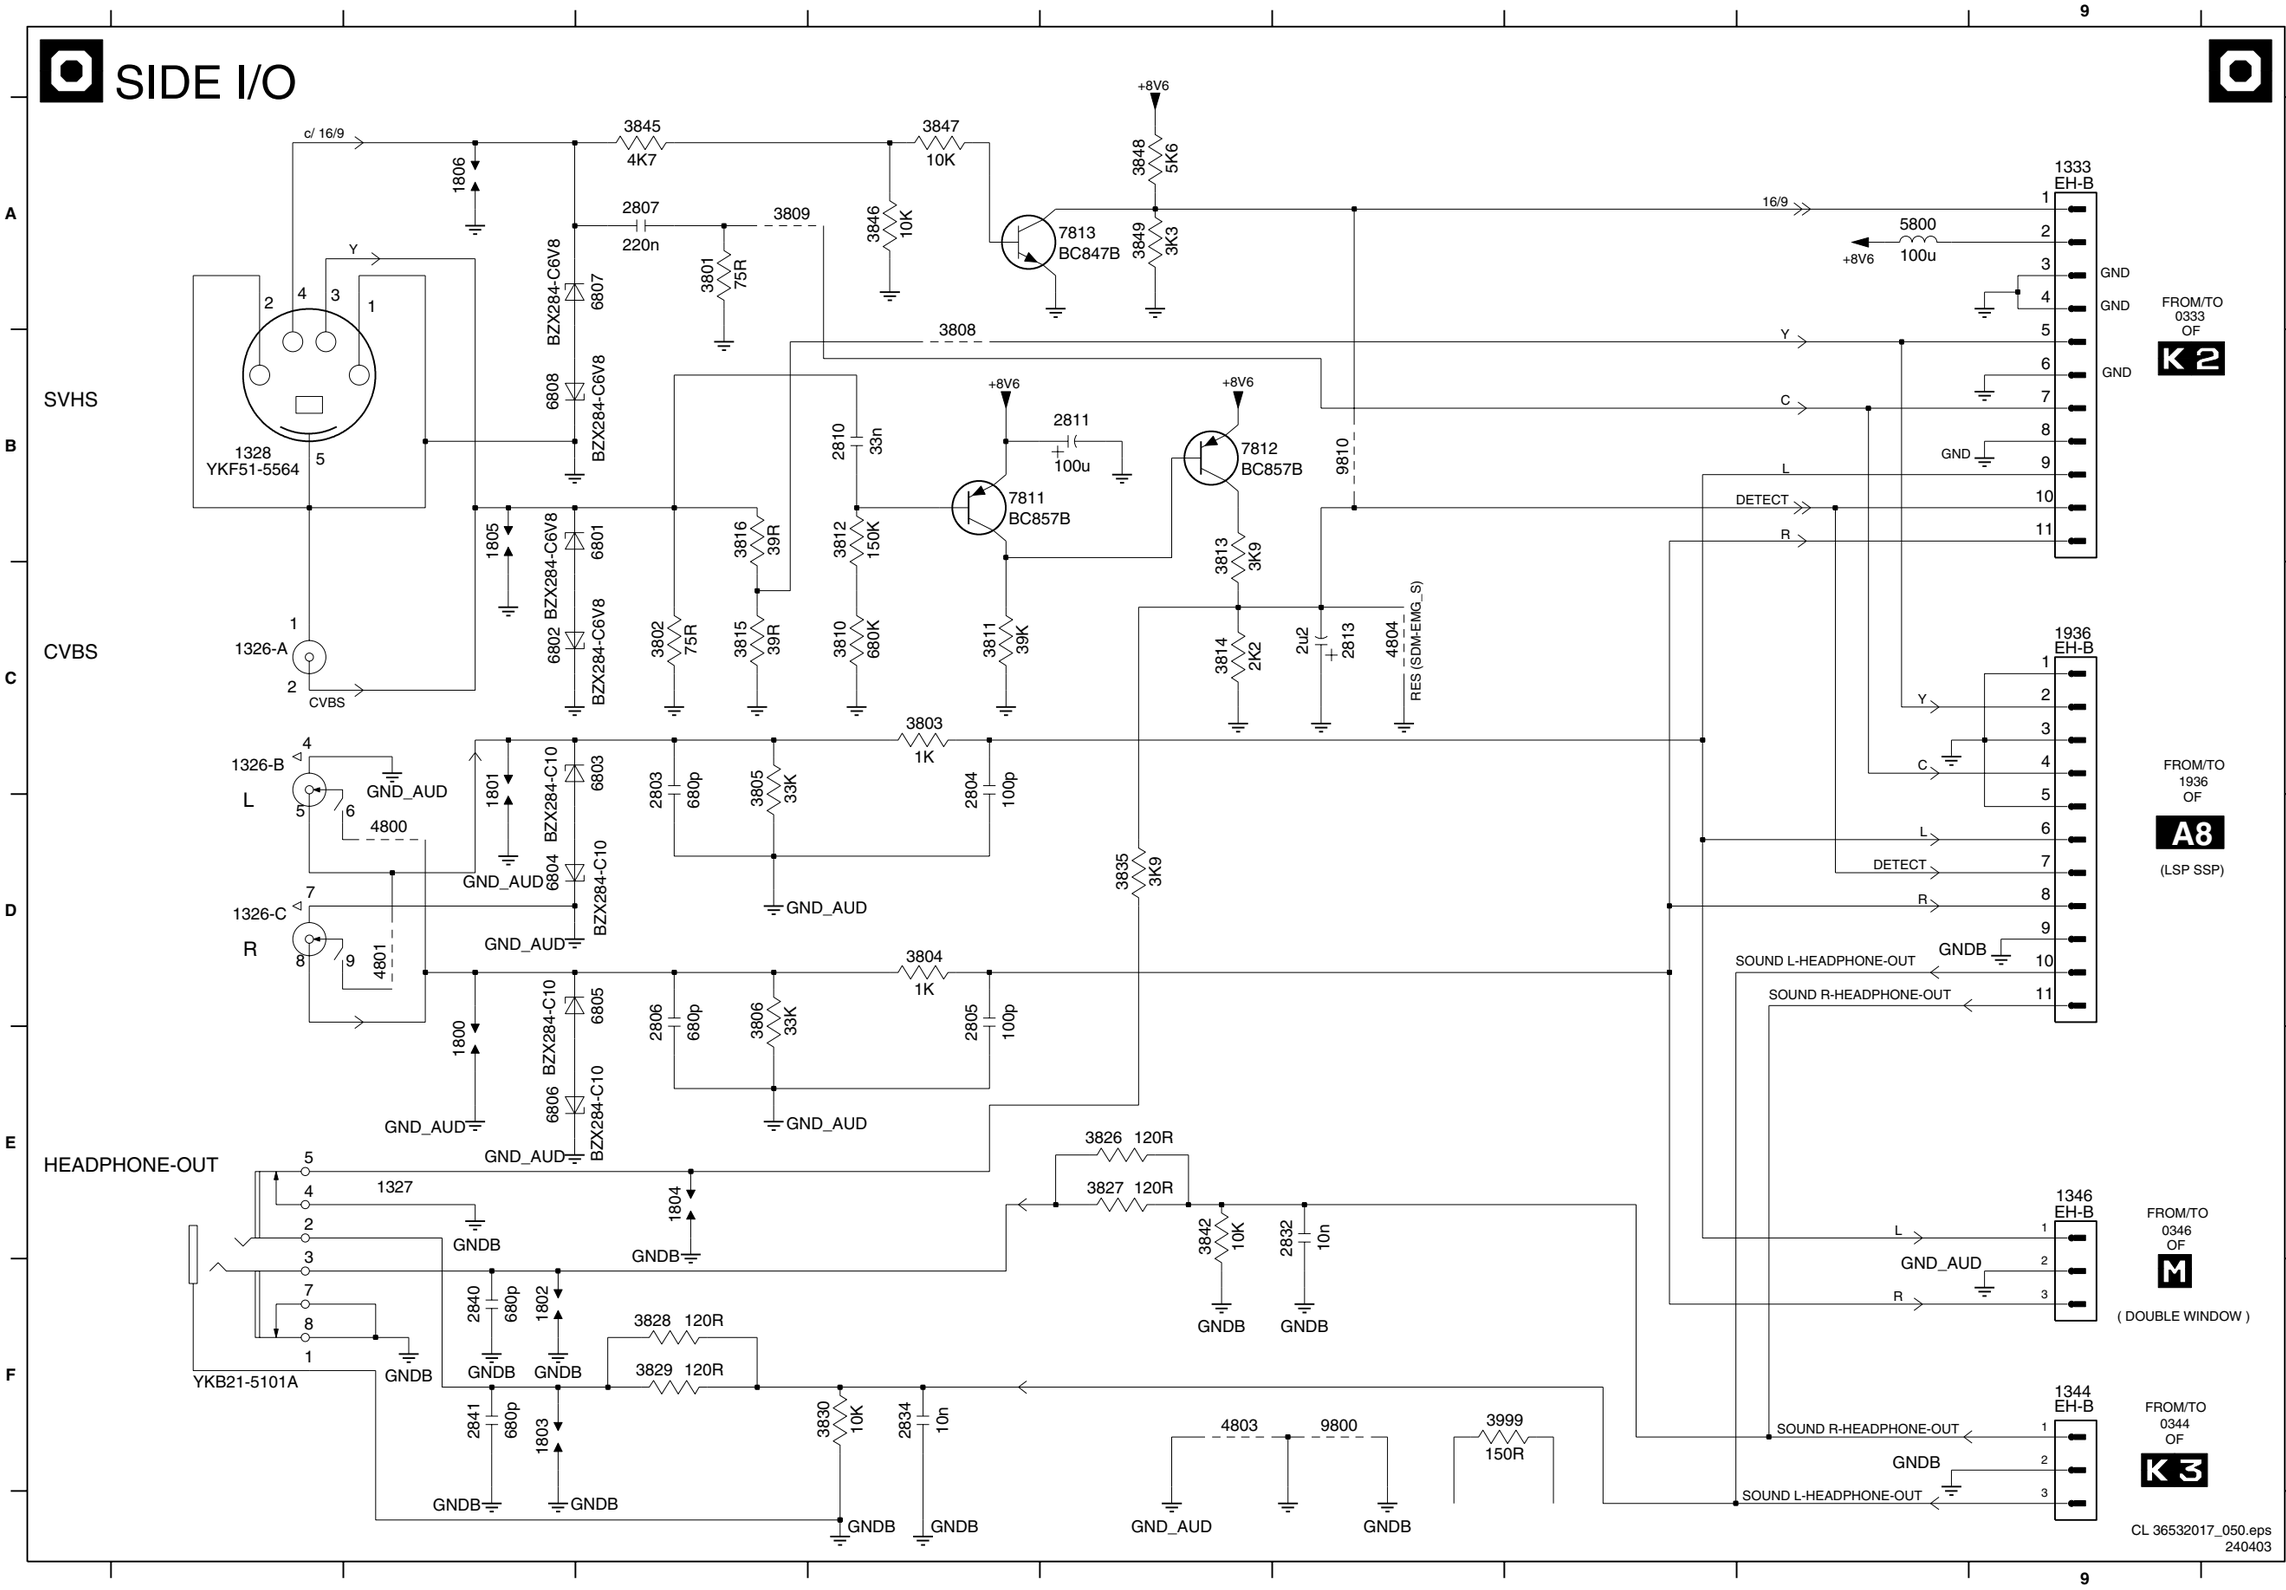


1326-A C1
1326-B C1
1326-C D1
1327 E2
1328 B1
1333 A9
1344 F9
1346 E9
1800 E2
1801 C2
1802 F2
1803 F2
1804 E3
1805 B2
1806 A2
1936 C9
2803 C3
2804 C4
2805 D4
2806 D3
2807 A3
2810 B4
2811 B5
2813 C6
2832 E6
2834 F4
2840 F2
2841 F2
3801 A3
3802 C3
3803 C4
3804 D4
3805 C3
3806 D3
3808 B4
3809 A3
3810 C4
3811 C4
3812 B4
3813 B5
3814 C5
3815 C3
3816 B3
3826 E5
3827 E5
3828 F3
3829 F3
3830 F4
3835 D5
3842 E5
3845 A3
3846 A4
3847 A4
3848 A5
3849 A5
3999 F7
4800 D2
4801 D2
4803 F5
4804 C6
5800 A8
6801 B3
6802 C2
6803 C3
6804 D2
6805 D3
6806 E2
6807 A3
6808 B2
7811 B4
7812 B5
7813 A5
9800 F6
9810 B6

Layout Side I/O Panel (Top Side)

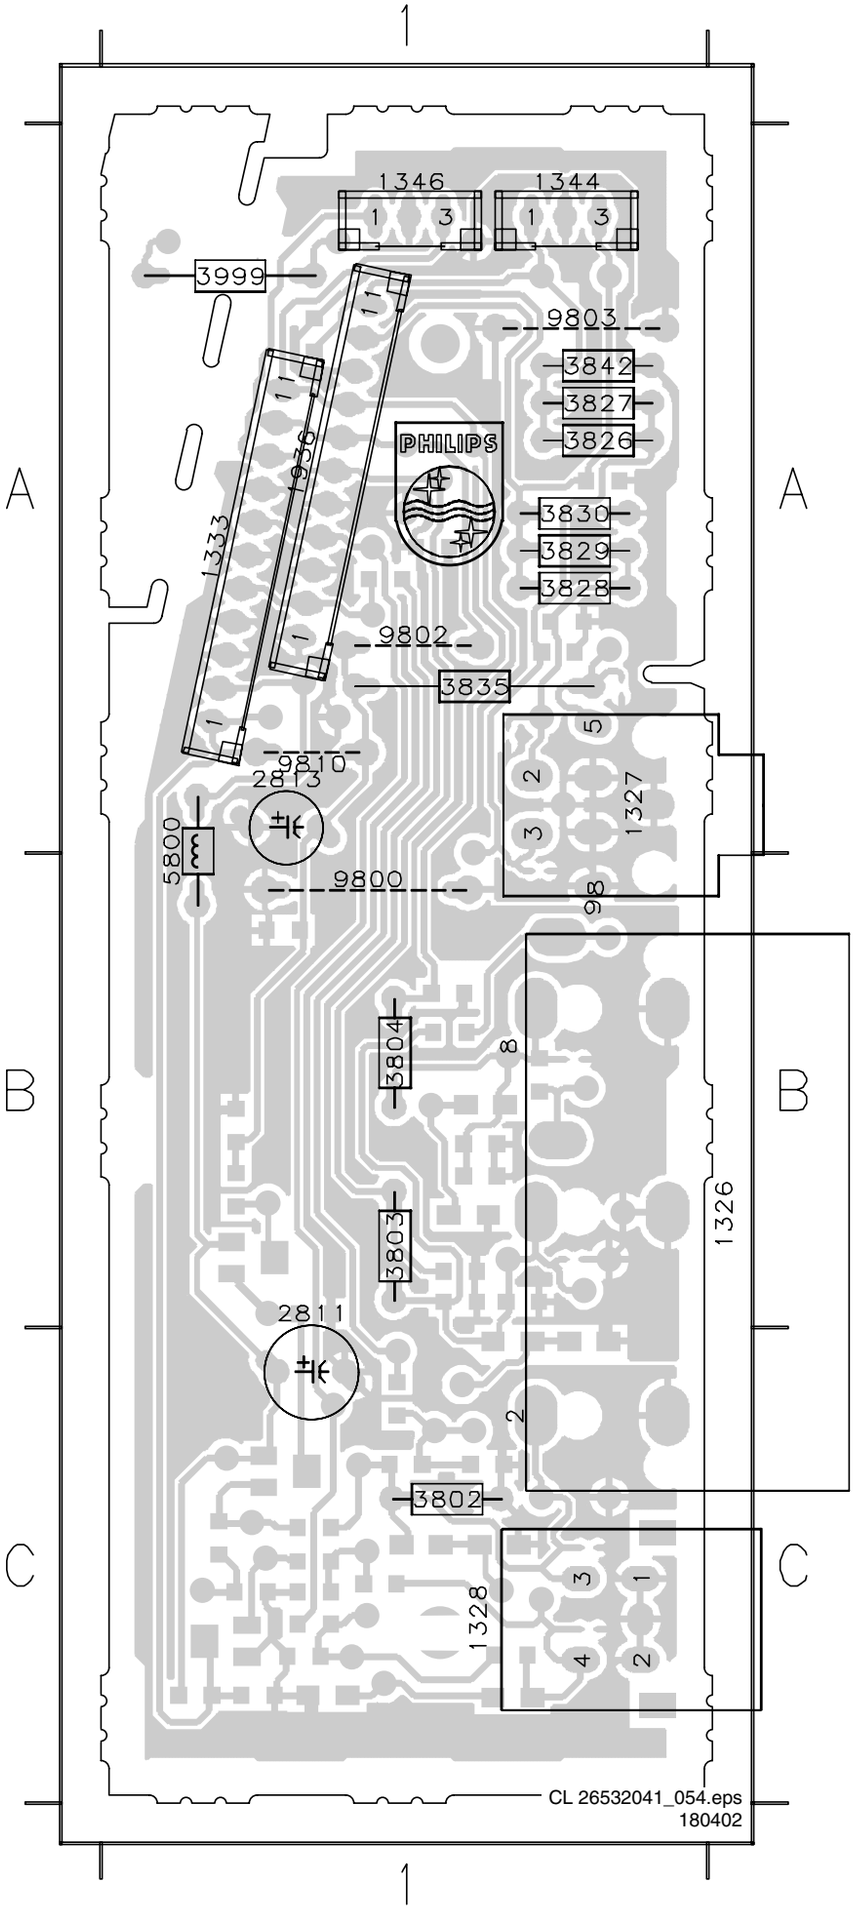


1326	B1
1327	A1
1328	C1
1333	A1
1344	A1
1346	A1
1936	A1
2811	B1
2813	A1
3802	C1
3803	B1
3804	B1
3826	A1
3827	A1
3828	A1
3829	A1
3830	A1
3835	A1
3842	A1
3999	A1
5800	A1
9800	B1
9802	A1
9803	A1
9810	A1

Layout Side I/O Panel (Bottom Side)

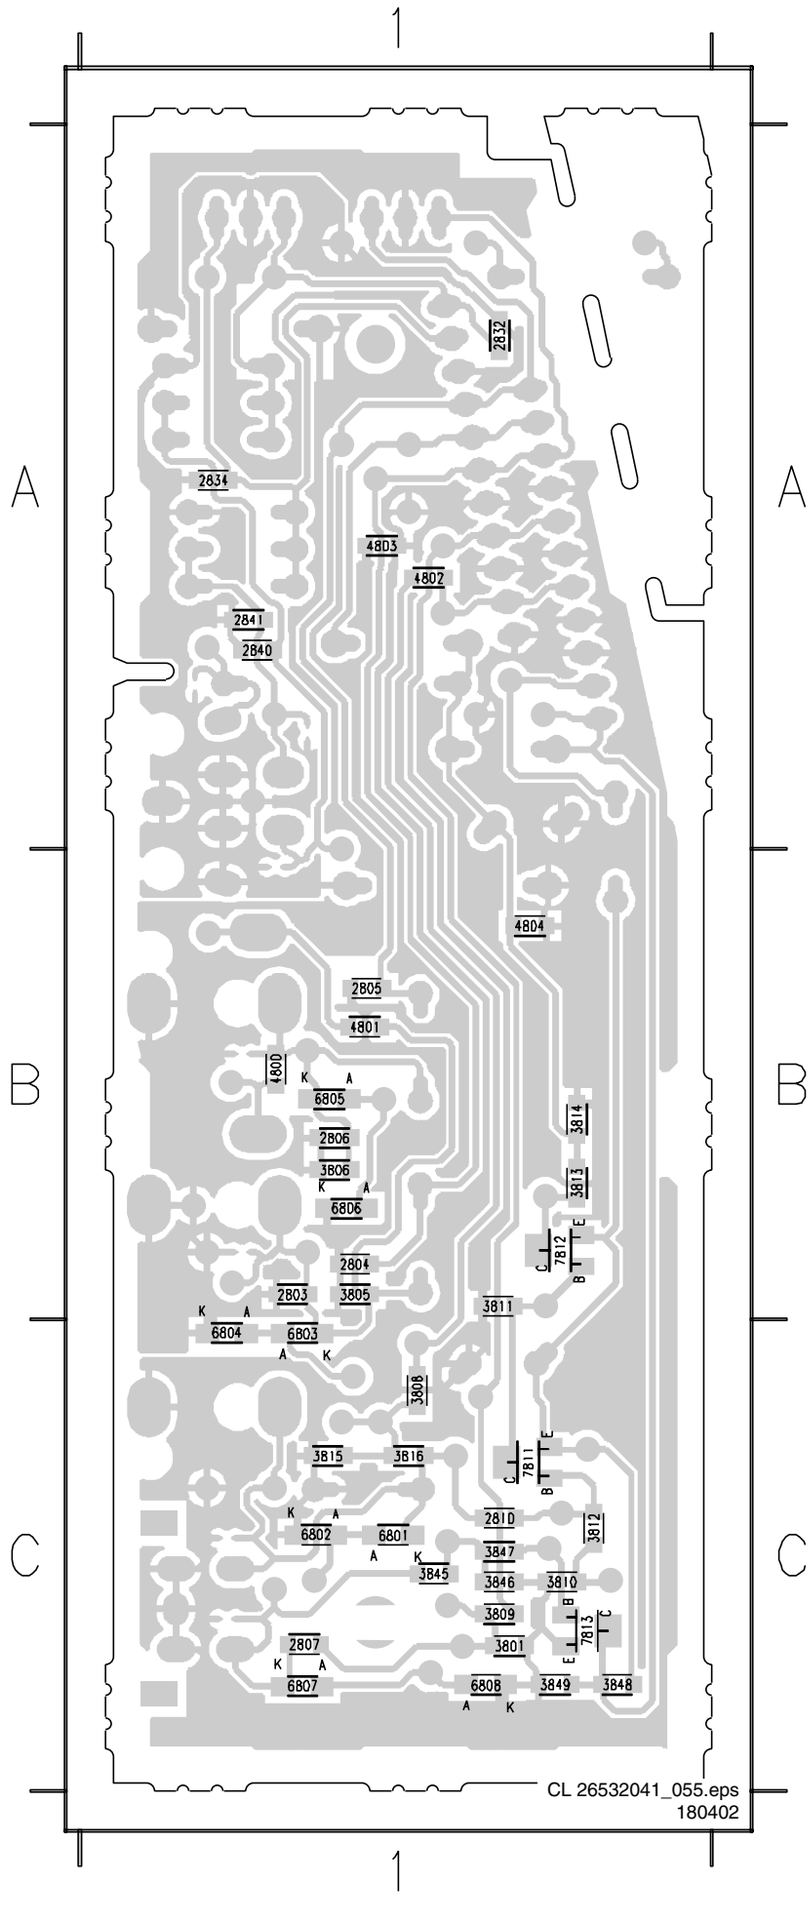

2803	B1
2804	B1
2805	B1
2806	B1
2807	C1
2810	C1
2832	A1
2834	A1
2840	A1
2841	A1
3801	C1
3805	B1
3806	B1
3808	C1
3809	C1
3810	C1
3811	B1
3812	C1
3813	B1
3814	B1
3815	C1
3816	C1
3845	C1
3846	C1
3847	C1
3848	C1
3849	C1
4800	B1
4801	B1
4802	A1
4803	A1
4804	B1
6801	C1
6802	C1
6803	B1
6804	C1
6805	B1
6806	B1
6807	C1
6808	C1
7811	C1
7812	B1
7813	C1


Top Control Panel

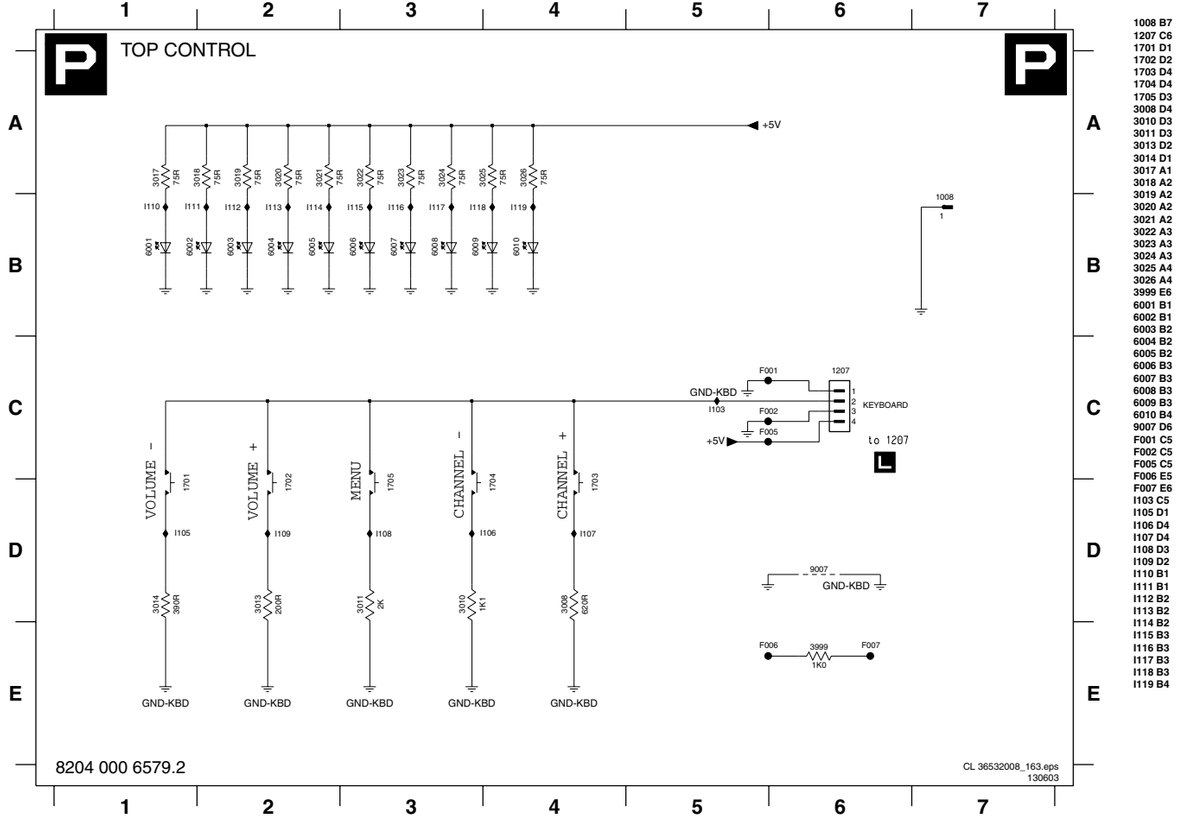

1008 B7
1207 C6
1701 D1
1702 D2
1703 D4
1704 D4
1705 D3
3008 D4
3010 D3
3011 D3
3013 D2
3014 D1
3017 A1
3018 A2
3019 A2
3020 A2
3021 A2
3022 A3
3023 A3
3024 A3
3025 A4
3026 A4
3999 E6
6001 B1
6002 B1
6003 B2
6004 B2
6005 B2
6006 B3
6007 B3
6008 B3
6009 B3
6010 B4
9007 D6
F001 C5
F002 C5
F005 C5
F006 E5
F007 E6
I103 C5
I105 D1
I106 D4
I107 D4
I108 D3
I109 D2
I110 B1
I111 B1
I112 B2
I113 B2
I114 B2
I115 B3
I116 B3
I117 B3
I118 B3
I119 B4


Top Control Panel (Top Side)

1008 -- 1701 -- 1703 -- 1705 -- 6002 -- 6004 -- 6006 -- 6008 -- 6010 --
1207 -- 1702 -- 1704 -- 6001 -- 6003 -- 6005 -- 6007 -- 6009 --

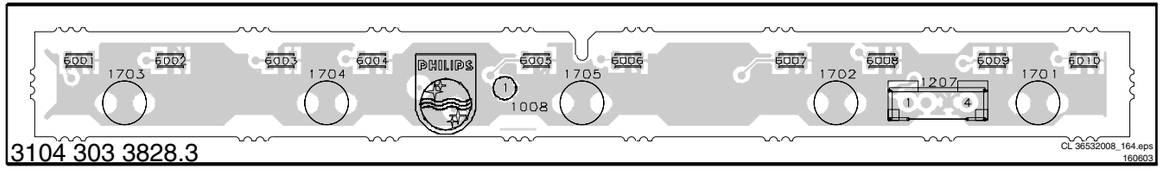

Top Control Panel (Bottom Side)

1008 -- 1701 -- 1703 -- 1705 -- 3010 -- 3013 -- 3017 -- 3019 -- 3021 -- 3023 -- 3025 -- 3999 --
1207 -- 1702 -- 1704 -- 3008 -- 3011 -- 3014 -- 3018 -- 3020 -- 3022 -- 3024 -- 3026 -- 9007 --

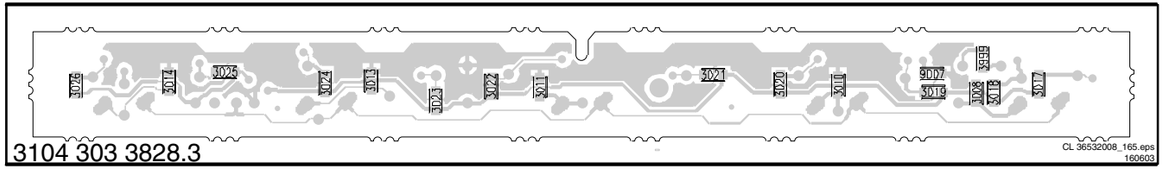

Wireless Transmitter

TRANSMITTER

SYNTHESIZER

7101 TSA5060ATS

6101 PLVA2656A

1105 AT-51 4M

7102 BC847B

7103 BFR92A

7104 BC857B

7105 BFG520

7106 BFG520

6110 BAV99

6111 BAV99 OPT.

1102 RT-01T

0002 AERIAL BRACKET

ANT. BUTTERFLY

TO CHANGE

TO TV CONNECTION

EH-B

7112 SA572D

7113-A NJM4565M

7113-B NJM4565M

7116-A NJM4565M

7116-B NJM4565M

7117 LD1117DT

7118 BC847B

7119 BC847B

7120 BC857B

7121 BC847B

7110 74HC4060

STEREO CODER

7111-A 74HC4053D

7111-B 74HC4053D

7111-C 74HC4053D

COMPANDER

MODULATION LEVEL


COMPNENT VALUES FOR ORIENTATION BASED ON 864MHz VERSION.

3104 213 3521.3

CL36532008_131.eps
120503

0001 D1	3115 D7	F116 F2
0002 B15	3116 A8	F117 E2
1101 E2	3117 A10	F118 E2
1102 A14	3118 B10	F119 E2
1105 C2	3119 C8	F120 F2
1106 I12	3120 C8	F121 F3
1107 D1	3121 A7	F122 F4
2101 C6	3122 D8	F123 E5
2102 C2	3123 B9	F124 F6
2103 B2	3124 D9	F125 E6
2104 B2	3125 B12	F126 F7
2105 B1	3127 A12	F130 G13
2106 C4	3130 H12	F131 F13
2107 D5	3131 G13	F140 G4
2108 B5	3132 G11	F141 H4
2109 C5	3140 G1	F142 H4
2110 C5	3141 H1	F143 J4
2111 B6	3142 H1	F144 J6
2113 B6	3143 H1	F145 H7
2114 A8	3144 G3	F146 I9
2115 D7	3145 H3	F147 J10
2116 C8	3146 G2	F148 I11
2117 D8	3147 H2	F149 J12
2118 D8	3148 H5	F150 I14
2120 C8	3149 K5	F151 E4
2121 A11	3150 G6	
2122 A8	3151 K6	
2123 C9	3152 G6	
2124 D9	3153 K6	
2125 C9	3154 I4	
2126 B12	3155 J4	
2127 B12	3156 J2	
2128 B13	3157 J2	
2129 C12	3158 J1	
2130 C13	3159 K1	
2131 B14	3160 H7	
2132 C13	3161 J7	
2133 H11	3164 J7	
2134 G13	3165 K7	
2135 E12	3166 I9	
2136 F9	3167 I5	
2137 F8	3168 J5	
2139 I4	3169 I8	
2140 I3	3171 J11	
2141 H2	3172 J9	
2142 H2	3173 K10	
2143 G2	3174 J10	
2144 H2	3175 I10	
2145 G2	3176 I10	
2146 H2	3177 J11	
2147 J2	3178 J11	
2148 J2	3179 J13	
2149 I2	3180 E4	
2150 J2	3181 E5	
2151 H6	3182 F6	
2152 J6	3183 G6	
2153 H6	3185 F5	
2154 K6	3186 G4	
2155 H5	3187 J13	
2156 J5	3188 I15	
2157 I5	3189 G9	
2158 J5	3190 I8	
2159 J1	3191 J7	
2160 J1	4101 B13	
2161 J2	4102 A9	
2162 J2	4104 B14	
2163 I2	4105 I13	
2164 I2	4106 E7	
2165 I7	4107 A6	
2166 J7	4108 C15	
2167 K7	5101 C6	
2168 I9	5103 B7	
2169 K10	5104 C9	
2170 J10	5105 B12	
2171 I11	5106 A12	
2172 K11	5107 B13	
2173 J11	5108 C6	
2174 J15	5109 C14	
2175 I14	5112 B13	
2176 I6	5113 C6	
2177 I10	5116 C10	
2178 K11	5117 D10	
2179 F3	5118 C11	
2180 F4	5120 B16	
2181 E5	5121 C16	
2182 F5	5125 E12	
2183 G6	5126 E8	
2184 F2	5127 F3	
2185 C10	5128 B15	
2186 C10	5129 C15	
2187 C10	5130 J13	
2188 C11	5131 B14	
2189 C11	5132 A6	
2190 C11	5133 E7	
2191 C11	6101 D2	
2192 C10	6102 B5	
2193 A11	6103 B10	
2194 J13	6105 E5	
2195 J13	6106 F4	
2196 J13	6110 B14	
2197 D3	6111 C14	
2198 D6	7101 B3	
2199 B6	7102 B4	
2200 D10	7103 C7	
2201 A7	7104 A10	
2202 E7	7105 C9	
2203 F2	7106 B12	
2204 F2	7110 E11	
2205 C9	7111-A F8	
2206 B15	7111-B G8	
2207 C15	7111-C H8	
2208 B15	7112 I3	
2210 C14	7113-A I6	
3101 C1	7113-B J6	
3102 C1	7116-A J12	
3103 C2	7116-B J10	
3104 C2	7117 F5	
3105 D5	7118 E5	
3106 D5	7119 F6	
3107 B2	7120 K9	
3108 B1	7121 K10	
3109 B1	F110 C2	
3110 B4	F111 C4	
3111 C5	F112 B1	
3112 B5	F113 A8	
3113 D7	F114 B14	
3114 C7	F115 C14	

Layout Wireless Transmitter (Top Side)

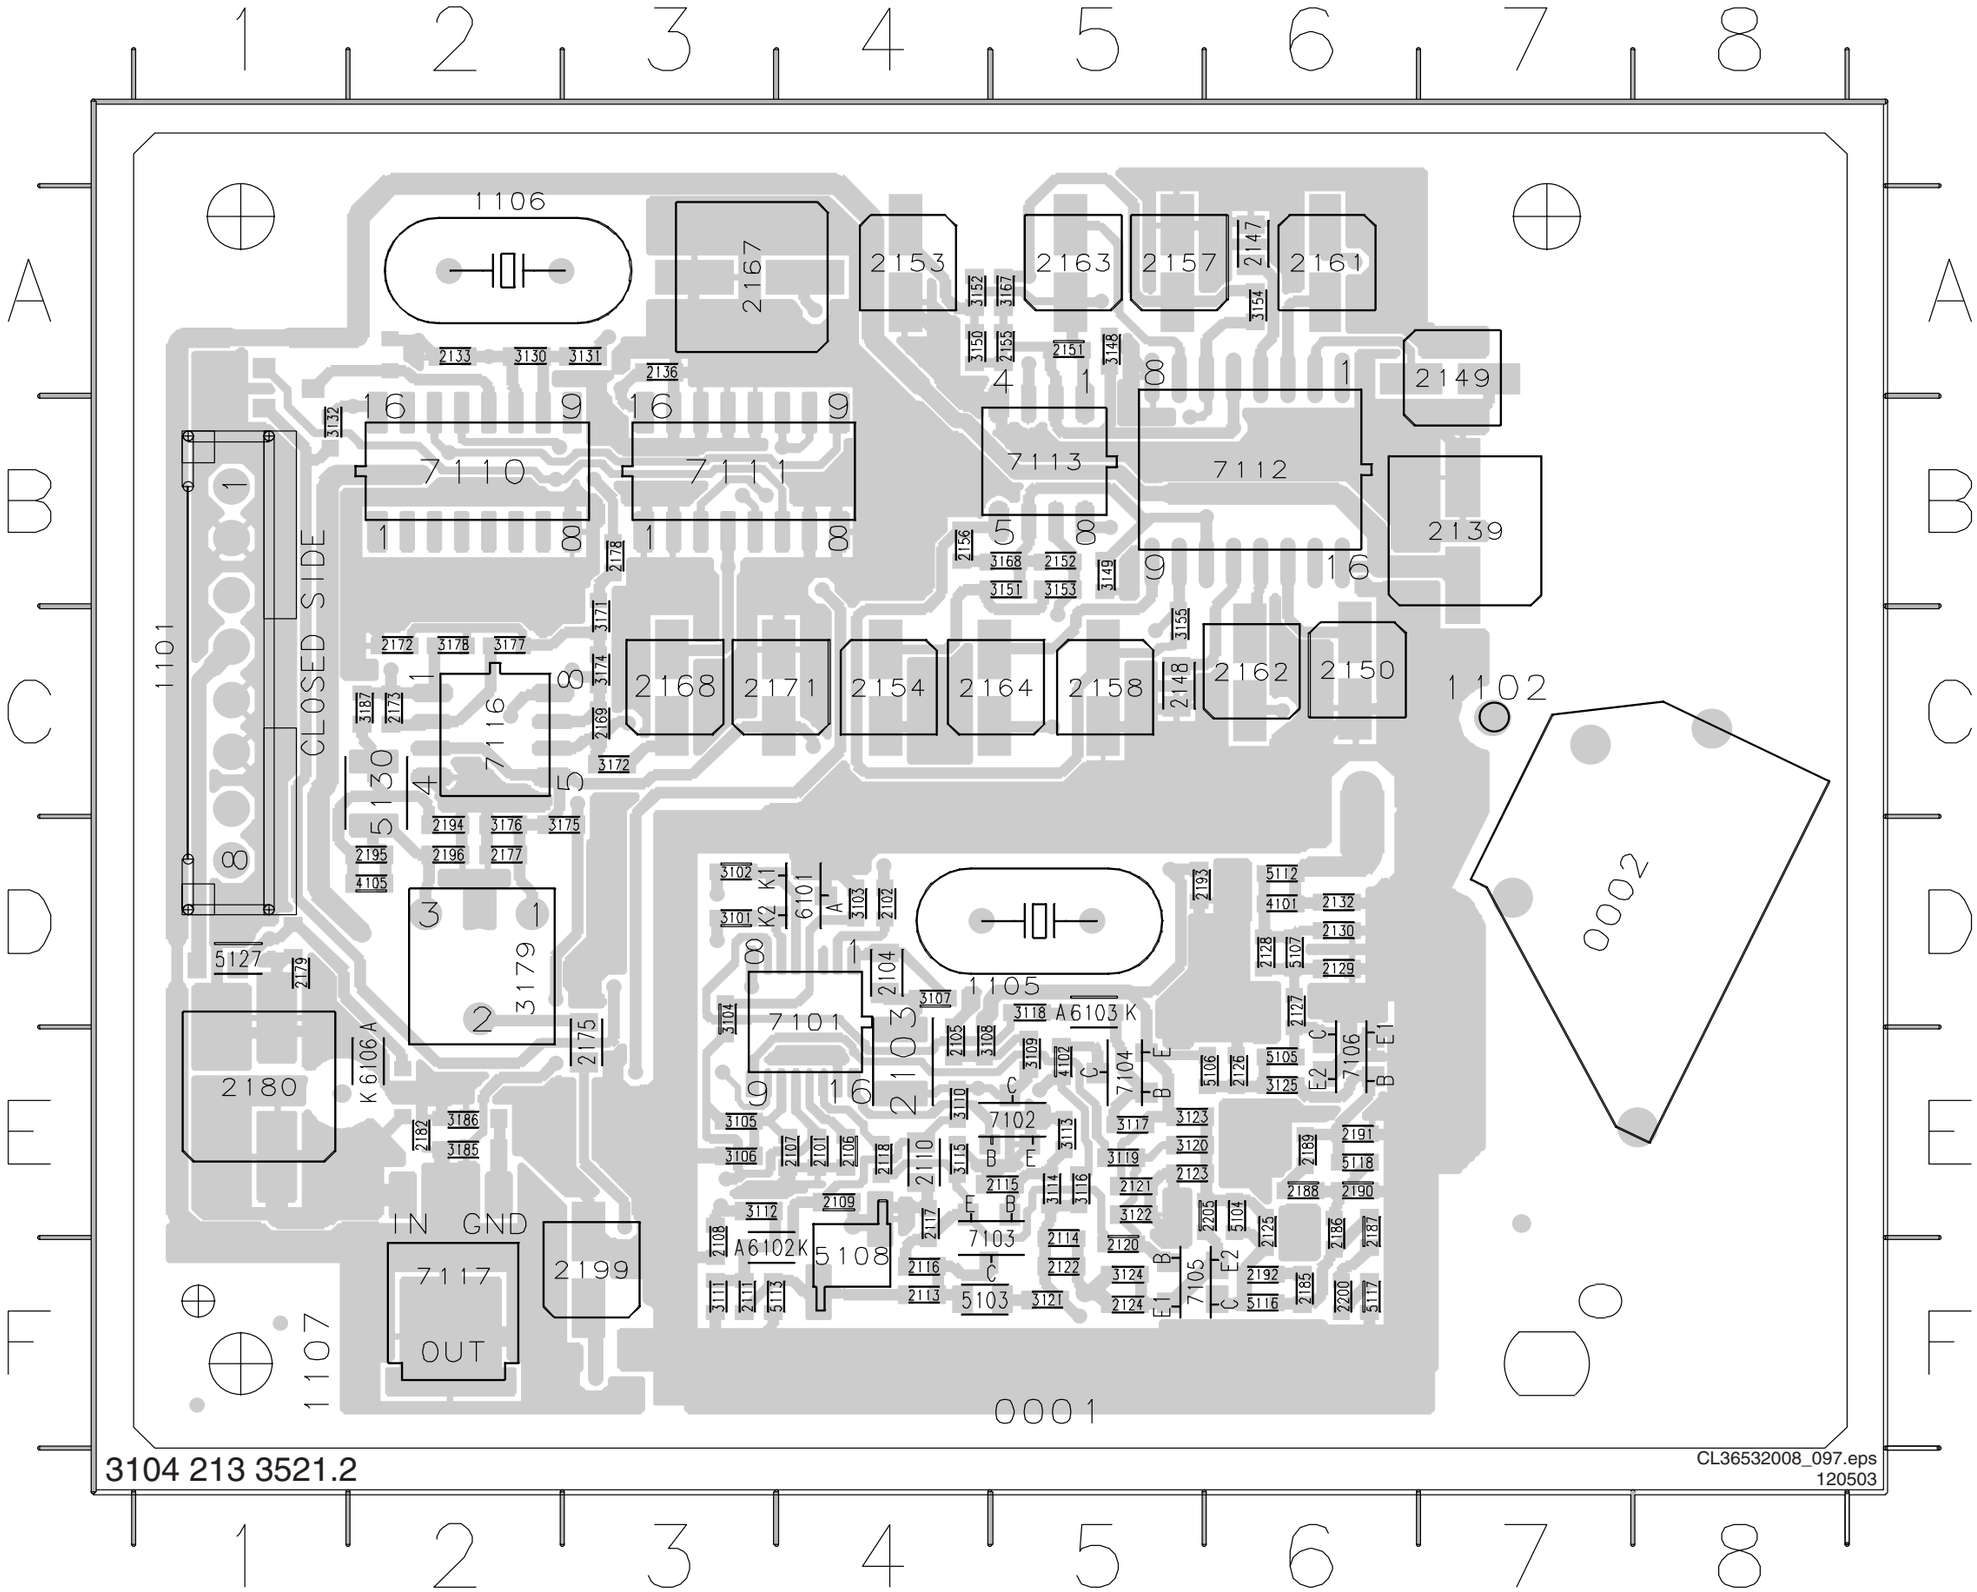


3104 213 3521.2

CL36532008_097.eps
120503

0001	E6	2172	C2	3155	C5
0002	D7	2173	C2	3167	A5
1101	C1	2175	E3	3168	B5
1102	C7	2177	D2	3171	C3
1105	D5	2178	B3	3172	C3
1106	A2	2179	D1	3174	C3
2101	E4	2180	E1	3175	D3
2102	D4	2182	E2	3176	D2
2103	E4	2185	E6	3177	C2
2104	D4	2186	E6	3178	C2
2105	E4	2187	E6	3179	D2
2106	E4	2188	E6	3185	E2
2107	E4	2189	E6	3186	E2
2108	F3	2190	E6	3187	C2
2109	E4	2191	E6	4101	D6
2110	E4	2192	F6	1402	E5
2111	F3	2193	D5	4105	D2
2113	F4	2194	D2	5103	F4
2114	F5	2195	D2	5104	E6
2115	E5	2196	D2	5105	E6
2116	F4	2199	F3	5106	E6
2117	E4	2200	F6	5107	D6
2118	E4	2205	E6	5108	F4
2120	F5	3101	D3	5112	D6
2121	E5	3102	D3	5113	F3
2122	F5	3103	D4	5116	F6
2123	E5	3104	D3	5117	F6
2124	E5	3105	E3	5118	E6
2125	E6	3106	E3	5127	D1
2126	E6	3107	D4	5130	C2
2127	D6	3108	E4	6101	D4
2128	D6	3109	E5	6102	F3
2129	D6	3110	E4	6103	D5
2130	D6	3111	F3	6106	E2
2132	D6	3112	E3	7101	D4
2133	A2	3113	E5	7102	E5
2136	A3	3114	E5	7103	F5
2139	B7	3115	E4	7104	E5
2147	A6	3116	E5	7105	F5
2148	C5	3117	E5	7106	E6
2149	A7	3118	D5	7110	B2
2150	C6	3119	E5	7111	B3
2151	A5	3120	E5	7112	B6
2152	B5	3121	F5	7113	B5
2153	A4	3122	E5	7116	C2
2154	C4	3123	E5	7117	F2
2155	A5	3124	F5		
2156	B4	3125	E6		
2157	A5	3130	A2		
2158	C5	3131	A3		
2161	A6	3132	B1		
2162	C6	3148	A5		
2163	A5	3149	B5		
2164	C5	3150	A4		
2167	A3	3151	B5		
2168	C3	3152	A4		
2169	C3	3153	B5		
2171	C4	3154	A6		

Layout Wireless Transmitter Board (Bottom Side)

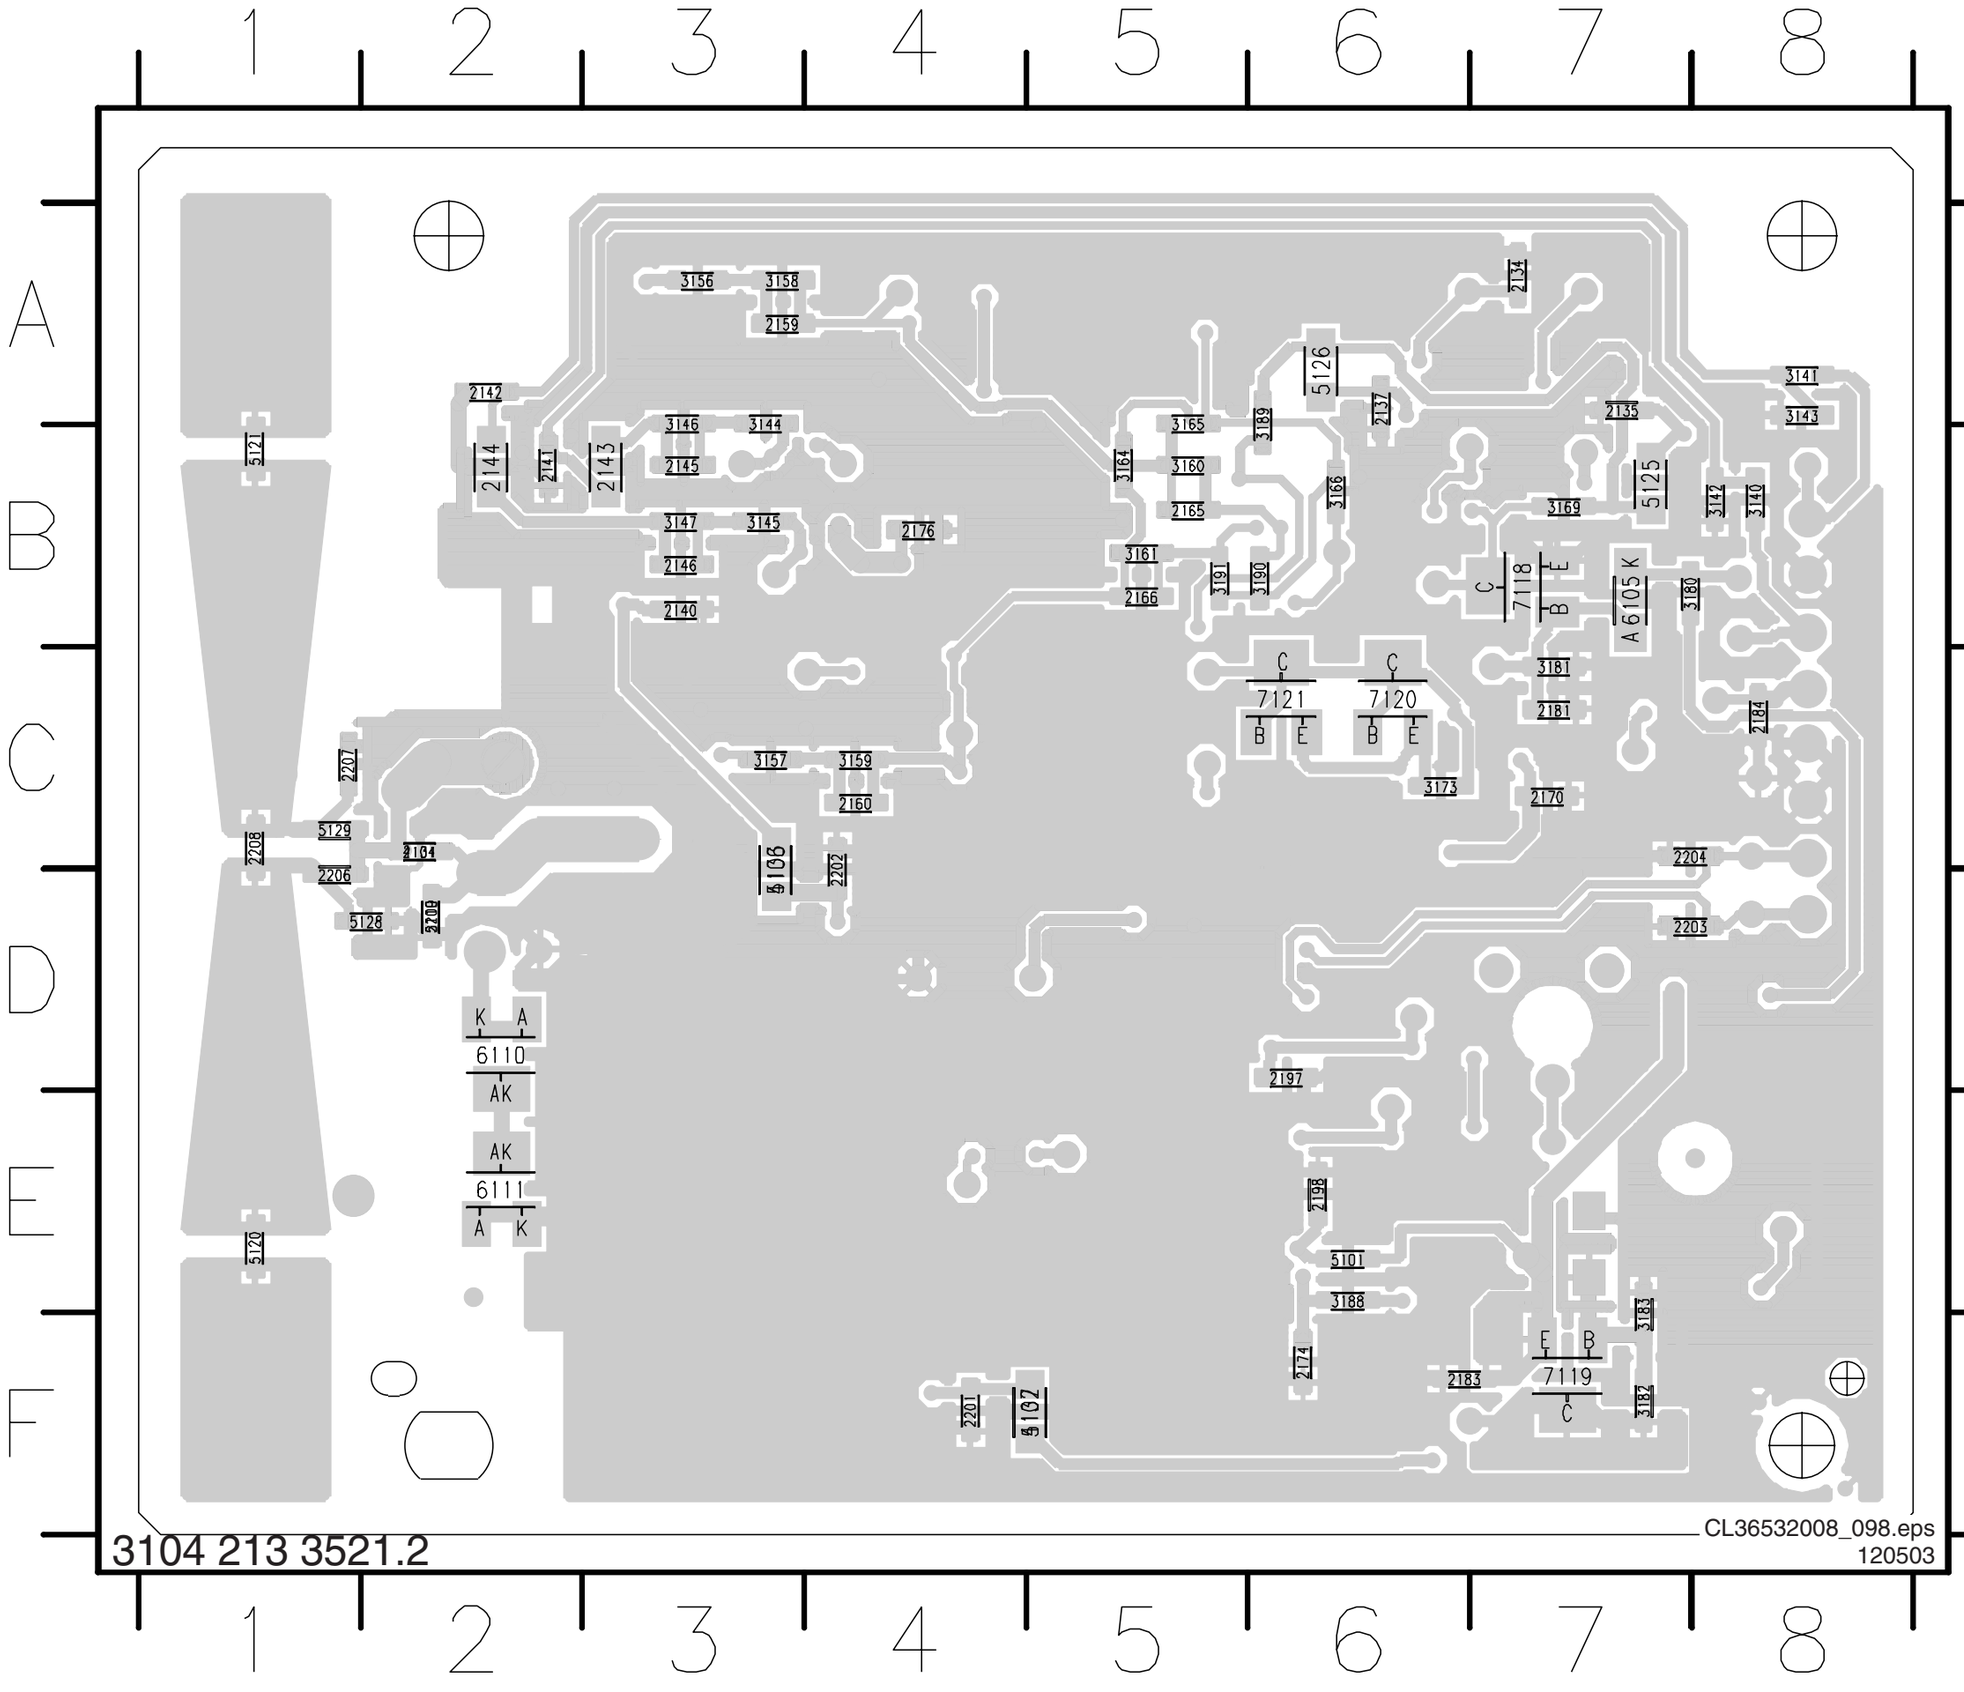


3104 213 3521.2

CL36532008_098.eps
120503

2131	C2	3183	F7
2134	A7	3188	E6
2135	A7	3189	A6
2137	A6	3190	B6
2140	B3	3191	B5
2141	B2	4104	C2
2142	A2	4106	D3
2143	B3	4107	F5
2144	B2	5101	E6
2145	B3	5109	D2
2146	B3	5120	E1
2159	A3	5121	B1
2160	C4	5125	B7
2165	B5	5126	A6
2166	B5	5128	D2
2169	C7	5129	C1
2174	F6	5132	F5
2176	B4	5133	D3
2181	C7	6105	B7
2183	F6	6110	D2
2184	C8	6111	E2
2197	D6	7118	B7
2198	E6	7119	F7
2201	F4	7120	C6
2202	D4	7121	C6
2203	D7		
2204	C7		
2206	D1		
2207	C1		
2208	C1		
2210	D2		
3140	B8		
3141	A8		
3142	B8		
3143	A8		
3144	A3		
3145	B3		
3146	A3		
3147	B3		
3156	A3		
3157	C3		
3158	A3		
3159	C4		
3160	B5		
3161	B5		
3164	B5		
3165	A5		
3166	B6		
3167	B7		
3169	C6		
3173	B7		
3180	B8		
3181	C7		
3182	F7		

Radio Module ECO6 3 Band Cenelec

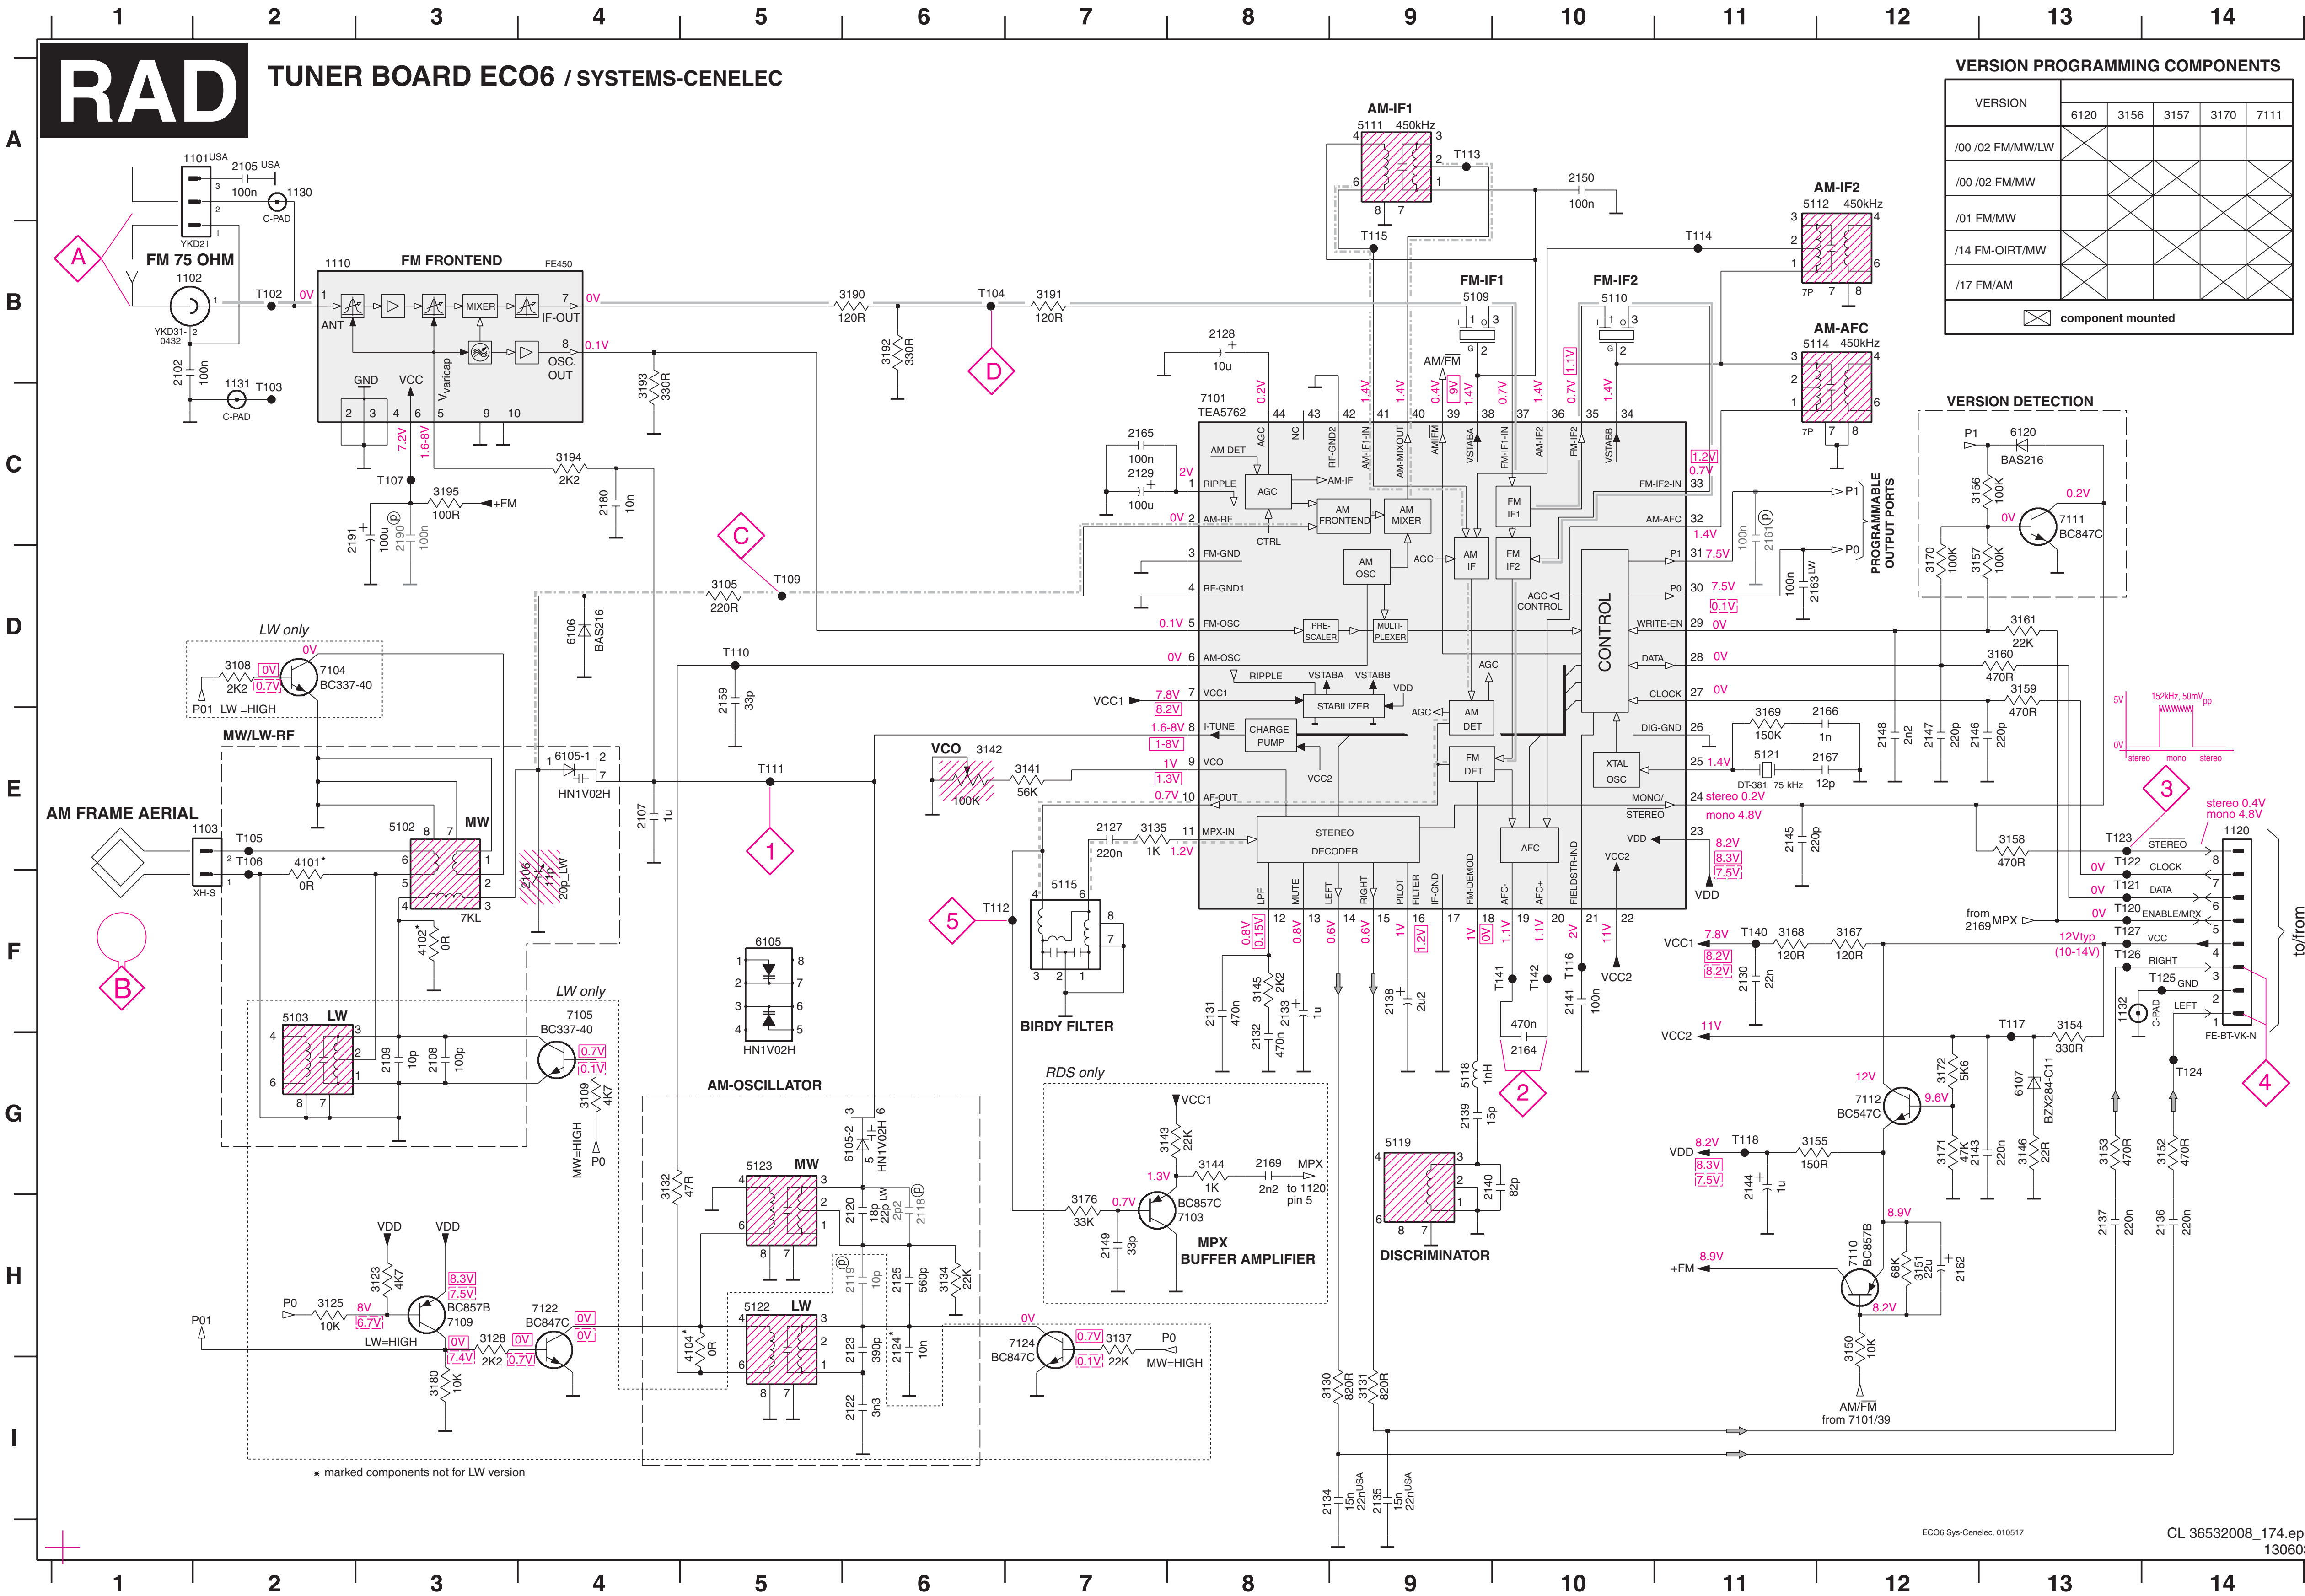

VERSION PROGRAMMING COMPONENTS

VERSION	6120	3156	3157	3170	7111
/00 /02 FM/MW/LW	X				
/00 /02 FM/MW		X	X		X
/01 FM/MW		X		X	X
/14 FM-OIRT/MW	X		X		X
/17 FM/AM	X			X	X

X = component mounted

LEGEND

* ... only assembled in FM/AM-version
(p)...for provision only
USA ... for USA version only
LW ... for LW version only

SMD jumper: 41xx 0R

EVM

...V FM mode stereo
...V (boxed) MW mode
...V (dashed box) LW mode
voltages measured while set is tuned to a strong transmitter


Signal path

- FM
- AM
- MPX (Audio Frequency)
- AF - left/right

Component	Position
1101	A2
1102	B1
1103	E2
1110	B2
1120	E14
1130	A2
1131	C2
1132	F13
2102	B1
2105	A2
2106	E3
2107	E4
2108	G3
2109	G3
2118	H6
2119	H6
2120	H6
2122	I6
2123	H6
2124	H6
2125	H6
2127	E7
2128	B8
2129	C7
2130	F11
2131	F8
2132	F8
2133	F8
2134	I8
2135	I9
2136	H14
2137	H13
2138	F9
2139	G9
2140	G9
2141	F10
2143	G12
2144	G11
2145	E11
2146	E12
2147	E12
2148	E12
2149	H7
2150	A10
2159	D5
2161	C11
2162	H12
2163	D11
2164	G10
2165	C7
2166	E11
2167	E11
2169	G8
2180	C4
2190	C3
2191	C3
3105	D5
3108	D2
3109	G4
3123	H3
3125	H2
3128	H3
3130	I9
3131	I9
3132	G4
3134	H6
3135	E7
3137	H7
3141	E7
3142	E6
3143	G7
3144	G8
3145	F8
3146	G13
3150	H12
3151	H12
3152	G14
3153	G13
3154	F13
3155	G12
3156	C12
3157	D12
3158	E13
3159	D13
3160	D13
3161	D13
3167	F12
3168	F11
3169	E11
3170	D12
3171	G12
3172	G12
3176	H7
3180	I3
3190	B6
3191	B7
3192	B6
3193	B4
3194	C4
3195	C3
4101	E2
4102	F3
4104	H5
5102	E3
5103	F2
5109	B9
5110	B10
5111	A9
5112	A11
5114	B11
5115	E7
5118	G9
5119	G9
5121	E11
5122	H5
5123	G5
6105-1	E4
6105-2	G6
6106	D4
6107	G13
6120	C13
7101	C8
7103	H8
7104	D2
7105	F4
7109	H3
7110	H12
7111	C13
7112	G12
7122	H4
7124	H7
T102	B2
T103	B2
T104	B6
T105	E2
T106	E2
T107	C3
T109	D5
T110	D5
T111	E5
T112	F7
T113	A9
T114	B11
T116	F10
T117	F13
T118	G11
T120	F13
T121	F13
T122	E13
T123	E13
T124	G14
T125	F14
T126	F13
T127	F13
T140	F11
T141	F10
T142	F10


Layout Radio Module ECO6 3 Band Cenelec (Top Side)

1101 B5 1110 B4 1131 C5 2107 B3 2133 C1 2162 A4 5102 C4 5110 A2 5114 A2 5121 B2 7104 C4 9101 A2 9104 B1 9107 B4 9110 A4
1102 B5 1120 A4 1132 A4 2128 A3 2138 B1 2191 B4 5103 C4 5111 A3 5115 C2 5122 C3 7105 C5 9102 B2 9105 B1 9108 B3 9111 A3
1103 C5 1130 A5 2106 B4 2129 B3 2144 B1 3142 C2 5109 B3 5112 A2 5119 B2 5123 C3 7112 B1 9103 A1 9106 B1 9109 C2

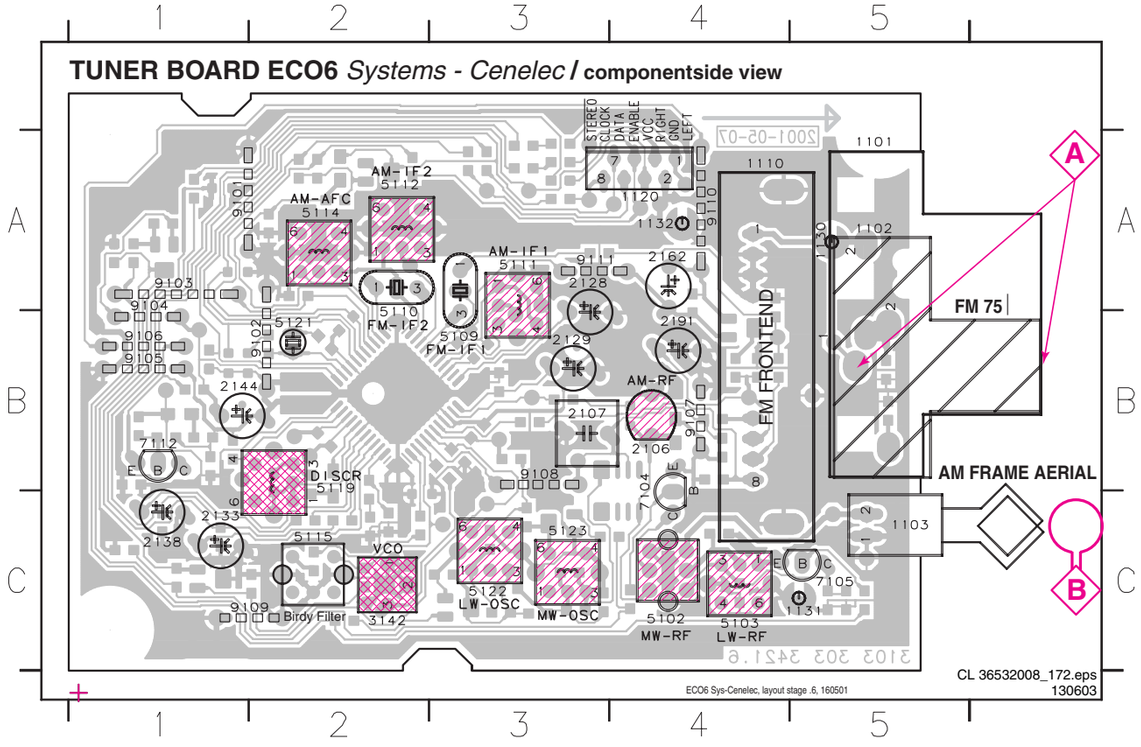


Layout Radio Module ECO6 3 Band Cenelec (Bottom Side)

2102 B1 2120 C3 2130 B3 2137 A3 2146 B5 2161 A4 2169 A3 3123 A5 3134 C3 3145 C4 3154 B5 3160 A3 3171 B5 3192 A2 4104 C3 6106 B2 7110 B2
2105 B1 2122 C3 2131 C4 2139 B4 2147 A5 2163 A4 2180 B2 3125 A5 3135 C4 3146 B5 3155 B5 3161 A4 3172 B5 3193 B2 4105 B2 6107 B5 7111 A4
2108 C1 2123 C3 2132 C4 2140 B4 2148 B4 2164 B4 2190 B2 3128 C2 3137 C4 3150 B3 3156 A4 3167 A5 3176 C4 3194 B2 4106 B3 6120 A4 7122 C3
2109 C1 2124 C3 2134 C5 2141 B5 2149 C4 2165 B3 3105 B3 3130 C4 3141 B3 3151 A2 3157 A4 3168 C5 3180 A5 3195 B2 4107 C4 7101 B4 7124 C3
2118 C3 2125 C3 2135 C5 2143 B5 2150 B3 2166 B5 3108 C2 3131 C4 3143 C5 3152 A3 3158 A3 3169 B4 3190 B2 4101 C2 5118 C4 7103 C5
2119 C3 2127 C4 2136 A3 2145 B5 2159 B3 2167 B4 3109 C1 3132 B3 3144 A5 3153 A3 3159 A3 3170 A4 3191 A3 4102 C2 6105 B2 7109 A5

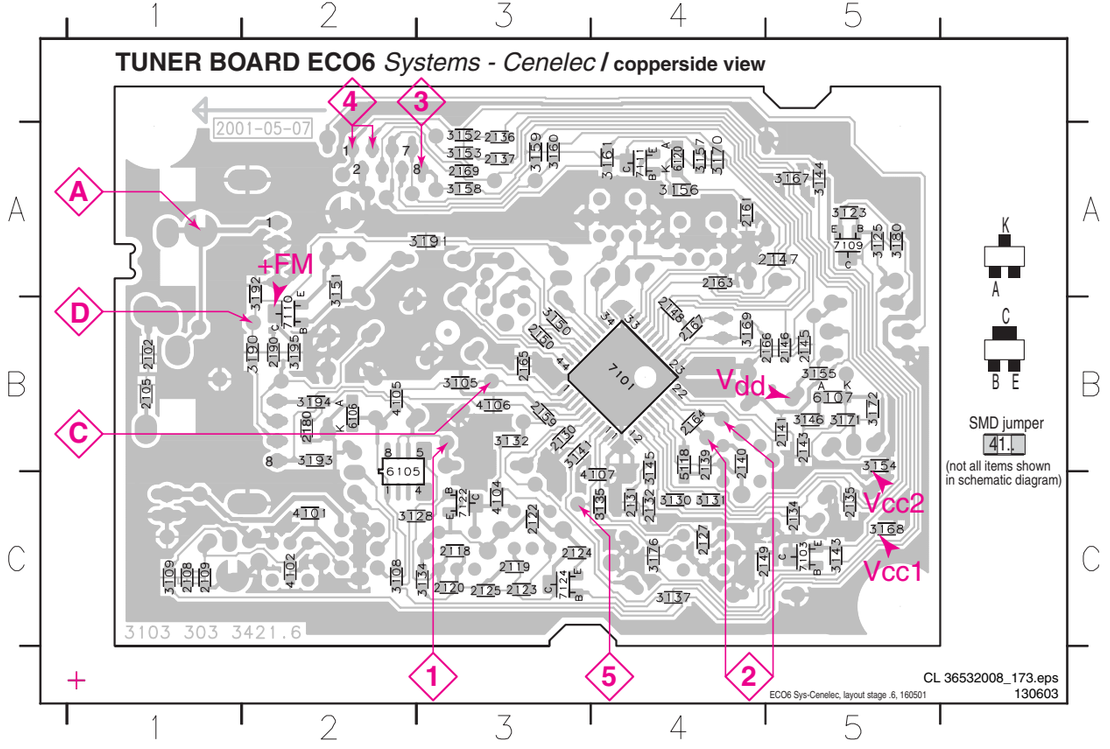


Wireless Receiver/Frontend

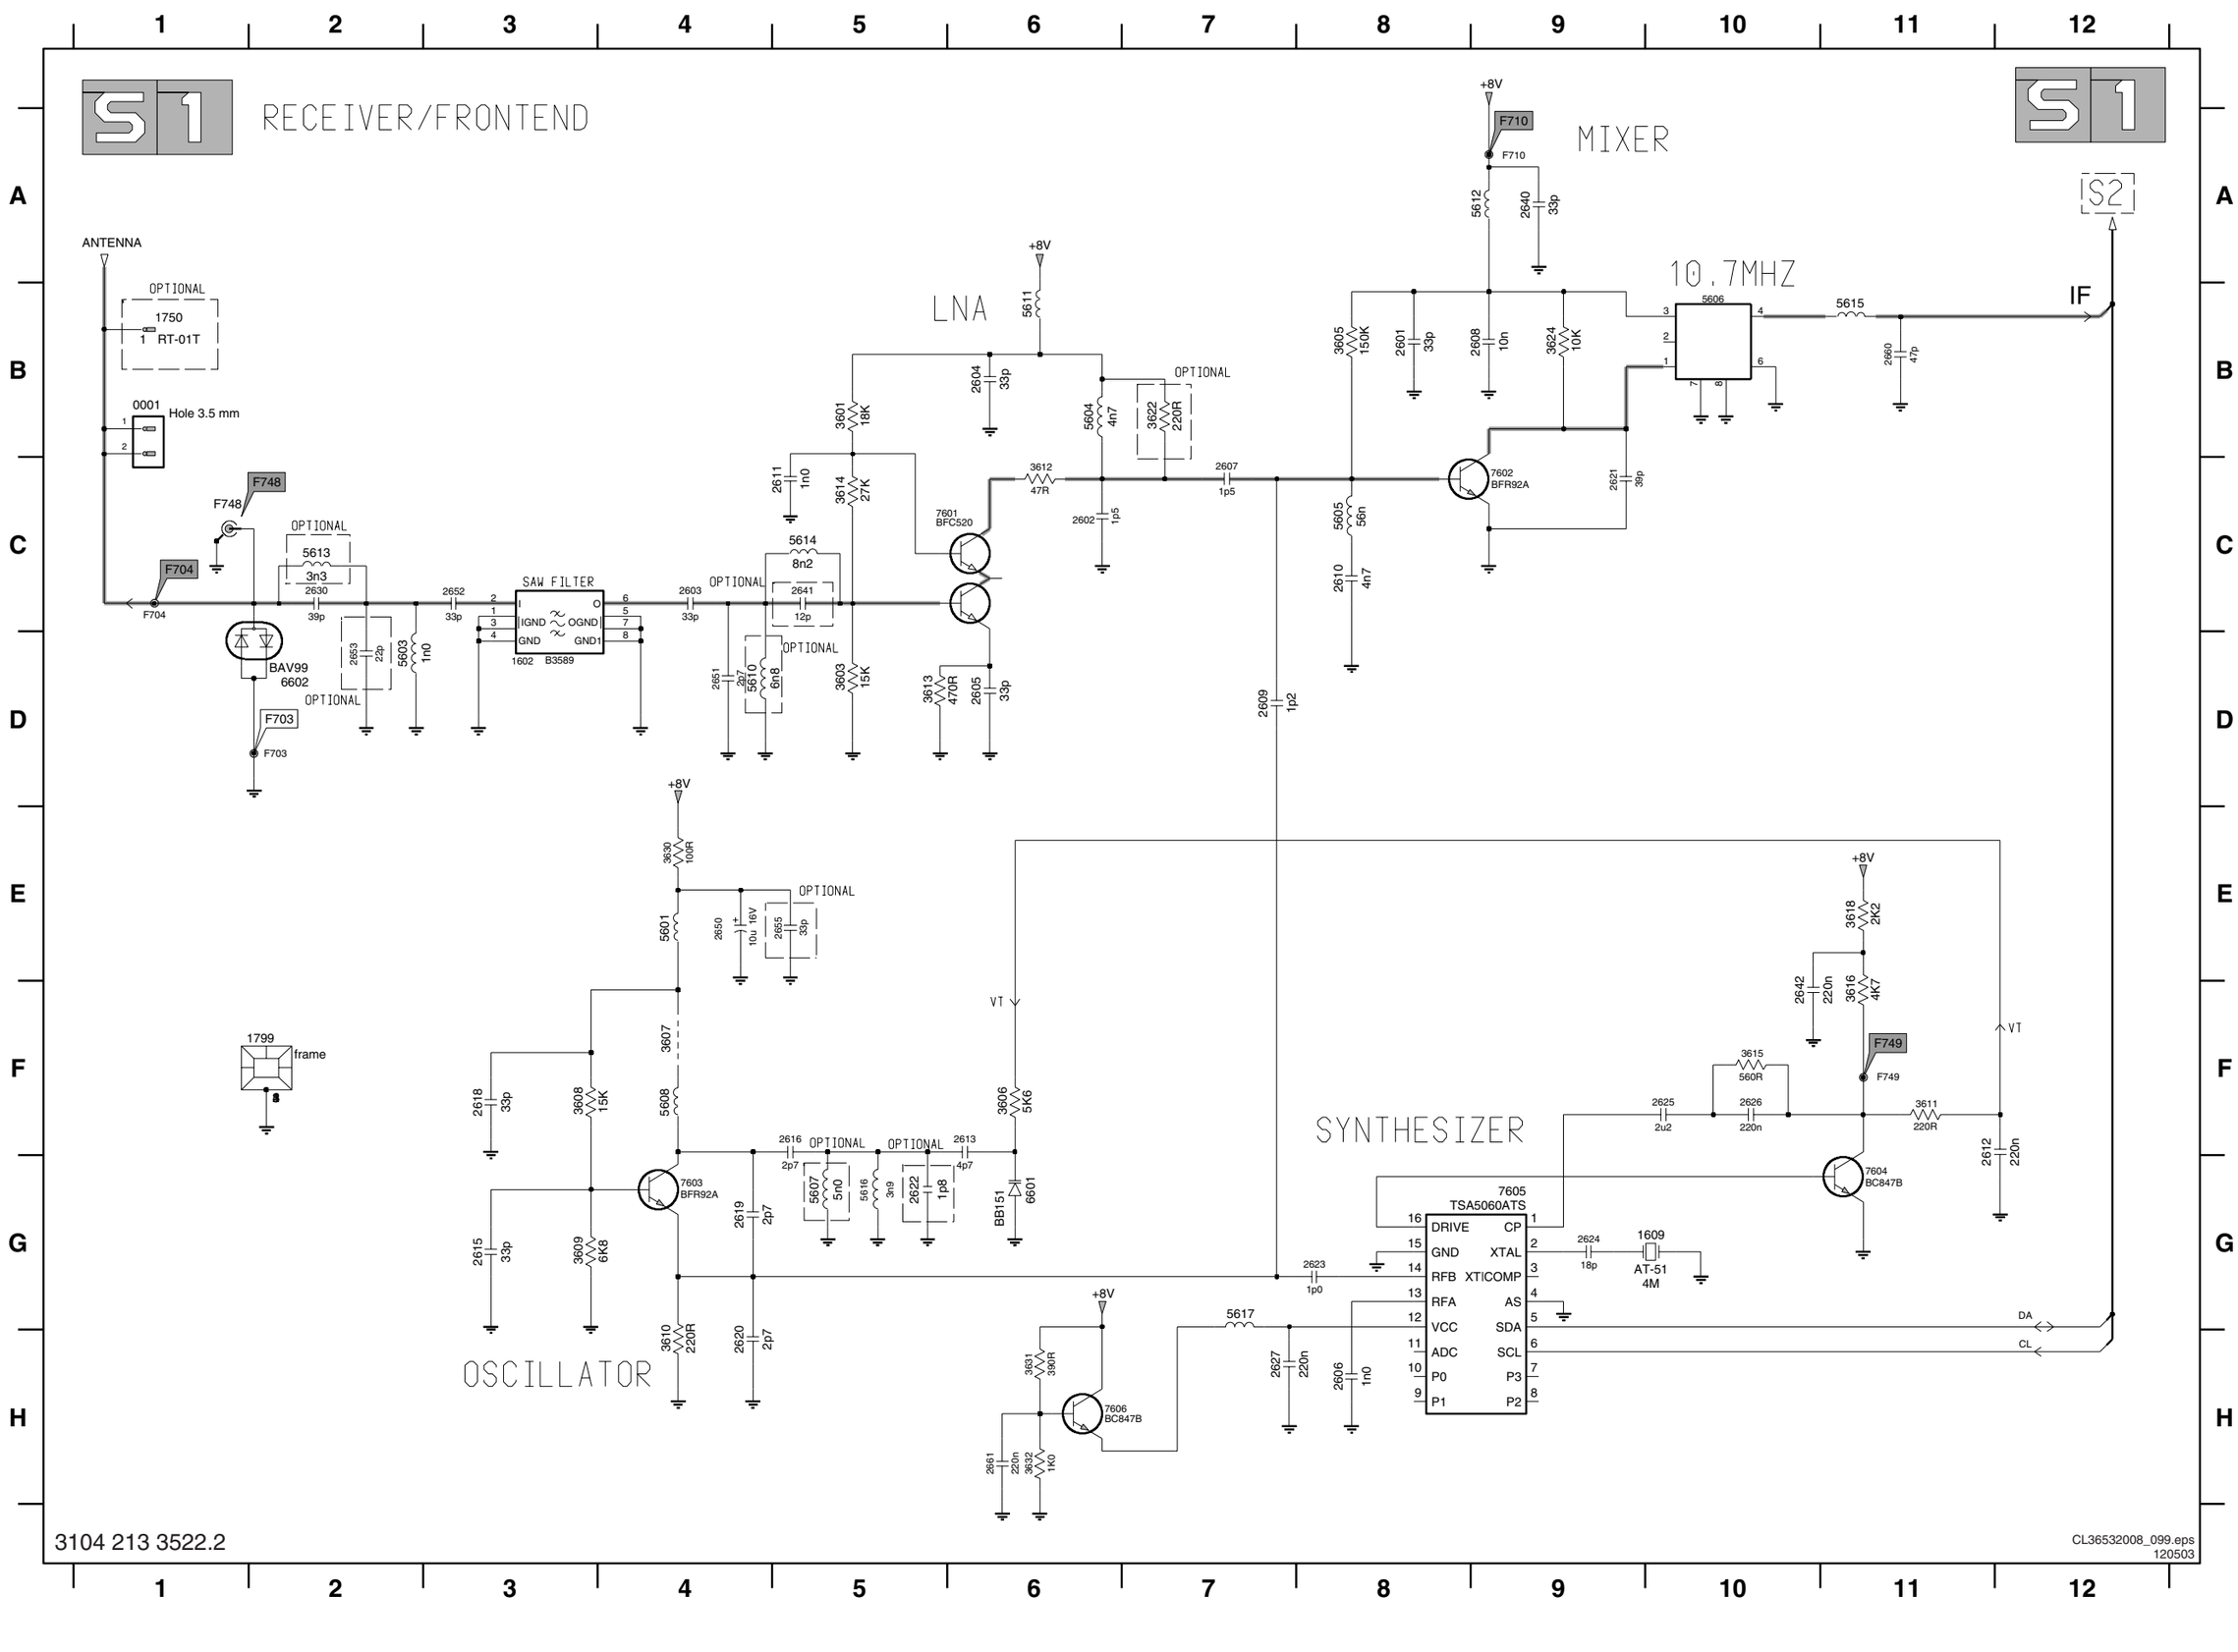


0001 B1
1602 D3
1609 G10
1750 B1
1799 F1
2601 B8
2602 C6
2603 C4
2604 B6
2605 D6
2606 H8
2607 C7
2608 B9
2609 D7
2610 C8
2611 C5
2612 F11
2613 F6
2615 G3
2616 F5
2618 F3
2619 G4
2620 H4
2621 C9
2622 G5
2623 G8
2624 G9
2625 F10
2626 F10
2627 H7
2630 C2
2640 A9
2641 C5
2642 F10
2650 E4
2651 D4
2652 C3
2653 D2
2655 E5
2660 B11
2661 H6
3601 B5
3603 D5
3605 B8
3606 F6
3607 F4
3608 F3
3609 G3
3610 H4
3611 F11
3612 C6
3613 D5
3614 C5
3615 F10
3616 F11
3618 E11
3622 B7
3624 B9
3630 E4
3631 H6
3632 H6
5601 E4
5603 D2
5604 B6
5605 C8
5606 B10
5607 G5
5608 F4
5610 D4
5611 B6
5612 A9
5613 C2
5614 C5
5615 B11
5616 G5
5617 G7
6601 G6
6602 D2
7601 C5
7602 C9
7603 G4
7604 G11
7605 G9
7606 H7
F703 D2
F704 C1
F710 A9
F748 C1
F749 F11

Wireless Receiver/Backend

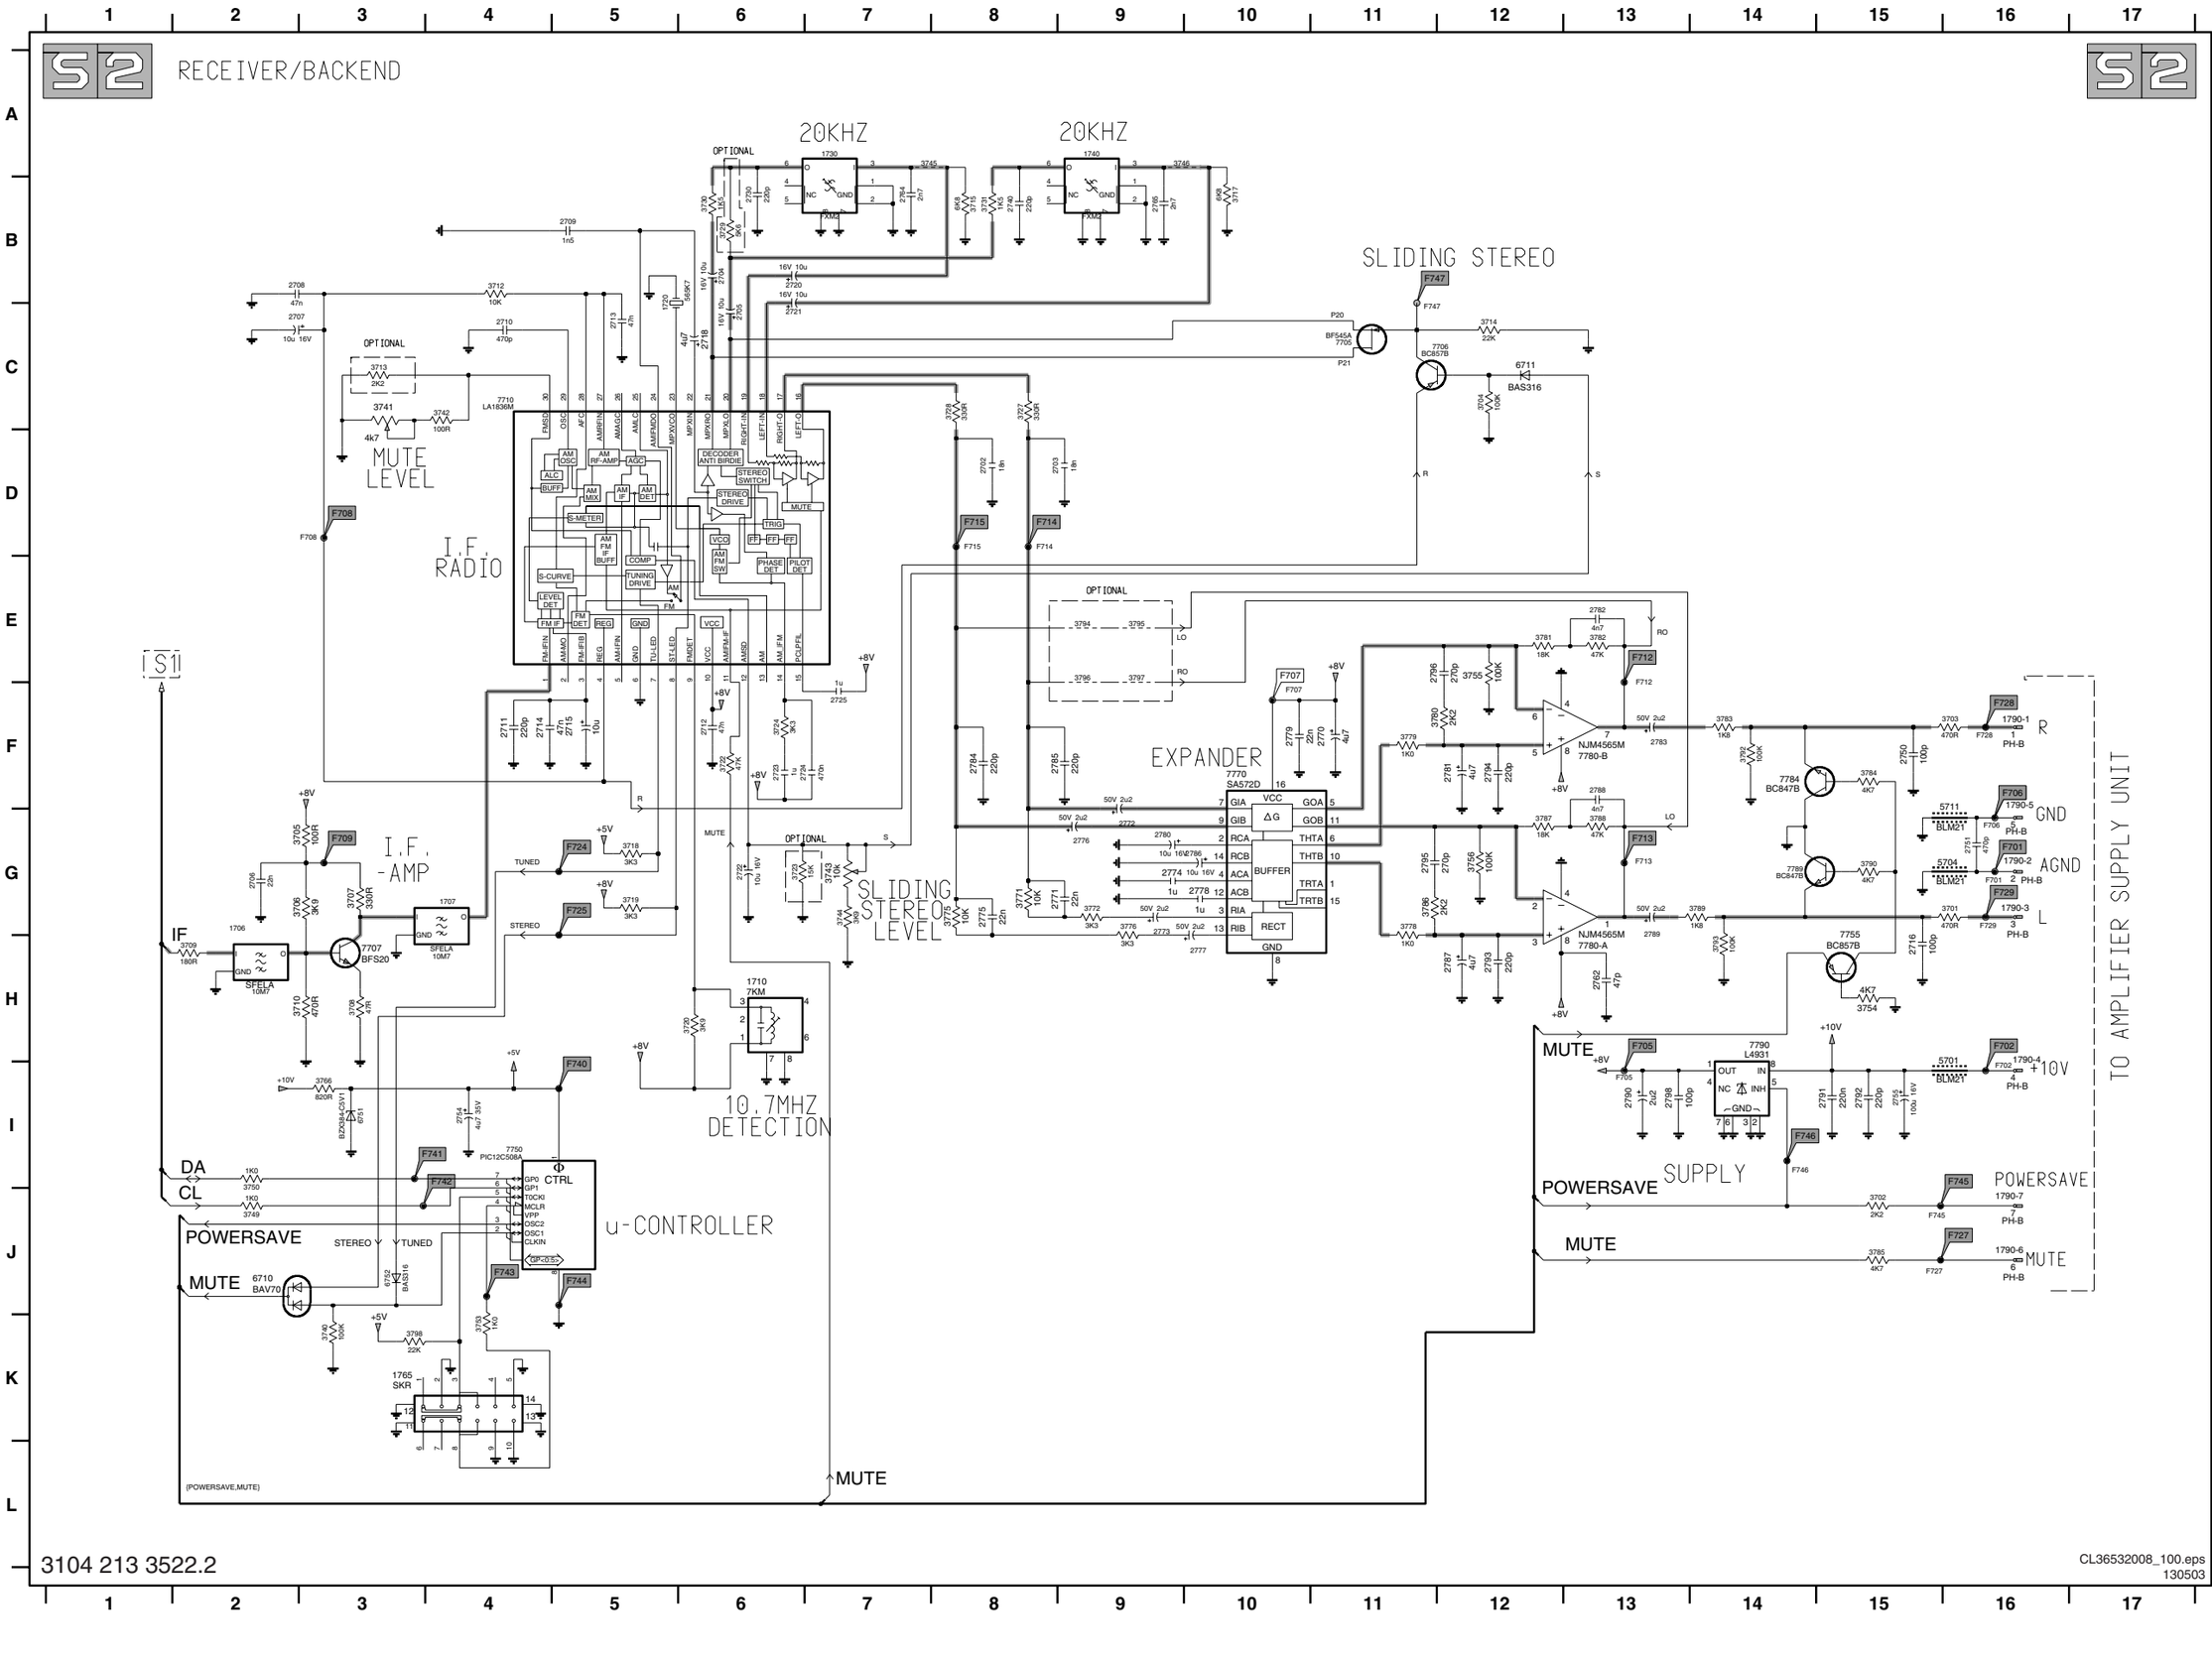

1706 G2
1707 G4
1710 H6
1720 B5
1730 A7
1740 A9
1765 K3
1790-1 F16
1790-2 G16
1790-3 G16
1790-4 I16
1790-5 F16
1790-6 J16
1790-7 J16
2702 D8
2703 D9
2704 B6
2705 C6
2706 G2
2707 C2
2708 B2
2709 B5
2710 C4
2711 F4
2712 F6
2713 C5
2714 F4
2715 F5
2716 H15
2718 C6
2720 B6
2721 C6
2722 G6
2723 F6
2724 F7
2725 F7
2730 B6
2740 B8
2750 F15
2751 G16
2754 I4
2755 I15
2762 H13
2770 F11
2771 G9
2772 G9
2773 G9
2774 G9
2775 G8
2776 G9
2777 H10
2778 G10
2779 F10
2780 G9
2781 F12
2782 E13
2783 F13
2784 F8
2785 F9
2786 G10
2787 H12
2788 F13
2789 G13
2790 I13
2791 I15
2792 I15
2793 H12
2794 F12
2795 G11
2796 E12
2798 I13
3701 G16
3702 J15
3703 F16
3704 C12
3705 G3
3706 G3
3707 G3
3708 H3
3709 H2
3710 H3
3712 B4
3713 C3
3714 C12
3715 B8
3717 B10
3718 G5
3719 G5
3720 H6
3722 F6
3723 G6
3724 F6
3727 C8
3728 C8
3729 B6
3730 B6
3731 B8
3740 K3
3741 C3
3742 C4
3743 G7
3744 G7
3745 A7
3746 A9
3749 J2
3750 I2
3753 K4
3754 H15
3755 E12
3756 G12
3766 I3
3771 G8
3772 G9
3775 G8
3776 G9
3778 G11
3779 F11
3780 F12
3781 E12
3782 E13
3783 F14
3784 F15
3785 J15
3786 G11
3787 G12
3788 G13
3789 G14
3790 G15
3792 F14
3793 H14
3794 E9
3795 E9
3796 E9
3797 E9
3798 K3
5701 H16
5704 G16
5711 F16
6710 J2
6711 C12
6751 I3
6752 J3
7705 C11
7706 C12
7707 H3
7710 C4
7750 I4
7755 H15
7770 F10
7780-A H13
7780-B F13
7784 F14
7789 G14
7790 H14
F701 G16
F702 I16
F705 I13
F706 G16
F707 F10
F708 D3
F709 G3
F712 F13
F713 G13
F714 D8
F715 D8
F724 G5
F725 G5
F727 J15
F728 F16
F729 G16
F740 I5
F741 I4
F742 J4
F743 J4
F744 J5
F745 J15
F746 I14
F747 C11

Layout Wireless Receiver (Top Side)

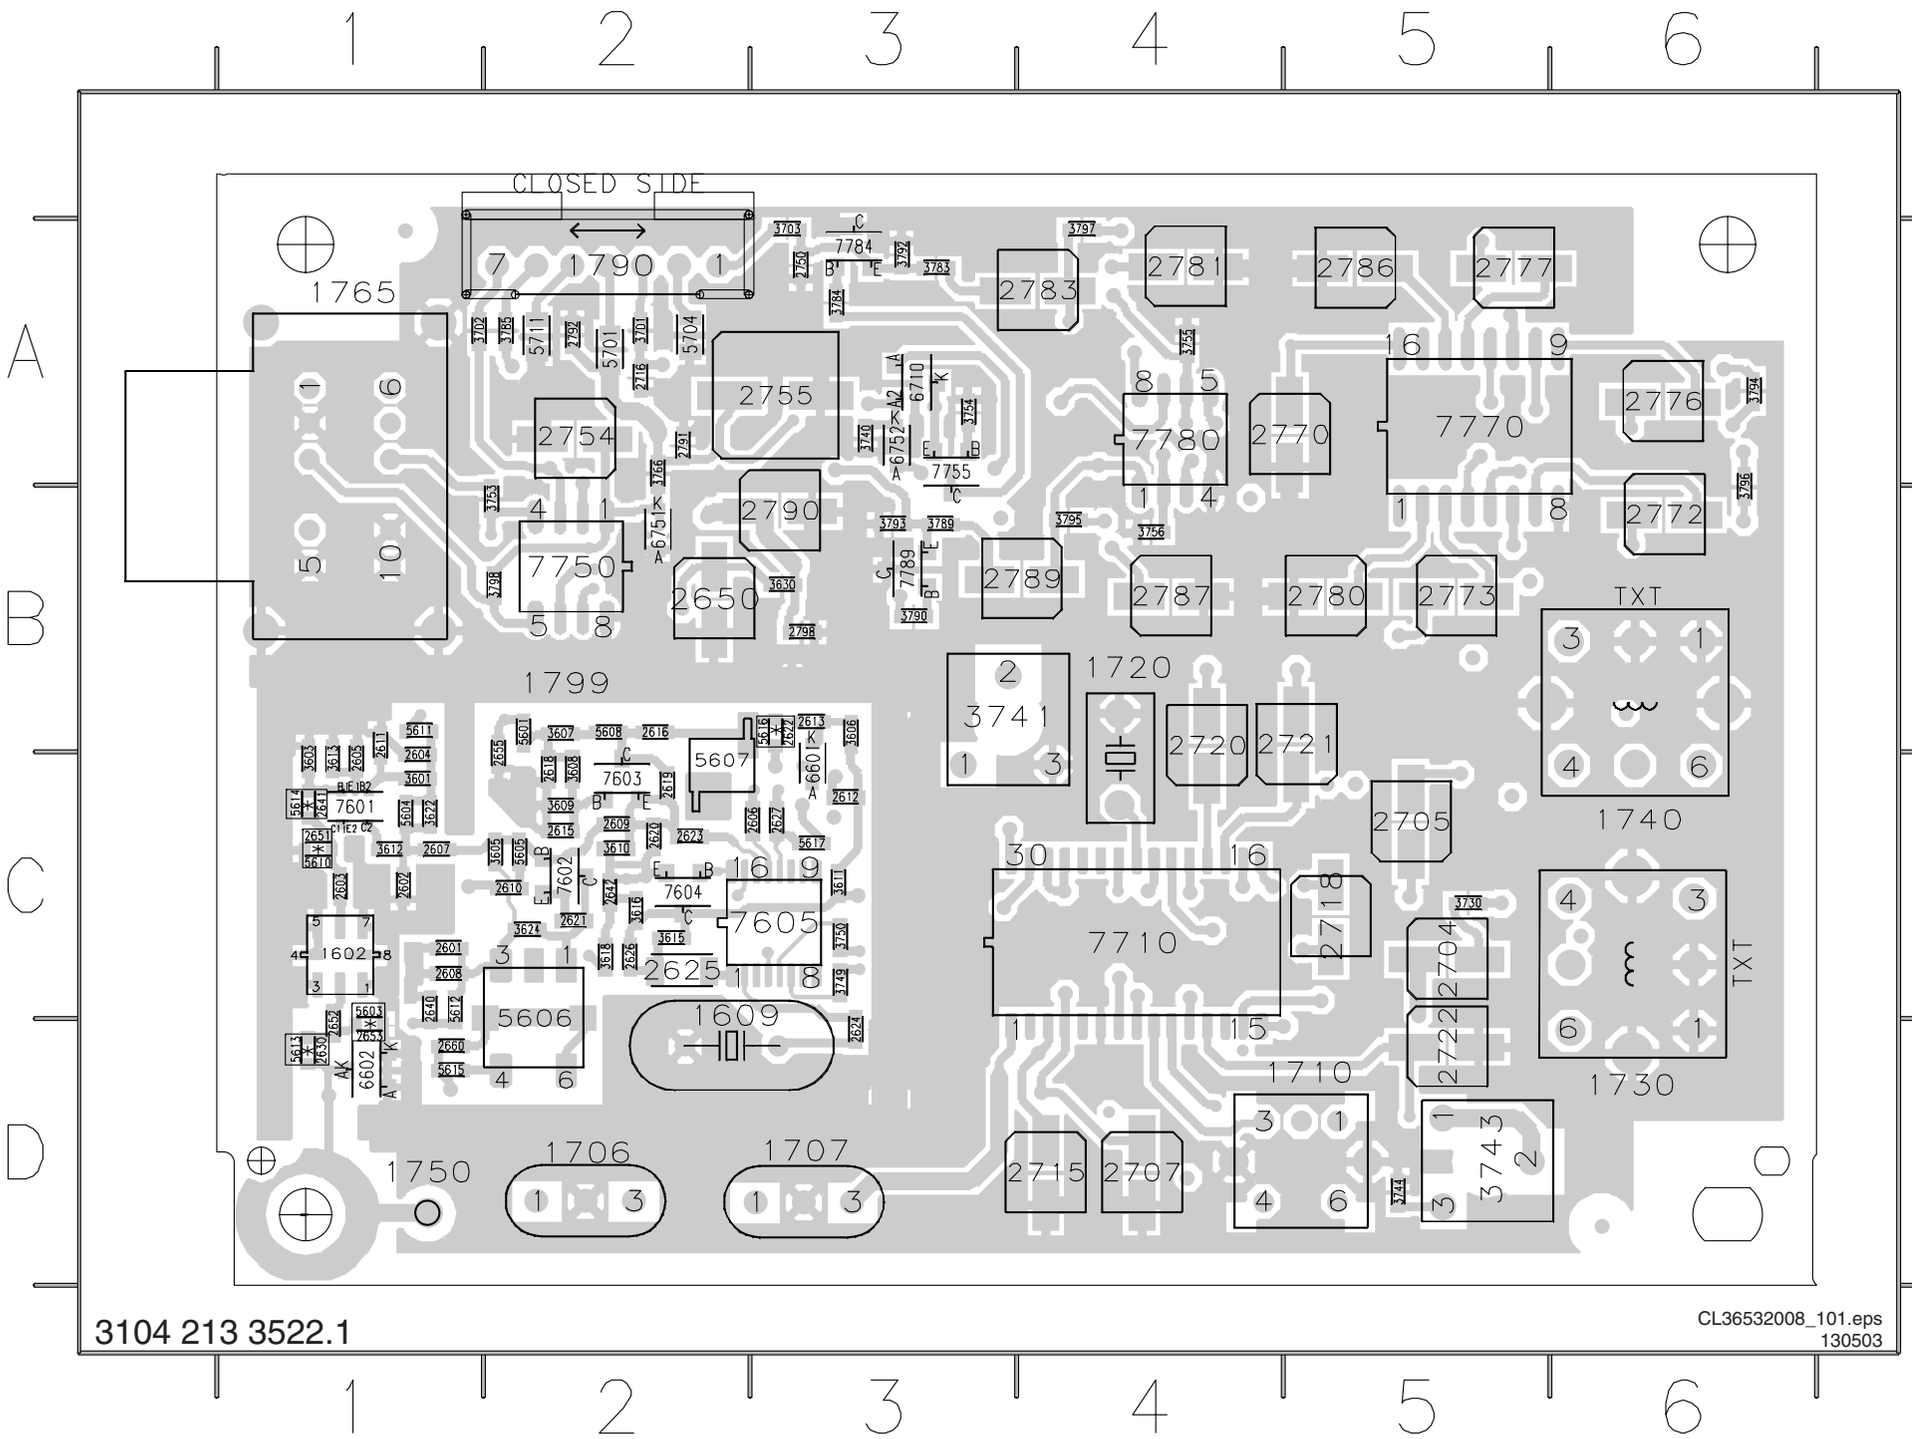


1602	C1	2755	A3	3797	A4
1609	D2	2770	A5	3798	B2
1706	D2	2772	B6	5601	B2
1707	D3	2773	B5	5603	D1
1710	D5	2776	A6	5604	C1
1720	C4	2777	A5	5605	C2
1730	C6	2780	B5	5606	C2
1740	B6	2781	A4	5607	C2
1750	D1	2783	A4	5608	B2
1765	A1	2786	A5	5610	C1
1790	A2	2787	B4	5611	B1
1799	C1	2789	B4	5612	C1
2601	C1	2790	B3	5613	D1
2602	C1	2791	A2	5614	C1
2603	C1	2792	A2	5615	D1
2604	C1	2798	B3	5616	B3
2605	C1	3601	C1	5617	C3
2606	C3	3603	C1	5701	A2
2607	C1	3605	C2	5704	A2
2608	C1	3606	B3	5711	A2
2609	C2	3607	B2	6601	C3
2610	C2	3608	C2	6602	D1
2611	B1	3609	C2	6710	A3
2612	C3	3610	C2	6751	B2
2613	B3	3611	C3	6752	A3
2615	C2	3612	C1	7601	C1
2616	D2	3613	C1	7602	C2
2618	C2	3615	C2	7603	C2
2619	C2	3616	C2	7604	C2
2620	C2	3618	C2	7605	C3
2621	C2	3622	C1	7710	C4
2622	B3	3624	C1	7750	B2
2623	C2	3630	B3	7755	A3
2624	D3	3701	A2	7770	A5
2625	C2	3702	A1	7780	A4
2626	C2	3703	A3	7784	A3
2627	C3	3730	C5	7789	B3
2630	D1	3740	A3		
2640	C1	3741	B3		
2641	C1	3743	D5		
2642	C2	3744	D5		
2650	B2	3749	C3		
2651	C1	3750	C3		
2652	D1	3753	B2		
2653	D1	3754	A3		
2655	C2	3755	A4		
2660	D1	3756	B4		
2704	C5	3766	A2		
2705	C5	3783	A3		
2707	D4	3784	A3		
2715	D4	3785	A2		
2716	A2	3789	B3		
2718	C5	3790	B3		
2720	B4	3792	A3		
2721	B5	3793	B3		
2722	D5	3794	A6		
2750	A3	3795	B4		
2754	A2	3796	B6		

3104 213 3522.1

CL36532008_101.eps
130503

Layout Wireless Receiver Board (Bottom Side)

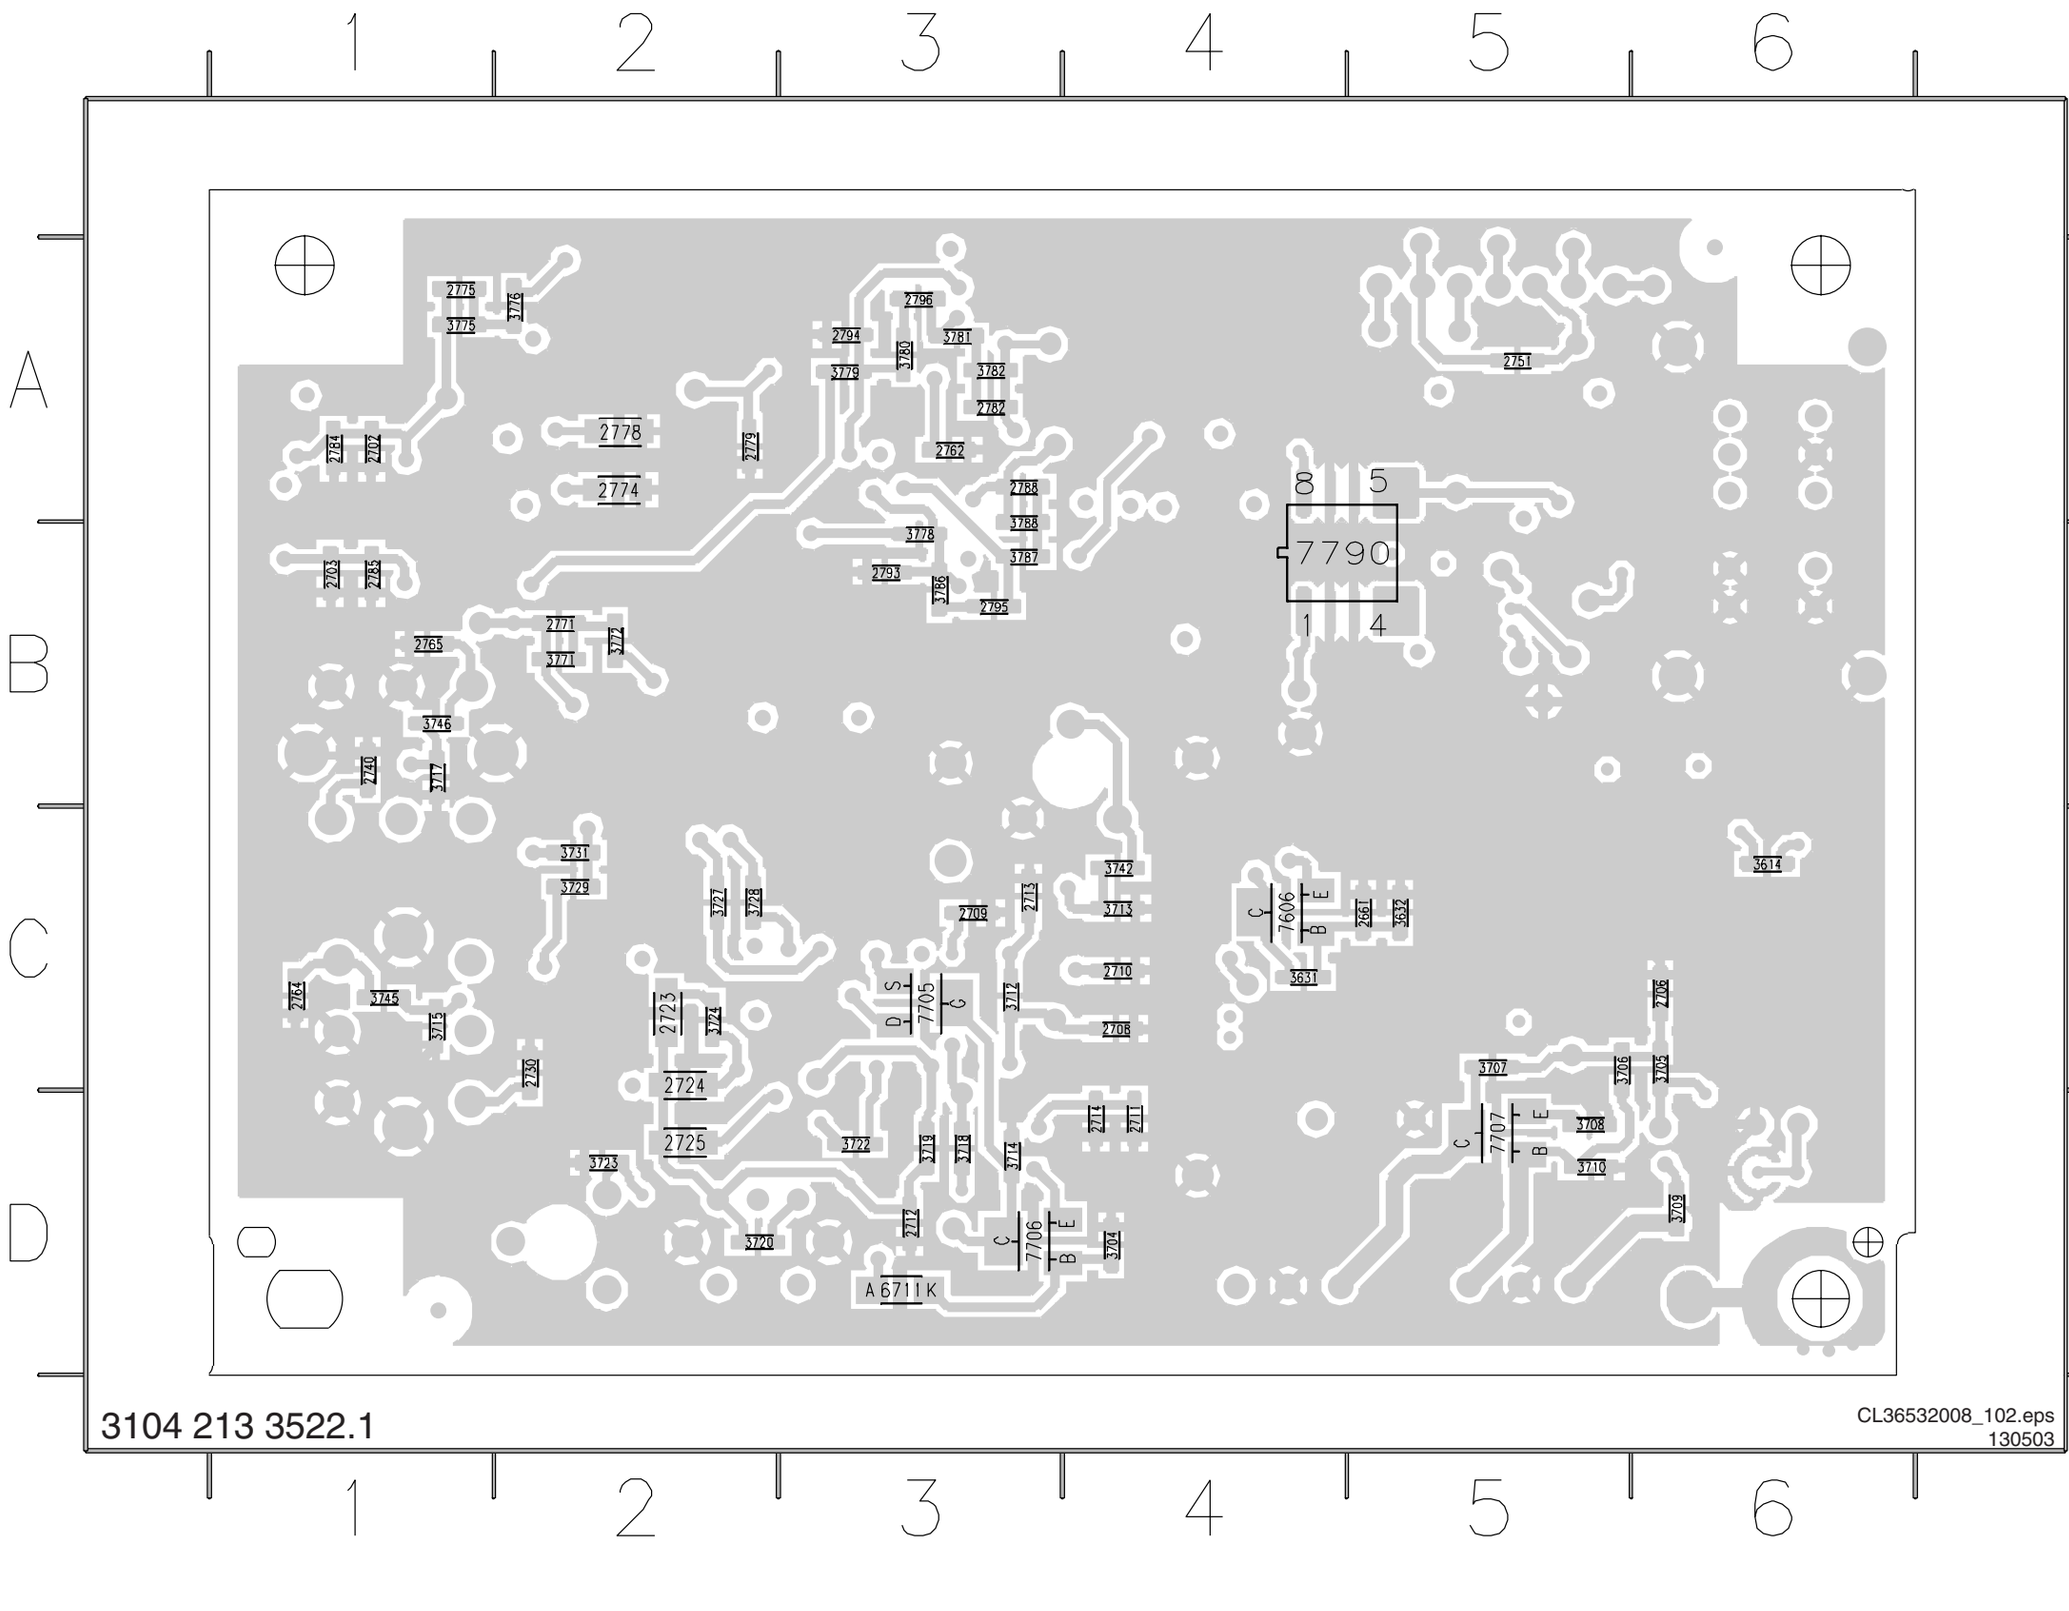

3104 213 3522.1

CL36532008_102.eps
130503

2661	C5	3745	C1
2702	A1	3746	B1
2703	B1	3771	B2
2706	C6	3772	B2
2708	C4	3775	A1
2709	C3	3776	A2
2710	C4	3778	B3
2711	D4	3779	A3
2712	D3	3780	A3
2713	C3	3781	A3
2714	D4	3782	A3
2723	C2	3786	B3
2724	C2	3787	B3
2725	D2	3788	B3
2730	C2	6711	D3
2740	B1	7606	C4
2751	A5	7705	C3
2762	A3	7706	D3
2771	C1	7707	D5
2774	B1	7790	B4
2775	B2	F701	A5
2778	A2	F702	A5
2779	A2	F703	D6
2782	A3	F704	D6
2784	A1	F705	B4
2785	B1	F706	A5
2788	A3	F707	A2
2793	B3	F708	C3
2794	A3	F709	C5
2795	B3	F710	D6
2796	A3	F712	A3
3614	C6	F713	A3
3631	C4	F714	B1
3632	C5	F715	A1
3704	D4	F724	D3
3705	C6	F725	C3
3706	C5	F727	A5
3707	C5	F728	A5
3708	D5	F729	A5
3709	D6	F740	B5
3710	D5	F741	B5
3712	C3	F742	B5
3713	C4	F743	B5
3714	D3	F744	B5
3715	C1	F745	A6
3717	B1	F746	A5
3718	D3	F747	D3
3719	D3	F748	D6
3720	D2	F749	C4
3722	D3		
3723	D2		
3724	C2		
3727	C2		
3728	C2		
3729	C2		
3731	C2		
3742	C4		

Auto SCAVEM Panel

SC1 AUTOSCAVEM

MATRIX

DIFFERENTIATOR

CORING / CLIPPING

SCAVEM CONTROL

SCAVEM PROCESSING

LINE PARABOLA
(OPTIONAL)

TO 1940 A8 SIM

TO 1955 A8 SIM

N.C.
RESERVED FOR FUTURE

(OPTIONAL) SC3

SC3 (OPTIONAL)

TO / FROM 1940 F1 OF CRT

SC1:SC3

SC1
1 V / div DC
10µs / div

SC2
1 V / div DC
10µs / div

SC3
1 V / div DC
10µs / div

SC4
2 V / div DC
10µs / div

SC5
2 V / div DC
10µs / div

SC6
2 V / div DC
10µs / div

SC7
2 V / div DC
10µs / div

SC8
2 V / div DC
10µs / div

SC9
2 V / div DC
10µs / div

SC10
1 V / div DC
10µs / div

SC11
200mV / div DC
10µs / div

SC12
1 V / div DC
10µs / div

SC13
50mV / div DC
10µs / div

SC23
2 V / div DC
100µs / div

SC24
2 V / div DC
100µs / div


8204 000 6494.6

CL 26532134_003.eps
080503

1440 L17
1940 B4
1955 E4
1956 D4
2000 B8
2002 C8
2003 C9
2004 D8
2006 C8
2008 C9
2010 C11
2012 B12
2014 D12
2016 B14
2018 C15
2020 C15
2022 I12
2024 F12
2026 F12
2028 H11
2038 F15
2040 F16
2200 J14
2202 J15
2208 I3
2210 A6
2212 A7
2500 E7
2502 F7
2503 I6
2504 K6
2600 H3
2602 I3
2605 G11
2606 I13
2607 H3
2608 J12
3000 B7
3002 C7
3004 D7
3006 B7
3008 C7
3010 C7
3012 B8
3014 C8
3016 C8
3018 B8
3020 C8
3022 B9
3024 C9
3026 B10
3028 C9
3030 C10
3032 B10
3034 B10
3036 B11
3038 C11
3040 B11
3042 C11
3044 C12
3046 B13
3048 D12
3050 B13
3052 D13
3054 C14
3056 C14
3058 B14
3060 D14
3062 C15
3064 D15
3066 B16
3068 D16
3070 D9
3072 E11
3074 G11
3076 G12
3078 G12
3080 F12
3082 G12
3084 G12
3086 E13
3088 G13
3090 E13
3091 G15
3092 E14
3093 F15
3094 F14
3096 F14
3106 G15
3108 E15
3110 F15
3112 E16
3114 F16
3116 E16
3118 D10
3120 E10
3121 H5
3122 H6
3123 I6
3124 I5
3125 I5
3126 J5
3127 J5
3128 K6
3129 K6
3130 K5
3131 K5
3132 L5
3133 M5
3134 M6
3135 M6
3136 M5
3137 N5
3138 N5
3200 J10
3202 J10
3204 I14
3206 I11
3208 H15
3210 J11
3212 H15
3214 I11
3216 J11
3218 J12
3220 I12
3222 I16
3224 J16
3226 I12
3228 J12
3230 I13
3232 I13
3234 J13
3236 I13
3238 J13
3240 H14
3242 J15
3244 J15
3254 A7
3500 E6
3502 F6
3600 G2
3999 A3
5600 G3
5601 I3

6000 C10
7000 B7
7002 C7
7003 I5
7004 D7
7005 K5
7006 C8
7007 M5
7008 C10
7010 C10
7012 B11
7014 C13
7016 D13
7018 B14
7020 D14
7022 C15
7024 F11
7026 F11
7028 F13
7030 F13
7032 F13
7038 E14
7040 F16
7042 F16
7200 I13
7202 I14
7204 I15
7208 I15
7402 I13
7500 E7
7501 I11
7505 I11
9000 G13
9001 E2
9002 G2
9003 B3
9004 C3
9005 C3
9006 C3
9007 B3
9009 H2
9010 B5
9011 B5
I690 B11


Layout Auto SCAVEM Panel (Top Side)

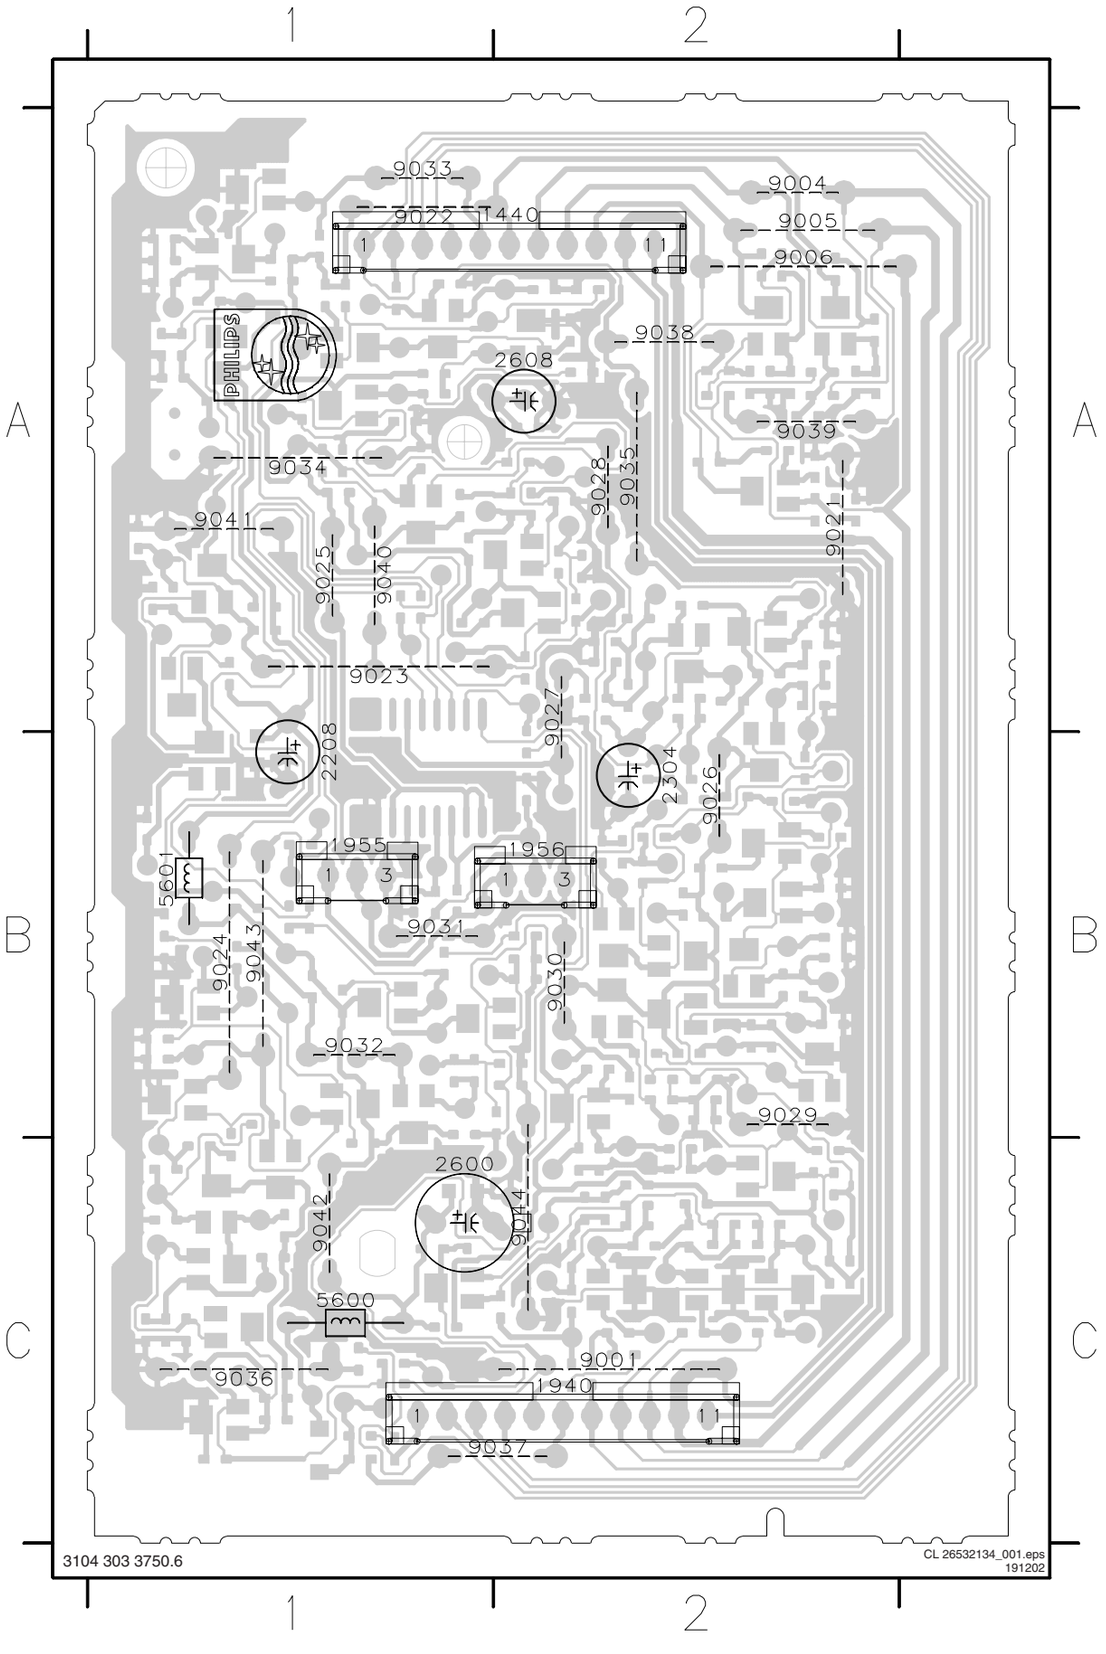

1440 A2
1940 C2
1955 B1
1956 B2
2208 B1
2304 B2
2600 C1
2608 A2
5600 C1
5601 B1
9001 C2
9004 A2
9005 A2
9006 A2
9021 A2
9022 A1
9023 A1
9024 B1
9025 A1
9026 B2
9027 A2
9028 A2
9029 B2
9030 B2
9031 B1
9032 B1
9033 A1
9034 A1
9035 A2
9036 C1
9037 C1
9038 A2
9039 A2
9040 A1
9041 A1
9042 C1
9043 B1
9044 C2


Layout Auto SCAVEM Panel (Bottom Side)

2000 C1	2038 A2	2500 B1	3012 C1	3044 C2	3076 B2	3112 A2	3132 A1	3218 A1	3302 B1	3404 A1	3442 B1	7002 C1	7028 A2	7414 B1	9010 C1				
2002 C1	2040 A2	2502 B2	3014 C1	3046 C2	3078 B1	3114 A2	3133 A1	3220 A2	3304 B1	3406 B1	3444 C1	7003 A1	7030 B2	7416 B1	9011 C1				
2003 C2	2200 A1	2503 A1	3016 C1	3048 B2	3080 B2	3116 A2	3134 A1	3222 A2	3306 B1	3408 A1	3446 B1	7004 C1	7032 A2	7418 B1	9020 A2				
2004 C1	2202 A1	2504 A1	3018 C2	3050 C2	3082 B2	3118 A2	3135 A1	3224 A2	3308 B1	3410 A1	3448 C1	7005 A1	7038 A2	7420 C1	9045 A2				
2006 C1	2210 C1	2602 B2	3020 C1	3052 B2	3084 A2	3120 A2	3136 A1	3226 A2	3310 B1	3418 B1	3450 B1	7006 C2	7040 A2	7422 B1	9046 C1				
2008 C2	2212 C1	2603 B1	3022 C1	3054 B2	3086 A2	3121 A1	3137 A1	3228 A1	3312 A1	3420 B1	3452 C1	7007 A1	7042 A2	7500 A2	9047 C2				
2010 C2	2300 B1	2604 A1	3024 C1	3056 B2	3088 B2	3122 A1	3138 A1	3230 A2	3316 A1	3422 B1	3454 C1	7008 C2	7200 A2	7501 A1					
2012 C2	2400 A1	2605 B1	3026 C2	3058 C2	3090 A2	3123 A1	3200 A1	3232 A2	3318 A1	3424 B1	3456 C1	7010 C2	7202 A2	7502 A1					
2014 B2	2410 B1	2606 A2	3028 C2	3060 B2	3091 A1	3124 A1	3202 A1	3234 A2	3320 A1	3426 B1	3458 B1	7012 C2	7204 A2	7503 B1					
2016 B2	2412 B1	2607 C2	3030 C2	3062 B2	3092 A2	3125 A1	3204 A2	3236 A2	3322 A1	3428 B1	3460 C1	7014 B2	7208 A2	7504 A1					
2018 B2	2414 B1	3000 C1	3032 C2	3064 B1	3093 A2	3126 A1	3206 A2	3238 A2	3324 A1	3430 B1	3500 B2	7016 C2	7300 B1	7505 A1					
2020 B1	2416 B1	3002 C1	3034 C2	3066 B2	3094 A2	3127 A1	3208 A2	3240 A2	3326 A1	3432 B1	3502 B2	7018 B2	7400 A1	9000 B2					
2022 A1	2418 C1	3004 C1	3036 C2	3068 B1	3096 A2	3128 A1	3210 A1	3242 A1	3328 A1	3434 B1	3600 C2	7020 B2	7402 A2	9002 C2					
2024 B2	2420 B1	3006 C1	3038 C2	3070 B1	3106 A2	3129 A1	3212 A2	3244 A1	3330 A1	3436 B1	3999 B2	7022 C2	7408 B1	9003 C2					
2026 A2	2422 C1	3008 C1	3040 C2	3072 B2	3108 A2	3130 A1	3214 A2	3254 C1	3400 A1	3438 B1	6000 C2	7024 B1	7410 B1	9007 C2					
2028 A1	2424 B1	3010 C1	3042 C2	3074 B1	3110 A2	3131 A1	3216 A1	3300 B1	3402 A1	3440 B1	7000 C1	7026 B2	7412 B1	9009 C2					

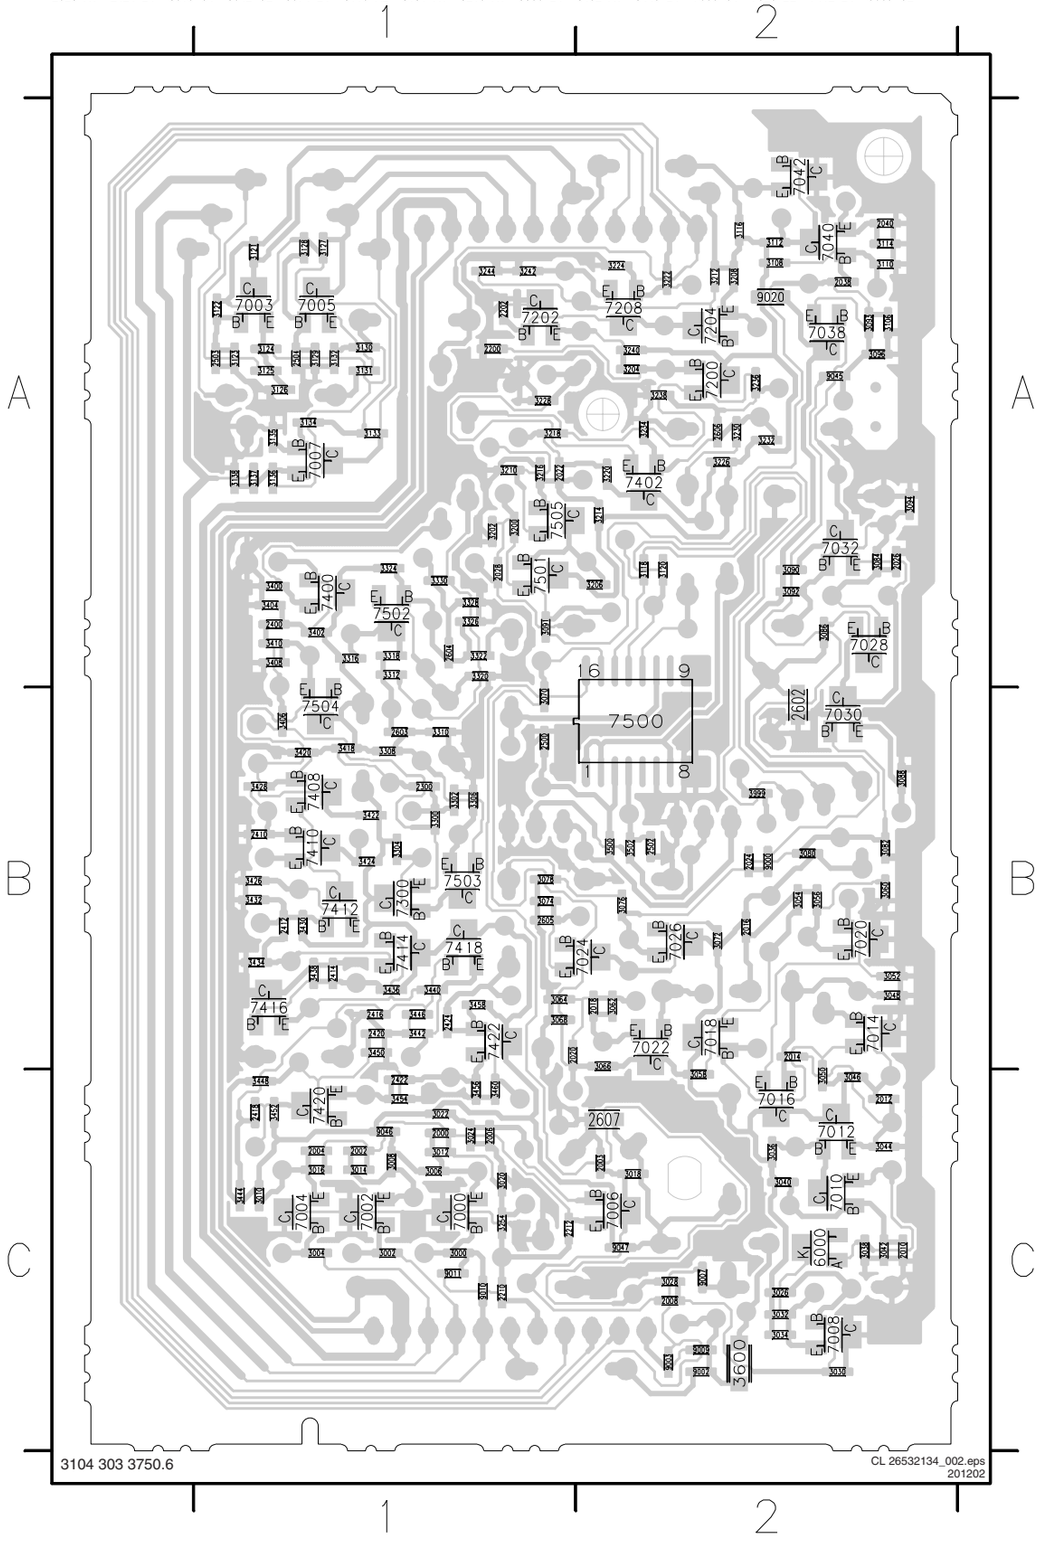


Interface Board TDL: Interface uP

1239 G2	2001 A4	2008 F14	2015 H10	2022 H8	2029 F7	3003-A A8	3004-D B9	3011 H12	3020 C9	3027 D14	3035 D9	3044 F12	3054 H5	3066 B6	3073 A10	3083 A10	6004 B12	6011 H3	7002 A7	7009 G7	9004 F14	F103 A13	F110 B13	F117 C13	F124 A6	F140 H3	F148 B6
1260 A14	2002 B4	2009 F13	2016 H12	2023 E3	2030 E9	3003-B B9	3005 D8	3012 H14	3021 E10	3029 D11	3037 D8	3046 F6	3057 H6	3067 A9	3074 A10	3084 A8	6005 B15	6012 G10	7003 D13	7010 H6	9005 A12	F104 A13	F111 B14	F118 C15	F125 B7	F141 H3	F149 B14
1280 A1	2003 B4	2010 F13	2017 H13	2024 H15	2031 E9	3003-C B9	3006 G10	3013 G13	3022 D13	3030 C9	3039 D4	3047 F7	3059 H6	3068 A9	3075 B6	3999 H1	6006 C15	6013 G12	7004 A5	7011 A12	9006 H1	F105 A15	F112 B13	F119 D12	F126 H15	F142 B1	F150 F10
1300 B6	2004 A5	2011 A5	2018 G6	2025 B7	2032 E9	3003-D B9	3007 G11	3014 H13	3023 C9	3031 D9	3040 D7	3048 G12	3060 E13	3069 A9	3076 B6	6000 A12	6007 E13	6014 G12	7005 F14	9000 B2	9007 H15	F106 B1	F113 B15	F120 C9	F127 C7	F143 E1	F151 F10
1400 A6	2005 D3	2012 A6	2019 A10	2026 A4	2033 E10	3004-A B9	3008 H11	3017 C9	3024 E10	3032 C9	3041 D5	3049 A10	3063 C9	3070 A9	3078 A10	6001 A12	6008 E4	6015 H14	7006-A G11	9001 C2	F100 A13	F107 B14	F114 B14	F121 E1	F132 F6	F145 E6	F152 G13
1U02 D1	2006 B5	2013 A6	2020 G8	2027 A6	2034 F2	3004-B B9	3009 G12	3018 F10	3025 D13	3033 D8	3042 F15	3050 A10	3064 C9	3071 A9	3079 E2	6002 A15	6009 E13	7000 A3	7006-B H13	9002 C1	F101 A13	F108 B13	F115 B14	F122 B6	F133 G15	F146 F6	F198 H1
2000 A3	2007 E13	2014 H10	2021 H8	2028 H13	3002 H12	3004-C B9	3010 H13	3019 F11	3026 D13	3034 D9	3043 F6	3051 A10	3065 C6	3072 A9	3082 A8	6003 B12	6010 F13	7001 D13	7007 G14	9003 C2	F102 A1	F109 B13	F116 C14	F123 E1	F139 G3	F147 F7	F199 H2

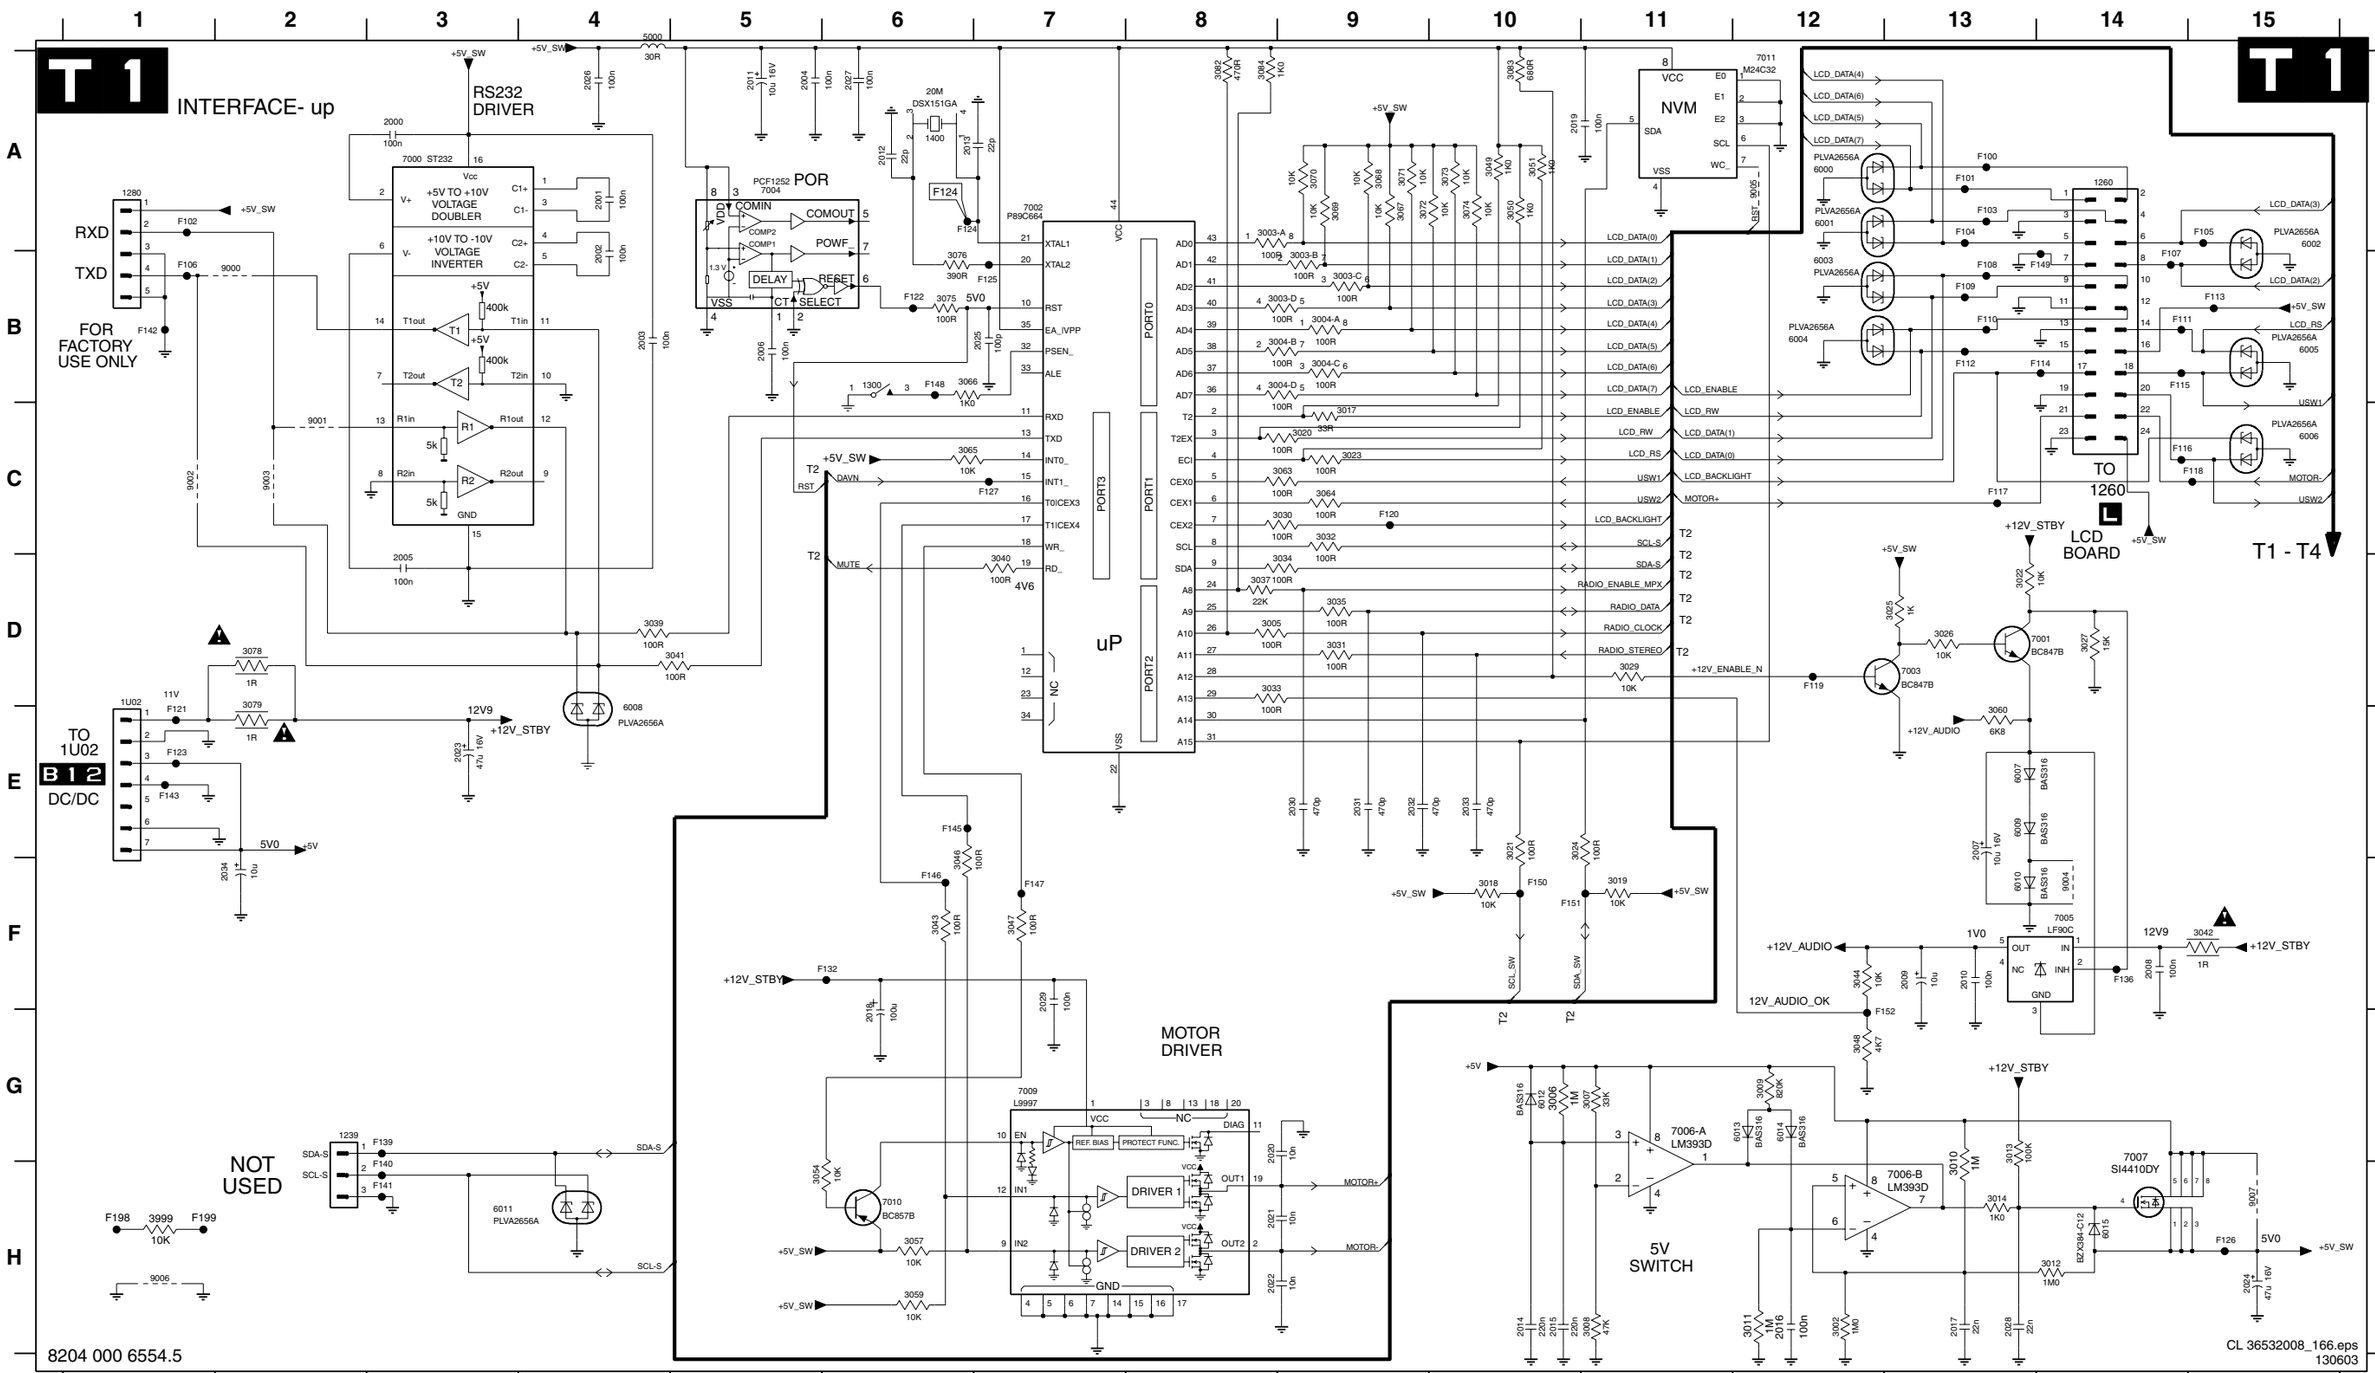

Interface Board TDL: RDS Decoder and Audio Switch

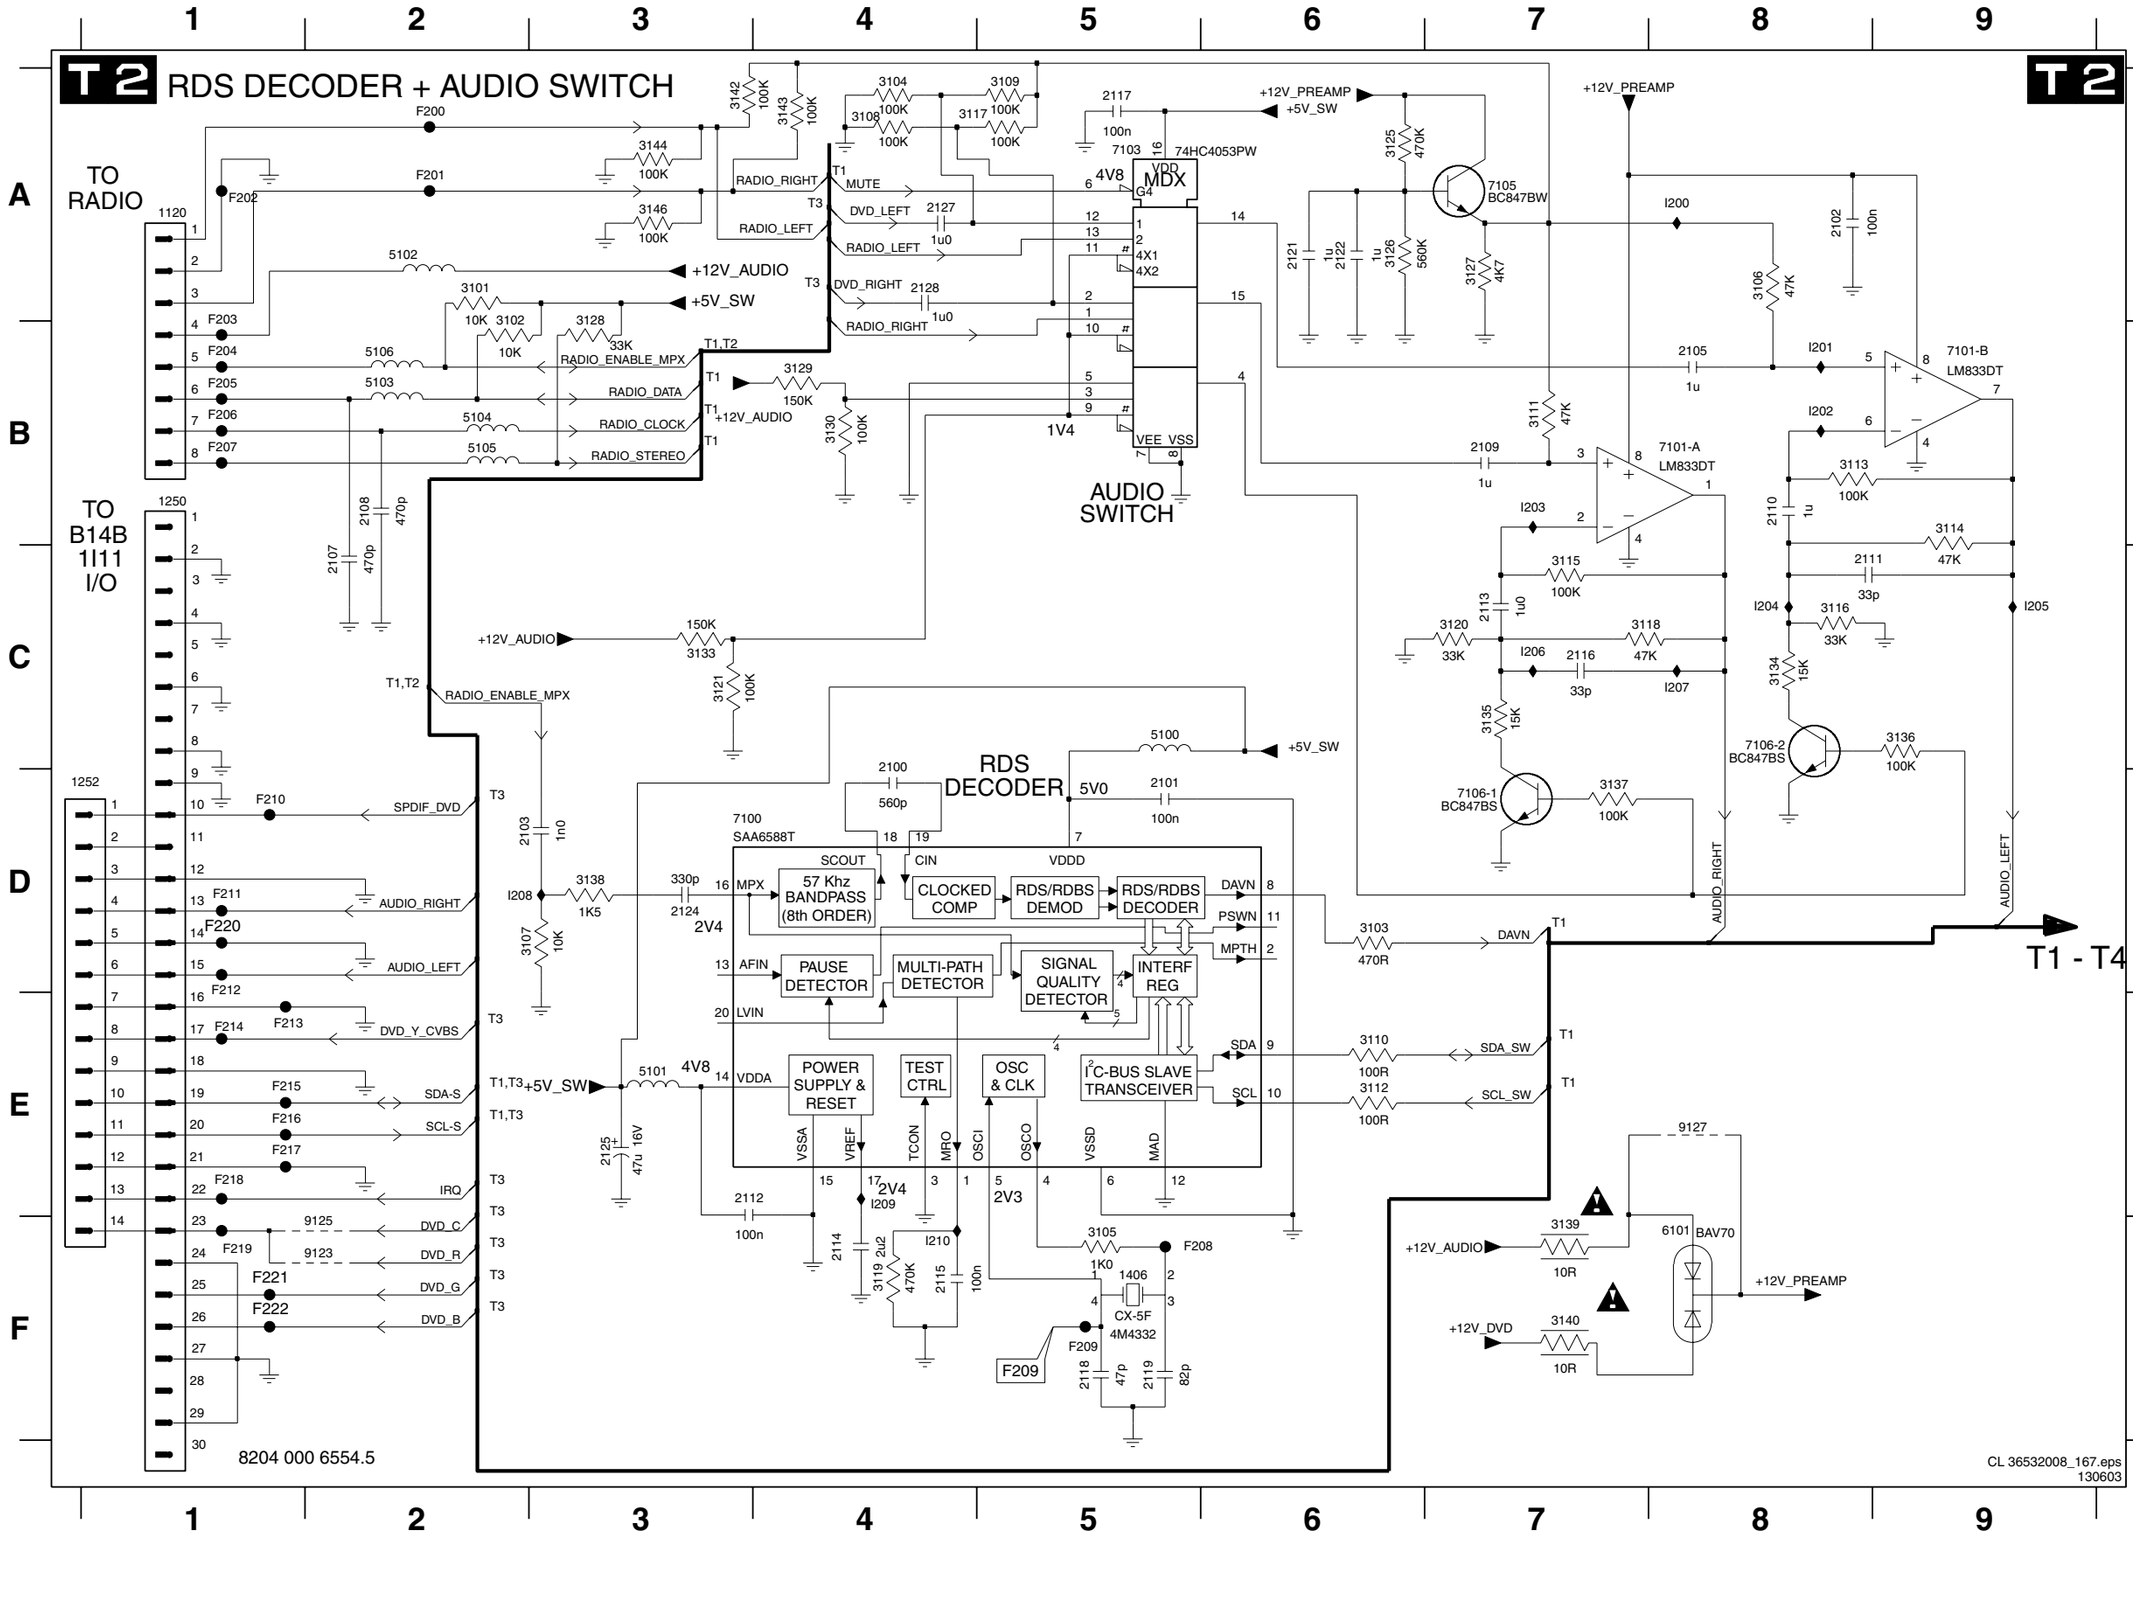

1120 A1	7101-B B9
1250 B1	7103 A5
1252 D1	7105 A7
1406 F5	7106-1 D7
2100 D4	7106-2 C8
2101 D5	9123 F2
2102 A8	9125 F2
2103 D2	9127 E8
2105 B8	F200 A2
2107 C2	F201 A2
2108 B2	F202 A1
2109 B7	F203 B1
2110 B8	F204 B1
2111 C8	F205 B1
2112 E3	F206 B1
2113 C7	F207 B1
2114 F4	F208 F5
2115 F4	F209 F5
2116 C7	F210 D1
2117 A5	F211 D1
2118 F5	F212 E1
2119 F5	F213 E1
2121 A6	F214 E1
2122 A6	F215 E1
2124 D3	F216 E1
2125 E3	F217 E1
2127 A4	F218 E1
2128 A4	F219 F1
3101 A2	F220 D1
3102 B2	F221 F1
3103 D6	F222 F1
3104 A4	I200 A8
3105 F5	I201 B8
3106 A8	I202 B8
3107 D3	I203 B7
3108 A4	I204 C8
3109 A5	I205 C9
3110 E6	I206 C7
3111 B7	I207 C8
3112 E6	I208 D2
3113 B8	I209 E4
3114 B9	I210 F4
3115 C7	
3116 C8	
3117 A4	
3118 C7	
3119 F4	
3120 C7	
3121 C3	
3125 A6	
3126 A6	
3127 A7	
3128 B3	
3129 B4	
3130 B4	
3133 C3	
3134 C8	
3135 C7	
3136 C9	
3137 D7	
3138 D3	
3139 F7	
3140 F7	
3142 A3	
3143 A4	
3144 A3	
3146 A3	
5100 C5	
5101 E3	
5102 A2	
5103 B2	
5104 B2	
5105 B2	
5106 B2	
6101 F8	
7100 D3	
7101-A B8	

Interface Board TDL: DVD Interface

T3 DVD INTERFACE

T3

I²C I/O EXPANDER

IRQ
SCL-S
DVD_SCL 9300
SDA-S
DVD_SDA 9301
+5_2V_MP
+5V_PCF
+5V_DVD_OK
DVD_STDBY
+3V3_DVD_OK
+12V_DVD_OK
INTERRUPT LOGIC
LP FILTER
INPUT FILTER
I²C BUS CONTROL
SHIFT REGISTER
8 BIT I/O PORTS
POWER-ON RESET
DVD_IRQ
DVD-MUTE
DVD_EJECT
9302

TO DVD
T1 - T4

DVD_SCL
DVD_SDA
DVD_IRQ
DVD_B
DVD_G
DVD_R
DVD_Y
DVD_C
DVD_CVBS
SPDIF_DVD
DVD_LEFT
DVD_RIGHT
DVD-MUTE
+3V3_DVD
+5V_DVD
+11V_S
+12V_DVD

TO 1264 K
DVD EJECT BUTTON
EJECT LED


DVD_CVBS 9320
DVD_Y 9322
DVD_Y_CVBS To 1266

1253 A11
1264 E11
2303 C3
2320 D4
2321 E10
3304 E11
3321 B3
3322 C3
3323 C3
3324 C3
3327 C7
3329 C8
3330 C8
3332 C8
3333 B7
3335 C4
3338 D3
7306 B4
9300 C2
9301 D2
9302 D7
9317 C12
9318 C12
9320 F10
9322 G10
F301 A12
F302 C12
F303 A12
F305 A12
F308 B12
F318 B12
F321 B12
F327 B12
F330 B12
F334 C12
F340 C12
F342 C12
F343 C12
F344 E10
F345 C12
F347 D12
F354 C3
F355 C3
F356 E11
I308 B4
I309 C4
I315 D4
I317 C4

8204 000 6554.5

CL 36532008_168.eps
160603


Interface Board TDL: Regulator

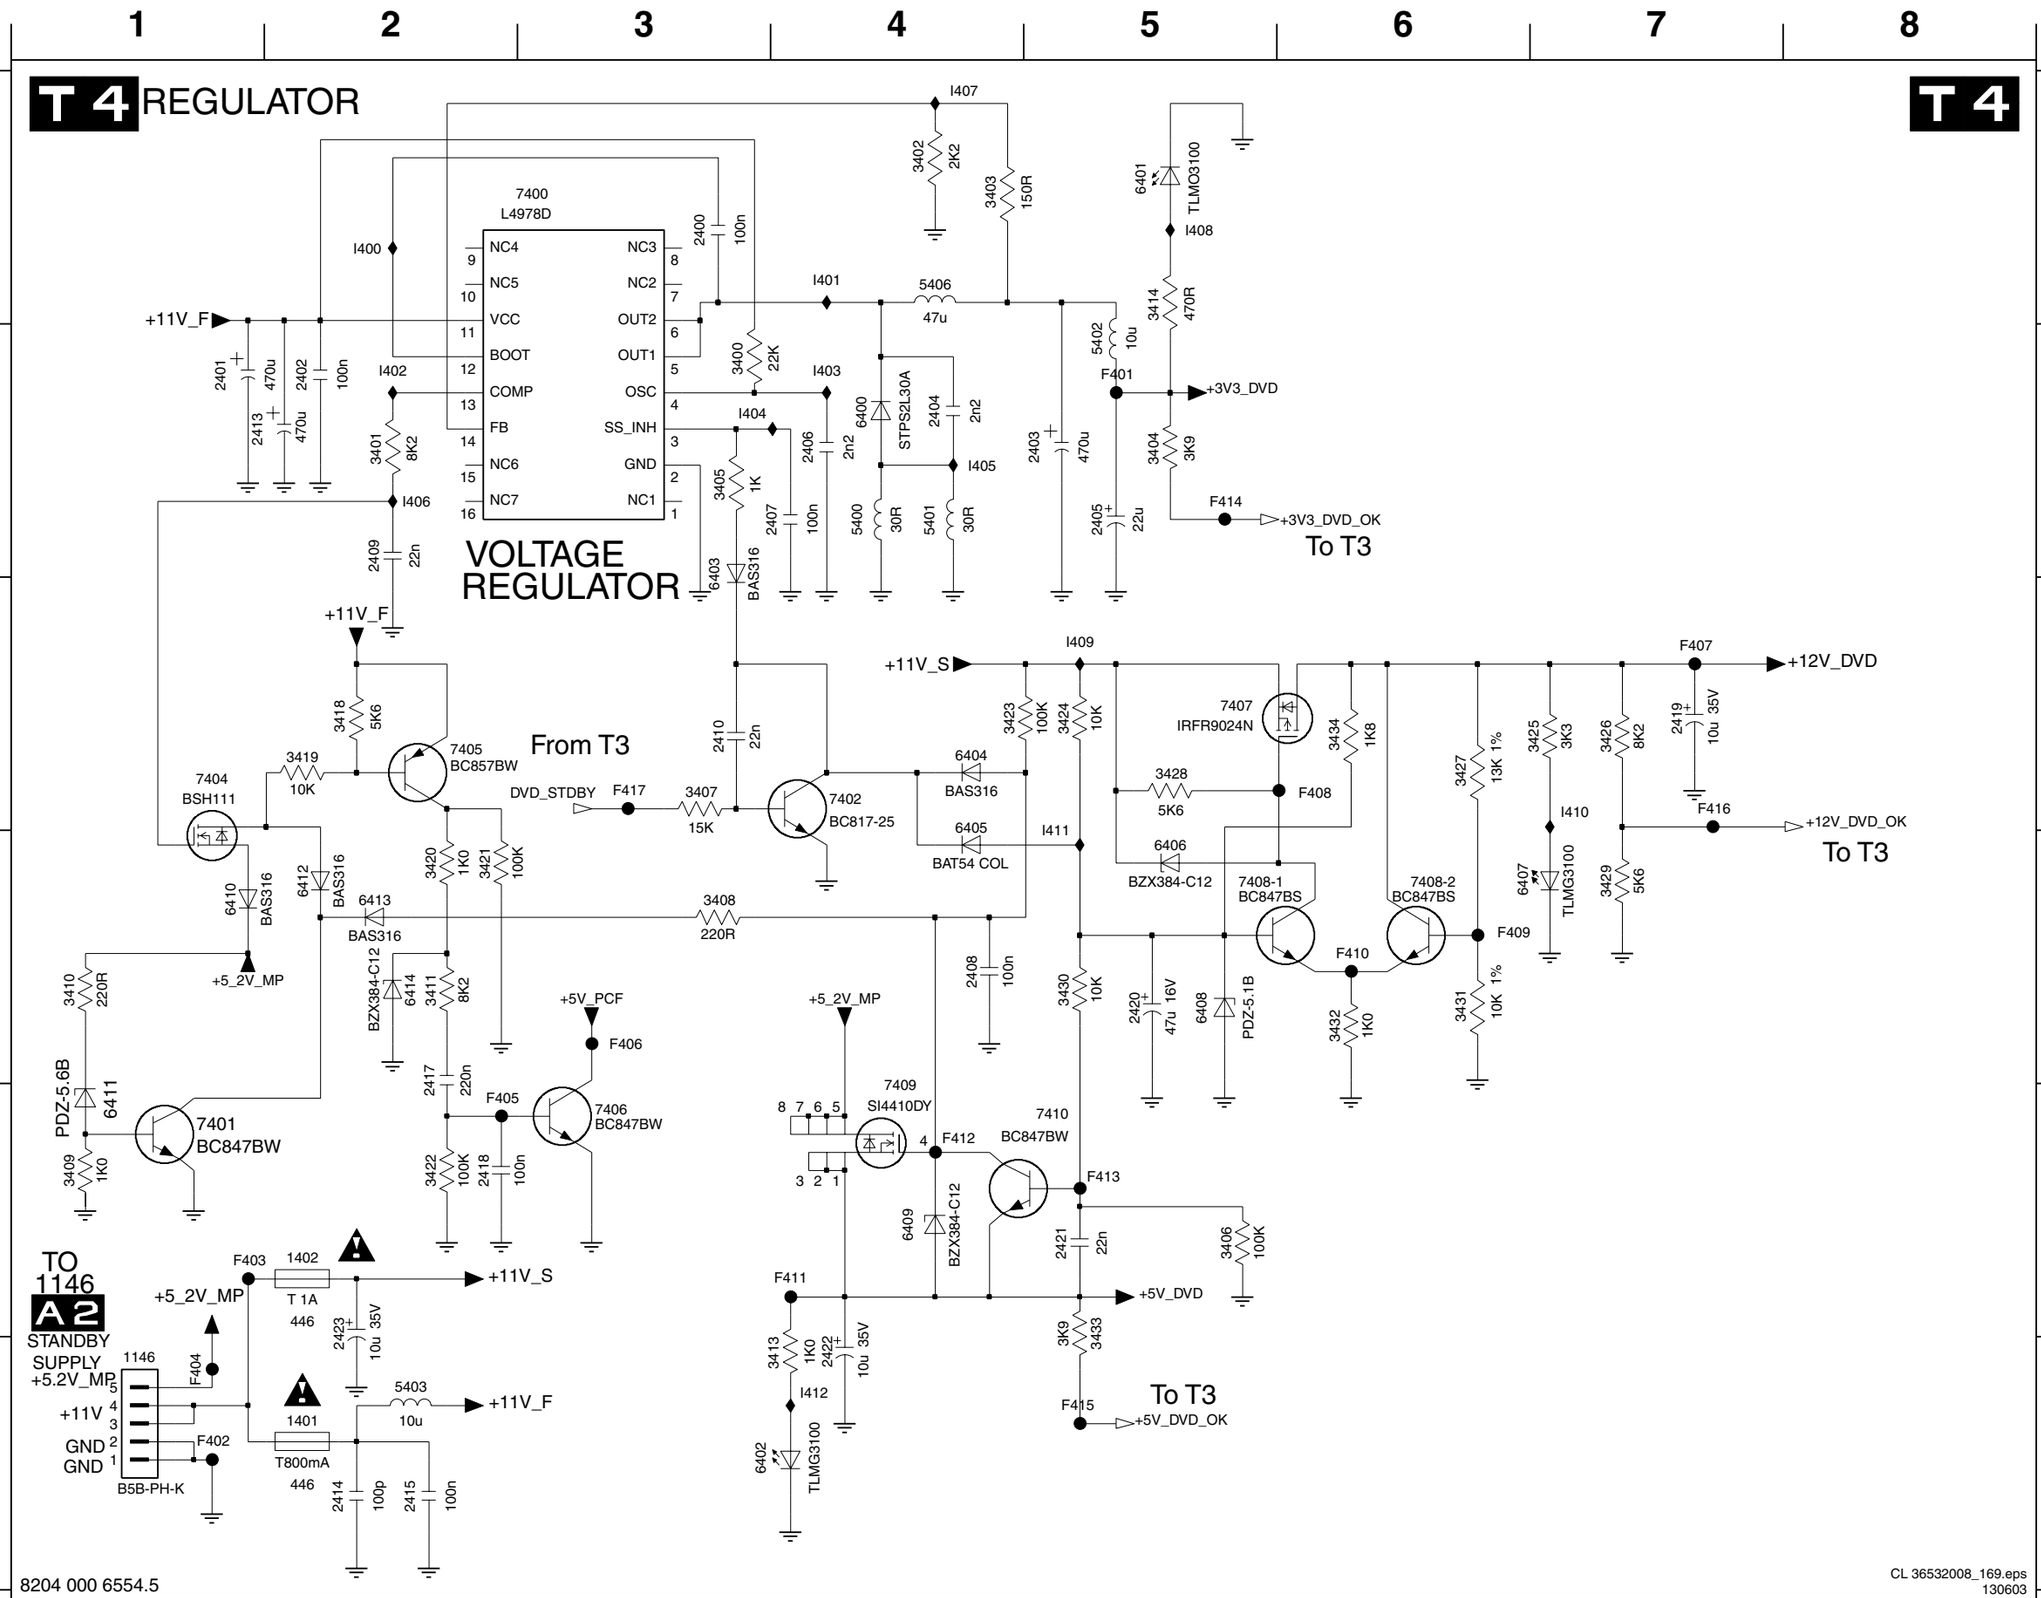

1146 F1	6413 D2
1401 F2	6414 D2
1402 E2	7400 A3
2400 A3	7401 E1
2401 B1	7402 C4
2402 B2	7404 C1
2403 B5	7405 C2
2404 B4	7406 E3
2405 B5	7407 C5
2406 B4	7408-1 D5
2407 B4	7408-2 D6
2408 D4	7409 E4
2409 B2	7410 E5
2410 C3	F401 B5
2413 B1	F402 F1
2414 F2	F403 E1
2415 F2	F404 F1
2417 D2	F405 E2
2418 E2	F406 D3
2419 C7	F407 C7
2420 D5	F408 C6
2421 E5	F409 D6
2422 F4	F410 D6
2423 E2	F411 E4
3400 B3	F412 E4
3401 B2	F413 E5
3402 A4	F414 B5
3403 A4	F415 F5
3404 B5	F416 C7
3405 B3	F417 C3
3406 E5	I400 A2
3407 C3	I401 A4
3408 D3	I402 B2
3409 E1	I403 B4
3410 D1	I404 B3
3411 D2	I405 B4
3413 F4	I406 B2
3414 A5	I407 A4
3418 C2	I408 A5
3419 C2	I409 C5
3420 D2	I410 C7
3421 D2	I411 C5
3422 E2	I412 F4
3423 C4	
3424 C5	
3425 C7	
3426 C7	
3427 C6	
3428 C5	
3429 D7	
3430 D5	
3431 D6	
3432 D6	
3433 E5	
3434 C6	
5400 B4	
5401 B4	
5402 B5	
5403 F2	
5406 A4	
6400 B4	
6401 A5	
6402 F3	
6403 B3	
6404 C4	
6405 D4	
6406 D5	
6407 D6	
6408 D5	
6409 E4	
6410 D1	
6411 E1	
6412 D2	


Layout Interface Board TDL (Top Side)

1120 C1	1U02 B2	2025 C2	2108 C1	2321 A1	2417 A1	3021 C2	3037 C2	3063 B2	3078 B2	3119 C1	3143 C1	3338 A2	3418 A1	3432 A2	5403 A1	6401 B2	7001 C2	7402 B2	9097 C2	
1146 A2	2004 B2	2027 C2	2109 C1	2401 A1	2418 A1	3022 C2	3039 C2	3064 B2	3079 B2	3121 C1	3144 C1	3401 A1	3419 A1	3433 A2	5406 B1	6402 A2	7002 C2	7404 A1	9300 A2	
1239 B2	2006 C1	2029 C1	2112 C1	2402 A1	2419 A2	3023 B2	3040 C2	3065 C2	3101 C1	3125 C1	3146 C1	3402 A1	3420 A1	3434 B2	6000 B1	6403 A1	7003 C2	7405 A1	9301 A2	
1250 B2	2007 C2	2030 C2	2114 C1	2403 A1	2420 A1	3024 C2	3041 C2	3066 C2	3103 C2	3126 C1	3304 A1	3403 A1	3421 A1	3999 B2	6001 B1	6404 B2	7004 B1	7406 A2	9317 A2	
1252 B2	2008 C2	2031 C2	2115 C1	2404 A1	2421 A2	3025 C2	3042 C2	3067 B1	3104 C1	3127 C1	3321 B2	3404 B2	3422 A1	5100 C1	6002 B1	6405 B2	7005 C2	7407 A2	9318 A2	
1253 A2	2009 C2	2032 C2	2117 C1	2405 A2	2422 A2	3026 C2	3043 C2	3068 B1	3105 C1	3129 C1	3322 B2	3405 A1	3423 B2	5101 C1	6003 B1	6406 A2	7009 B1	7408 A2	9320 A2	
1260 B1	2010 C2	2033 C2	2121 C1	2406 A1	2423 A2	3027 C2	3044 C2	3069 B1	3106 C1	3130 C1	3323 A2	3406 A2	3424 B2	5102 C1	6004 B1	6407 A2	7010 C1	7409 A2	9322 A2	
1264 A1	2011 B2	2034 B2	2122 C1	2407 A1	3003 B2	3029 C2	3046 C2	3070 B1	3107 C1	3133 C1	3324 B2	3407 B2	3425 A1	5103 C1	6005 B1	6408 A2	7100 C1	7410 A2		
1280 C1	2018 C1	2100 C1	2124 C1	2408 B2	3004 C2	3030 C2	3047 C2	3071 B1	3108 C1	3134 C1	3327 B2	3408 B2	3426 A2	5104 C1	6006 B1	6409 A2	7103 C1	9000 C1		
1300 C2	2020 B1	2101 C1	2125 C1	2409 A1	3005 C2	3031 C2	3048 C2	3072 B2	3109 C1	3135 C1	3329 A2	3409 B2	3427 A2	5105 C1	6007 C2	6410 A1	7105 C1	9001 C1		
1400 C2	2021 B1	2102 C1	2127 A1	2410 B2	3017 B2	3032 C2	3054 C1	3073 B1	3110 C1	3136 C2	3330 A2	3410 B2	3428 A2	5106 C1	6009 C2	6411 B2	7106 C2	9002 C1		
1401 A2	2022 B1	2103 C1	2128 A1	2413 A1	3018 C2	3033 C2	3057 C1	3074 B1	3111 C1	3137 C1	3332 A2	3411 A1	3429 A2	5400 A1	6010 C2	6412 A1	7306 A2	9003 B1		
1402 A2	2023 B2	2105 C1	2303 A2	2414 A2	3019 C2	3034 C2	3059 C2	3075 C2	3112 C1	3138 C1	3333 B2	3413 A2	3430 B2	5401 A1	6011 B2	6413 A2	7400 A1	9004 C2		
1406 C2	2024 B2	2107 C1	2320 A2	2415 A2	3020 B2	3035 C2	3060 C2	3076 C2	3117 C1	3142 C1	3335 B2	3414 B1	3431 A2	5402 B1	6400 A1	6414 A1	7401 A2	9006 C2		

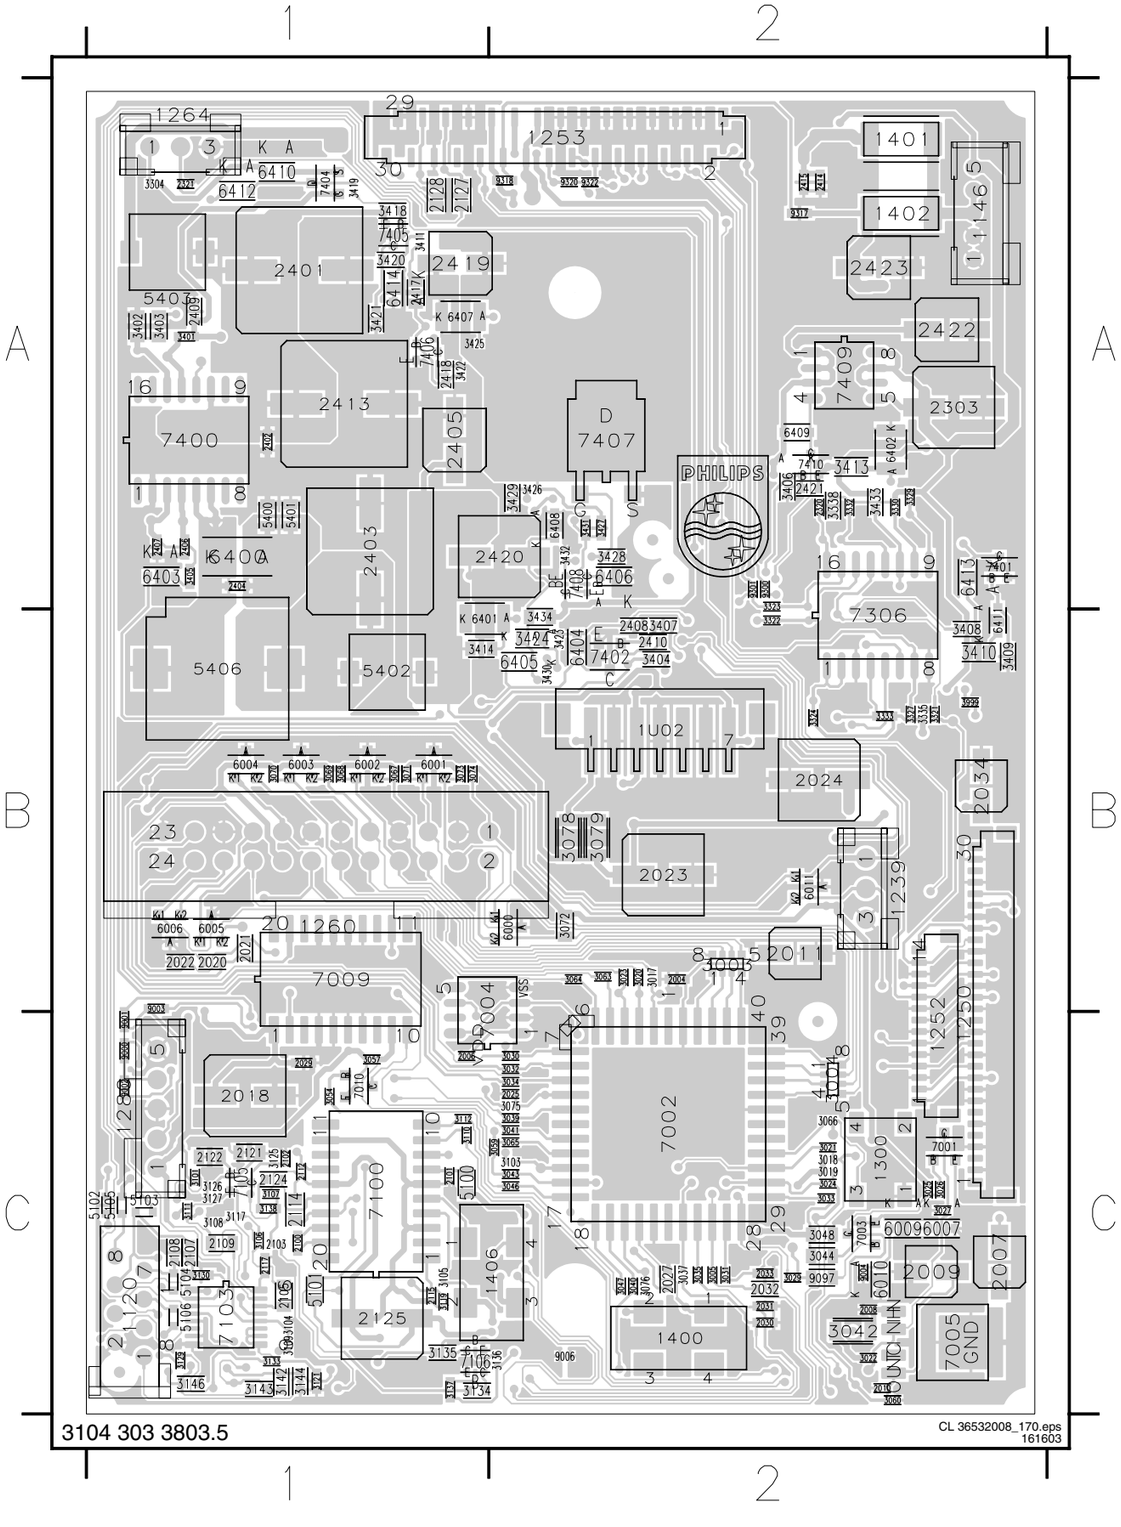

Layout Interface Board TDL (Bottom Side)

1120 C2	1264 A2	2002 C2	2013 C1	2017 B1	2110 C2	2118 C2	3006 B1	3010 B1	3014 B1	3082 C1	3113 C2	3118 C2	3140 B2	6012 B1	6101 B2	7011 C1	9123 A1			
1146 A1	1280 C2	2003 B2	2014 B1	2019 C1	2111 C2	2119 C1	3007 B1	3011 B1	3049 C1	3083 C1	3114 C2	3120 C2	3400 A2	6013 B2	7000 B2	7101 C2	9125 A1			
1239 B1	2000 C2	2005 C2	2015 B1	2026 C1	2113 C2	2400 A2	3008 B1	3012 B1	3050 C1	3084 C1	3115 C2	3128 C2	5000 C1	6014 B2	7006 B1	9005 C1	9127 B2			
1260 B2	2001 C2	2012 C1	2016 B1	2028 B1	2116 C2	3002 B1	3009 B2	3013 B1	3051 C1	3102 C2	3116 C2	3139 A2	6008 C2	6015 B1	7007 B1	9007 B1	9302 A2			

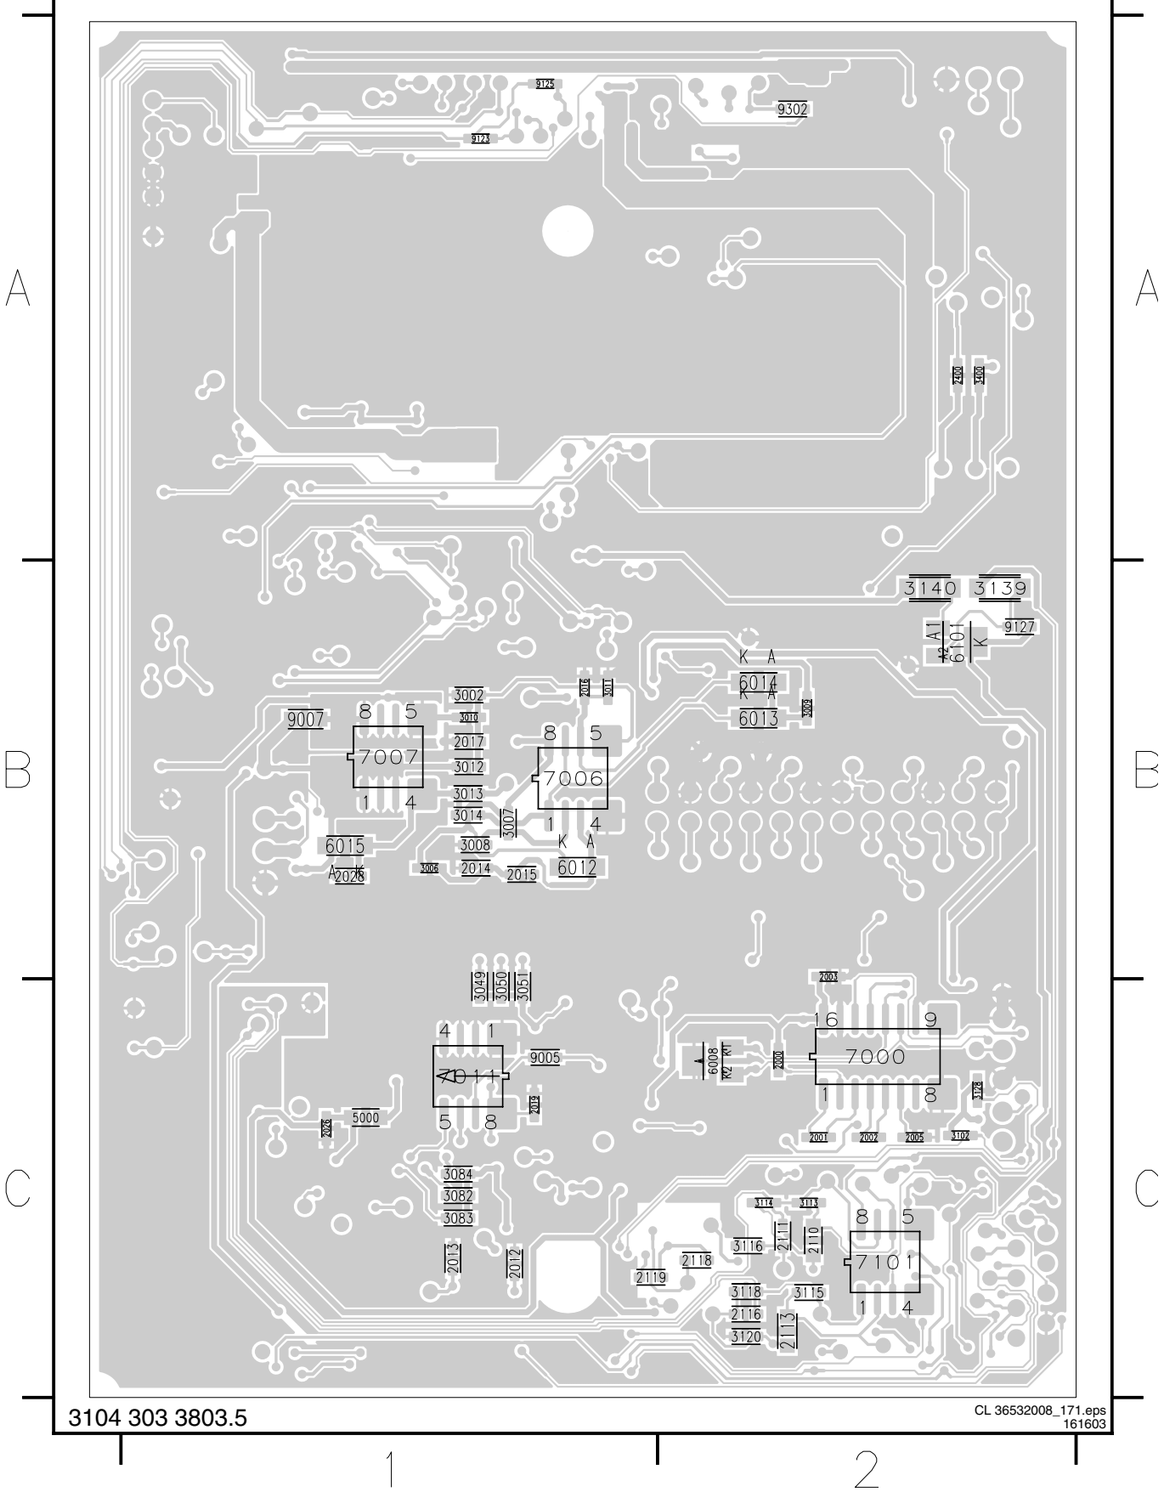

Audio Output Amplifier

AUDIO OUTPUT AMPLIFIER

WIRED AUDIO INPUT 3.5 STEREO JACK

HSJ1636-011070

R-AUD

L-AUD

RECEIVEROFF

LEFT-RIGHT (OPTION)

1102 SSSS822101

7100-A LM837MX

7100-B LM837MX

7100-C LM837MX

7100-D LM837MX

7101 TDA1564TH AUDIO OUTPUT AMPLIFIER

SUPPLY_PREAMP 10V6

PVCC

REF

REF_AMP 3140

MUTE_AMPn

MUTE_WIRED

R-RCV

L-RCV

SUPPLY RECEIVER +10V

MUTE

PWR_SAVE

PH-B 1106

To 1790 S2 RECEIVER BACK-END

7103 BC847CW

7104 BC847CW

7105 BC847CW

7106 BC847CW

7107 BC847CW

BAS316

6100 SML-310 ON GREEN

6101 SML310 STANDBY RED

1110 HOLE 3.5MM

1104 HOLE 3.5MM

1105 HOLE 3.5MM

OPTION

1101 TC28 To RIGHT SPEAKER 4R/15W 2.5 MONO JACK

1103 TC28 To LEFT SPEAKER 4R/15W 2.5 MONO JACK

DC-SUPPLY 13VDC PINPOSITIVE

1108

1109 CM04 EMI

7110 LM317MDT


+13V

+10V

7111 BC847CW

	I117	I105
Normal Operation	10V	0V7
3.5 mm Jack plugged in (wired input)	1V2	0V

		LED	I126	I127	MUTE_AMP I113	REF I114	AMP2_IN I106	AMP1_IN I102	SE_OUT I103	OUT1+ I118	OUT2+ I107
AMPLIFIER ON	I110 (MUTE) <0V6 I109 (PWR_SAVE) <0V6	GREEN	0V1	11V5	9V7	3V3	3V3	3V3	<7V	6V7	6V7
AMPLIFIER MUTED	I110 (MUTE) 4V I109 (PWR_SAVE) <0V6	GREEN	0V1	11V5	2V3	3V3	3V3	3V3	<7V	6V7	6V7
AMPLIFIER STANDBY	I110 (MUTE) 4V I109 (PWR_SAVE) PULSED*	RED	11V	0V1	0V1	11V	11V	11V	<0V7	<0V7	<0V7

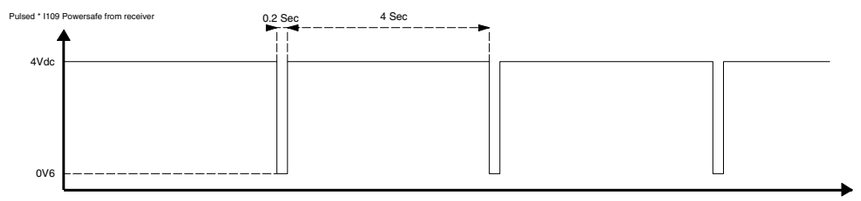


3104 123 4371.2

CL36532008_142.eps
130503


1100 B1
1101 B14
1102 B5
1103 C14
1104 E8
1105 E9
1106 E1
1108 H1
1109 H4
1110 E8
2100 A6
2101 A6
2102 B5
2103 B5
2104 B10
2105 B8
2106 B9
2107 B6
2108 B8
2109 B8
2110 B3
2111 B9
2112 B12
2113 B12
2114 C9
2115 C3
2116 C12
2117 C12
2118 C8
2119 B3
2120 C3
2121 C8
2122 C12
2123 C12
2124 C9
2125 C12
2126 C12
2127 C5
2128 C5
2129 C9
2130 C8
2131 C6
2132 D8
2133 D8
2134 D9
2135 D11
2136 D10
2137 F3
2138 A11
2139 H3
2140 H4
2141 H5
2142 H5
2143 I6
2144 I6
2145 B10
2146 D10
2147 E2
2148 E2
2149 F2
2150 F2
2151 C11
2152 C11
2153 C11
2154 C11
3100 A7
3101 A6
3102 D2
3103 B7
3104 B4
3105 B5
3106 B3
3107 B4
3108 B7
3109 B13
3110 C3
3111 C4
3112 C13
3113 C2
3114 C6
3115 C9
3116 C4
3117 C13
3118 C13
3119 C7
3120 D5
3121 D2
3122 D4
3123 D4
3124 D4
3125 D4
3126 B2
3127 D7
3128 D2
3129 E5
3130 E6
3131 F5
3132 F3
3133 F4
3134 F6
3135 F5
3136 F4
3137 F5
3138 G4
3139 G4
3140 A10
3141 H6
3142 I6
4100 B4
4101 B7
4102 C4
4103 D7
4104 F9
4105 F9
4106 F8
6100 E5
6101 E6
6102 F3
6103 G4
7100-A B6
7100-B C6
7100-C A12
7100-D A10
7101 B11
7103 D2
7104 F4
7105 F6
7106 F5
7107 G5
7110 H6
7111 I6
I101 A6
I102 B8
I103 C9
I104 B13
I105 D2
I106 C8
I107 C13
I108 E1
I109 F2
I110 F2
I111 E3
I112 E3
I113 F5
I114 A11
I115 H3
I116 H3
I117 H6
I118 B13
I119 C13
I120 I5
I121 H6
I122 B2
I123 C2
I124 B4
I125 C4
I126 F5
I127 F6
I128 F3
I129 F4

Layout Audio Output Amplifier (Top Side)

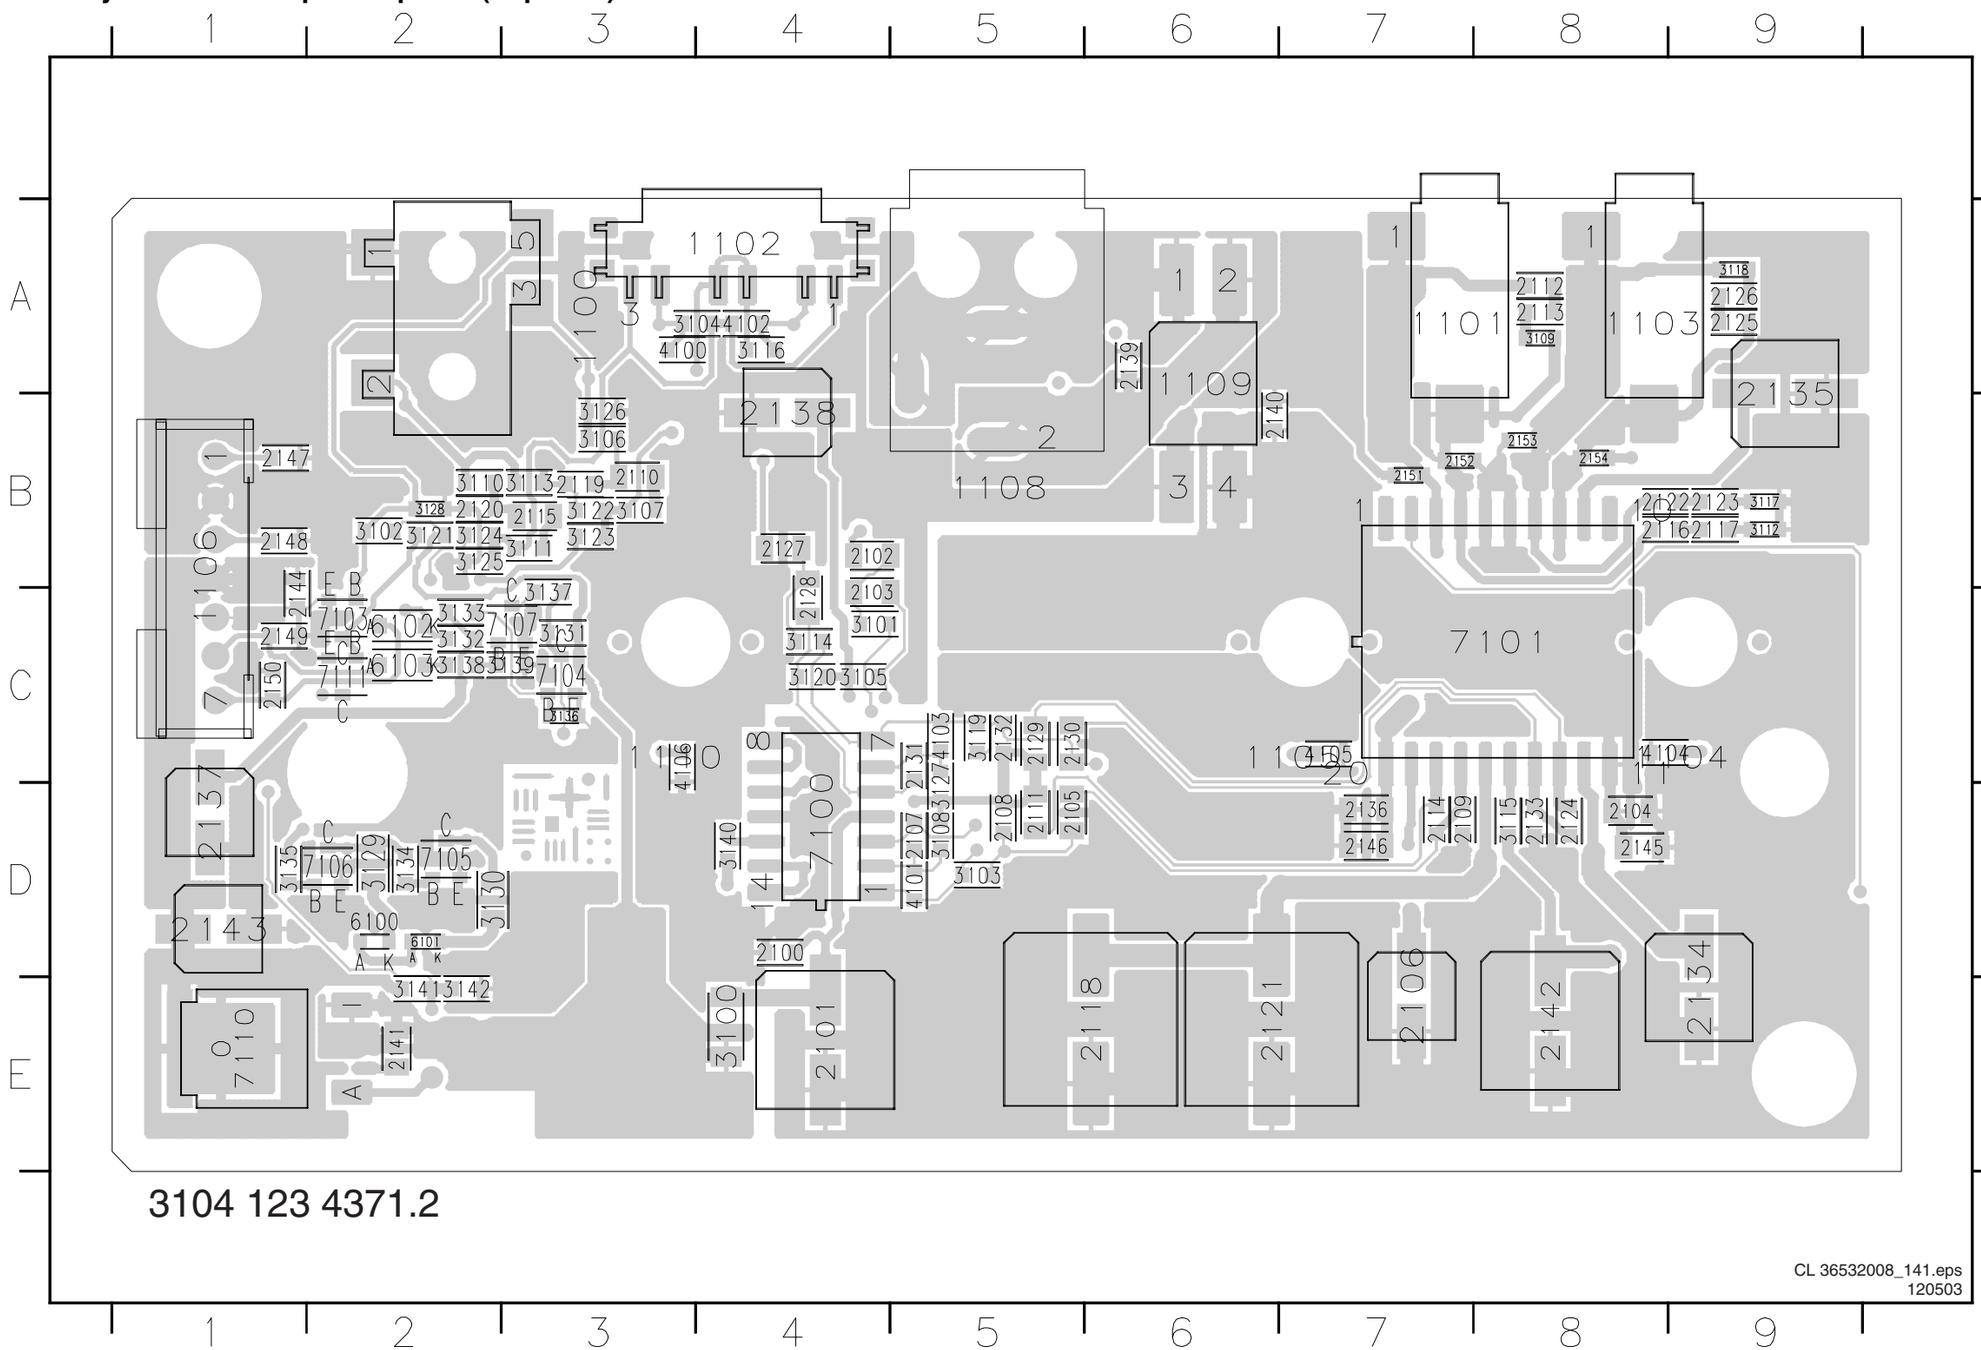

1100	A3	2139	A6	3130	D2
1101	A7	2140	B6	3131	C3
1102	A4	2141	E2	3132	C2
1103	A8	2142	E8	3133	C2
1106	B1	2143	D1	3134	D2
1108	B5	2144	C1	3135	D1
1109	A6	2145	D8	3136	C3
2100	D4	2146	D7	3137	C3
2101	E4	2147	B1	3138	C2
2102	B4	2148	B1	3139	C3
2103	C4	2149	C1	3140	D4
2104	D8	2150	C1	3141	E2
2105	D5	2151	B7	3142	E2
2106	E7	2152	B7	4100	A3
2107	D5	2153	B8	4101	D5
2108	D5	2154	B8	4102	A4
2109	D7	3100	E4	4103	C5
2110	B3	3101	C4	4104	C8
2111	D5	3102	B2	4105	C7
2112	A8	3103	D5	4106	C3
2113	A8	3104	A4	6100	D2
2114	D7	3105	C4	6101	D2
2115	B3	3106	B3	6102	C2
2116	B8	3107	B3	6103	C2
2117	B9	3108	D5	7100	D4
2118	E6	3109	A8	7101	C8
2119	B3	3110	B2	7103	C2
2120	B2	3111	B3	7104	C3
2121	E6	3112	B9	7105	D2
2122	B8	3113	B3	7106	D2
2123	B9	3114	C4	7107	C3
2124	D8	3115	D8	7110	E1
2125	A9	3116	A4	7111	C2
2126	A9	3117	B9		
2127	B4	3118	A9		
2128	C4	3119	C5		
2129	C5	3120	C4		
2130	C5	3121	B2		
2131	C5	3122	B3		
2132	C5	3123	B3		
2133	D8	3124	B2		
2134	E9	3125	B2		
2135	B9	3126	B3		
2136	D7	3127	D5		
2137	D1	3128	B2		
2138	B4	3129	D2		

Layout Audio Output Amplifier (Bottom Side)

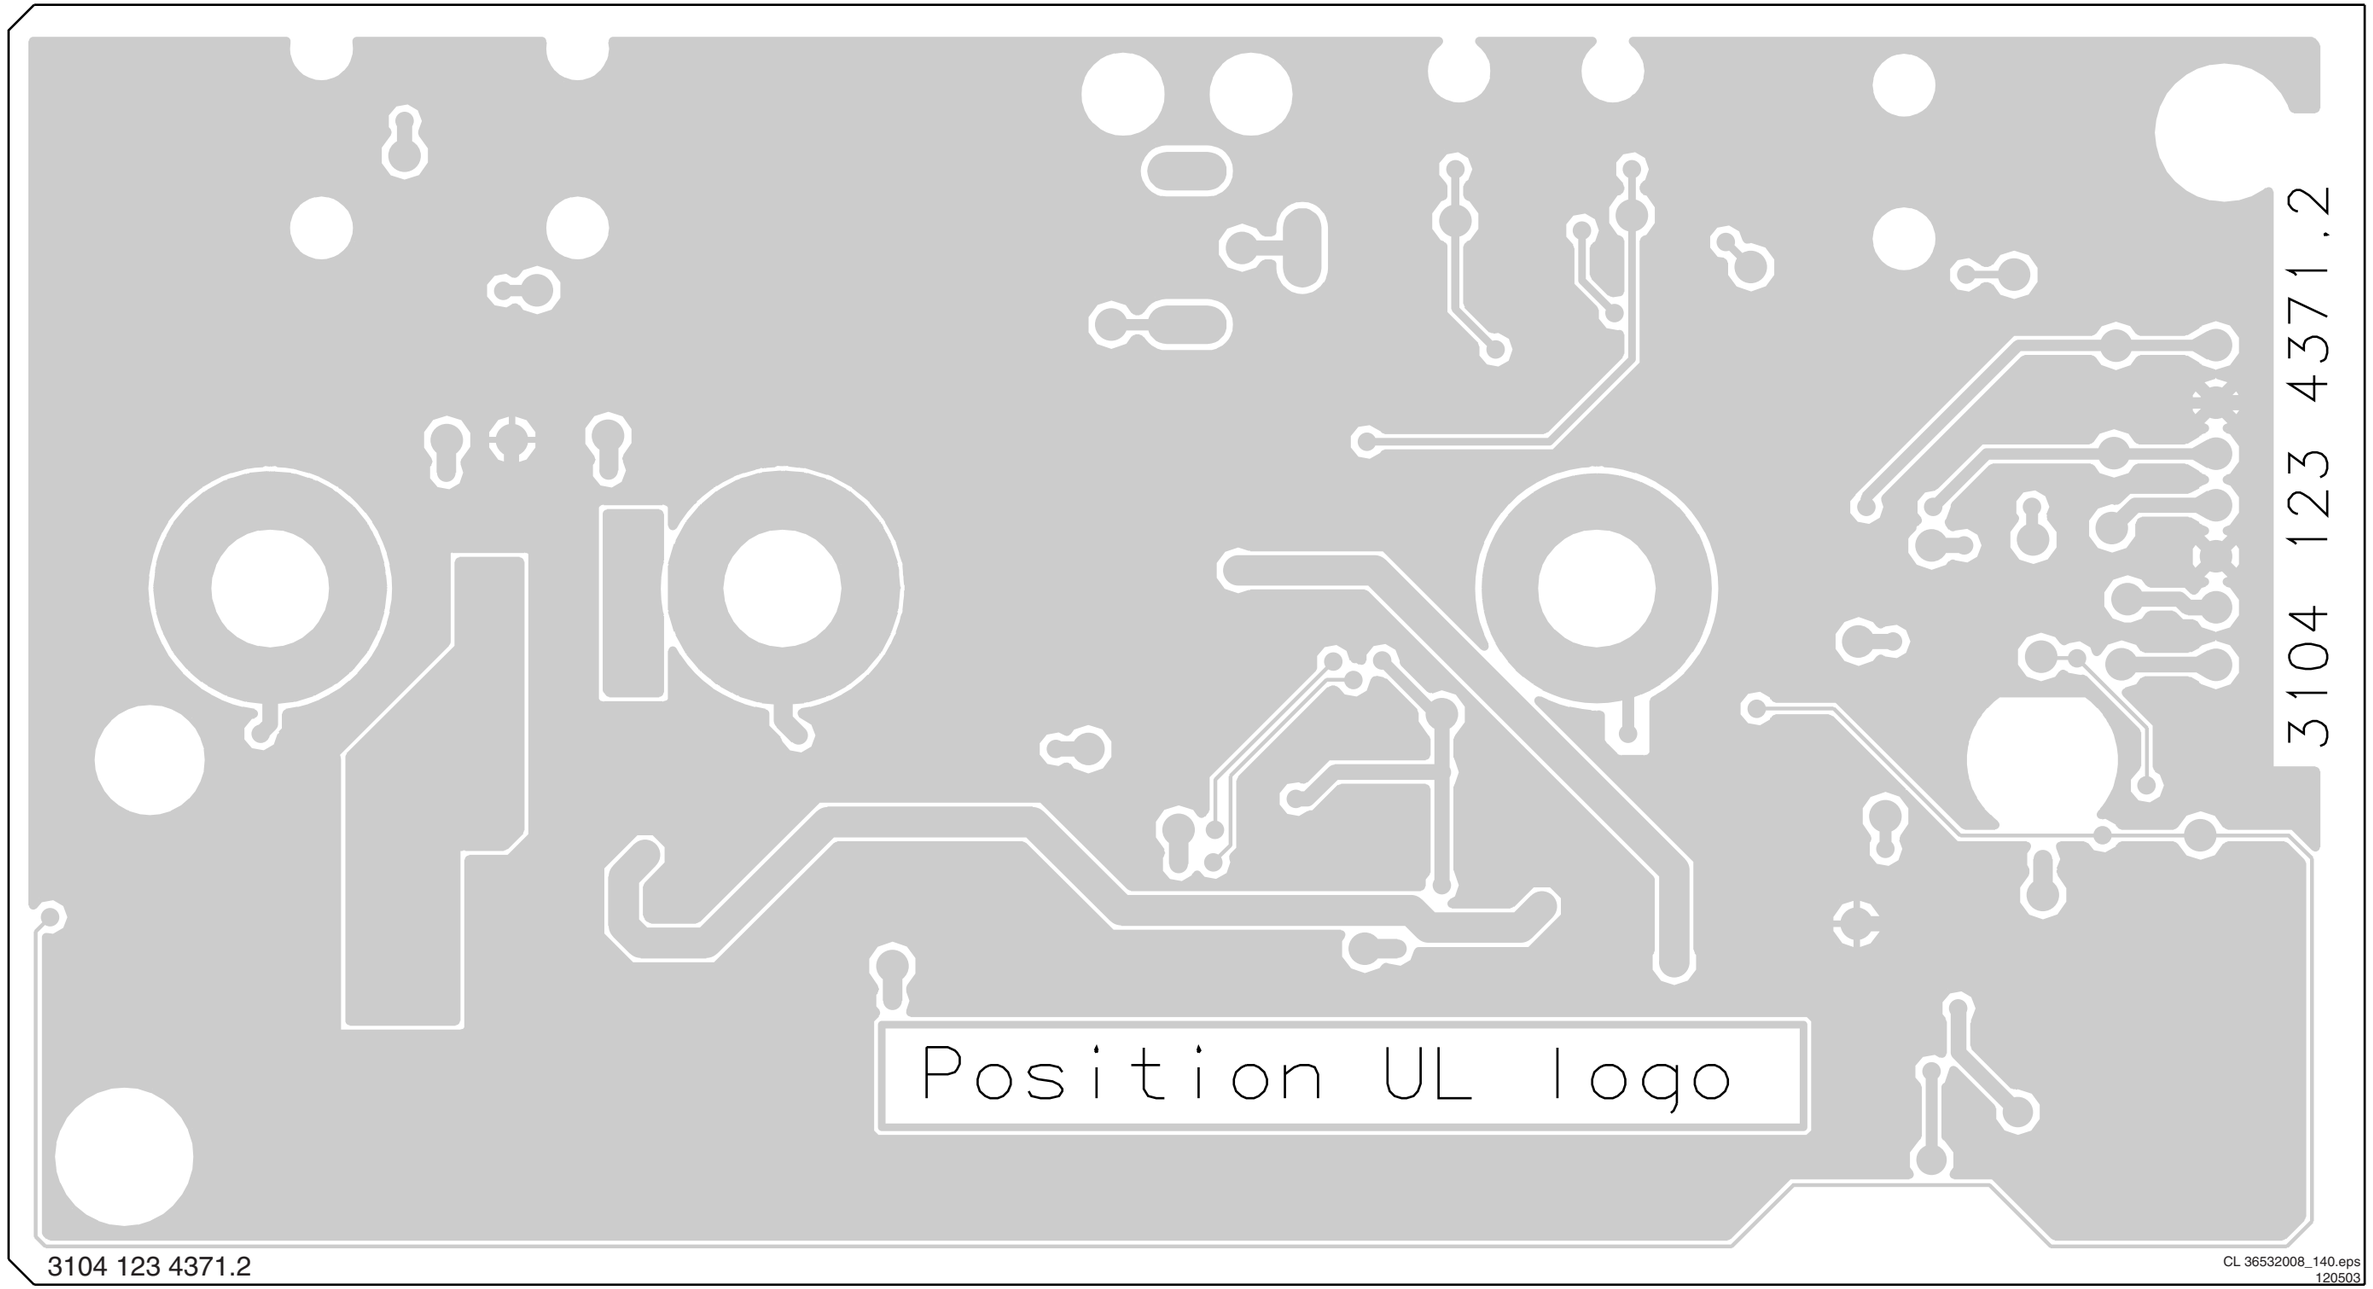

CL 36532008_140.eps
120503

8. Electrical Alignments

Index of this chapter:
1. General alignment conditions
2. Hardware alignments
3. Software alignments
4. Option settings

8.1 General Alignment Conditions

8.1.1 Start Conditions

Perform all electrical adjustments under the following conditions:
- Power supply voltage: 230 V_ac / 50 Hz (± 10 %).
- Connect the set to the mains via an isolation transformer with low internal resistance.
- Allow the set to warm up for approximately 20 to 30 minutes.
- Measure voltages and waveforms in relation to chassis ground (with the exception of the voltages on the primary side of the power supply).
  Caution: never use heatsinks as ground.
- Test probe: Ri > 10 M ohm, Ci < 20 pF.
- Use an isolated trimmer/screwdriver to perform alignments.

Perform all electrical adjustments with the following default settings (for all CRTs):

Table 8-1 Default settings

Alignment	Setting	Remark
[Active Control]	Off	Button on RC
[Menu] -> Picture		Via user menu
Contrast	75	
Brightness	40	
Colour	28 inch: 52 32 inch: 53 36 inch: 54	
Sharpness	3	
Tint	Normal	
Digital Options	Pixel Plus	
Dynamic Contrast	Off	
DNR	Off	
Colour Enhan.	Off	
Picture Format	Widescreen	
Alignm. -> General		Via SAM
Peak White Limiter	9	
Soft Clipper	Pwl + 0%	
Luma Gain	2	
Drive	Red: 32 Green: 32 Blue: 32 Cathode: 15 Rd BL offset: 7 Bk BL offset: 7 Col.temp: norm.	
Luminance Delay	PAL BG: 9 PAL I: 9 SECAM: 11 Bypass: 10	

8.1.2 Adjustment Sequence

Use the following adjustment sequence:
1. Set the correct TV-set "options" (after storing, re-start the set).
2. Rough adjustment of "Vg2" and "Focus".
3. Rough adjustment of "Geometry".
4. Allow the set to warm up.
5. Precise adjustment of "Vg2" and "Focus".
6. Precise adjustment of "Geometry".
7. "Colour" alignments.
8. "PIP" alignments (if present).
9. Software alignments (like "Cut-Off", "Cathode Drive", "Peak White", etc).

8.2 Hardware Alignments

Notes:
- The Service Alignment Mode (SAM) is described in the "Service Modes, Error Codes and Fault Finding" section.
- All changes to menu items and alignments are stored automatically.
- Use the cursor-, menu-, and OK-buttons of the remote control (RC) transmitter for navigation.

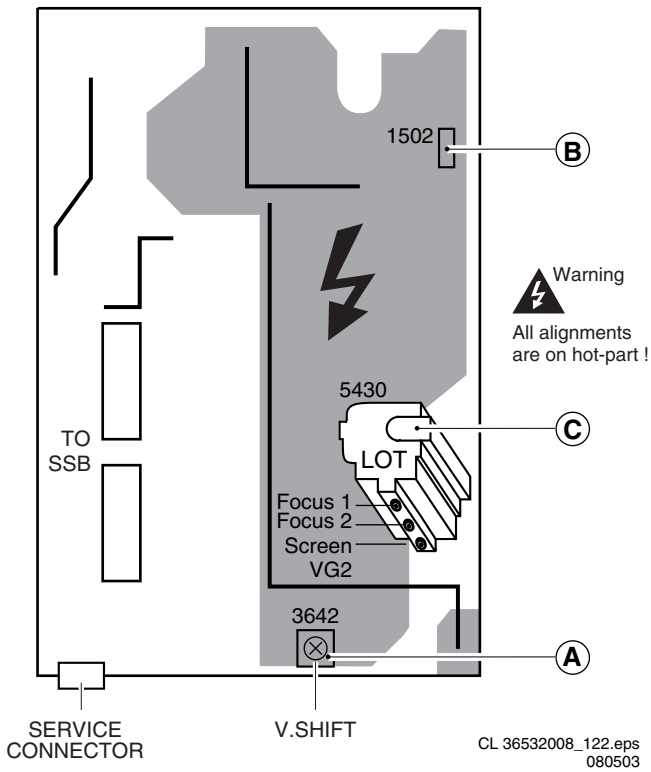


Figure 8-1 Top view LSP

8.2.1 Vg2 Adjustment

In the frame-blanking period of the R, G, and B signals applied to the CRT, the HOP video processor inserts a measuring pulse with different DC levels. Measure the black level pulse during the vertical flyback at the RGB cathodes of the CRT.
1. Use the MENU key to enter the "user" menu, select "Picture", and set "Brightness" and "Contrast" to minimum.
2. Enter SAM by pressing the following key sequence on the remote control transmitter: **062596** directly followed by **OSD [i+]** (do not allow the display to time out between entries while keying the sequence).

3. Connect the RF output of a pattern generator to the antenna input. Input a "black" picture (blank screen on CRT without any OSD info) test pattern.
4. Set the oscilloscope to 20 V/div and the time base to 20 us/div. Use external triggering on the vertical pulse (**caution**: use a trigger point on the "**cold**" side!)
5. Ground the scope on the CRT panel ("**cold**" side) and connect a 10:1 probe to one of the cathodes of the picture tube socket (see circuit diagram F1).
6. Measure the cut-off pulse during first full line after the frame blanking. You will see two pulses; one is the cut-off pulse and the other is the white drive pulse. Choose the one with the lowest value; this is the cut-off pulse.
7. Select the cathode with the highest V_dc value for the alignment. Adjust the V_cut-off of this gun with the SCREEN (lower) potentiometer on the LOT to the correct DC value (tolerance is +/- 3 V_dc):
   - 28 inch= 160 V.
   - 32 inch= 170 V.
   - 36 inch= 170 V.
8. Reset "Contrast" to "75" and "Brightness" to "39" ("34" for 28 inch sets).

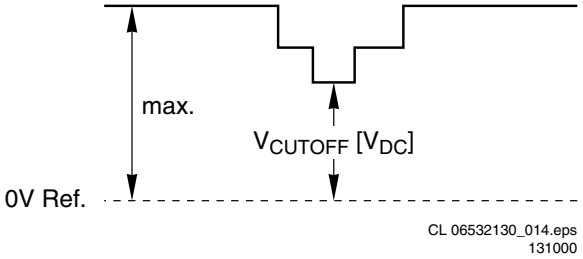


Figure 8-2 Waveform Vg2 alignment

8.2.2 Focus alignment

Notes:
- Use an external video pattern generator to input a "circle with crosshatch" test pattern to the set.
- Choose "Natural" picture mode with the "Smart Picture" button on the remote control transmitter.
- Use the MENU key to enter the User menu, select "Picture", and set both "Contrast" and "Brightness" to "0".
- LOT outline:
  - Focus 1 (F1) = Static alignment (black wire).
  - Focus 2 (F2) = Dynamic alignment (red wire).

Align the focus by means of the two "Focus" potmeters on the LOT, until the horizontal and vertical lines at the positions mentioned in the following table are of minimum width, without introducing a visible haze. First, adjust the DYNAMIC focus and then the STATIC focus. Repeat if necessary to achieve the best result.

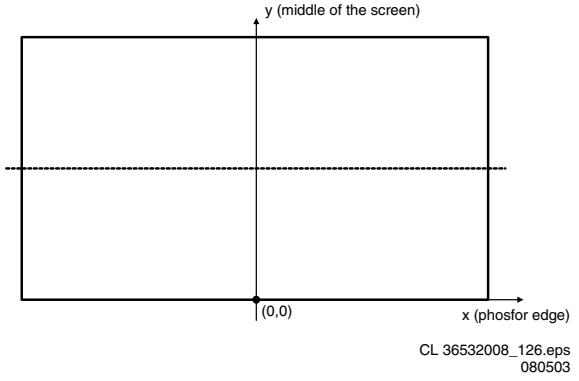


Figure 8-3 Screen positions for focus alignment

Table 8-2 Focus alignment positions

CRT size	Static Focus		Dynamic Focus	
	X [cm]	Y [cm]	X [cm]	Y [cm]
28 inch RF WS (PDC MkII)	25	16	0	29
32 inch RF WS (EMEC)	30	18	0	33
36 inch RF WS (EMEC)	35	21	0	39

8.2.3 40.4 MHz Neighbour-channel Sound Trap Alignment (s)

1. Tune to a checkerboard test pattern (system PAL B/G with a carrier frequency of 475.25 MHz).
2. Connect an oscilloscope to pin 19 (CVBS out) of the SCART1 connection and trigger line frequent.
3. Align the coil L5103 (diagram B2) completely downwards (see figure "SSP top view").
4. Align the coil upwards until under- and overshoot arise at the black/white and white/black transitions in the video signal (see figure "Waveform sound trap alignment").
5. Align the coil downwards again, until above mentioned under- and overshoot just disappears.

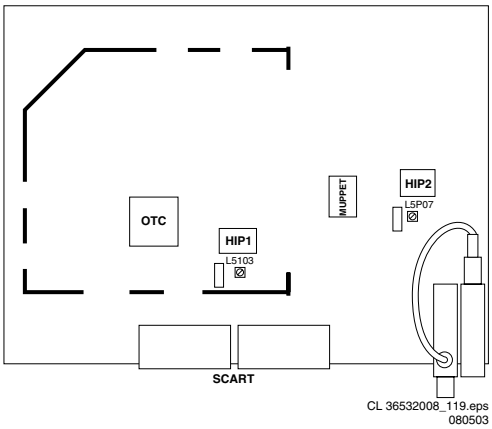


Figure 8-4 SSP top view

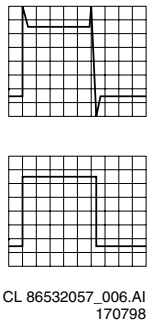


Figure 8-5 Waveform sound trap alignment

When the set is equipped with a DW/PIP circuitry, the same alignment must be performed on this part:
1. Tune the PIP/DW tuner to a checkerboard test pattern (system PAL B/G with a carrier frequency of 475.25 MHz). See to it, that the main tuner is tuned to another channel.
2. Connect an oscilloscope to pin 19 (CVBS out, WYSIWYR) of the SCART2 connection and trigger line frequent.
3. Align the coil L5P07 (diagram B15A) completely downwards (see figure "SSP top view").
4. Align the coil upwards until under- and overshoot arise at the black/white and white/black transitions in the video signal (see figure "Waveform sound trap alignment").
5. Align the coil downwards again, until above mentioned under- and overshoot just disappears.

8.2.4 Wireless Receiver Alignments

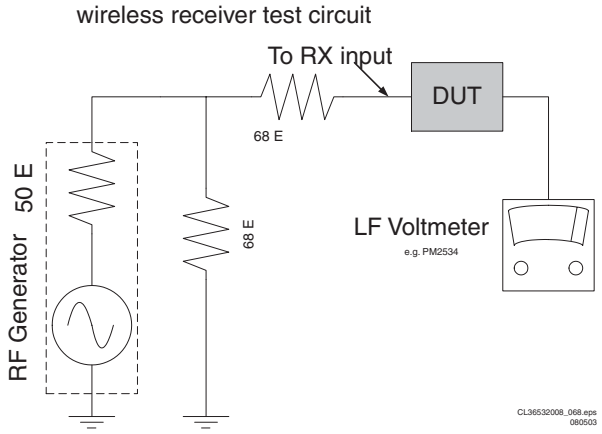


Figure 8-6 Wireless receiver test circuit

Wireless Receiver functional check and adjustment table TV Mark 3 (EM6) versions

Powersupply check	Measurement ground	testpoint	Scope / Voltmeter
DC Check	F701	F702	+10V ± 0.1V
		F740	+ 5.2V ± 0.5V
		F705	+ 8V ± 0.5V
		F707	+ 8V ± 0.5V
		F708	+3.6V ± 0.2V
		F709	+7.75V ± 0.5V
	F744	F740	+ 5.2V ± 0.2V
	F701	F712	+ 4.1V ± 0.3V
		F713	+ 4.1V ± 0.3V

Functional check
picture DUT:

RF input signal, modulation = 50 kHz via adaptation network*	RF carrier frequency	Input signal	Testpoints grounded to F744	channel switch select	Output signal	Voltmeter	version
F748	863.3 MHz	1 mV rms	F724 & F725	channel 1	F728	LF max output	for EUR and UK version
F748	433.3 MHz	1 mV rms	F724 & F725	channel 1	F728	LF max output	for some EU countries

Alignment of the receiver EUR version

RF input signal, modulation = 50 kHz via adaptation network*	RF carrier frequency	Input signal	Testpoints grounded to F744	channel switch select	Alignment	Align	Output signal	Voltmeter	version
F748	863.3 MHz	1 mV rms	F724 & F725	channel 1	FM Detector coil	1710	F728	LF max output	for EUR and UK version
			Remove groundings F724 & F725						
F748	863.3 MHz	250 µV rms		channel 1	Sliding stereo signal	3743	F747	>3 V DC	for EUR and UK version
F748	863.3 MHz	250 µV rms		channel 1	Sliding stereo signal	reduce 3743 slowly	F747	between 0.2 and 3 V	for EUR and UK version
F748	863.3 MHz	10 µV rms		channel 1	Tuned/Muted level	3741	F724	>2.5 V DC	for EUR and UK version
F748	863.3 MHz	10 µV rms		channel 1	Tuned/Muted level	reduce 3741 slowly	F724	< 1 V	for EUR and UK version

Alignment of the receiver for some EU countries

RF input signal, modulation = 50 kHz via adaptation network*	RF carrier frequency	Input signal	Testpoints grounded to F744	channel switch select	Alignment	Align	Output signal	Voltmeter	version
F748	433.3 MHz	1 mV rms	F724 & F725	channel 1	FM Detector coil	1710	F728	LF max output	for some EU countries
			Remove groundings F724 & F725						
F748	433.3 MHz	250 µV rms		channel 1	Sliding stereo signal	3743	F747	>3 V DC	for some EU countries
F748	433.3 MHz	250 µV rms		channel 1	Sliding stereo signal	reduce 3743 slowly	F747	between 0.2 and 3 V	for some EU countries
F748	433.3 MHz	10 µV rms		channel 1	Tuned/Muted level	3741	F724	>2.5 V DC	for some EU countries
F748	433.3 MHz	10 µV rms		channel 1	Tuned/Muted level	reduce 3741 slowly	F724	< 1 V	for some EU countries

* e.g. SMT02 from Rohde & Schwarz

CL 36532008_148.eps
130503

Figure 8-7 Functional check and alignments table

8.2.5 FM Radio Module Alignments

TUNER ADJUSTMENT TABLE (**ECO6 Cenelec** FM/MW - and FM/MW/LW - versions with AM-frame aerial)

Waverange	Input frequency	Input	Tuned to	Adjust	Output	Scope/Voltmeter
VARICAP ALIGNMENT						
FM 87.5 - 108MHz (50kHz grid)			108MHz	check	1	8V ±1.2V
			87.5MHz	check		1.6V ±0.5V
MW 531 - 1602kHz (9kHz grid)			1602kHz	5123		8V ±0.2V 3-band 6.9V ±0.2V 2-band
			531kHz	check		1.1V ±0.4V
LW 153 - 279kHz (3kHz grid)			279kHz	5122		8V ±0.2V
			153kHz	check		1.1V ±0.4V
FM - IF						
FM	10.7MHz, 45mV continuous wave	D	IC 7101 21, shortcircuit to block AFC, 2141	5119	2	0mV ±3mV
FM - VCO						
FM	98MHz, 1mV continuous wave	A	98MHz	3142	3	152kHz ±1kHz 1)
FM RF (channel separation)	Note: The FM-frontend unit has already been adjusted by the factory and needs therefore no further adjustments for service purposes.					
FM	98MHz, 1mV 90% Left + 9% pilot mod=1kHz	A	98MHz	IF coil inside FM frontend 1110	4	right channel min.
AM IF						
MW	450kHz connect pin 6 of IC 7101 (AM Osc.) with 3.3k⎸ to Vcc	C Δf = ±10kHz V_{RF} = 0.5mV (as low as possible)	IC 7101 36, 100nF, 220R	5111	5	max., f_o symmetric
			IC 7101 40, 100nF, 220R, see remark 2)	5112		
AM AFC **MW**		C continuous wave V_{RF} = 2mV		5114	2	0mV ±2mV
AM RF 3)						
MW	1494kHz	B Δf = ±30kHz V_{RF} as low as possible	1494kHz	2106	5	max., f_o symmetric
	558kHz		558kHz	5102		
LW	198kHz		198kHz	5103		

ECO6 Sys Cenelec, 190599

Use Service Testprogram. By selecting the TUNER TEST test frequencies will be stored as preset frequencies automatically.

1) If sensitivity of frequency counter is too low adjust to max. channel separation (input signal: stereo left 90% + 9%, adjust output on right channel to minimum)

2) RC network serves for damping the IF-filter while adjusting the other one.

3) For AM RF adjustments the original frame antenna has to be used! MW has to be aligned before LW.

↕ Repeat

CL 36532049_004.eps
060603

Figure 8-8 Tuner adjustment table

8.3 Software Alignments

With these alignments, it is possible to align the Geometry, White Tone, and Tuner IF settings.
Put the set in the SAM (see the "Service Modes, Error Codes and Fault Finding" section). The SAM menu will now appear on the screen. Select ALIGNMENTS and go to one of the sub menus. All these alignments are explained below.

Notes:
- All changes to menu items and alignments are stored automatically, except changes to the option codes. They must be stored manually.
- If an empty EAROM (permanent memory) is detected, all settings are set to pre-programmed default values.

8.3.1 GENERAL

VG2 TEST PATTERN
In this sub menu, you can turn "on" the OSD feedback for the Vg2 alignment (see "Vg2 Adjustment" section).

ADJUST PEAK WHITE LIMITER
Fixed setting of "9".

EHT COMPENSATION
Fixed setting of "0".

SOFT CLIPPER
Fixed setting of "Pwl + 0%".

LUMA GAIN
Fixed setting of "2".

DELTA LUMA GAIN FOR AUX
Fixed setting of "0 dB".

IF AFC
Supply, via a service generator or via off-air, a TV-signal with a signal strength of at least 1 mV and a frequency of 475.25 MHz.
Alignment procedure:
1. During the IF AFC-parameter adjustment, one can see OSD feedback on the screen.
2. The OSD feedback can give 4 kinds of messages:
3. The first item (IN/OUT) informs you whether you are in or out of the AFC-window.
4. The second item (HIGH/LOW) informs you whether the AFC-frequency is too high or too low.

Table 8-3 OSD feedback of AFC alignment

AFC-window	AFC-frequency vs. reference
Out	High
In	High
* In *	* Low *
Out	Low

1. Adjust the IF AFC parameter until the **first** value is within the AFC window (= IN).
2. Next, adjust the IF AFC parameter until the **second** value is LOW.

IF LPRIME AFC
Same procedure as described above but with other signal source (SECAM L').

TUNER AGC
1. Connect the RF output of a video pattern generator to the antenna input.
2. From the generator, input a PAL B/G TV signal with a signal strength of approximately 2 mV and a frequency of 475.25 MHz.
3. Measure the DC voltage on pin 1 of the (main) Tuner. You can adjust this voltage by adjusting the TUNER AGC item in the SAM menu. Alignment is correct when the DC voltage is just below 3.5 V.

IF AFC TUNER 2
Use the same procedure as described above (under IF AFC) with the set switched to the DW source.

IF LPRIME AFC TUNER 2
Use the same procedure as described above (under IF LPRIME AFC) with the set switched to the DW source.

TUNER AGC TUNER 2
Use the same procedure as described above (under TUNER AGC) with the set switched to the DW source. Measure on pin 1 of the DW Tuner.

BLEND INTENSITY
Use this alignment when you replace the microcontroller or the HOP. It aligns the level of transparency of the menu-picture blended into the main-picture.
Position the "Brightness", "Contrast", and "Colour" setting in the middle position (in the customer "Picture" menu).
1. Apply a signal with a 100 % white video pattern (white raster).
2. Connect an oscilloscope to pin 8 of connector 1298 of the CRT panel and measure the Red output level.
3. Align the BLEND INTENSITY parameter so that the blended signal is 65 % of the black-white amplitude. This will be about 1.3 V (blended signal) versus 2 V (full white signal).
4. The parameter can be adjusted from 0 to 31.

8.3.2 DRIVE (Colour Alignments)

Note: Switch off all (available) colour-influencing features (set the TV in ECO-mode).

Cut-Off Adjustment
1. Set, via the user menu, the "Contrast" to "100".
2. Go to SAM, select ALIGNMENTS - GENERAL - DRIVE - TEST PATTERN and turn it ON. During the following alignments, you will see a white block in the middle of the screen. Measure with the colour analyser on this area.
3. Select CATHODE and enter the value "15" (for all picture tubes).
4. Set the RED, GREEN and BLUE values to "32".
5. Set RED BL OFFSET to default value "7".
6. Set GREEN BL OFFSET to default value "7".
7. Set, via the user menu, the "Brightness" to a value between 3.0 and 5.0 Nit (rough setting).
8. Go to SAM, select ALIGNMENTS - GENERAL - DRIVE and set COLOR TEMPERATURE to NORMAL.
9. Adjust the RED BL OFFSET and GREEN BL OFFSET parameters to achieve the right NORMAL colour-temperature, according to the values in table "White levels".

Table 8-4 White levels

CRT	Analyz-erreadings	Cool (10200 K)	Normal (8700 K)	Warm (6500 K)
28 inch	X	280	289	313
	Y	287	299	329
32/36 inch	X	275	283	308
	Y	287	299	329

White Tone Adjustment: NORMAL

1. Set, via the user menu, the "Contrast" to "100".
2. Go to SAM, select ALIGNMENTS - GENERAL - DRIVE - TEST PATTERN and turn it ON. During the following alignments, you will see a white block in the middle of the screen. Measure with the colour analyser on this area.
3. Set COLOR TEMPERATURE to NORMAL.
4. Pre-adjust the GREEN parameter with the value from the "Luminance Adjustment".
5. Adjust the RED and BLUE parameters to achieve the right colour temperature according to the values in table "White levels".

Note: The WHITE TONE adjustments for the colour temperatures COOL and WARM have to be done at the end of the colour alignments, otherwise the correct light output (luminance adjustment) is not taken into account.

Luminance Adjustment

1. Set, via the user menu, the "Contrast" to "100".
2. Set, via the user menu, the "Sharpness " to "0".
3. Go to SAM, select ALIGNMENTS - GENERAL - DRIVE - TEST PATTERN and turn it ON. During the following alignments, you will see a white block in the middle of the screen. Measure with the colour analyser on this area.
4. Set COLOR TEMPERATURE to NORMAL.
5. Adjust the RED, GREEN, and BLUE parameters **equally** to achieve the right light output, according to the values in table "Luminance levels".

Table 8-5 Luminance levels

CRT size	Light output (cd/m2)
28 inch RF WS (PDC Mk II)	450
32 inch RF WS (EMEC)	395
36 inch RF WS (EMEC)	345

White Tone Adjustment: COOL and WARM

1. Go to SAM, select ALIGNMENTS - GENERAL - DRIVE - TEST PATTERN and turn it ON. During the following alignments, you will see a white block in the middle of the screen. Measure with the colour analyser on this area.
2. Select a COLOUR TEMPERATURE (e.g. COOL or WARM).
3. Adjust the RED and BLUE parameters to achieve the right colour-temperature, according to the values in table "White levels".

Mathematical values (next paragraph) can be used for COOL and WARM, but it is recommended to align them.

Adjustment Method Without Colour Analyser

If you do not have a colour analyser, you can use the default values. This is the next best solution. The default values are average values coming from production (statistics).

1. Set, via the user menu, the "Contrast" to "100".
2. Go to SAM, select ALIGNMENTS - GENERAL - DRIVE - CATHODE, and enter the value "15" (for all picture tubes).
3. RED BL OFFSET: the Black Level can be aligned very precisely here. The default value is "7".
4. GREEN BL OFFSET: the Black Level can be aligned very precisely here. The default value is "7".
5. Select a COLOUR TEMPERATURE (e.g. COOL, NORMAL, or WARM).
6. Set the RED, GREEN and BLUE default values according to the values in the "Tint settings" table.

Table 8-6 Tint settings

	Cool	Normal	Warm
R	36	37	40
G	30	30	30
B	37	31	18

8.3.3 LUM. DEL. (Luminance Delay)

With this alignment, you place the luminance information exactly on the chrominance information (brightness is pushed onto the colour). Use a colour bar / grey scale pattern as test signal.

- **LUM. DELAY PAL BG:** Apply a PAL BG colour bar / grey scale pattern as a test signal. Adjust this parameter until the transients of the colour part and black and white part of the test pattern are at the same position. Default value is "9".
- **LUM. DELAY PAL I:** Apply a PAL I colour bar/grey scale pattern as a test signal. Adjust this parameter until the transients of the colour part and black and white part of the test pattern are at the same position. Default value is "9".
- **LUM. DELAY SECAM:** Apply a SECAM colour bar/grey scale pattern as a test signal. Adjust this parameter until the transients of the colour part and black and white part of the test pattern are at the same position. Default value is "11".
- **LUM. DELAY BYPASS:** apply a NTSC colour bar/ greyscale pattern as a test signal. Adjust this value until the transients of the colour and black and white part of the test area are at the same position. Default value is "10".

8.3.4 GEO-NOR

Note: For all geometry alignments, use an **external** pattern generator with a crosshatch pattern.

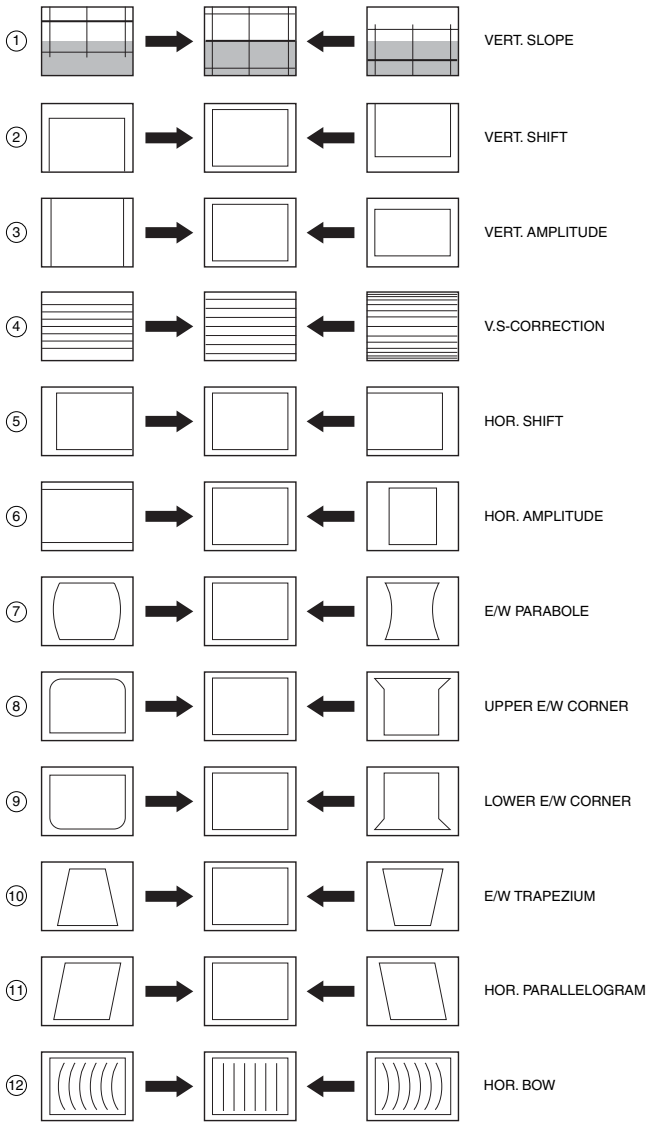


Figure 8-9 Geometry Alignments

"Geo-Nor" stands for Normal Geometry, and is aligned in Pixel Plus mode (at 75 Hz).

Service tip: When the set is equipped with a rotation coil, use this menu item to check its correct alignment. If alignment is not correct, go to the user menu, choose SETUP, GENERAL, and TILT ADJUST. With the use of a crosshatch test pattern, align it to achieve a correct horizontal picture.

V. SLOPE
Aligns the zero crossing of the frame deflection to the mechanical middle of the picture tube.

1. First set the start conditions for 16:9 sets: V. S-CORRECTION value on "16" for the 28 inch, "18" for the 32 inch, or "20" for the 36 inch sets.
2. Align V. SLOPE (during alignment, the lower half of the picture is blanked) so that the middle line of the test pattern is matched with the edge of the pattern transient in the middle of the picture.
3. Repeat the alignment if necessary.

V. SHIFT AND V. AMPLITUDE (vertical alignment)
Aligns the vertical centre and height of the picture.

1. Use V. AMPLITUDE to align the vertical amplitude so that the entire test pattern is visible.
2. Set V. SHIFT to a value of 32.
3. Connect a voltmeter (V_dc) between R3642 and "hot" ground.
4. Adjust the DC voltage to 0 with potmeter R3642 (see figure "Top view LSP").
5. Use V. SHIFT again to align the test pattern roughly vertically in the middle of the screen.
6. Repeat the alignment if necessary.

V. S-CORRECTION
Aligns for equal size squares on the top, middle, and bottom of the picture tube.

- Align V. S-CORRECTION so that the squares at the top (or bottom) of the picture are the same height as the squares in the middle of the picture.

H. SHIFT AND H. AMPLITUDE (horizontal alignment)
1. Use H. AMPLITUDE to align the horizontal amplitude so that the entire test pattern is visible.
2. Use H. SHIFT to align the picture horizontally in the middle.
3. Repeat the H. AMPLITUDE alignment if necessary.

Note: If the horizontal linearity in wide-screen mode is out of tolerance, add a "DC-shift correction" panel (3104 328 06230) to connector 1419 of the DAF-panel [diagram I]. On the DC-shift panel, cut diode **6433** for correction to the right or diode **6432** for correction to the left.
Caution: Be sure to switch the set "off" first. Never plug in "not aligned" DC-shift module in a working TV-set!

EAST/WEST ALIGNMENT
1. Use EAST/WEST PARABOLA to align the vertical lines until they are straight.
2. Use UPPER EAST/WEST CORNER to align the vertical lines in the upper corners of the screen until they are straight.
3. Use LOWER EAST/WEST CORNER to align the vertical lines in the lower corners of the screen until they are straight.
4. Use EAST/WEST TRAPEZIUM to align for a rectangular picture.
5. Use HORIZONTAL BOW to correct the E/W parabola so that it is symmetrical.
6. Use HORIZONTAL PARALLELOGRAM to align for straight vertical lines if necessary.

Repeat steps 1 to 6 if necessary.

8.3.5 GEO-4:3

"Geo-4:3" stands for 4:3 geometry alignment in 16:9 sets and is aligned in Pixel Plus mode (at 75 Hz).

1. Use EAST/WEST PARABOLA to align the vertical lines until they are straight.
2. Use UPPER EAST/WEST CORNER to align the vertical lines in the upper corners of the screen until they are straight.
3. Use LOWER EAST/WEST CORNER to align the vertical lines in the lower corners of the screen until they are straight.

8.3.6 GEO-SW

"Geo-SW" stands for Super Wide geometry alignment in 16:9 sets and is aligned in Pixel Plus (at 75 Hz).

You only need to set the following values (if the normal geometry alignment has been performed correctly):
1. V. S-CORRECTION, enter the value of the normal geometry alignment.

2. H. AMPLITUDE, enter the value of the normal geometry alignment subtracted by 1.
3. EAST/WEST PARABOLA, enter the value of the normal geometry alignment.

8.3.7 GEO-100Hz

"Geo-100Hz" stands for 100 Hz alignment in 16:9 sets and is aligned in Digital Scan mode (at 100 Hz).

- Align the picture height to the correct amplitude requirements.

8.4 Option Settings

8.4.1 Introduction

The microprocessor communicates with a large number of I2C ICs in the set. To ensure good communication and to make digital diagnosis possible, the microprocessor has to know which ICs to address. The presence / absence of these specific ICs (or functions) is made known by the option codes.

Notes:
- After changing the option(s), save them with the STORE command.
- The new option setting is only active after the TV is switched "off" and "on" again with the Mains switch (the EAROM is then read again).

8.4.2 SERVICE OPTIONS

Select this sub menu to set the initialisation codes (options) of the set via text menus.

Table 8-7 Option overview

Menu-item	Subjects	Options	Description
Chassis/Region	Chassis	EMGS 2001	"Service" name= EM3
		EMGS 2002	"Service" name= EM5
		EMGS TOP 2003	"Service" name= EM6
	Region	AP NTSC	Only for AP
		US	Only for US
Dual screen	PIP/Dual Screen	Yes	Feature present.
		No	Feature not present.
	Text/EPG	Yes	Feature present.
		No	Feature not present.
	DS/PIP Tuner	Yes	Only selectable if Dual Screen option is "on"
		No	Feature not present.
Teletext	Flash RAM	Yes	Feature present.
		No	Feature not present.
	NexTView	None	Feature not present.
		Textguide only	Feature present, but only as text guide.
		Nextview 2c3	Feature present, for countries that support this.
Picture Tube	CRT Type	4 by 3	4:3 picture tube.
		16 by 9	16:9 picture tube.
	Picture Rotation	Yes	Frame rotation circuitry present.
		No	Frame rotation circuitry not present.
	CRT size	28 / 32 / 36 29 / 34 / 38	CRT size (in inches).MEC= Panasonic, II= Mark 2
	Anti Moiré filter	Yes	Feature present.
		No	Feature not present.
Video repro	Featurebox type	1050i/1250i	HD input
		Eagle	Eagle present (Pixel Plus).
	Lightsensor	Yes	Feature present.
		No	Feature not present.
	2D Combfilter	Yes	Feature present.
		No	Feature not present.
	Picture improvement	Yes	LTP (TOPIC) present.
		No	LTP (TOPIC) not present.
	Auto Scavem	Yes	Feature present.
		No	Feature not present.
	Signalling bits	Yes	For 16:9 sets
		No	For 4:3 sets

Menu-item	Subjects	Options	Description
Audio Repro	Dolby	None	Set without Dolby.
		Pro Logic	Set with Dolby ProLogic.
		Virtual	Sets with Virtual Dolby
	Rear speakers	Speakerless	Virtual Dolby (without rear speakers).
		Cordless	Wireless active surroundbox present.
	Subwoofer present	Yes	Feature present.
		No	Feature not present.
	Acoustic system	None, FL9-DAS, FL11, FL12, PV02, FL13, Soft Designline, Tech Designline.	
	AVL	On	Automatic Volume Limiter available in user menu.
		Off	Automatic Volume Limiter available in user menu.
Source Selection	AV3 2fH (2002)	Yes	Not selectable yet
		No	Feature not present.
	AV4 2fH (2002)	Yes	Not selectable yet
		No	Feature not present.
	EXT3 2fH (2003)	Yes	Feature present.
		No	Feature not present.
	EXT4 2fH (2003)	Yes	Not selectable for this chassis
		No	Feature not present.
Miscellaneous	Home Cinema	Yes	Set with Home Cinema Link (EU only)
		No	Set without Home Cinema Link
	Integrated RC	Yes	Feature present.
		No	Feature not present.
	Tuner type	UV1316	Set with Philips tuner.
		TEDE9	Set with Alps tuner.
	Integrated Radio	Yes	Feature present.
		No	Feature not present.
	P50 DVD menu line	Yes	Feature present (only in sets with Home Cinema).
		No	Feature not present.
Option no.	Group 1		Group 1 option code overview (see CRT sticker).
	Group 2		Group 2 option code overview (see CRT sticker).

8.4.3 OPT. NO. (Option numbers)

Select this SERVICE OPTIONS sub menu, to set all options at once (expressed in two long strings of numbers).

An option number (or "option byte") represents a number of different options. When you change these numbers directly, you can set all options very quickly. All options are controlled via eight option numbers.
When the EAROM is replaced, all options will require resetting. To be certain that the factory settings are reproduced exactly, you must set both option number lines. You can find the correct option numbers on the CRT sticker inside the TV set.

Example: The CRT sticker gives the following option numbers:
- 04187 08270 49936 00513
- 04118 00001 00001 00326

The first line (group 1) indicates options 1 to 4, the second line (group 2) options 5 to 8 (see tables below).
Every 5-digit number represents 16 bits (so the maximum number will be 65536 if all options are set).
When all the correct options are set, the sum of the decimal values of each Option Byte (OB) will give the option number.

Service tip: An easy way to check the option numbers is:
1. Convert the decimal option number (as given on the CRT sticker) to a binary number (e.g. by means of the 'scientific' calculator that comes with MS Windows™). E.g. OB4= 00513 (dec)= 000000100000001 (bin)
2. Use this binary number to check against the bits as mentioned in the tables below. This means in above-mentioned sample, that Bit 0 en Bit 9 are "1" (means "set"), and that the rest is "0". So, actually this means that the options "PIP/Aux Tuner" (Bit 0) and "Integrated Hard disk" (Bit 9) are set for this particular model.

Table 8-8 Option bytes Group 1

OB	Bit	Option name	Settings (in decimal values) for EM6E chassis		Option number
1	0	Featurebox	0= None (n.a.)	2= Prozonic (n.a.) 3= Eagle 4= Falconic (n.a.) 5= Falconic+ (1050i/1250i)	Sum OB1 (decimal)
	1				
	2				
	3	2D Comb Filter	0= Off	8= On	
	4	Auto-Scavem	0= Off	16= On	
	5	n.a. *	0		
	6	Light Sensor	0= Off	64= On	
	7	Luma Trans. Proc.	0= Off (fixed)	128= On (for none-Eagle sets)	
	8	n.a. *	0		
	9	n.a. *	0		
	10	n.a. *	0		
	11	n.a. *	0		
	12	WSS	0= Off (US/LA/AP-N)	4096= On (EU/AP-P)	
	13	3D Comb Filter	0= Off (EU/AP-P)	8192= On	
	14	Pixel Plus	0= Off	16384= On (fixed)	
	15	n.a. *	0		
2	0	n.a. *	0		Sum OB2 (decimal)
	1	Dolby ProLogic	0= Off	2= On	
	2	Virtual Rear Spkrs	0= Off	4= On	
	3	Cordless Rear Spkrs	0= Off (US/LA/AP-P/AP-N)	8= On	
	4	Dolby Digital	0= Off	16= On	
	5	Virtual Dolby	0= Off	32= On	
	6	Subwoofer	0= No subwoofer present	64= Subwoofer present	
	7				
	8	Chassis	0= EM6 (fixed)	256= EM5 512= EM3 3840= Others	
	9				
	10				
	11				
	12	n.a. *	0		
	13	EPG Type (EU only)	0= NexTView 2	8192= NexTView 2C3	
	14	n.a. *	0		
	15				
3	0	n.a. *	0		Sum OB3 (decimal)
	1	n.a. *	0		
	2	n.a. *	0		
	3	n.a. *	0		
	4	Dual Screen	0= Off	16= On	
	5	n.a. *	0		
	6	TXT-DS/EPG-DS	0= Off (US/LA/AP-N)	64= On	
	7	n.a. *	0		
	8	Aspect Ratio	0= 4:3	256= 16:9	
	9	Tilt	0= Off	512= On	
	10	Monitor	0= Off	1024= On (reserved for FTV)	
	11	Integrated Radio	0= Off (US/LA/AP-P/AP-N)	2048= On	
	12	Stand Alone	0= Off	4096= On (reserved for FTV)	
	13	Integrated DVD	0= Off (AP-P)	8192= On	
	14	Home Cinema	0= Off (US/LA/AP-P)	16384= On	
	15	Integrated RC (P50)	0= Off (US/LA/AP-P)	32768= On	

OB	Bit	Option name	Settings (in decimal values) for EM6E chassis		Option number
4	0	PIP/Aux. Tuner	0= Off	1= On	Sum OB4 (decimal)
	1	n.a. *	0		
	2	China IF	0= Off (EU/US/LA/AP-N)	4= On	
	3	Tuner	0= Philips	8= Alps	
	4	n.a. *	0		
	5	n.a. *	0		
	6	n.a. *	0		
	7	n.a. *	0		
	8	Digital Module (MILO)	0= Off (US/LA/AP-P/AP-N)	256= On	
	9	Integrated Harddisk	0= Off (AP-P)	512= On	
	10	n.a. *	0		
	11	n.a. *	0		
	12	Anti Aging	0= Off	4096= On (reserved for FTV)	
	13	DVD-door lock	0= Off (AP-P)	8192= On	
	14	n.a. *	0		
	15	n.a. *	0		

Notes: - Bits that are not used have a fixed value of "0", and are not mentioned in above overview.
AP-P= Asian Pacific PAL-multi, AP-N= Asian Pacific NTSC, EU= Europe, LA= Latin America, US= NAFTA.

Table 8-9 Option bytes Group 2

OB	Bit	Option name	Settings (in decimal values) for EM6E chassis		Option Number
5	0	n.a. *	0		Sum OB5 (decimal)
	1	Auto Store Mode	0= None (US/LA/AP-N)	2= PDC/VPS 4= TXT Page 6= PDC/VPS/TXT Page	
	2				
	3	Korean Stereo	0= Off	8= On	
	4	Picture Mute	0= Off	16= On	
	5	n.a. *	0		
	6	Virgin Mode	0= Off	64= On	
	7	n.a. *	0		
	8	n.a. *	0		
	9	n.a. *	0		
	10	n.a. *	0		
	11	n.a. *	0		
	12	TXT Preference	0= TOP	4096= FLOF	
	13	n.a. *	0		
	14	n.a. *	0		
	15	n.a. *	0		
6	0	P50 DVD menu-line	0= Off	1= On	Sum OB6 (decimal)
	1	n.a. *	0		
	2	n.a. *	0		
	3	n.a. *	0		
	4	Region	0= EU	16= AP PAL-multi 32= AP NTSC 48= US 64= LATAM 80= Australia	
	5				
	6				
	7				
	8	n.a. *	0		
	9	n.a. *	0		
	10	n.a. *	0		
	11	n.a. *	0		
	12	n.a. *	0		
	13	n.a. *	0		
	14	n.a. *	0		
	15	n.a. *	0		

OB	Bit	Option name	Settings (in decimal values) for EM6E chassis		Option Number
7	0	EXT4 1fH (EU)	0= Off	1= On	Sum OB7 (decimal)
	1	EXT 2fH 1 (EU)	0= Off	2= On (used as EXT5 in EM6)	
	2	EXT 2fH 2 (EU)	0= Off (fixed)	4= On	
	3	EXT VGA (EU)	0= Off (fixed)	8= On	
	4	EXT DVI (EU)	0= Off (fixed)	16= On	
	5	EXT3 (EU)	0= Off	32= On	
	6	n.a. *	0		
	7	n.a. *	0		
	8	n.a. *	0		
	9	AV 2fH 1 (non-EU)	0= Off	512= On (used as AV4 in EM6)	
	10	AV 2fH 2 (non-EU)	0= Off	1024= On (used as AV5 in EM6)	
	11	AV VGA (non-EU)	0= Off (fixed)	2048= On	
	12	AV DVI (non-EU)	0= Off (fixed)	4096= On	
	13	n.a. *	0		
	14	n.a. *	0		
	15	n.a. *	0		
8	0	Cabinet	0= FL6 (n.a.)	1= FL7 (n.a.) 2= FL8 (n.a.) 3= FL9 DAS 4= FL9 Monitor (n.a.) 5= FL10 (n.a.) 6= FL11 7= FL12 8= FL14 (n.a.) 9= PV02 10= FL13 11= Soft Design Line 12= Tech Design Line	Sum OB8 (decimal)
	1				
	2				
	3				
	4	n.a. *	0		
	5	n.a. *	0		
	6	AVL	0= Off	64= On	
	7	n.a. *	0		
	8	Picture tube size	0= 28 inch	256= 32 inch 512= 36 inch 768= 29 inch 1024= 34 inch 1280= 38 inch 1536= 32 inch MEC 1792= 28 inch Mk2 2048= 36 inch FP 3840= Other	
	9				
	10				
	11				
	12	Anti Moiré	0= Off	4096= On	
	13	n.a. *	0		
	14	n.a. *	0		
	15	n.a. *	0		

Notes: - Bits that are not used have a fixed value of "0", and are not mentioned in above overview.
AP-P= Asian Pacific PAL-multi, AP-N= Asian Pacific NTSC, EU= Europe, LA= Latin America, US= NAFTA.

8.4.4 DEALER OPTIONS

Table 8-10 Dealer options overview

Menu name	Subjects	Options	Physically in set
Personal Options	Picture Mute	Yes	Picture mute active in case no picture detected
		No	Noise in case of no picture detected
	Virgin Mode	Yes	TV starts up once with language selection menu after mains switch on for the first time (virgin mode)
		No	TV does not starts up once with language selection menu after mains switch on for the first time (virgin mode)
	Auto Store Mode	None	Autostore mode disabled (not in installation menu)
		PDC-VPS	Autostore mode via ATS (PDC/VPS) enabled
		TXT page	Autostore mode via ACI enabled
		PDC-VPS-TXT	Autostore mode via ACI or ATS enabled
	TXT Preference	TOP	Preference to TOP Teletext
		FLOF	Preference to FLOF Teletext
	DVD Door Lock(only for DVD sets)	Yes	Lock the DVD module, disc cannot be ejected
		No	Unlock the DVD module, disc can be ejected
	Flex TV Demo(only for HDD sets)	On	Enable dealer demo for Flex TV (HDD) sets
		Off	Disable dealer demo for Flex TV (HDD) sets

9. Circuit Descriptions, Abbreviation List, and IC Data Sheets

Index of this chapter:
1. Introduction
2. Block diagram
3. Power supply
4. Control
5. Video
6. Audio
7. Wireless surround
8. Tuner board
9. LCD board
10. Interface board
11. Software upgrading
12. Abbreviation list
13. IC Data Sheets

Notes:
- Only **new** circuits (compared to the EM5) are described. For the other circuit descriptions, see the manual of the EM5E. This manual is available in different languages:
  – 3122 785 12560 = English.
  – 3122 785 12571 = German.
  – 3122 785 12581 = French.
- Figures can deviate slightly from the actual situation, due to different set executions.
- For a good understanding of the following circuit descriptions, please use the diagrams in chapter 6 and 7. Where necessary, you will find a separate drawing for clarification.

9.1 Introduction

9.1.1 New Features

The new EM6E-TDL chassis has the following extra features (compared to the EM6E):
- Next step "Active Control" with: two new bars ("Motion" and "Tint Control" bar), four split demos, etc.
- Two tuner PIP/ FDS (Picture In Picture / Full Dual Screen).
- Same Large Signal Panel (LSP), but able to handle more power and prepared for future extensions like DVD, Digital TV (DTV), and Hard Disc Drive (HDD).
- New Small Signal Panel (SSP), which is however based on the existing EM5 architecture: not longer a shielded module via 80-pins SIMM connector as in EM5, but a full panel with integrated the shielded module. This results in better EMC / crosstalk behaviour and fewer cables.
- Dolby ProLogic 2 (only in top models). New algorithm provides stereo surround sound from any stereo source. Further, a higher bandwidth for all channels, so better channel separation and better sound quality.
- Eco Digital Dolby with new flat surround speakers (NXT technology). Multi-channel sound integrated on SSB via new Micronas chipset.
- Downloadable main software (via ComPair).
- Scavem on TXT.
- Flex TV (hard disc pack). This will allow time shift recording, instant recording, or programmed recording (not in all models).
- Built in RDS radio with motorised LCD display.
- Built in DVD player (not in all models).

9.1.2 Large Signal Panel

The chassis has a full sized Large Signal Panel / Small Signal Panel combination (LSP/SSP). The SSP is connected to the LSP by means of two IDE connectors and flex cables.
The main functionalities of the LSP are supply, deflection, and sound amplification.

The main functionalities of the SSP are tuner input, I/O, interface provisions (four SCART's), TXT/control, video / audio decoding, Feature Box, and sync / geometry control.

The LSP (single sided) is built up very conventional, with hardly any surface mounted components on the copper side. It has a large "hot" part, including both deflection coils.

9.1.3 Small Signal Panel

The SSP is a high tech module (four layer, 2 sides reflow technology, full SMC) with very high component density and partial shielding (FBX) for EMC-reasons. Despite this, it is designed in such a way, that repair on component level is possible. To achieve this, attention was paid to:
- Accessibility of the test points. The SSP has good accessible service positions.
- Clearance around surface mounted ICs (for replacing).
- Detailed diagnostics and fault finding is possible via ComPair.
- Software upgrading is possible via ComPair.

Further features of the SSP are:
- The PIP functionality is integrated on the SSP.
- It is equipped with a "multi-media" connector for so-called "bolt on" modules like DVD and HDD.
- The 3D Comb filter functionality (for USA) is integrated on the SSP.
- The rear I/O connections (like SCART and cinch) are integrated on the SSP, even as the (2) tuner(s) and wireless transmitter jack.

On below photographs you can see where all the functional cells are located on the SSP:

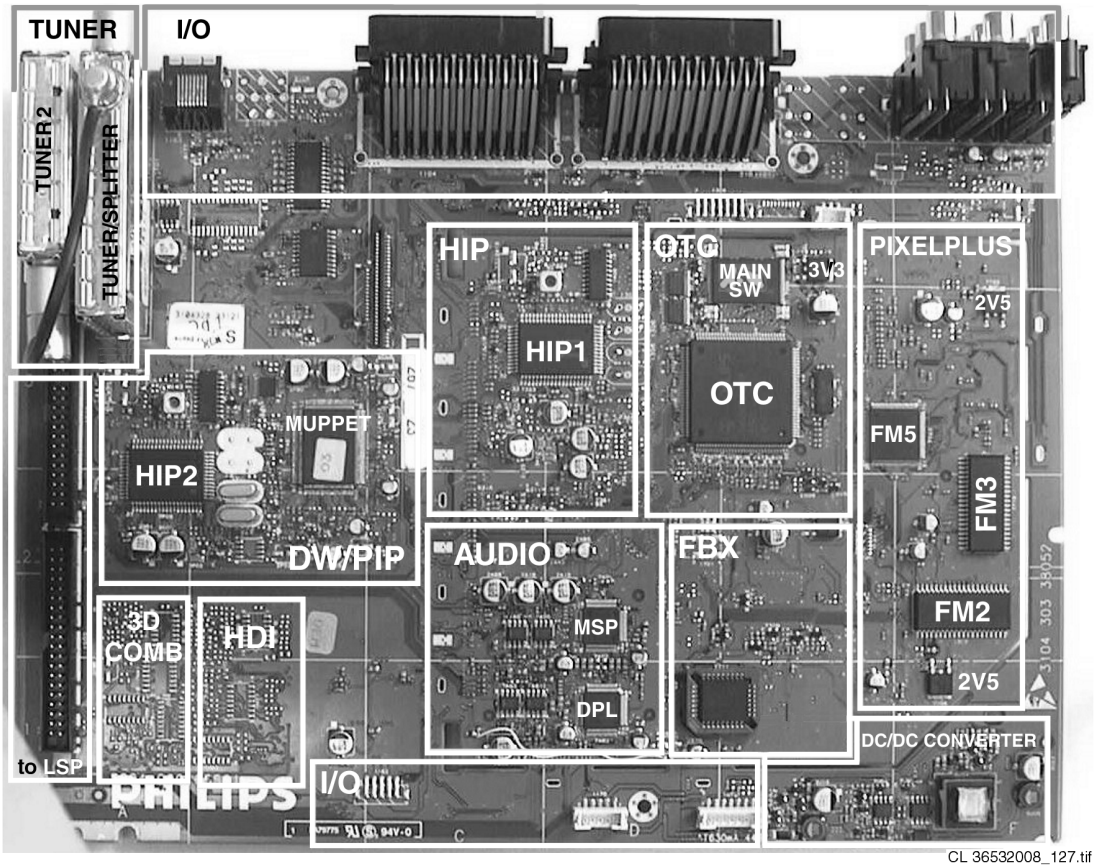


Figure 9-1 SSP top view

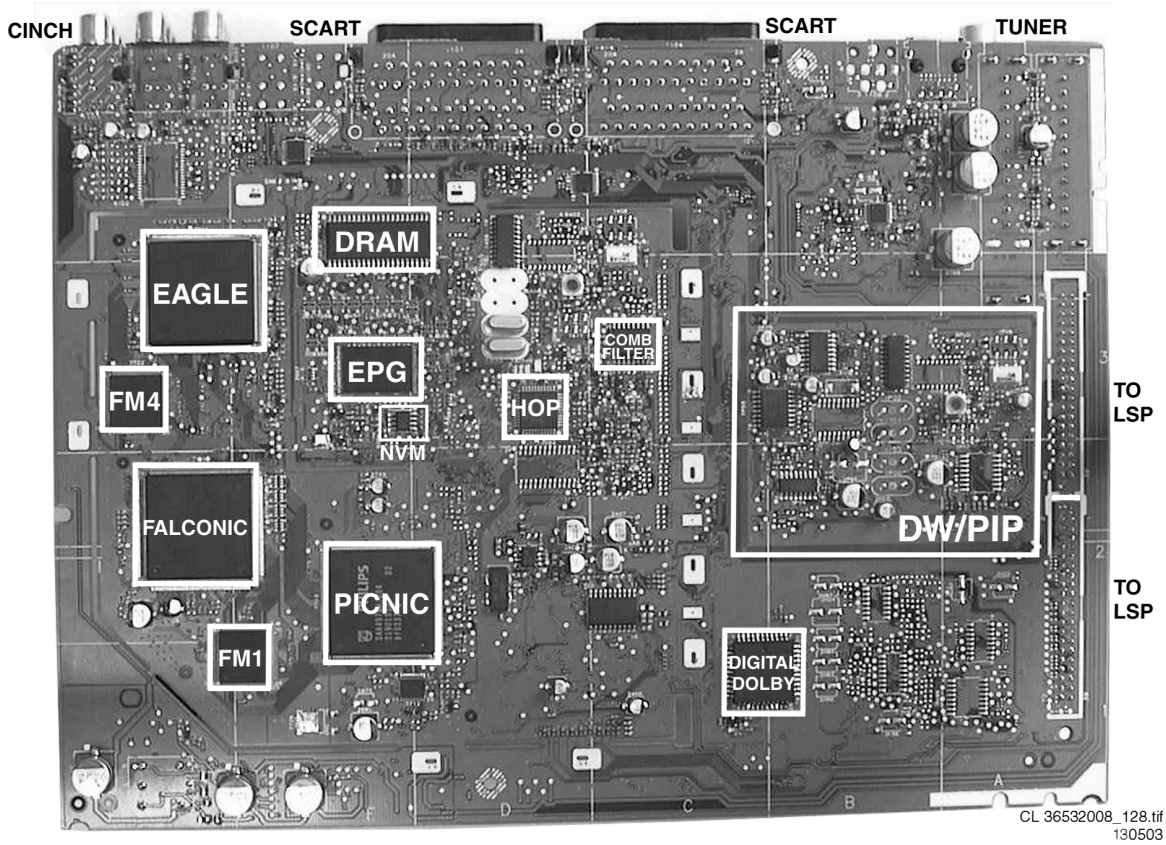


Figure 9-2 SSP bottom view

9.2 Block Diagram

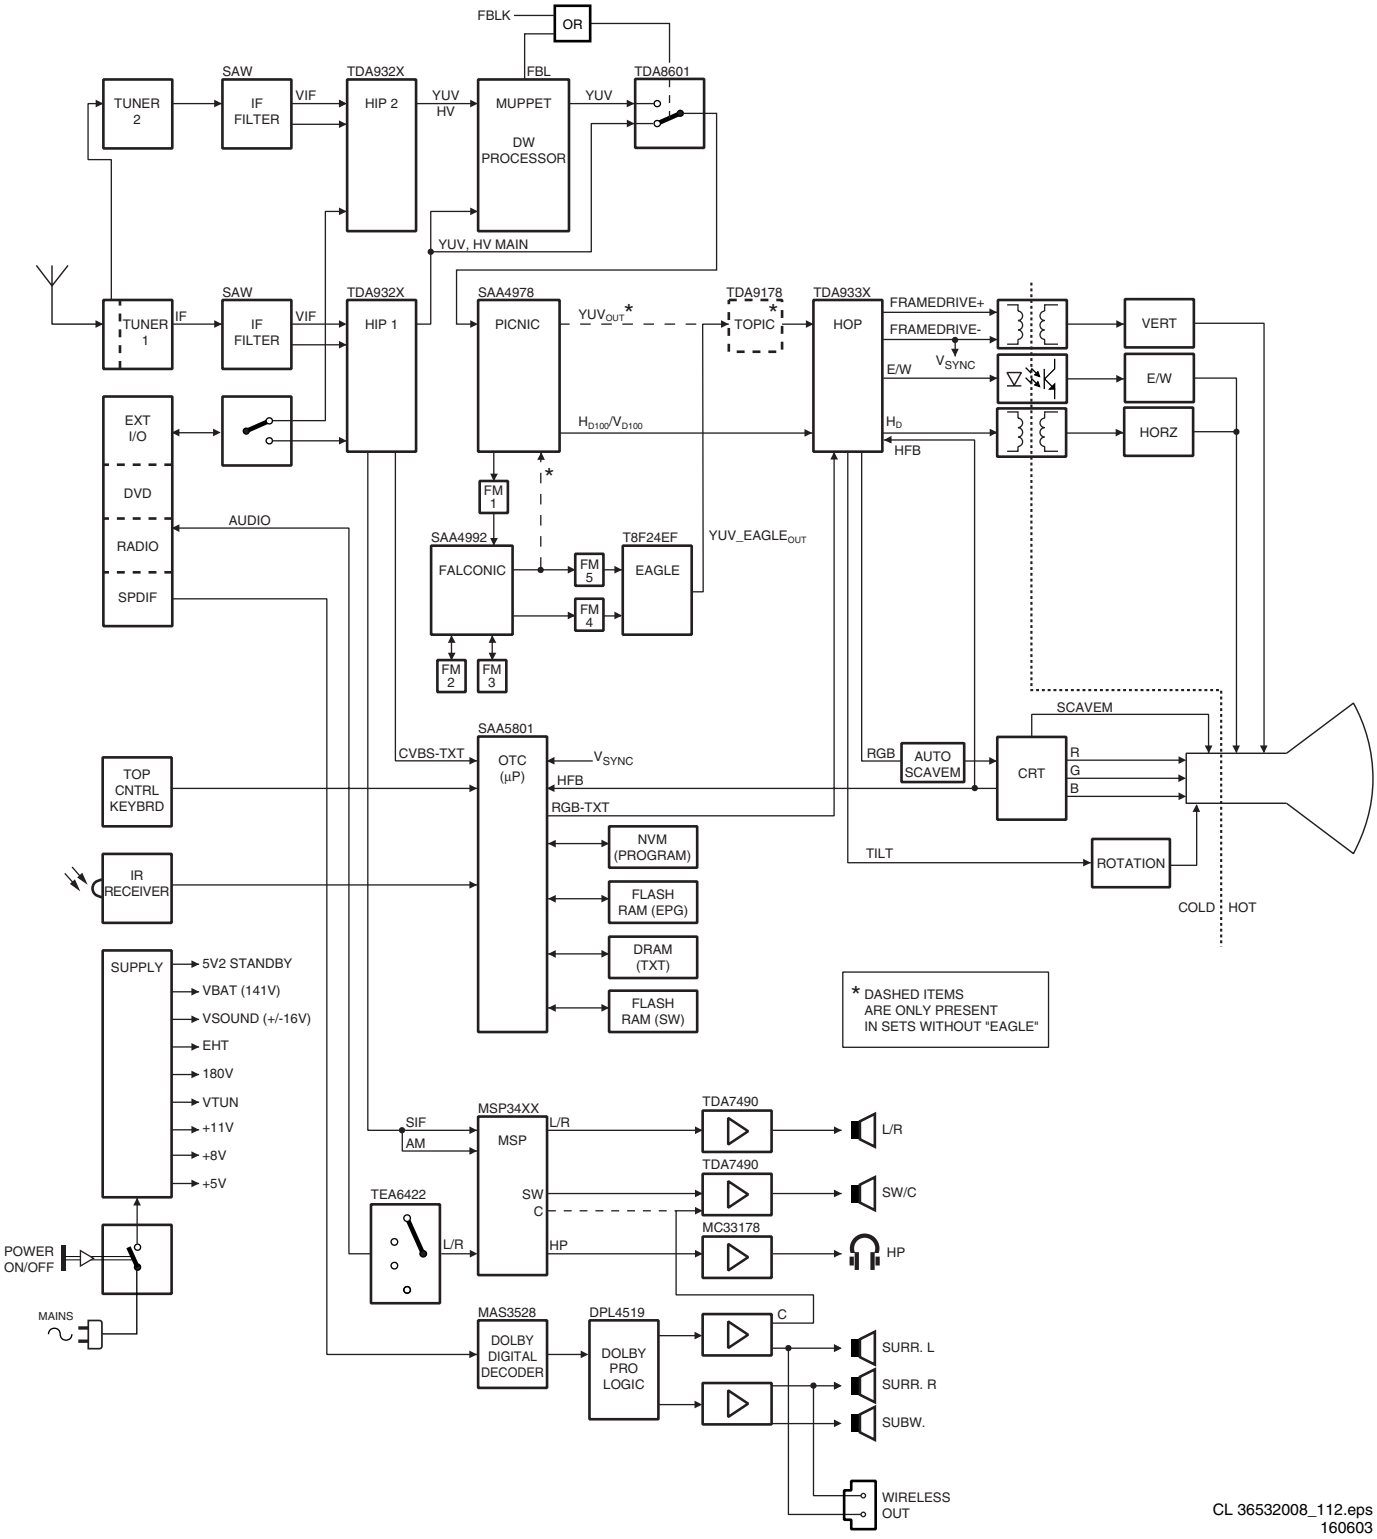


Figure 9-3 Block diagram

The Tuner/splitter is a PLL tuner and delivers the IF-signal, via audio and video SAW-filters, to the HIP1 (High-end Input Processor). The HIP1 has the following functions:

- IF modulation.
- Video source select and record select.
- Colour decoder.
- Synchronization.

For DW/PIP the set is equipped with a DW-processor.

The following video input/output connections (with audio connections) are available:

- Front: interfaces CVBS and Y/C.
- EXT1: interfaces CVBS, RGB- and YUV-input (1fH)
- EXT2: interfaces CVBS and Y/C (meant for VCR- or DVD+RW connection).
- EXT3: interfaces CVBS.
- EXT4: interfaces CVBS.
- Monitor out: interfaces CVBS out.

The HIP1 delivers YUV and sync signals to the PICNIC (in the Feature Box). This IC takes care of:
- Analogue to Digital conversion and vice versa.
- 100 Hz processing
- Interlaced to progressive scan conversion.
- Panorama mode.
- Noise reduction.
- Dynamic contrast.

After the PICNIC, the YUV-signals are fed to the FALCONIC for "Natural Motion", followed by the Eagle for "Pixel Plus" enhancement (if present). The processed YUV signals (from Eagle or PICNIC) are, together with the sync-signals from the PICNIC, then fed to the HOP (High-end Output Processor). This IC handles the video control and geometry part. The RGB-signals for CC/OSD (from the uP) are also inserted via the HOP. The video part delivers the RGB signals to the CRT-panel and the geometry part delivers the H-drive, V-drive, E/W-drive, and TILT-drive signals.

Both deflection circuits are "hot" and located on the LSP. The HOP drives them. To make a galvanic separation, the Line Drive is driven via transformer 5410 and the Frame Drive via transformer 5621.The horizontal output stage generates some supply voltages and the EHT voltage, focus voltage and Vg2 voltage.

The RGB amplifiers on the CRT-panel are supplied with 200 V from the LOT.
The Auto-SCAVEM circuit modulates transitions of the Luminance (Y) signal on the horizontal deflection current, giving a sharper picture.

The sound part is built around the MSP44x2 (Multi-channel Sound Processor) for IF sound detection, sound control and source selection. Dolby decoding is done by two separate ICs in cooperation with the MSP. Amplification is done via a "class D" integrated power amplifier IC, the TDA7490.
The set is also provided with a "wireless out" connector, for wireless surround applications.

The microprocessor, called OTC (OSD, TXT/CC and Control) takes care of the analogue TXT input processing and output processing. The OTC, ROM, and RAM are supplied with 3.3 V, which is derived from the +5V2.
The NVM (Non Volatile Memory) is used to store the settings; the Flash-RAM contains the set software.

There is a separate Standby Supply, in order to reduce the Standby power consumption. During Standby, the Main Supply is switched "off" (via TS7529).
A relay (1550) is used to switch the Degaussing circuit. It is switched "on" after set start-up and switched "off" by the microprocessor after 12 s.
The Main Supply, a SMPS based on the "boost converter" principle, generates the 141 V (V_BAT) and the +/- 16 V for the audio part.
For the power supply of the FBX and DW/PIP circuits, a separate DC/DC converter is used, generating 3.3 V.

9.3 Power Supply

The power supply has a number of main functions:
- **Mains harmonic filter.** The mains harmonic filter has two functions: to prevent high frequency signals (harmonics) from being transferred into the mains and to protect the set from lightning damage.
- **Degaussing picture tube.** As soon as the set is switched "on" via the ON/OFF switch, the 5V2 is present. When the DEGAUSSING signal from the processor (OTC) is "low", transistor 7528 will conduct, and relay 1550 is activated. Initially a considerable current will flow, via PTC 3516, through the degaussing coil. The PTC will heat up, resistance will rise, and the current will decay rapidly. The OTC makes the DEGAUSSING signal "high" after 12 s, which will switch "off" the relay.
- **Standby supply:**
  - Fly-back supply principle.
  - Outputs: 5V2, 8V6, 12V, and 30V.
- **Main supply:**
  - Buck-boost supply.
  - 140V (not mains isolated).
  - +16V and -16V for audio.
  - Self-oscillating power supply (SOPS).
- **DC/DC converter.** The function of this part is 12 V to 3.3 V conversion, to provide the supply voltage for the Feature Box and DW/PIP Muppet.

9.3.1 Standby power supply (diagram A2)

Compared to the EM5 circuit, there are the following differences in the +5V and +8V Standby power supply.
- The +5V is protected against over-voltage via D6149 and TS7140.
- If the +11V (11V_STBY line) is not present, the +5V supply line will be switched "off" via TS7141.

9.3.2 Main Supply (diagram A1)

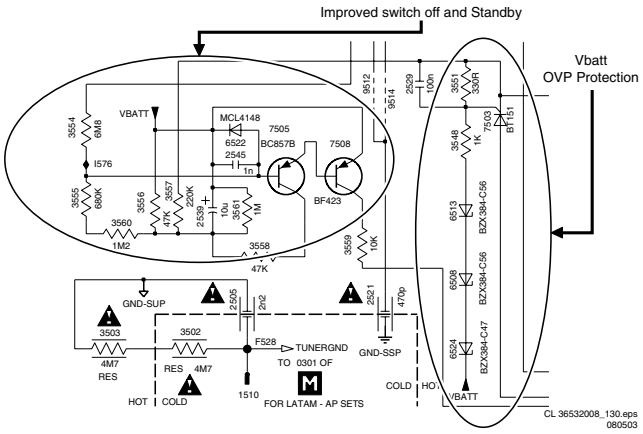


Figure 9-4 New main supply circuits

Compared to the EM5 circuit, there is an improvement in the "switch off" and "standby" behaviour of the main supply.
The circuit around TS7505 and TS7508 is a comparator between the V_BATT and the +380 V rectified input voltage. If V_BATT is present, the voltage divider R3554, R3555, R3560, R3556 is referenced to the +V_BATT, meaning that TS7505 and TS7508 are blocked.
At the moment the set is switched to "standby", the V_BATT will decrease. Now the reference of the voltage divider is connected to ground via R3557, and also R3556 is connected to ground because V_BATT is switched "off". In this condition, TS7505 and TS7508 will conduct. A current will flow via TS7508 / R3559 to the SUP-ENABLE line (which is negative), and via TS7529 more current will flow in the opto-coupler for "standby".
Thyristor TS7503 is a protection against "V_BATT over-voltage". If V_BATT exceeds the values of zener diodes D6524 + D6508 + D6513 (47+56+56= 159 V), then the gate of TS7503 will be positive and the device will conduct. As a result, the rectified voltage after the bridge rectifier will be short-circuited to ground and the fuse will be blown.

Some **important** notes on V_BATT:
- This voltage is **not** isolated from the main supply ("hot").
- It is alignment free.

9.3.3 DC/DC Converter (diagram B12)

A DC/DC converter has the following advantages:
- The DC/DC converter is directly on the SSB near the circuits that needs to be powered with the 3.3 V.
- Circuits in the FBX and the DW part need some high current by low voltage, so, there is no risk to have power dips or voltage loss in connections between the LSP and the SSB panel.

The circuit used is a so-called "synchronous buck converter". Some characteristics:
- Input parameters: 12.5 V / 330 mA.
- Output parameters: 3.42 V ± 0.15 V / 1.2 A.
- Switching frequency: approx. 60 kHz.
- Efficiency: approx. 90%.
- Inhibit (+5V) and fast turn-off (3V3_FAULT) control inputs.

Block diagram

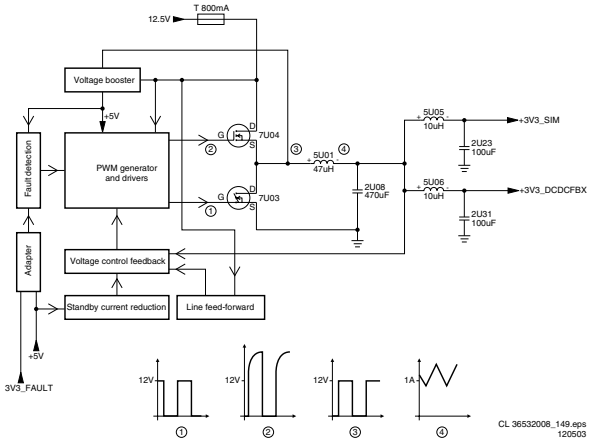


Figure 9-5 Block diagram DC/DC converter.

Advantage to use a "synchronous buck converter" instead of a "classical buck converter" is a better efficiency (about 90%). The difference between the two is that in a synchronous buck converter the "low -side" diode is replaced by a MOSFET (item 7U03). This, because the resultant voltage drop across the MOSFET is smaller than the forward voltage drop of the diode. This second MOSFET conducts current during the "off" times of the first MOSFET (at the input side). The upper MOSFET conducts to transfers energy from the input to the inductor and load, while the lower MOSFET conducts to circulate the inductor current. The synchronous PWM control block regulates the output voltage by modulating the conduction intervals of the upper and lower MOSFETs.

PWM Generator and Drivers
This circuit is build around transistors 7U01, 7U02, 7U08, 7U09, and the associated components. MOSFETs T7U04 and T7U03 are the switching transistors, they are conducting alternatively.
- Time sequence 1: T7U04 is conducting; energy is stored in coil 5U01. The current is flowing from the +11V power supply source.
- Time sequence 2: T7U04 is blocked; energy is stored in coil 5U01.
- Time sequence 3: T7U03 is conducting, and the current circuit is now closed via T7U03, Coil 5U01, C2U08, and the load. So the energy stored in the coil during time sequence T1 is consumed during sequence T3. The signal on the gate T7U03 is 180 degrees turned compared with the signal on the gate T7U04.

The principle of operation of the PWM generators and drivers is an astable circuit, whose frequency is mainly given by the values of capacitor 2U32 and resistor 3U03. Capacitors 2U05, 2U27, and 2U28 form a capacitive voltage divider to limit the negative peak voltage on the base of transistor 7U09 at about 3 V. The same role have the capacitors 2U09 and 2U12 for the transistor 7U08.
The resistor 3U14 and the capacitor 2U30 introduce a small dead time between switching "off" of transistor 7U03 and switching "on" of transistor 7U04 to prevent cross-conduction through them.
The capacitors 2U07, 2U16, and 2U18 speed-up the switching of the astable circuit. This circuit is blocked in "off" state (7U02 and 7U08 saturated and 7U01 and 7U09 blocked) when the transistor 7U11 is conducting.
This happens when either +5V has a low value (below 2 V), the boost voltage drops below its minimum value, or the 3V3_FAULT signal is low (below 1 V) for more than 20 ...30 ms.

Voltage Booster
This circuit is build around capacitors 2U03, 2U04, 2U05, resistor 3U51, and diodes 6U03 and 6U04.
It generates the boost voltage (approx. +20 V) for supplying the "high-side" driver transistor for the power MOS-FET 7U04. The voltage is generated only during normal operation of the converter; therefore, any drop in its value means an internal fault condition, which is sensed by the internal protection circuit.
The A.C. component of the voltage on the source of transistor 7U04 is rectified by diodes 6U04 and 6U03 and added to the input voltage, resulting into the boost voltage. The resistor 3U51 limits the peak current through the rectifier diodes to about 300 mA.

Voltage Control Feedback
This circuit keeps the output voltage constant when the input voltage and/or the output current vary. It is build around transistors T7U06-A, T7U06-B, T7U05, diode D6U07, and associated components.
A 6.9 V reference voltage is provided by zener diode D6U07 (via T7U15). Transistors T7U05 and T7U06A are comparators. E.g. if the voltage on the base of T7U06-B increases, T7U06-B and T7U08 will conduct more, and via T7U08 the conducting time of T7U04 will be reduced, resulting in a decreasing output voltage.

Linefeed Forward
This circuit (resistor 3U46) improves the line regulation factor.

Stand-by Current Reduction
This circuit is build around transistors 7U14 and 7U15. It cuts the quiescent current through the reference zener diode 6U07 in stand-by mode.

Adapter
This circuit is necessary for having proper start-up/shut-down operation of the converter at various shapes of the +5V voltage.

Fault detection
In "on" mode, transistors 7U12, 7U10, 7U07, and 7U13 are conducting and the transistor 7U11 is blocked.
In protection mode, transistors 7U11, 7U07, and 7U13 are conducting (provided that the “+5V” voltage is higher than 4.5 V) and transistors 7U10 and 7U12 are blocked.
During start-up, the protections are bypassed for a short time (tenths of ms) by capacitors 2U22 and 2U20.

+20V Detection
This circuit detects the boost voltage, and is build around transistor 7U12, diode 6U10, and associated components. If the boost voltage is lower than 15 V, transistors 7U12 and 7U10 are blocked, 7U11 is conducting, so via diodes 6U08 and 6U09 the PWM and Driver circuit is switched "off".
It is also the case when the input voltage “+11V” is less than about 10 V (the under-voltage lock-out function).

+3V3 Detection
If the +3.3V and +5V are present, C2U26 is charged. Transistor T7U10 conducts, T7U11 is blocked, and the PWM and Driver circuit is working.
If there is a voltage drop on the +3.3V, the voltage on C2U25 cannot be maintained, resulting that T7U10 will block and the PWM and driver circuit will be switched "off".

+5V Detection
The same situations if the +5V drops: T7U07 and T7U13 will block, the reference voltage on R3U41 will drop, and a switch "off" of the PWM and Driver circuit is the result.
Diode 6U06 is foreseen to clamp the output voltage to 5 V in case of fault conditions (like 7U04 short-circuited D-S). The fuse 1U01 will open in such conditions.

Role of Other Components
- The capacitors 2U06 and 2U10 are filtering the ripple current generated by the commutation of power MOS-FET 7U04 (about 700 mA_rms, while the capacitor 2U08 is filtering the output voltage.
- Coil 5U02 and capacitor 2U15 prevent that noise generated by the switching will disturb other circuits supplied from +11V.
- Coils 5U05 and 5U06 and capacitors 2U23 and 2U31 are supplementary filtering of the output voltage for the two load circuits (PIP and Feature Box).
- Beads 5U03 and 5U04 damp oscillations during the switching of the power MOS-FETs.
- Components 2U01, 2U02, and 6U02 are not present (the voltage “+3V3-ILINK” is not used).

Service Tips
- When a power MOS-FET is found defective, replace the other power MOS-FET, the fuse 1U01, and the diode 6U06 as well.
- When a driver transistor (7U01, 7U02, 7U08, or 7U09) is found defective, replace the complementary transistor as well
  (**example:** replace also 7U08 if 7U02 is defective).
- For a normal operation of the converter, it is important to check the switching frequency, the value of the boost voltage, and the amplitude of the gate voltage of transistor 7U04 (it should be close to the boost voltage).

9.4 Control

9.4.1 "Switch On" Behaviour

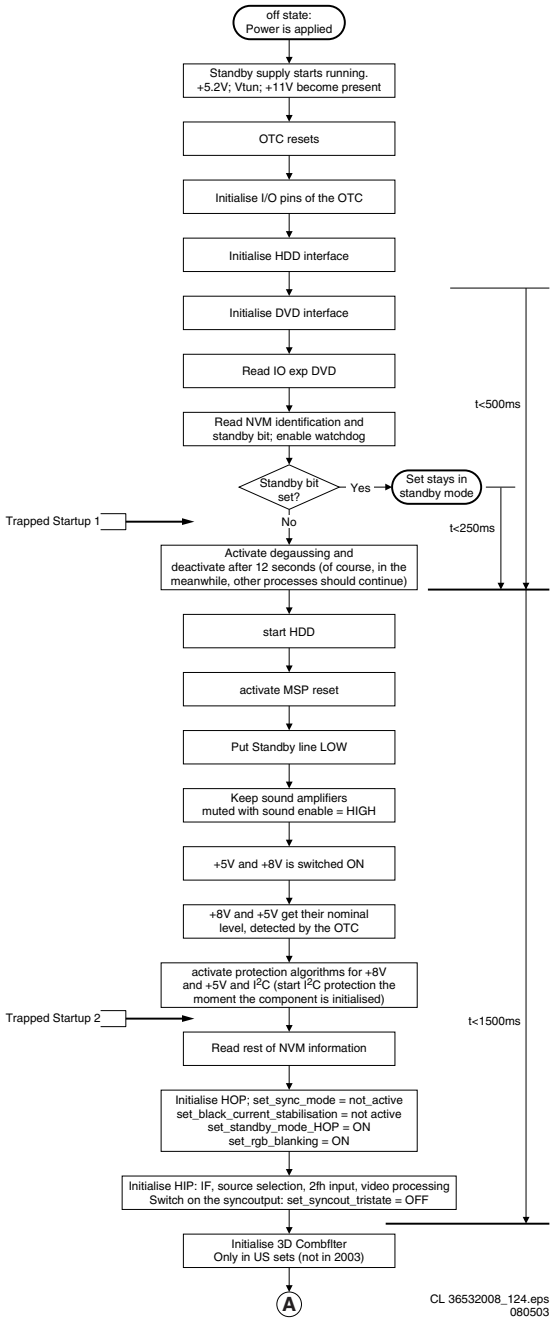


Figure 9-6 Switch "on" flow chart (part 1)

Start up sequence:
1. After the power is applied, the "Standby supply" starts oscillating, generating the +5V2, V_tun, and +11V. A reset (POR) is generated and the OTC is awakened.
2. Next step is the check whether the set needs to be in "Standby" mode or not. Therefore, the NVM content is read and the Standby-bit is checked. If the set is to stay in Standby, there is no further action.
3. If the set switches "on", first the degaussing will be activated (for 12 seconds).
4. Meanwhile the MSP is reset, and the Standby line is pulled low, leading to a full semi standby mode (+5V2 and +8V switched on). Mute sound amplifiers.
5. The OTC waits until the +5V and the +8V are fully present (checking the AD-input of the OTC does this). The +5V, +8V, and I2C protection-algorithms are activated.

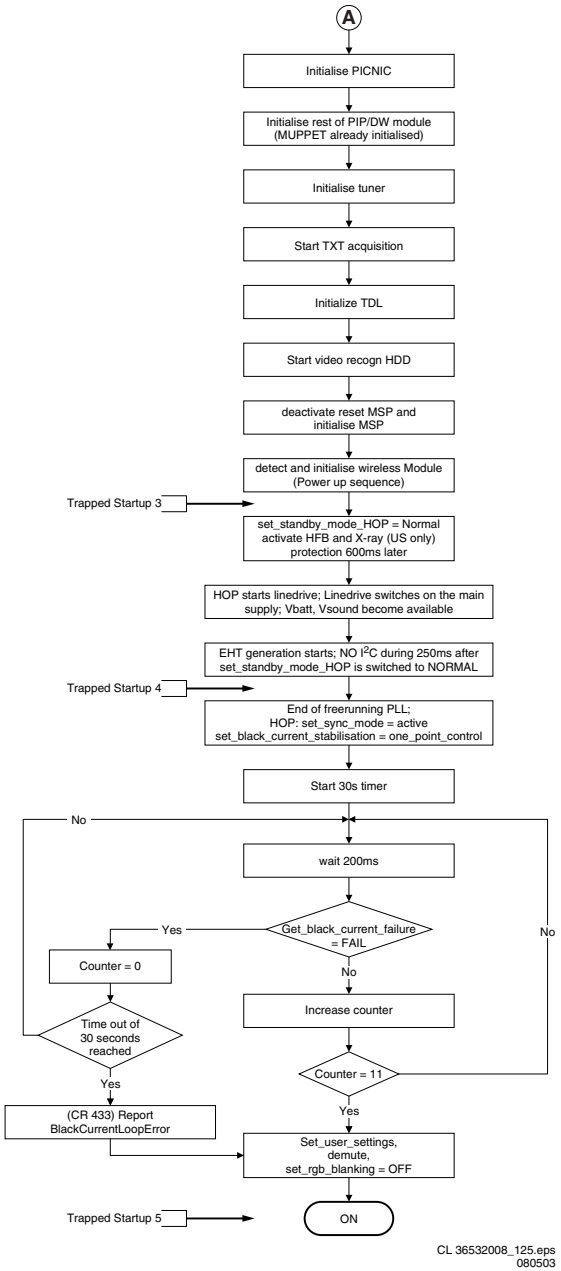


Figure 9-7 Switch "on" flow chart (part 2)

1. Initialise HOP, HIP, 3D Comb, PICNIC, PIP/DW, Tuner, and MSP.
2. Activate HFB and X-ray (USA only) protections.
3. The HOP is instructed via the I2C-bus to start the line drive.
4. Via the SUP-ENABLE signal, the main supply is activated. The Line Deflection circuitry is supplied now with the V_BAT, and the EHT generation can start. Also, V_SOUND becomes available.
5. During start-up of the deflection, I2C traffic must be disabled for 250 ms to avoid data corruption. If flashes or spikes are generated during EHT start-up, I2C data could be disturbed or corrupted.
6. After deflection is powered up completely, all the other protection-algorithms are activated.
7. The black current stabilisation loop in the HOP is switched on. Some extra checking is done to ensure that the loops are completely stabilised.
8. The OTC sets all the necessary parameters for a correct sound and image and unblanks the picture.

9.5 Video

9.5.1 Tuner & IF

Note: The "Tuner & IF" parts for the main picture and the DW/PIP picture are comparable.

The tuner/splitter is I2C controlled, and is capable of receiving off-air and cable channels.
Also, the tuning is done via I2C. The reference voltage on pin 9 is 33 V. This voltage (+33V) is derived from the secondary side of the standby supply (V_TUN), via D6110 and R3116// R3115 and a 33 V zener diode. The OTC, together with the HIP, controls the tuning procedure. There is also automatic switching for the different video systems.

The IF-filter is integrated in a SAW (Surface Acoustic Wave) filter. The type of this filter depends on the received standard(s). There are two SAW filters: one for filtering picture-IF and a second one for sound-IF.

The output of the tuner is controlled via an IF-amplifier with AGC-control. This is a voltage feedback from pin 62 of the HIP to pin 1 of the tuner. AGC take-over point is adjusted via the service alignment mode "Tuner AGC". If there is too much noise in the picture, it is possible that the AGC setting is wrong. It is also possible that the AGC-setting is misaligned, if the picture deforms with a perfect signal. Then the IF-circuit is amplifying too much.

The video IF-signal is fed to pins 2/3 of the PLL-controlled IF-demodulator. The voltage-controlled oscillator of the PLL is adjusted via the service menu "IF AFC". If the alignment is correct, the displayed frequency in the installation menu is the same as the applied frequency from a generator. The external coil L5408 (or L5P08 for the DW/PIP circuitry), connected between pins 7/8, is used as reference.
The demodulated IF-video signal is available at pin 10 of the HIP. In this video signal, there is a rest of the sound carrier, which is filtered out by the sound trap 1407 (or 1P09 for DW/PIP).
Then the signal is fed again to the HIP on pin 12, where the group delay is corrected, dependent on the standard that is received.
The CVBS-signal is available at pin 13 for further processing in the set. Via TS7322, the signal is supplied to EXT1 (SCART pin 19, CVBS out) and again back into the HIP (pin 14) to the source/record selection.

To achieve Quasi Split Sound (QSS), the IF-signal is fed to the HIP on pin 63/64 via SAW-filter 1409 (or 1P04 for DW/PIP). The FM-modulated signal is available on pin 5 and is fed to the audio demodulator (item 7A02).

9.5.2 Video: DW/PIP (diagram B15)

Introduction
The Double Window (DW) panel provides the option for the viewer to see two (or more) pictures / programs on the displayed area of a TV screen. The displayed pictures can be in PIP mode or DW mode. The viewer can also select the size and position of the "second" picture.

New DW/PIP features with respect to 2002:
- Making use of HIP instead of BOCMA.
- Provisions to use 2D Comb filter for the sub-picture.
- New modes by making use of FBX (e.g. Multi-PIP 12, Multi-PIP 9, Multi-PIP 8 surround).
- Photo finish in correct order by making use of FBX.

IF and Video section
The "IF and video" processing in the DW module is performed by a HIP IC, same as for the main picture.

Processing

The MUPPET IC (SAB9081, item 7PA6) is a multi-standard PIP controller, which can be used in Double Window or PIP applications.
The main picture YUV is fed to pins 98, 2, and 100, while the sub picture YUV is fed to pins 83, 79, and 81.
These signals are mainly used during the DW mode. In PIP mode, the signals are inserted into the main picture with reduced size.

Inside the MUPPET, the conversion to the digital environment is done with ADCs. Processing and storage (1 MB DRAM) of the video data is done entirely in the digital domain. The conversion back to the analogue domain is done by DACs. Internal clocks are generated by PLLs, which lock on to the applied horizontal and vertical syncs from the main and sub pictures. The main picture syncs are applied to pin 70 (V) and pin 94 (H) and the sub picture syncs are applied to pin 72 (V) and pin 87 (H).
For DW mode, the main picture is compressed horizontally by a factor of two and fed directly to the output. After compression, a horizontal expansion of two is possible for the main picture. The sub picture is also compressed horizontally by a factor of two but stored in memory before it is fed to the outputs.

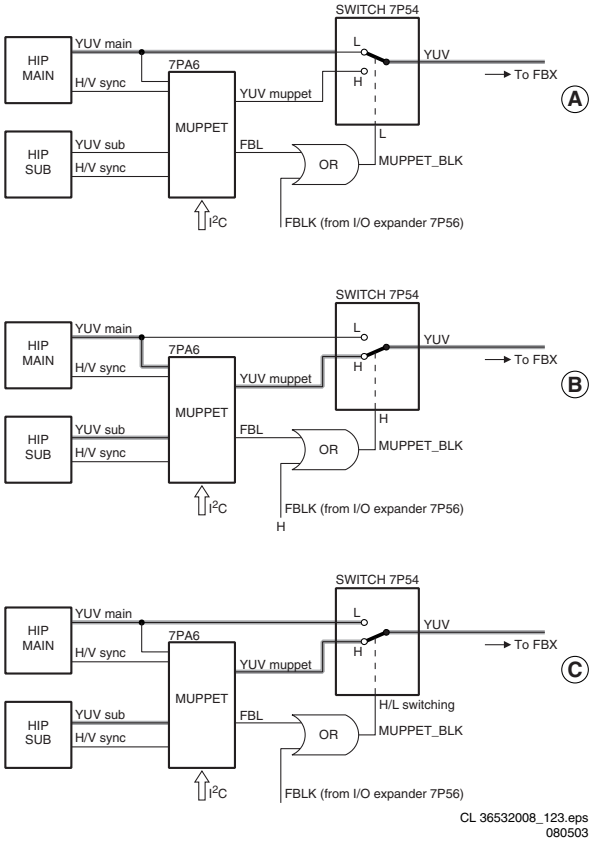


Figure 9-8 DW/PIP operation

[A] In normal mode (no DW or PIP), the YUV_MAIN signal is connected to switch 7P54, which is directly connected to the FBX (the switch is not activated).

[B] In case of DW, both signals, main YUV signal and sub YUV are added in de Muppet and via switch 7P54 routed to the FBX. In DW mode the switch is forced to send the signal from the Muppet (and not the main YUV). This to avoid that in squeezed mode instead of the black bars a part of the main signal should be visible.

[C] In case of PIP, the YUV_MAIN signal is connected to the switch (will be the "main" picture). Via the switch, the signal is connected to the FBX.

At the moment the PIP-info has to be written into the main picture, the switch is connected to the YUV-muppet signal (contents = YUV-sub signal). The switching is controlled by the FBL signal from pin 68 of the MUPPET, and the switching time determines the size and the place of the PIP picture.

Service Tips

- When something is wrong in the Muppet, and the FBL signal is "high" (example internal short circuit), then it is not possible to force the main path signal by software. However, you can do it manually by connecting the command line (pin 5) of switch IC7P54 to ground.
- When an error is communicated from the Muppet IC (no I2C communication), the H_sync and V_sync from main HIP must be checked (pin 94 or pin 70 of the Muppet IC). When there is no H- or V_sync, the I2C communication is interrupted.

9.6 Audio

This chassis can handle the following sound systems (depending on the model):

- Stereo.
- Virtual Dolby Surround.
- Dolby ProLogic 1 (4.1) and 2 (5.1).
- Dolby Digital (AC3).

The audio functionality is build up around the:

- MSP4450G (Multi Standard Sound Processor), in combination with the MAS3529H (Dolby Digital Decoder) and the DPL4519G (Dolby ProLogic Decoder) for full Digital Dolby.
- Or the MSP34x2 for the other executions.

The MSP IC takes care of the main FM sound decoding. It contains digital audio processing, used for the basic left/right stereo sound, such as bass, treble, balance, incredible sound and spatial. Additionally, for Digital Dolby, the MSP4450G can be "upgraded" with the MAS3529H (Dolby Digital Decoder) and the DPL4519G (Dolby ProLogic Decoder).

9.6.1 Audio: Inputs / Outputs

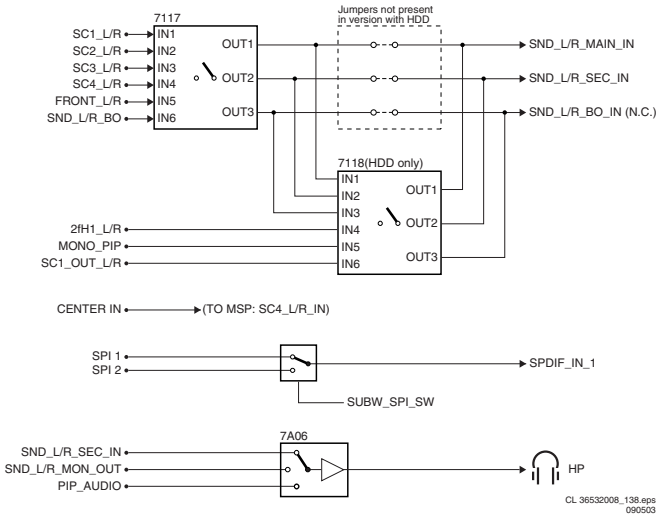


Figure 9-9 Audio input block diagram

Inputs:

- Up to four stereo audio inputs.
- Front input.
- 2 * 2fH stereo inputs (for US).
- 2 * Bolt-on inputs (HDD or DVD).
- 2 * SPDIF input + 1 * Bolt-on (BO) SPDIF input.

Outputs:
- CVBS / Decoder out.
- Record select (WYSIWYR= What You See Is What You Record).
- Headphone.

PIP audio is based on the TDA7309D (item 7A06) headphone processor as in MG-chassis.
Extra inputs are handled with the TEA6422D as in the MG-chassis.

9.6.2 Audio: IF Demodulation

At the input of the MSP, a choice can be made between two IF-signals: SIF1 and SIF2.
The selected signal is then fed to an AGC. After this, an ADC converts the IF-signal to digital.
Two demodulation channels can process this digital signal. The first one is able to handle FM and NICAM signals. The second one can handle FM and AM signals.
After the down-mix, the signal is fed, via a filter, to a discriminator. From here the AM, FM or NICAM demodulation can be performed.
Both channels contain an "automatic carrier mute" function, which automatically mutes the output of the analogue section when no carrier is detected.
After demodulation, the FM-signals are subjected to a de-emphasis operation. After that, the matrix of the stereo system is applied.

9.6.3 Audio: Processing

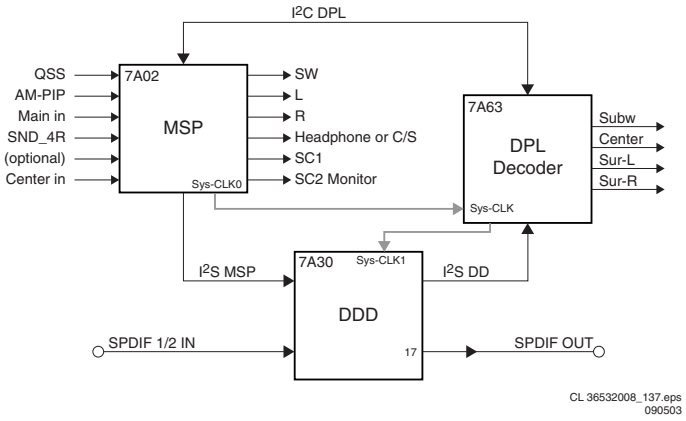


Figure 9-10 Audio processing block diagram

The sound processing is performed completely by the MSP:
- The user performs volume control via the SOUND menu.
- Tone control in "Stereo" sets is performed via the BASS/ TREBLE control.
- Headphone control: the MSP has a separate Headphone output so separate sound control is possible.

The Micronas Dolby Digital System
The Micronas Dolby Digital system solution consists of three dedicated integrated circuits:
- The MSP 44x0G is the interface for all TV-sound and analogue input signals. It performs the TV-audio demodulation including analogue stereo, NICAM, and Wegener Panda decompression. It has four pairs of audio D/A-converters, two of them including sound control facilities, and one additional subwoofer D/A converter.
- The DPL 4519G adds the Dolby Surround Sound features and has three pairs of audio D/A-converters, two of them including sound control facilities, and one additional subwoofer D/A converter.
- The MAS 3528E performs the Dolby Digital or MPEG decoding and has additional functions that are necessary for the Dolby Digital system.

While the MSP 44x0G is a stand-alone TV-sound solution, the combination with a DPL 4519G results in a high-end TV with Dolby Pro Logic functionality. With the addition of the MAS 3528E, the TV provides full Dolby Digital/MPEG-1 capabilities.

Micronas DPL 4519G
The DPL 4519G receives its incoming data via an I2S interface. The synchronisation is performed by means of an adaptive high-quality sample rate converter.
In an application together with the Dolby Digital decoder MAS 3528E, eight channels (left, right, surround left, surround right, centre, subwoofer, Pro Logic encoded left, Pro Logic encoded right) are fed in and processed in the DPL 4519G.
Similar to the multichannel I2S input interface, the DPL is provided with an 8-channel I2S output interface, which is connected to the MSP 44x0G. Therefore, all eight channels can be routed to each output in both ICs.
The base band processing including e.g. balance, bass, treble, and loudness is performed at a fixed sample rate of 48 kHz.

Micronas MAS 3528E
The MAS 3528E receives S/PDIF or serial data streams, and decodes the Dolby Digital (AC-3), MPEG or PCM-encoded audio formats.
Due to the automatic format detection, no controller interaction is needed for the standard operation. On the other hand, the controller has full access to all vital information contained in the Dolby Digital bit stream.
The choice of different output formats, as defined by Dolby, guarantees good adaptation to various listening environments.
The hardware of the MAS 3528E consists of a high performance RISC Digital Signal Processor (DSP) and appropriate interfaces.
The MAS 3528E is driven by a single clock at a frequency of 18.432 MHz. The clock is provided from an external source (SYS-CLK1 from the DPL 4519G) to pin XTI.

9.6.4 Audio: Amplifier

The audio amplifier is an integrated "class-D" power amplifier IC, the TDA7490. It delivers an output of 2 x 15 W_rms to two full range speakers. For the higher specified sets, a subwoofer and centre speaker are easy to implement, by adding a second amplifier. This circuit is described in the EM5 manual.

9.6.5 Audio: Headphone Amplifier

The headphone amplifier is a straightforward OpAmp amplifier (ICA07-A, MC33178D). It is supplied with +11V_AUD.

9.7 Wireless Surround Loudspeaker System

9.7.1 Introduction

With the Wireless Surround Loudspeaker System, it is possible to connect rear speakers wireless with the main set. The system consists of:
- Transmitter part (TX): a transmitter board (click-on module).
- Receiver part (RX): a receiver board, an amplifier board, and a power supply part.
- Loudspeaker boxes for Left and Right rear.

The wireless system is intended for stereo sound in the range from 20 Hz to 20 kHz.
It can be used for normal L/R stereo sound or for the surround channels in Dolby systems.
The system has an analogue sound processing system (compressing - expanding) and uses synthesised tuning at

both the transmitter and receiver side. There are frequency executions available in different frequency bands:

- 433 MHz (some EU countries).
- 864 MHz (EU).
- 914 MHz (US).

In each particular frequency band, there is a choice between four different channels or frequencies.

9.7.2 System Considerations

The Wireless system uses a very high performance audio processing that allows up to 100 dB dynamic range to be transmitted over a classic analogue link, through the compressing effect at the transmitter (reducing the dynamic range by a factor of 2 in dB) and the expanding effect in the receiver (increasing the dynamic range by a factor of 2 in dB).

In addition, the system has the possibility to maintain the high S/N up to low RX field strengths by applying sliding stereo (this means reducing the stereo effect at low signal field strengths). Pre-emphasis (at TX) / de-emphasis (at RX) technique is with15 us time constant.

Since the signal processing is analogue, there is a low latency in the system of < 15 us between input TX and output RX.

The receiver part has a power save mode that will be initiated automatically when no signal to reduce power consumption.

The system uses normal FM modulation/demodulation and also uses the Zenith stereo system. However, the frequencies used are different in this respect: the sub carrier frequency= 3 * 15.625 kHz = 46.875 kHz (chosen because interference zero-beats with the TV line freq). Consequently, the pilot frequency is 23.4375 kHz (half of sub carrier).

The transmitter amplifier has an output power of 10 mW and drives it into an internal printed antenna (the 433 MHz version uses an external antenna).

9.7.3 Transmitter

Block Diagram

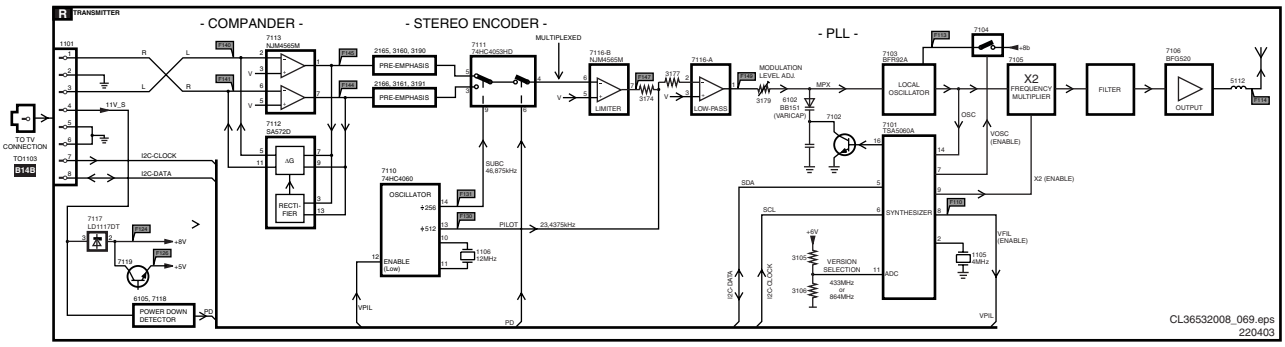


Figure 9-11 Block diagram transmitter

Audio Compander

The audio compressor uses a SA572 (7112), which is intended for high-end applications. It is used together with a low noise OpAmp (7113). There is no audio input filtering ahead of the compressor. Therefore, it can only be used when the source is having no frequency components above 20 kHz, otherwise the compander's linearity will be at risk. This is realised with a digital filter on the SSP.

Graphically the operation of a "compressing and expanding" (=companding) system can be understood from following figure:

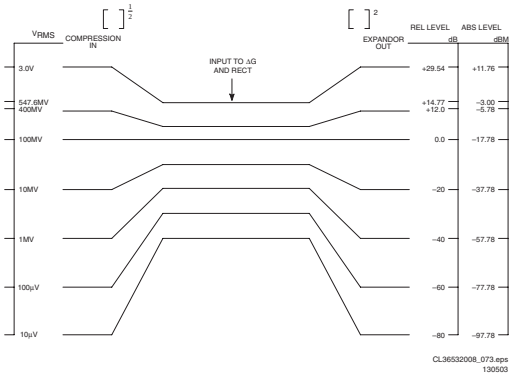


Figure 9-12 Compressing/Expanding graphics

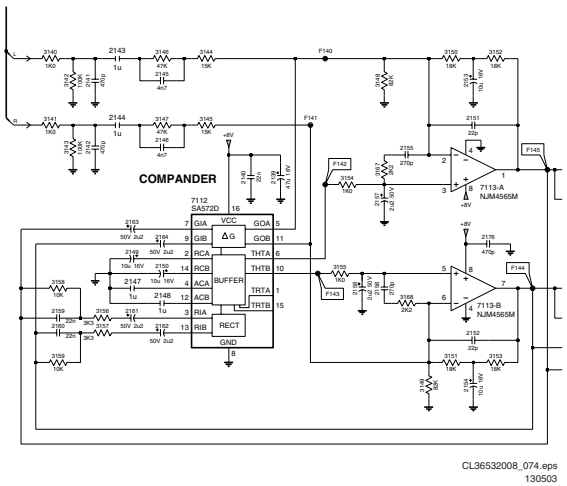


Figure 9-13 Companding circuit

Basically, the circuit comes down to following simple circuit:

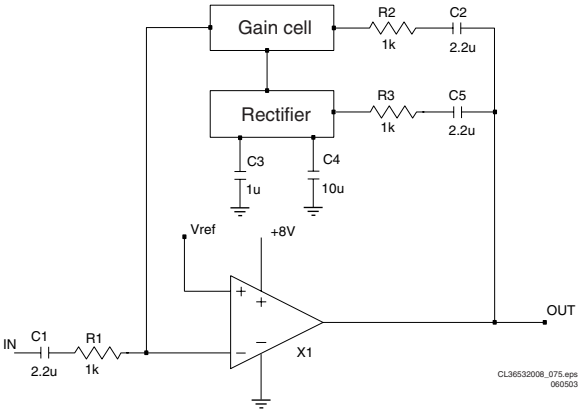


Figure 9-14 Basic compander configuration

The basic compander configuration is given above. From the diagram, one can understand the factor of two of companding as follows:
There is a variable gain cell (variable resistor) in the feedback loop of an OpAmp (NJM4565M) that is controlled by the rectifier cell that detects the output voltage of the OpAmp and translates it into a current send to the gain cell. The rectifier has an attack time constant (C3) and a decay time constant (C4), which is optimised to give the best auditive result.
If the input (V_in) rises with e.g. 4 times then the output can rise only 2 times. This is because the feedback resistor formed by the gain cell is decreased with a factor of two.

Remember that for an OpAmp V_out= V_in*((Rf+R1)/R1), where R1 is constant (Rf= R2+internal gain cell resistance).

The Pre-Emphasis, Stereo Encoding, and Output Filtering
The two channels that are available from the compander are now having pre-emphasis with a time constant of 12 us. Too much time constant would give problems with the voltage rising too high at maximum modulation frequency, and hence occupied bandwidth of the modulated signal. The pre-emphasis consists of a simple RC circuit. The stereo encoder 7111C is in fact just an electronic switch, which is driven by the sub carrier frequency. With this operation, the frequency spectrum at the output of the switch is as follows in the frequency domain:

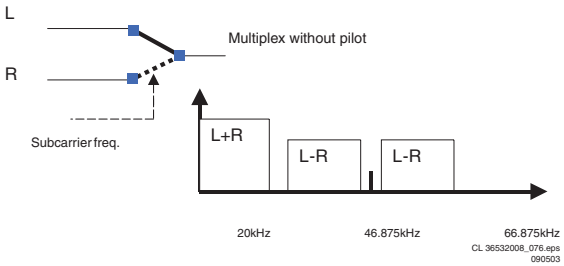


Figure 9-15 Stereo encoder circuitry

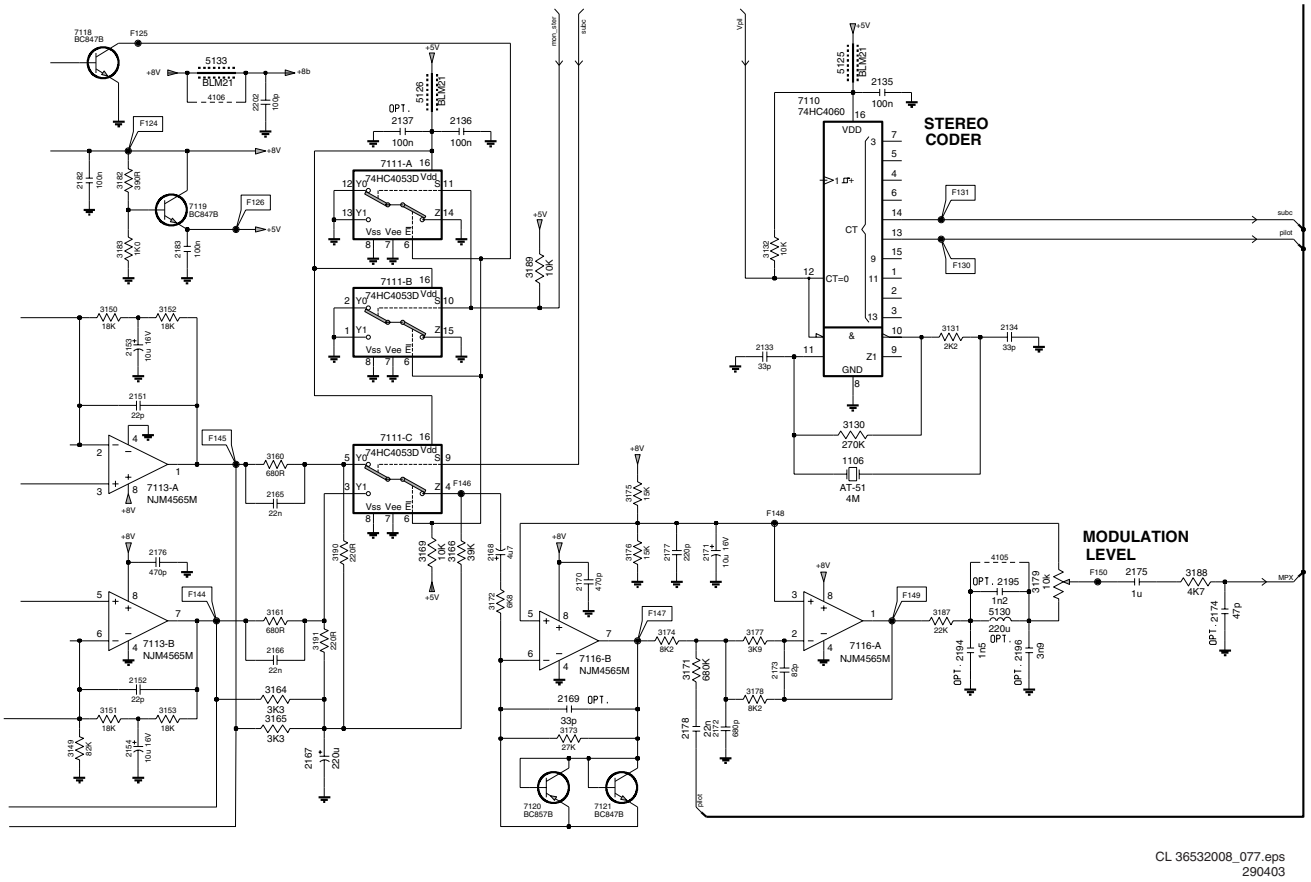


Figure 9-16 Stereo encoding frequency spectrum

Note: the other two switches of 7111 (respectively 7111A and 7111B) are not used.

Synthesizer and Local Oscillator

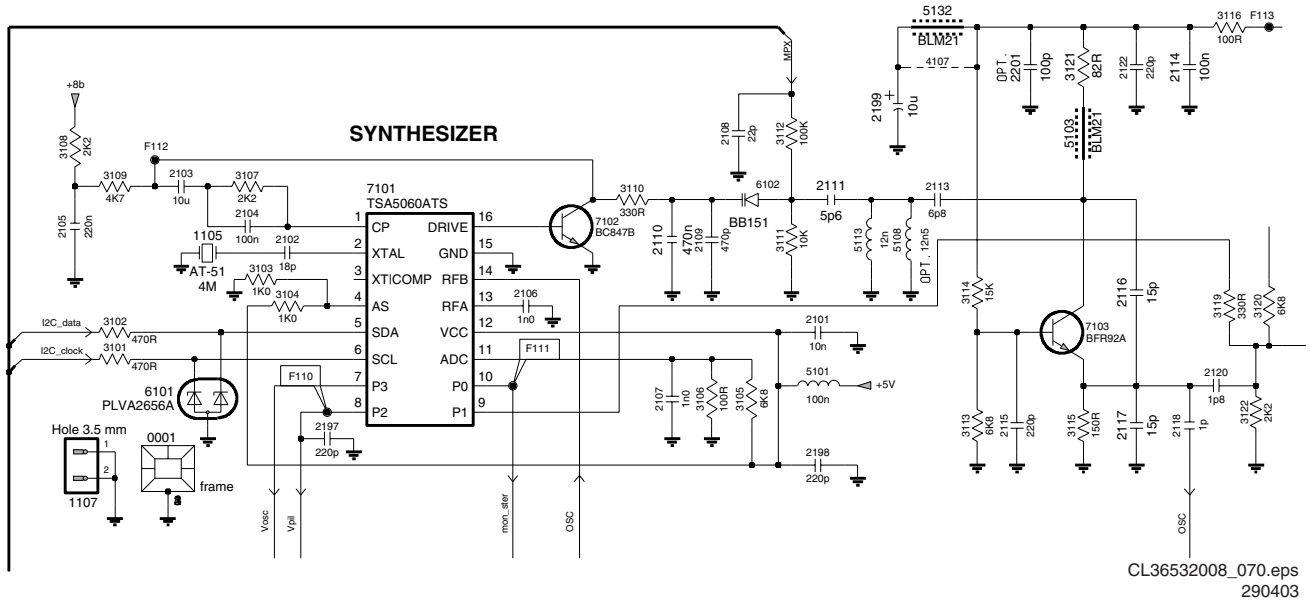


Figure 9-17 Synthesizer and local oscillator

The internal circuitry of the synthesizer IC (TSA5060A) can be seen in figure below:

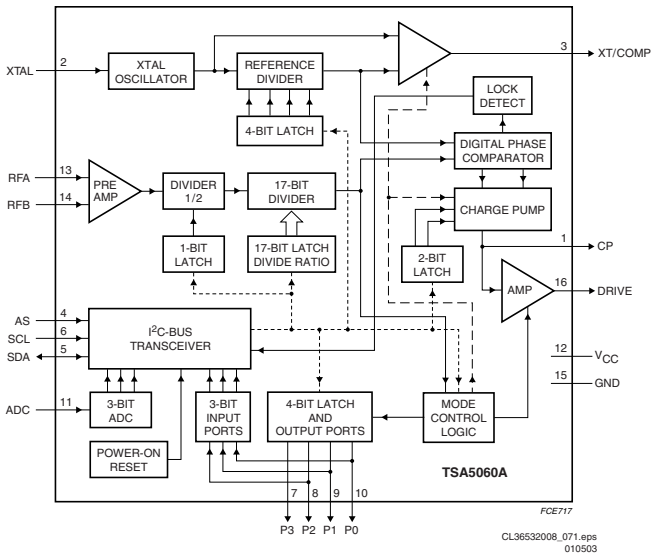


Figure 9-18 Block diagram TSA5060A

The TSA5060A is software controlled by the I2C bus (commands are send directly via the TV slow I2C bus).
To verify whether there is communication between the host device and the TSA5060A, one can check the supply voltage of the oscillator transistor 7103 (TP F113). This should be about 7.5 V in normal conditions when the I2C signal is interpreted by the synthesiser. If there is improper communication, the voltage remains at 0 V.
There is version recognition foreseen to discriminate between 433 or 864 MHz units. This feature will automatically load the correct frequency division words into the synthesiser at starting up and initialisation of the TV set.
The reference quartz crystal is 4 MHz, which is divided to a lower reference frequency of 25 or 50 kHz (depending on the version).
The PLL filter is passive and includes 2103, 2104, and 3107.
The transistor 7102 is part of the PLL current source, and allows connection to higher supply voltages as +5 V.

The TSA5060A has some output ports:

- Port P3 (V_osc), used to switch the local oscillator (LO).
- Port P2 (V_pil), used to switch the pilot.
- Port P1, used to switch the power amplifier (PA).

The local oscillator (LO) is a common base transistor (7103) that is oscillating at half the output frequency. The frequency is tuned by varicap 6102, until the tuning voltage is in the range of the loop filter (between 1 and 6 Vdc). If the voltage is outside this range, then possibly the division ratio is chosen outside the normal range, or some frequency dependant component around the transistor is faulty.

Multiplier and Power Amplifier

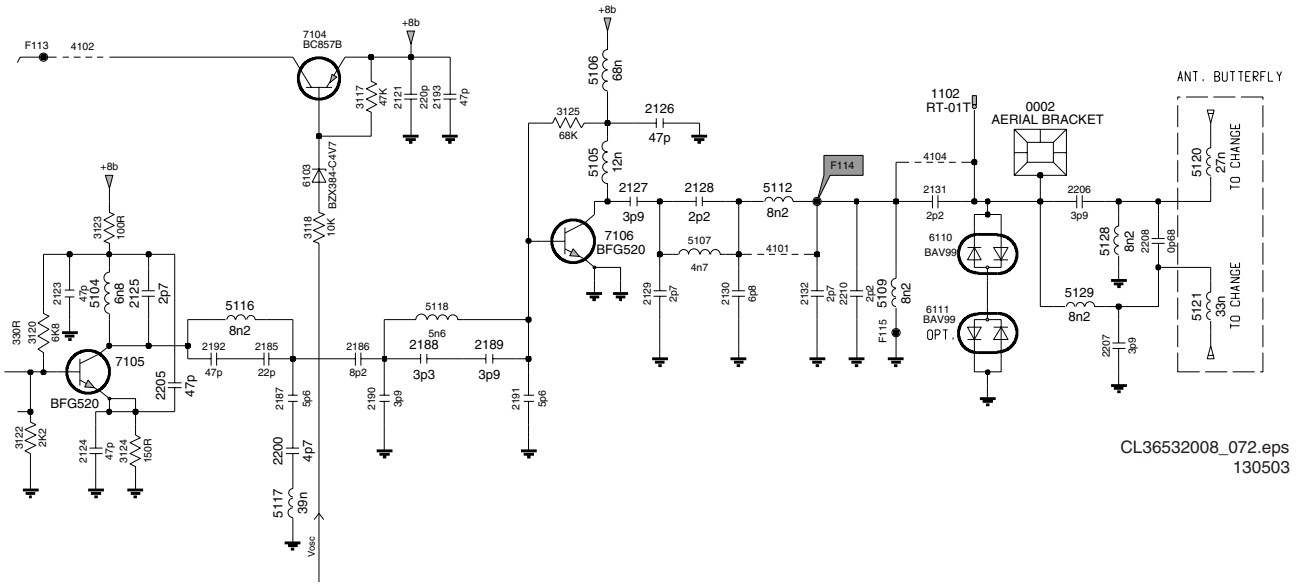


Figure 9-19 Multiplier and power amplifier

The LO signal is multiplied by two in a separate stage (7105) in order to get a high isolation between the local oscillator and the antenna. There is quite some filtering necessary at the output, necessary to prevent the oscillator frequency and its harmonics from reaching the power amplifier (PA) stage.
There is also a 2-stage band stop filter followed by an elliptic low pass filter. This has to do with the legal requirements for spurious radiation.
The PA stage with 7106 increases the power level to about +15 dBm at the output of the filter. The transistor is polarised into class A for minimum harmonic content and furthermore there is output filtering available to further reduce the harmonics. The configuration differs with the frequency version.
The 864 MHz version uses an integrated antenna on the board. The printed dipole is driven symmetrically by a "balun" for optimum power transfer and symmetry. There are protection diodes (6110 & 6111) foreseen but not stuffed for ESD when applying an external antenna (the 433 MHz version uses an external antenna).

Power Supply and Power Down

The board is having a low drop voltage regulator 7117, which has an output voltage of 8.3 Vdc. The 5 V supply is extracted via transistor 7119.
The "power down detection" is done via 6105 and 7118: when the voltage drops, transistor 7118 comes out of saturation rapidly, thereby putting the stereo coder in Hi-Z position (idle). No AF output will be there from the stereo coder.
Suitable timing signals for the sub carrier and pilot frequency are extracted out of a 12 MHz crystal by division with 256 and 512 respectively. The whole chip 7110 can be enabled / disabled via the synthesiser port P2 (V_pil, "low"= enable). The outputs are square wave 5 V compatible.
The multiplex output from the stereo coder is fed into a limiter amplifier 7116B, which sets a limit to the output voltage. In case the audio input signals increase towards 1.3 V, the signal will be flat-topped and limited symmetrically. This of course introduces distortion, but is necessary in order to observe the bandwidth limitations as set by legal standards. The base-emitter junctions of 7120 and 7121 form the limits.
This output signal is then summed with the pilot signal, which is injected just as a plain square wave. The amplifier 7116A forms a second order low pass filter that cuts at about 90 kHz. This reduces the harmonics present in the composite output signal. This signal is actually fed via trim potmeter 3179 towards the varicap in order to achieve FM modulation. Trim potmeter 3179 is aligned for a deviation of 50 kHz. There are three ways to align the trim potmeter:

- Use a FM modulation analyser meter such as FAM (Rohde and Schwarz) or similar.
- Put the RF output on a spectrum analyser and connect both audio inputs together at 0.41 V/400Hz at the inputs of the TX. There are two peaks visible on the screen. Align until the difference between the -3dB peaks is 2 * 50 kHz or 100 kHz.
- Use an accompanying receiver and while modulating both inputs of the TX, align until the measured audio output of the RX is 1.3 V_rms.

9.7.4 Receiver

Block Diagram

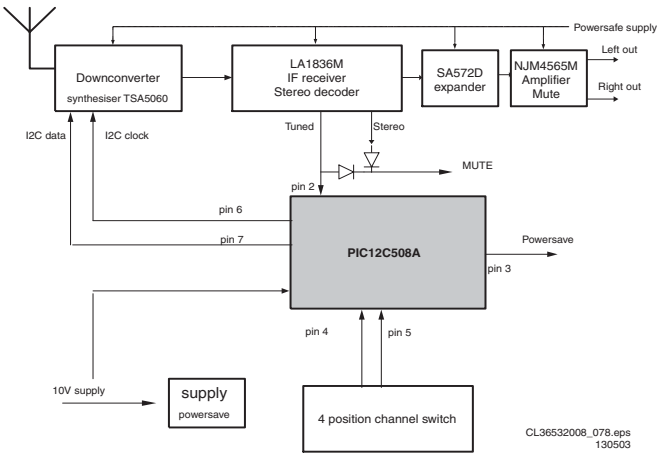


Figure 9-20 Block diagram receiver

Antenna Input

The antenna input is tuned for a 17 cm telescopic antenna. The input is ESD protected by diode 6602. The SAW filter 1602 protects the receiver for out of band interference.

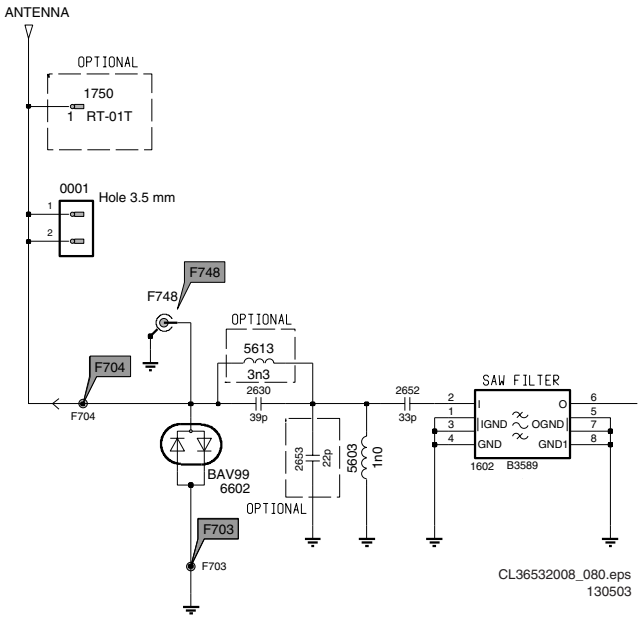


Figure 9-21 Antenna input circuit

LNA and Mixer

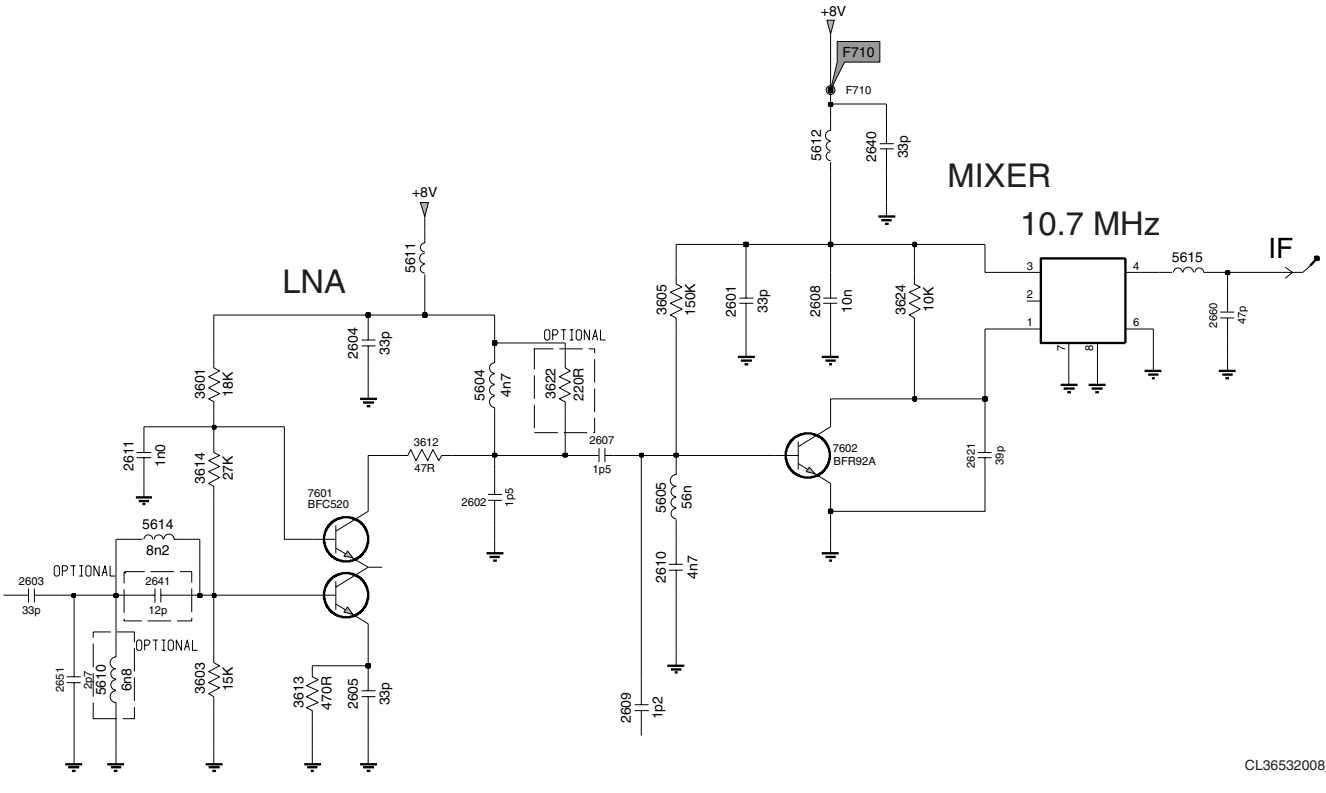


Figure 9-22 LNA and mixer circuit

The LNA is a cascode configuration around transistor 7601. This circuit provides gain with a low noise figure, while providing isolation from the oscillator to antenna. This isolation is necessary to comply with the legal requirements for radiated interference.

The output of the LNA and the LO signal is mixed in transistor 7602. This is a one transistor mixer that provides high conversion gain with low LO input signal. This level is only around 20 mV. The reason for this high conversion gain is that there is a 10.7 MHz trap at the base (5605 - 2610).

The output of the mixer is a tuned circuit at 10.7 MHz. The coil is pre-aligned at the factory.

Synthesizer and Local Oscillator

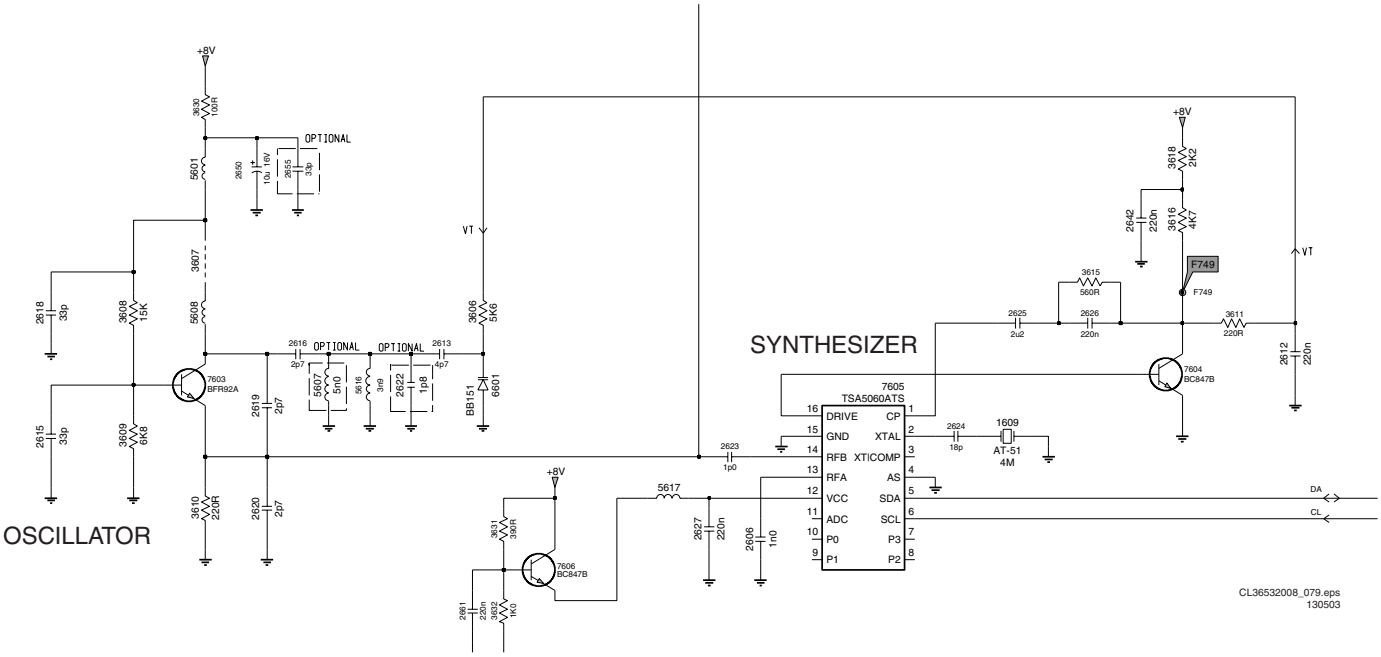


Figure 9-23 Synthesizer circuit

The internal circuitry of the TSA5060A can be seen in figure below.

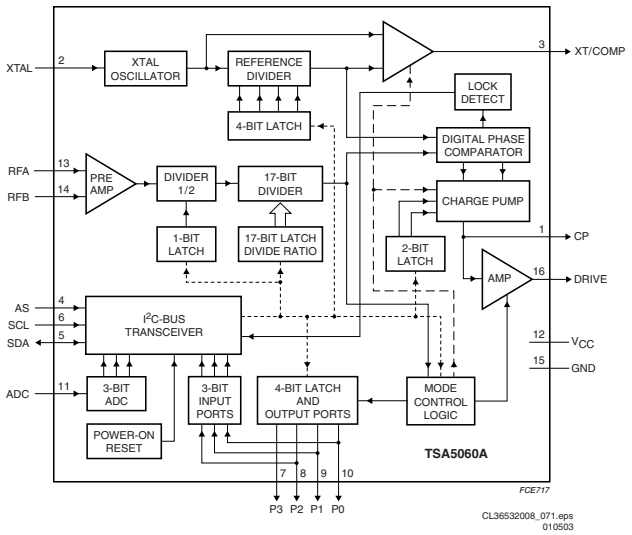


Figure 9-24 Block diagram TSA5060A

The TSA5060A is software controlled via the I2C bus by the PIC12C508 microcontroller.
There is no hardware version recognition foreseen but the version can be read out from the PIC12C508 microcontroller. There is a different software code for the 433, 864, or 914 MHz version.
The reference quartz crystal is 4 MHz and is divided to a lower reference frequency of 200 kHz or 100 kHz (depending on the version). The PLL filter is passive and includes 2625, 2626, 3615, 3611, and 2612. The transistor 7604 is part of the PLL current source, and allows connection to higher supply voltages as +5V.
The local oscillator (LO) is a common base transistor (7603) that is oscillating at the fundamental frequency. The frequency is tuned by the varicap 6601 until the tuning voltage is in the range of the loop filter (between 0.5 and 7 Vdc). If the voltage is outside this range then possibly, the division ratio is chosen outside the normal range or some frequency dependant component around the transistor is faulty.

IF Amplifier

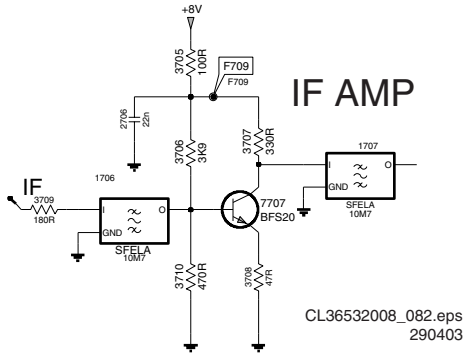


Figure 9-25 IF amplifier circuit

The mixer output signal is filtered by two ceramic IF filters. An IF amplifier (7707) is reducing the loss introduced by these filters.

FM Detector, Stereo Decoder, Amplifier

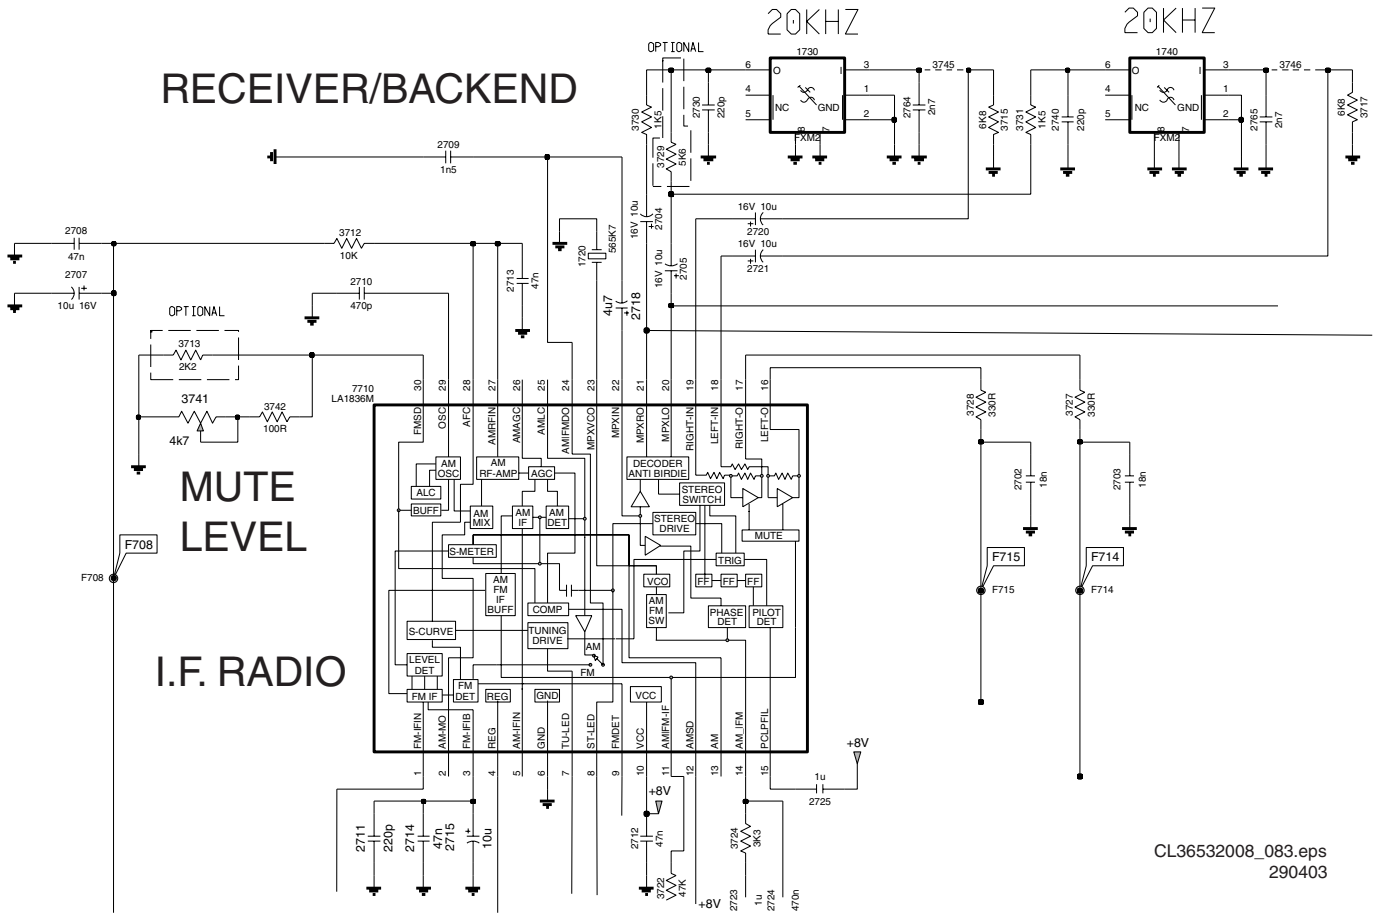


Figure 9-26 IF demodulator circuit

The IF signal is demodulated in the 7710 (LA1836M), the IF Radio IC. This IC has a coil FM detector that is aligned (for alignment instructions see chapter "Electrical Alignments"). The stereo decoder is integrated and needs no adjustment. The demodulated signal is filtered with 1730/1740. These filters are pre-aligned and are reducing the pilot- and sub carrier frequency. This is necessary to prevent wrong operation of the expander circuit.

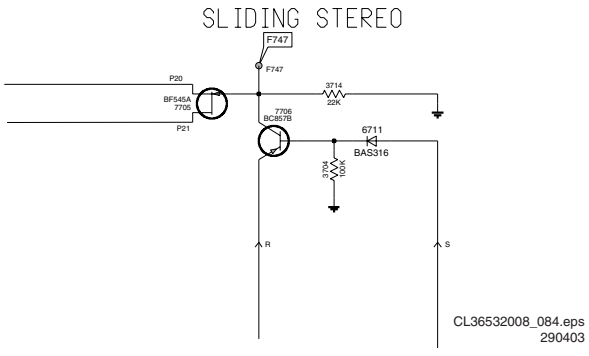


Figure 9-27 Sliding stereo circuit

There is a sliding stereo circuit for reducing the stereo noise at low signal field strengths. Transistor 7705 is short-circuiting the Audio Left and Audio Right signals at low field strengths. The crossover level must be aligned (for alignment instructions see chapter "Electrical Alignments"). There is also a "mute level" alignment, which is set at 10 V RF input level. At this signal level, the wireless audio link is muted.

Audio Expander

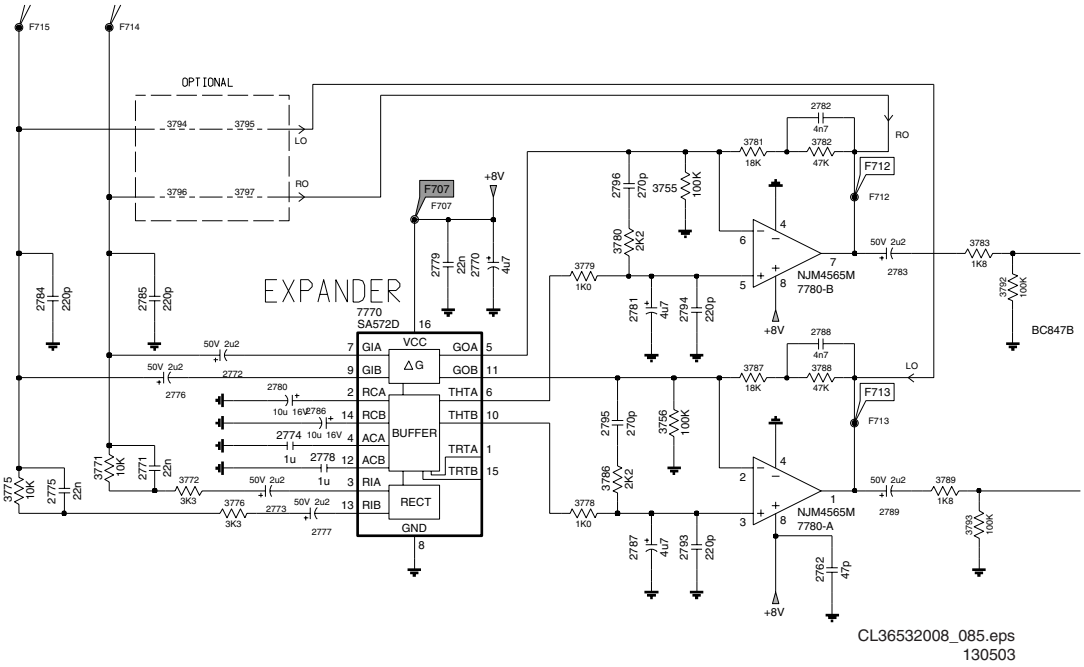


Figure 9-28 Expander circuit

The audio expander uses device SA572 (7770) that is intended for high-end applications. It is used together with a low noise OpAmp (7780).
There is an expanding factor of 2 in dB. There is a variable gain cell (variable resistor) in the negative input of the OpAmp 7780 (NJM4565M). There is a rectifier cell that detects the input voltage and translates into a current send to the gain cell .The rectifier has an attack time constant and a decay time constant, which is optimised to give the best auditive result.
If the input (V_in) rises with e.g. 2 times then the output will rise 4 times. This is because the negative input resistor formed by the gain cell is decreased with a factor of two.
Remember that for an OpAmp V_out = V_in*((Rf+Rin)/Rin) where Rf is constant (Rin= internal gain cell resistance).

Microcontroller

The microcontroller is an OTP Microchip PIC12C508A type with 512-bit EPROM and six I/O lines. The controller has to be programmed on the production line according the required version of 433 or 864 MHz.
The main functions of the uP is reading the setting of the (4 position) slide switch within every 250 milliseconds, reading the tuned info continuously, and start the power save mode if necessary.

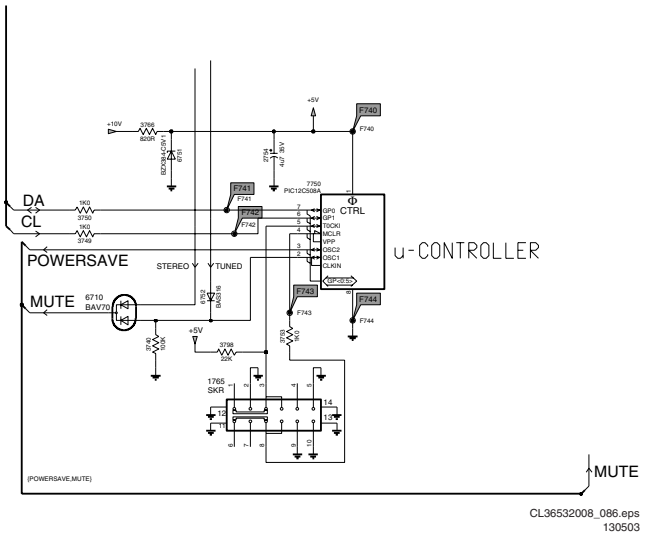


Figure 9-29 Microcontroller circuit

Frequency setting: This is necessary when the 4-position slide switch is changed. In an internal look-up table, the four required frequencies for the local oscillator are stored. The output towards the synthesiser chip in the front-end is in I2C form. The synthesizer is the only device on the bus. During frequency setting the "mute" is active.
Scanning of the channel switch occurs within every 250 milliseconds (in any mode).
When "tuned" is going "high" in normal mode, the channel data should be transmitted to the synthesizer to protect the receiver in case of hang-up situations.

Muting: The "mute" of the receiver is controlled by the IF receiver part, but can be overridden by the microcontroller. The "mute" action initiated by the microcontroller is necessary during channel switching and in the standby mode. Muting has priority on all other main tasks. The hardware mute is the result of an "AND" function between the “Tuned” and “Stereo” information. The "tuned" information can be read by the microcontroller on pin 2. The same pin has to be put in output

mode to activate the microcontroller initiated "mute". This "mute" must be used during the frequency setting and during the standby mode.

Power save mode: The main supply can be switched off with the “power save” control line to reduce the current consumption. The microcontroller is always powered by the power supply. All other electronics can be put into power save mode.
After approx. 10 minutes of no "Tuned" signal the receiver goes into power save mode. Once in power save mode, the receiver is operated in “listen-sleep” mode to reduce the average current consumption.

Power Supply
The board is having a low drop voltage regulator 7790, which has an output voltage of 8 Vdc.
The 5 Vdc supply for the micro controller is extracted from the 10 Vdc input supply via a zenerdiode 6751. The 5 Vdc supply of the synthesizer is extracted from transistor 7606. The POWERSAVE signal is also provided to the connector for the amplifier.

9.7.5 Amplifier (Diagram W)

General
The amplifier module delivers 2 x 15 Watt into 4 ohm speakers. There is an incorporated high-pass filter because of the use of soft-flat panels as speaker. The speakers are connected through 2.5 mm mono-jacks. The crossover will be around 150 Hz. The amplifier uses a “cool power” amplifier IC (TDA1564TH).
The module is featured with an additional “wired backup” input (3.5mm stereo-jack) and a 2-colour LED indicator. Green indicates the active state, red is standby. There is also an on-board 10 Vdc regulator, specially intended for the TX receiver.

DC-references and Supply
The reference voltage used in the preamp-filter is made of the internal reference of the amplifier chip TDA1564TH. This reference is buffered by 7100-D and present on pin 14 of 7100-D. The reference is only valid when the chip is active or muted.
The power supply for the pre-amp is made by using the filter circuitry 3100, 2101, and 2100. This supply is 10.6 Vdc for all operating conditions.
The built-in voltage regulator LM317MDT delivers 10 Vdc for the receiver board. The 10 Vdc is set by 3141 and 3142. This is the normal operating condition by wireless use of the whole set.
This 10 Vdc supply can be switched "off" by connecting a 3.5 mm plug into the "wired backup" input. By doing so, the base of 7103 is connected to ground, 7111 is saturated, and pin 1 of 7110 is on ground level. The result is 1.25 Vdc on the supply line to the receiver.

Mute Circuitry
In normal operating circumstances, the voltage on the MODE pin of the amplifier will be 9.7 Vdc. Transistors 7104 and 7107 are not saturated at that moment. When the receiver generates a ”mute” (4 Vdc on pin 6 of connector 1106), then 7107 will saturate and pulls down the level on pin 2 of 7101 to 2.3 Vdc. All DC-references stay as they were, the LED stays green, but no sound is produced on the outputs.
When the receiver goes into "power save" mode (when 10 minutes no signal from the TV set), the circuitry around 7104 pulls the mute line down to nearly 0 V. In this condition, the amplifier is completely in "standby" mode, while all DC-references are disabled. The LED red will be "on", while green is "off".
When the receiver detects a valid signal from the TV set, the POWERSAVE line becomes continuously "low", and after a small time (2137, 3133, 7104) 7104 is turned "off". At the same moment, the mute line becomes "low" and the amplifier is enabled again.

Amplifier considerations
The 26 dB amplifier TDA1564TH operates on 13 Vdc and can deliver 2 x 15 Watts into 4 ohm loads. The dissipation is minimized by internally switching in the TDA1564 from Single Ended (SE) to Bridge Tied Load (BTL) mode, only when a higher output voltage swing is needed.
Input signals from the receiver (or the 3.5 mm stereo jack) input are filtered in the two-section high pass filter around 7100-B and 7100-A. This is needed because the flat panel speakers cannot reproduce low frequency sound. The -3 dB point is somewhere around 150 Hz.
Input sensitivity of the amplifier for maximum output:
- Wireless use (signals coming from the receiver board): typical 1.4 V_rms
- Wired use (signals coming from the 3.5 mm jack input): typical 2.5 V_rms

9.8 Tuner Board

9.8.1 General

The ECO6 tuner module is an electronic controlled digital tuner. It is an economic version of the TUNER 92 (economic means: no special front-end unit, new designed radio IC).

9.8.2 Key Components

- Tuner front end: FE450.
- Radio IC: TEA5762.

Tuner front end

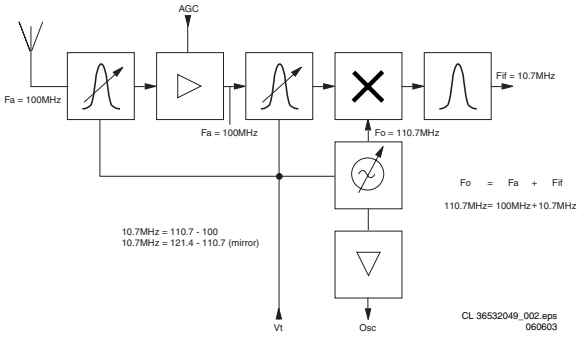


Figure 9-30 Block diagram tuner front-end

This is a ready made and trimmed unit.

Radio IC TEA5762
This IC is a 44 pins monolithic integrated AM-receiver and FM-IF part with demodulator and stereo decoder. It is designed for the use with an external FM front-end.
It incorporates internal stabilised power supplies that allow a wide supply voltage range from 2.5 V up to 12 V without any loss of performance.

The radio
For FM operation, an external FM front-end is necessary. This is switched "on" and "off" by the FM_ON/OFF signal which is generated in the bus system.
The AFC circuit in the TEA5762 provides a tuning voltage to drive the VCO of the external FM front-end.
The frequency of the external VCO is counted in the Self Tuned Radio (STR) tuning system.
The FM-IF circuit is designed for distributed IF ceramic filters (items 5109 and 5110). The FM quadratic detector uses a ceramic resonator.
The PLL stereo decoder incorporates a signal dependent stereo-blend circuit and a soft-mute circuit.

Tuning
The tuning-concept of Self Tuned Radio (STR) is based on "fuzzy logic": it mimics hand tuning (hand tuning is a combination of coarse and fine-tuning to the qualitatively best frequency position). Consequently, the tuning system is very fast.
The tuning algorithm is completely integrated; so there are only a few external components needed.
The bus only consists of three wires (BUS-CLOCK, DATA and WRITE-ENABLE), so the bus and the microcontroller can be kept very simple. The microcontroller must basically give two instructions:

- **Preset operation.** In this mode, the microcontroller has to load information such as frequency band, frequency, and mono/stereo. This information has to be sent via the bus to the STR. After the AFC has tuned the real frequency to the desired frequency, an in-lock signal can be generated. In the FM mode the tuning voltage controls the VCO of the external FM front-end and the frequency of the VCO is counted in the TEA5762.
- **Search operation.** During a search operation, the only action the microcontroller has to take is: sending the desired band plus the direction and the search sensitivity level to the STR. STR. The search operation is performed until an in-lock signal is generated. The AFC then fine tunes to the station. The frequency belonging to the found station will be counted by the counter and written into the last-station memory and the shift register of the counter. At this time, the frequency is available in the shift register and can be read by the microcontroller. The microcontroller decides whether the frequency is within the desired frequency band. If so, this frequency can be stored under a preset and if not, a new search action should be started.

The Bus
The TEA5762 radio has a bus, which consists of three wires:

- BUS-CLOCK, software driven clock input (pin 27).
- DATA, data input / output (pin 28).
- WRITE-ENABLE, write / read input (pin 29).

These three signals, together with the mono/stereo pin (MO/ST; pin 24), communicate with the microcontroller on the interface board.
The mono/stereo indicator has two functions, which are controlled by the BUS-CLOCK: "mono/stereo" and "tuned/not tuned".

9.8.3 Basic fault finding on the tuner module.

If there is a malfunction of the module, one can proceed as follows:

1. Check the available supply voltages
   – Incoming supply 12 V (10 - 14 V on pin 4 of connector 1120)
   – Supply of IC7101: pin 7 must be 7.8 V, and pin 22 must be 11 V.
2. Check the data communication between microprocessor and IC7101. Select other preset and check with an oscilloscope if data is send on pin 29 (WRITE_EN), pin 27 (CLOCK), and pin 28 (DATA).
   – If no data transfer can be seen when activating a button on the RC, the problem must be located around the microprocessor.
   – If data transfer is occurring, probably 7101 is defective.
3. If data communication towards 7101 is OK, the switch settings (pins 30 and 31) of 7101 can be checked.
4. At this point the standard fault locating can be started, as usual from AF output working towards RF input.

9.9 LCD Board

See description in next paragraph "Interface Board".

9.10 Interface Board

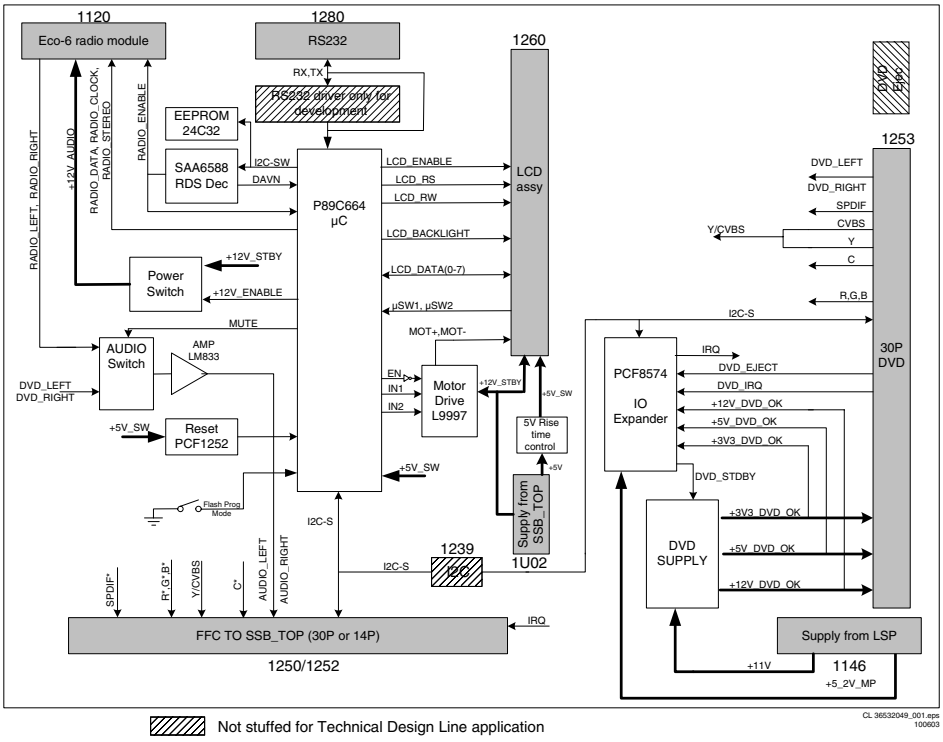


Figure 9-31 Block diagram TDL interface board

The TDL (Technical Design Line) interface board fulfils several requirements:

- Interface (radio, motor driver, LCD, etc.).
- RDS decoder and audio switch.
- DVD interface.
- Voltage regulator.

This panel has 2 diversities:
- Full spec: all components stuffed.
- Eco TDL: has no DVD, so the PCF8574, supply of DVD, and connectors 1146 and 1253 are not stuffed.

9.10.1 Interface Control

The 89C66x is a new family of microcontrollers derived from the 87C65x but with on-chip flash memory i.s.o. an EPROM. This (slave) microcontroller has hardware I2C support to communicate with the host. For local control, a software I2C bus is used. The device works on 5 V, and so it is switched "off" during the standby of the set.

9.10.2 Radio Interface

The ECO6 is used as stereo FM radio. The module has also AM, but this is not used in this application.
The control of the module is through a 4-wire bus. Some wires have double functions:
- The WRITE ENABLE line also contains MPX data.
- The combination of the CLOCK and MONO/STEREO lines give status information.
- The DATA line is used besides writing and reading of data, for indication if searching has finished.

Timing for WRITE mode:
- RADIO_ENABLE and RADIO_DATA signals must be stable for 20 us before the rise edge of RADIO_CLOCK (set-up time).
- RADIO_DATA must not change during at least 1.5 us after the RADIO_CLOCK is high (hold time).

Timing for READ mode:
- RADIO_DATA signals must be read 20 us after the rise edge of RADIO_CLOCK.
- When the search is finished (RADIO_DATA becomes low), the first data bit can be read after 20 us.

Notes:
- The RADIO_ENABLE_MPX has a delay up to 1 ms.
- After sending the SEARCH START command, the RADIO_ENABLE_MPX has to stay high for minimum 3 ms, to prevent a search stop on the actual tuned station.
- Set RADIO_CLOCK high about 350 ms after frequency setting, and keep it high until the RADIO_STEREO becomes low, but minimum for 100 ms.

Power Supply
The power supply to the radio module can be switched "on" and "off" by the microcontroller (pin 28), by means of a power switch (circuit around items 7001, 7003 and 7005). The power switch is used to switch the +12V_AUDIO of the radio "on" and "off". The switch is opened when the +5V_SW is "off" (hardware). If the +5V_SW is present, the switch is controlled by software:
- RADIO_ON: +12V_ENABLE = 0
- RADIO_OFF: +12V_ENABLE = 1

Audio Switch
The ECO6 module delivers Left and Right audio (on connector 1120, pins 1 and 3). The module does not contain a real mute circuit (only mute when not accessing the module), so the mute must be done by means of the MUTE signal controlling the ENABLE pin of audio switch 7103 (pin 6). This is automatically activated when a tuning action is done. When accessing the radio module, the ENABLE line must be set to "low".
With the audio switch 7103, the audio L/R of the DVD is switched with the L/R of the radio, to generate the L/R output of the module.

The audio sound output is controlled by means of an analogue switch HEF4053. The +12V_ENABLE signal must be "low" to enable the sound from DVD. At reset, this signal is "high" thus enabling the sound from the radio board.

RDS
RDS information is transmitted on a 57 kHz sub carrier as amplitude modulated suppressed carrier. It is modulated with a coded signal at a bit-rate of 1187.5 bits/sec. The deviation due to the 57 kHz sub carrier is very small (about 2 kHz). This MPX data from the ECO6 radio is fed to the RDS decoder chip SAA6588. This chip does RDS demodulation, symbol decoding, and error correction. The data is available via the I2C bus. The SAA6588 has a buffer of 40 ms (= 1/2 groups = 2 blocks). The DAVN (Data Available) line can be programmed to give an interrupt when e.g. a block is received.
An optional EEPROM (item 7011) can be used as non-volatile memory for storage of example FM presets or RDS Program Service Names.

9.10.3 LCD Interface

LCD
The LCD is controlled through a LCD controller chip from Samsung: S6A0070. This chip has an 8-bit data bus.
It is a character based display driver of 1 line x 16 characters, each character being 5 x 7. There are 192 characters defined. One character is used to display icons. This means that 15 characters are left to display text. In total 35 icons can be displayed.
The LCD is powered with the +5V_SW. This means that in Standby, the LCD is not active.

Backlight
The backlight of the LCD is controlled by means of a PWM pin of the microcontroller (pin 7).

Motor
For the motor control, the L9997ND (or compatible) is used. Three lines are needed to control the IC.
- IN2.
- IN1.
- ENABLE (via inverter 7010 to actual ENABLE pin).

A high level on the ENABLE line puts the controller in standby mode (this is the default state).

Table 9-1 Motor control

IN1	IN2	Motor
Low	Low	Idle
Low through PWM	High	Negative motor voltage
High	Low through PWM	Positive motor voltage
High	High	Idle = default

In order to reduce the motor voltage, the IN1/IN2 lines are chopped. Chopping the control lines changes the speed of the motor (PWM control). This is needed when DC motors are used with a rated voltage of less than 12 V and for smooth start/stop of the motor.
Two lines, USW1 and USW2 (pins 5 and 6), tell the microcontroller whether the movement is completely closed or completely open. In between, there is no indication of the position of the moving part.

9.10.4 DVD Interface

The control of the DVD slot-loader (if present) is done through a PCF8574 IO expander. By driving DVD_STDBY low, the 3.3V, 5V, and 12V supply will be sent to the DVD module.
It is also possible to check that every voltage to the DVD is high by reading signal +3V3_DVD_OK, +5V_DVD_OK, and +12V_DVD_OK through the PCF IO expander.

Table 9-2 DVD I/O expander signals

Signal Name	I/O	Description
EJECT	I	Low when the DVD Eject knob is pressed (not used for TDL)
+5V_DVD_OK	I	Low when the 5V supply to DVD is off
IRQ	O	Interrupt line to OTC
DVD_MUTE	I	Mute indication from DVD
DVD_IRQ	I	Interrupt line from DVD
12V_DVD_OK	I	Low when the 3.3V supply to DVD is off
3V3_DVD_OK	I	Low when the 3.3V supply to DVD is off
REAL_STANDBY	O	High to disable 12V, 5V and 3.3V supply to DVD

The output of audio sound is controlled by means of an analogue switch HEF4053. The +12V_ENABLE signal must be “low” to enable the sound from DVD.

9.10.5 Voltage Regulator

This part takes care for the voltages that are needed for the (optional) DVD slot loader (+3.3V, +5V, and +12V)
The L4978 is a step-down switching regulator delivering a 3.3 V. The device uses an internal power D-MOS transistor (with a typical Rds_on of 0.25 W) to obtain high efficiency and high switching speed. A switching frequency of 150 kHz is set via C2406 and R3400. Input voltage is derived from the +11V coming from the Standby supply.
Other features of this DC-DC converter include pulse-by-pulse current limit, hiccup mode for short circuit protection, voltage feed forward regulation, soft-start, protection against feedback loop disconnection, inhibit for zero current consumption and thermal shutdown.

Notes:
- The LEDs on this board are not stuffed in production, they only were used during development for debugging purposes.
- Switch 1300, is also only meant for development purposes.

9.10.6 Interface Board Signal Descriptions

Table 9-3 Interface board signal descriptions

Signal	Description
11V_STANDBY	Stand by supply voltage
5V	Supply voltage
SPDIF_DVD	SPDIF from e.g. an internal DVD drive
12V_AUDIO	Supply voltage for the radio module ECO6
DVD_L/R	Audio from DVD module
RADIO_L/R	Audio from radio module
OUT_L/R	Audio output of the module
+12V_ENABLE	Control signal to switch on the radio module
DATA/CLOCK/ MONO/STEREO	Control signals for the radio module
WRITE_ENABLE	Control signal for the radio
MPX	Multiplex signal containing audio and RDS information
DAVN	Data available signal from the RDS de-coder chip
I2C_S	Software I2C bus
USW1_LCD_DOWN	Indicates the close-end position of the LCD display
USW2_LCD_UP	Indicates the open-end position of the LCD display
FORWARD	Control line for the motor control L9997ND
REVERSE	Control line for the motor control L9997ND
ENABLE	Control line for the motor control L9997ND
M+	Positive motor voltage
M-	Negative motor voltage
I2C	I2C bus to host
IRQ	Interrupt request line to host

9.11 Software Upgrading

9.11.1 Introduction

In this chassis, you can upgrade the software via ComPair. This offers the possibility, to replace the entire SW image without having to remove the flash-RAM from its socket. You can find more information on how this procedure works in the ComPair file. It is possible that not all sets are equipped with the hardware, needed to make software upgrading possible. To speed up the programming process, the firmware of the ComPair interface can be upgraded. See Chapter "Service Modes ..."; paragraph "ComPair" - “How To Order” for the order number.

9.11.2 Specifications

Some specifications are:
- The upgrade feature makes use of I2C to transfer a new SW image (4 MB).
- It requires the ComPair interface Box (RS232 to I2C).
- The I2C bus is available at the rear side of the set, BUT it is still necessary to open the set to place a dedicated jumper. This, to avoid FCR (Field Call Rates).
- It uses a ZIP-compressed BIN image to speed up the transfer process (1/2 size).
- The complete procedure takes less than 20 minutes with an upgraded ComPair interface:
  - About 90 seconds to erase a 4 MB flash-RAM.
  - Less than 10 minutes to transfer the file (max 1.9 MB).
  - About 5 minutes to decompress/program the flash-RAM

Note: It takes about 85 minutes with a standard interface.

Constraints:
- Needs the EPG flash memory, so this device must be placed also for non-EPG regions like Asian Pacific and United States.

Advantages:
- Flexibility.
- No change in internal ROM (IROM) required (IROM not used).
- Flexibility to change of code flash manufacturer as the "flash driver" is part of the bootstrap code (part of the main software image).

9.11.3 Concept

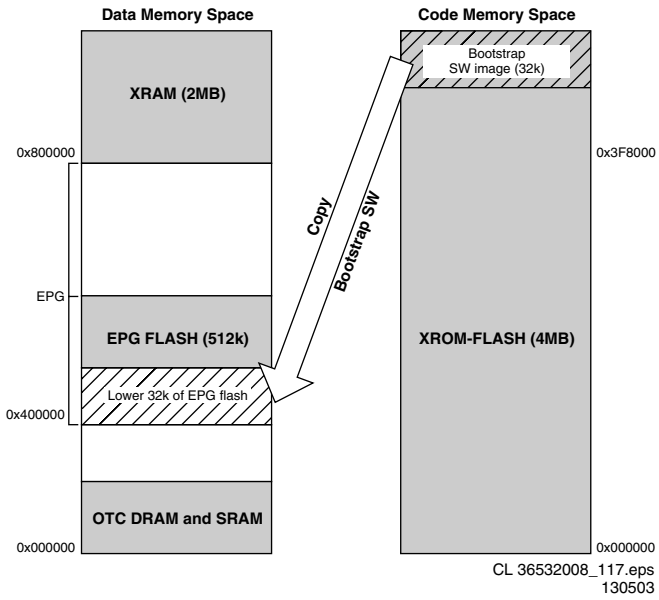


Figure 9-32 Memory diagram (initial situation)

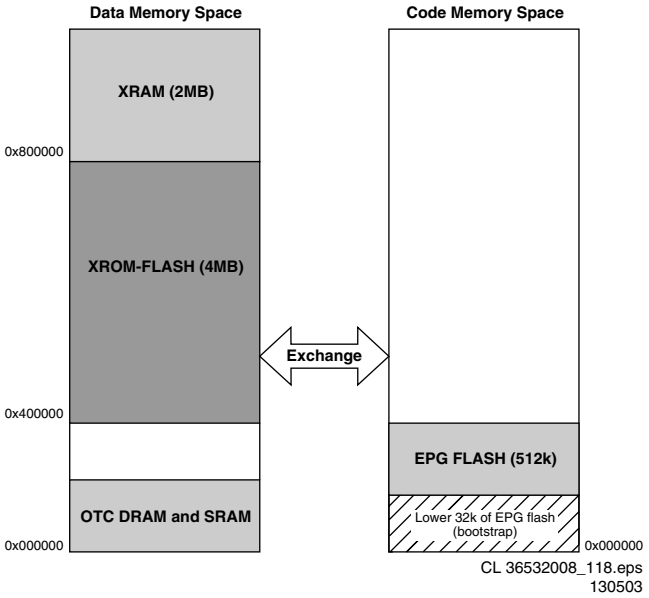


Figure 9-33 Memory diagram (after bus exchange)

The architecture of the OTC microprocessor does not allow the execution of code from the external RAM. It is also impossible to write data in the code memory space (there is no instruction to write data to those memory locations).
The OTC normally boots from its internal ROM (IROM) but modification of the **internal** ROM software would be too expensive. Fortunately, the chip architecture allows also the booting from **external** ROM (XROM).
The IROM is mapped on the first 32 kB of the ROM address space. The XROM is mapped starting at the same address. Therefore, the lower 32 kB of XROM overlaps the IROM memory space.
Via an external pin (EA), it is possible to reveal the XROM memory below the IROM and so boot using this hidden software. This is the first trick used by the software upgrade procedure.

To be able to write to the CODE flash, it is required to address the device via the RAM address space. Today all RAM but also the EPG flash is mapped on the RAM address space.
Devices are mapped to the right address space via a few control lines (kind of chip select). By exchanging the control lines between the EPG and the CODE flash, it is possible to map the CODE flash in the RAM address space and at the same time use the EPG flash to execute software. This is the second trick used by the procedure.

The main idea is to use the EPG flash to boot up the software upgrade procedure.
Therefore, the complete procedure relies on the presence of that one. The upgrade procedure is so prescribed for Europe but a small flash of 32 kB could still be used for US and AP (currently investigated).

In order to be able to write new software code to the set, we therefore must copy the bootstrap code to a free memory area (e.g. the EPG flash-RAM) in order to be able to execute "externally" the upgrade procedure code.
Solution: swap the software code to the data memory space (via placing a jumper on 1402) and boot from the EPG FLASH. After the zip-file uploading and (internally) software unpacking, the old situation must be restored.

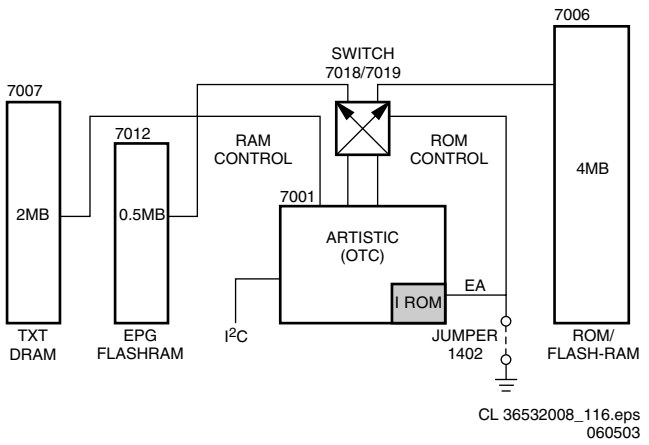


Figure 9-34 Software upgrade set-up

A jumper on the SSP will swap the devices and boot "externally" via the EPG flash. Then, via ComPair, the download command is given. The new (ZIP) image will be first downloaded to the OTC's external RAM (TXT DRAM). Then a checksum on the ZIP image will be computed on both sides and compared.
If everything is correct, the CODE flash will be erased and the new image will be transferred and unzipped (= decompressed) into the flash. This is done via the bootstrap code. A second checksum will be computed on the decompressed image.
After the upgrade, the EPG flash will be cleared again.

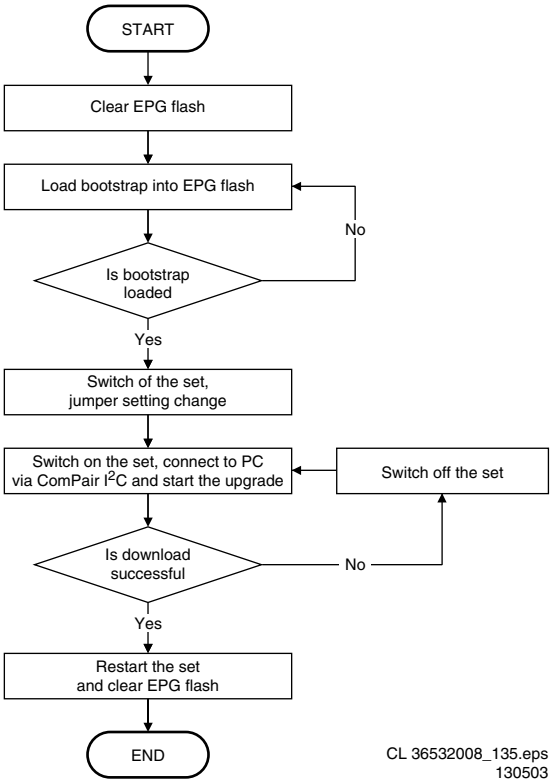


Figure 9-35 Software upgrade flow chart

9.12 Abbreviation list


2DNR	Spatial (2D) Noise Reduction
3DNR	Temporal (3D) Noise Reduction
AARA	Automatic Aspect Ratio Adaptation: algorithm that adapts aspect ratio to remove horizontal black bars; keeps the original aspect ratio
ACI	Automatic Channel Installation: algorithm that installs TV channels directly from a cable network by means of a predefined TXT page
ADC	Analogue to Digital Converter
AFC	Automatic Frequency Control: control signal used to tune to the correct frequency
AGC	Automatic Gain Control: algorithm that controls the video input of the feature box
AM	Amplitude Modulation
ANR	Automatic Noise Reduction: one of the algorithms of Auto TV
AR	Aspect Ratio: 4 by 3 or 16 by 9
Artistic	See OTC 2.5: main processor
ASF	Auto Screen Fit: algorithm that adapts aspect ratio to remove horizontal black bars without discarding video information
ATV	See Auto TV
Auto TV	A hardware and software control system that measures picture content, and adapts image parameters in a dynamic way
BC-PROT	PROTection signal to the microprocessor for a too high Beam Current.
BG	System B and G
BLC-INFO	BLack Current INFO
B-SC1-IN	Blue SCART1 IN
B-SC2-IN	Blue SCART2 IN
B-TXT	Blue TeleteXT
C	Centre channel (audio)
CL	Constant Level: audio output to connect with an external amplifier
ComPair	Computer aided rePair
CRT	Cathode Ray Tube or picture tube
CSM	Customer Service Mode
CTI	Colour Transient Improvement: manipulates steepness of chroma transients
CVBS	Composite Video Blanking and Synchronization
CVBS-TER	CVBS TERrestrial
DAC	Digital to Analogue Converter
DBE	Dynamic Bass Enhancement: extra low frequency amplification
DC-filament	Filament supply voltage
DFU	Directions For Use: owner's manual
DNR	Digital Noise Reduction: noise reduction feature of the set
DSP	Digital Signal Processing
DST	Dealer Service Tool: special remote control designed for service technicians
DVD	Digital Video Disc
DYN-FASE-COR	DYNamic phASE CORrection: corrects the phase of the H-drive
Eagle	Feature box IC performing peaking, zooming and sub pixel LTI in both horizontal and vertical directions, CTI, and other colour features
EHT	Extra High Tension
EHT-INFO	Extra High Tension INFOrmation, used for contrast reduction, vertical and horizontal amplitude correction, beam current protection, and flash detection.
EW	East West, related to horizontal deflection of the set
EW-DRIVE	The drive signal for the EW transistor
EXT	EXTernal (source), entering the set by SCART or by cinches (jacks)
FALCONIC	SAA4992H, feature box IC which performs Digital Natural Motion, 3DNR vertical zoom, and vertical peaking
FBL	Fast BLanking: DC signal accompanying RGB signals
FBSCO	Fixed Beam Current Switch Off, a 140 V dip detection to activate the black switch off circuit
FBX	Feature BoX: part of the small signal board /separate module which contains 100 Hz processing, extra features and AutoTV algorithms (FBX6= based on PICNIC, FBX7= based on PICNIC and Eagle)
FDS	Full Dual Screen
FILAMENT	Filament of CRT
FLASH	FLASH memory
FM	Field Memory or Frequency Modulation
G-TXT	Green TeleteXT
GND-DRIVE	A separate ground for the line-drive toward the line driver
H	H_sync to the module
H_770	H_sync for 770.2 or 770.3 source
H_A50	Horizontal Acquisition 1fH: horizontal sync pulse coming out of the HIP
H_D100	Horizontal Drive 2fH: horizontal sync pulse coming out of the feature-box
HD at HOME	A signal from the OTC, to switch the HOP to the Pixel Plus standard (60 Hz frame)

H-DVI	H_sync from DVI to RGB converter chip
HFB	Horizontal Flyback Pulse: horizontal sync pulse from large signal deflection
HIP	High-end video Input Processor (TDA9320): video and chroma decoder.
HOP	High-end video Output Processor (TDA9330): video, sync, and geometry controller
H_OUT	H_sync output of the module
HP	HeadPhone
Interlaced	Scan mode where two fields are used to form one frame. Each field contains half the number of the total amount of lines. The fields are written in "pairs", causing line flicker
IROM	Internal ROM (inside uP)
Last Status	The settings last chosen by the customer and read and stored in RAM or in the NVM. They are called at start-up of the set to configure it according to the customer's preferences
LCD	Liquid Crystal Display
LDP	Line Deflection Protection signal, derived from the EW current and voltage
LED	Light Emitting Diode
LINE-DRIVE	LINE DRIVE signal (for the Line transistor)
LNA	Low Noise Adapter / Low Noise Amplifier
LO	Local Oscillator
Ls, Rs	Left surround and Right surround channel (audio)
LSP	Large Signal Panel
Lt, Rt	Left total and Right total in case of a Dolby ProLogic encoded signal (audio)
MPX	MultiPleX
MSP	Multi-standard Sound Processor: ITT sound decoder
MUTE	MUTE Line
NC	Not Connected
NVM	Non Volatile Memory: IC containing TV related data such as alignments
O/C	Open Circuit
OSD	On Screen Display
OTC	On screen display Teletext and Control; also called Artistic (SAA5800)
OTP	One Time Programmable
P50	Project 50: communication protocol between TV and peripherals
PA	Power Amplifier
PCB	Printed Circuit Board
PICNIC	Peripheral Integrated Combined Network IC (SAA4978): main IC for 100 Hz features and feature processing
PIP	Picture In Picture
Progressive Scan	Scan mode where all scan lines are displayed in one frame at the same time, creating double vertical resolution.
PTP	Picture Tube Panel
PWM	Pulse Width Modulation
RAM	Random Access Memory
R-TXT	Red TeleteXT
RC	Remote Control
RC5 / RC6	Signal protocol from the remote control receiver
RDS	Radio Data System
RESET	RESET signal
ROM	Read Only Memory
SAM	Service Alignment Mode
S	Surround channel or mono surround channel (audio)
SC	SandCastle: two-level pulse derived from sync signals
S/C	Short Circuit
SCAVEM	SCAn VElocity Modulation
SCL-F	CLock Signal on Fast I2C bus
SD	Standard Definition
SDA-F	DAta Signal on Fast I2C bus
SIF	Sound Intermediate Frequency
SNERT	Synchronous No parity Eight bit Reception and Transmit
SPDIF	Sony Philips Digital Interface
SSP	Small Signal Panel
STBY	STandBY
SW	SubWoofer
TXT	TeleteXT
UART	Universal Asynchronous Receiver Transmitter
uP	Microprocessor
U_100	U from Feature Box
V_100	V from Feature Box
V_A50	Vertical Acquisition 1fH
V_BAT	Main supply for deflection (usually 141 V)
V_D100	Vertical Drive 2fH: vertical sync pulse from deflection
V_DPOS	One of the symmetrical drive signals for the DC frame output stage.
V_DNEG	One of the symmetrical drive signals for the DC frame output stage.
VFB	Vertical Flyback Pulse: vertical sync pulse coming from the feature box
VL	Variable Level out: processed audio output toward external amplifier
WYSIWYR	What You See Is What You Record: record selection that follows main picture and sound
X-RAY-PROT	A PROTection signal against excessive X-RAY radiation
XROM	External ROM (outside uP)
XTAL	Quartz crystal
Y_100	Y from Feature Box
Y-G	Luminance or Green signal with sync
Y_OUT	Luminance-signal to HOP IC
YUV-Feat	The YUV input for the main picture, coming from the Feature box or the HIP
V	V_sync to the module

9.13 IC Data Sheets

This section shows the internal block diagrams and pin layouts of ICs that are drawn as "black boxes" in the electrical diagrams (with the exception of "memory" and "logic" ICs).

9.13.1 Diagram B3C, T8F24EF (IC7724)

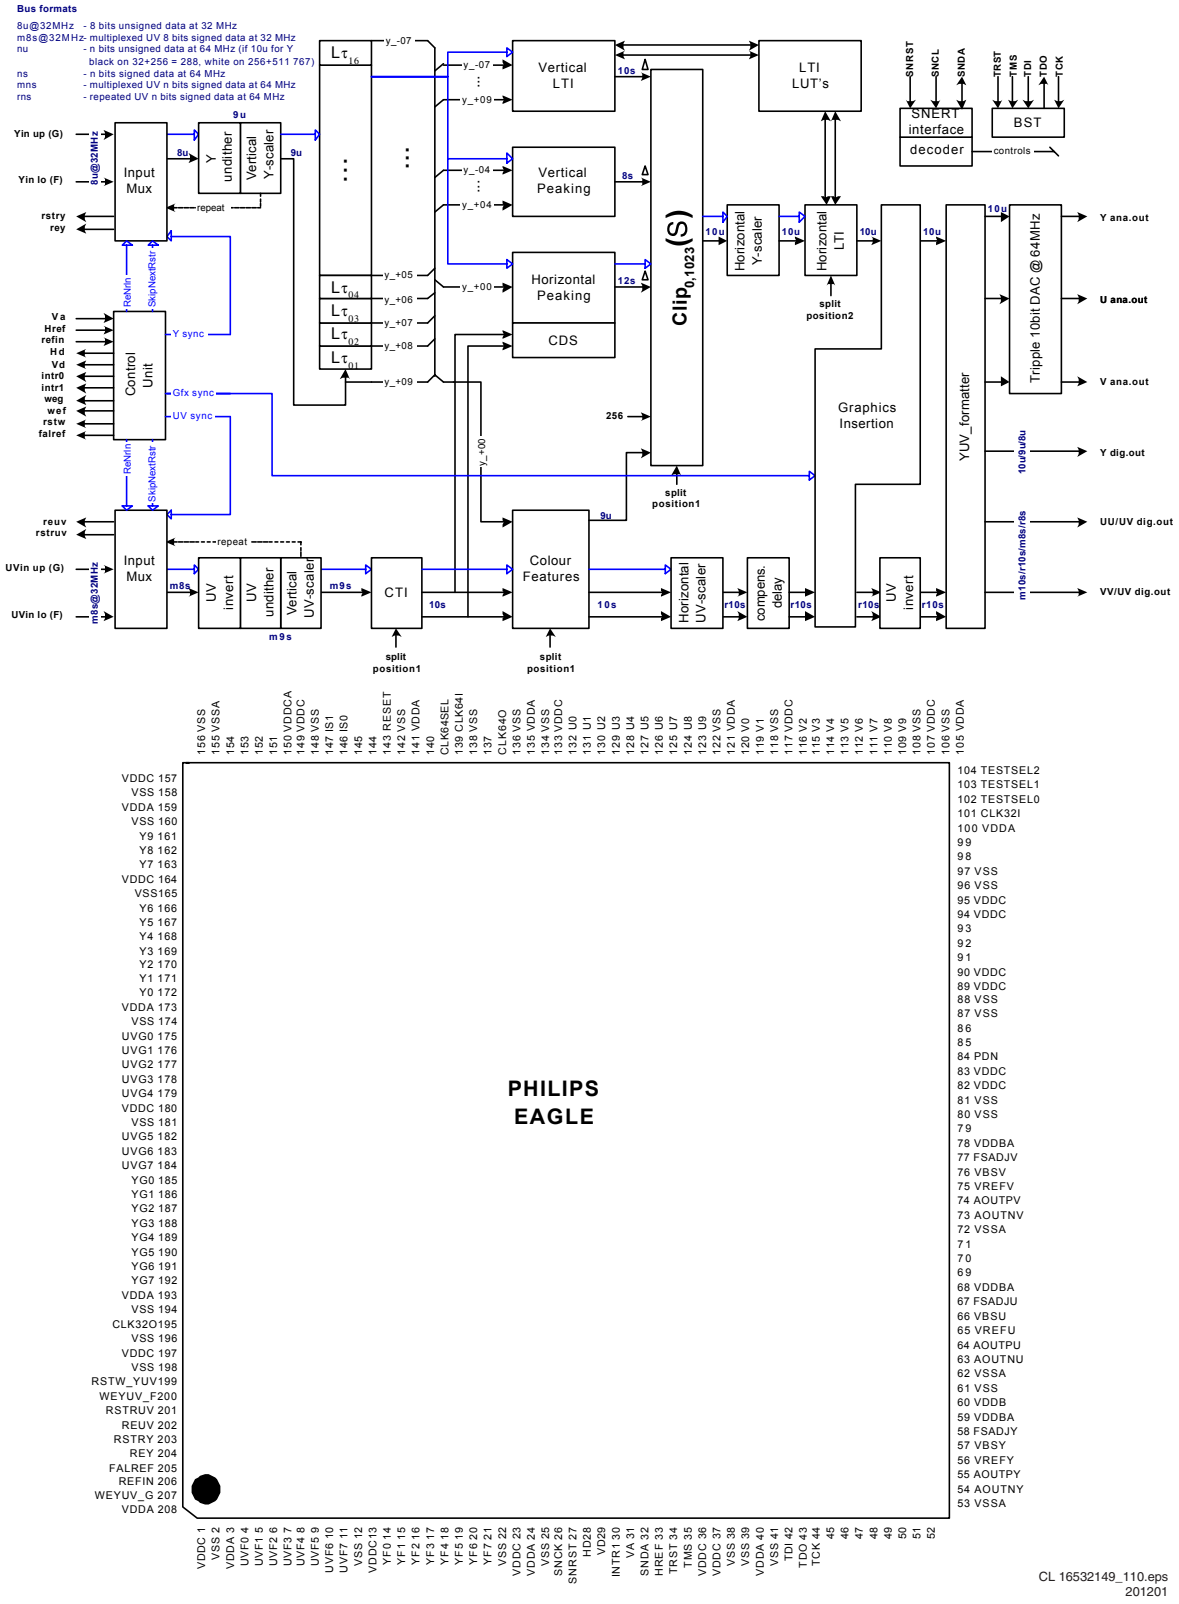

CL 16532149_110.eps
201201

Figure 9-36 Internal Block Diagram and Pin Layout

9.13.2 Diagram B6B, MAS3528E (IC7A30)

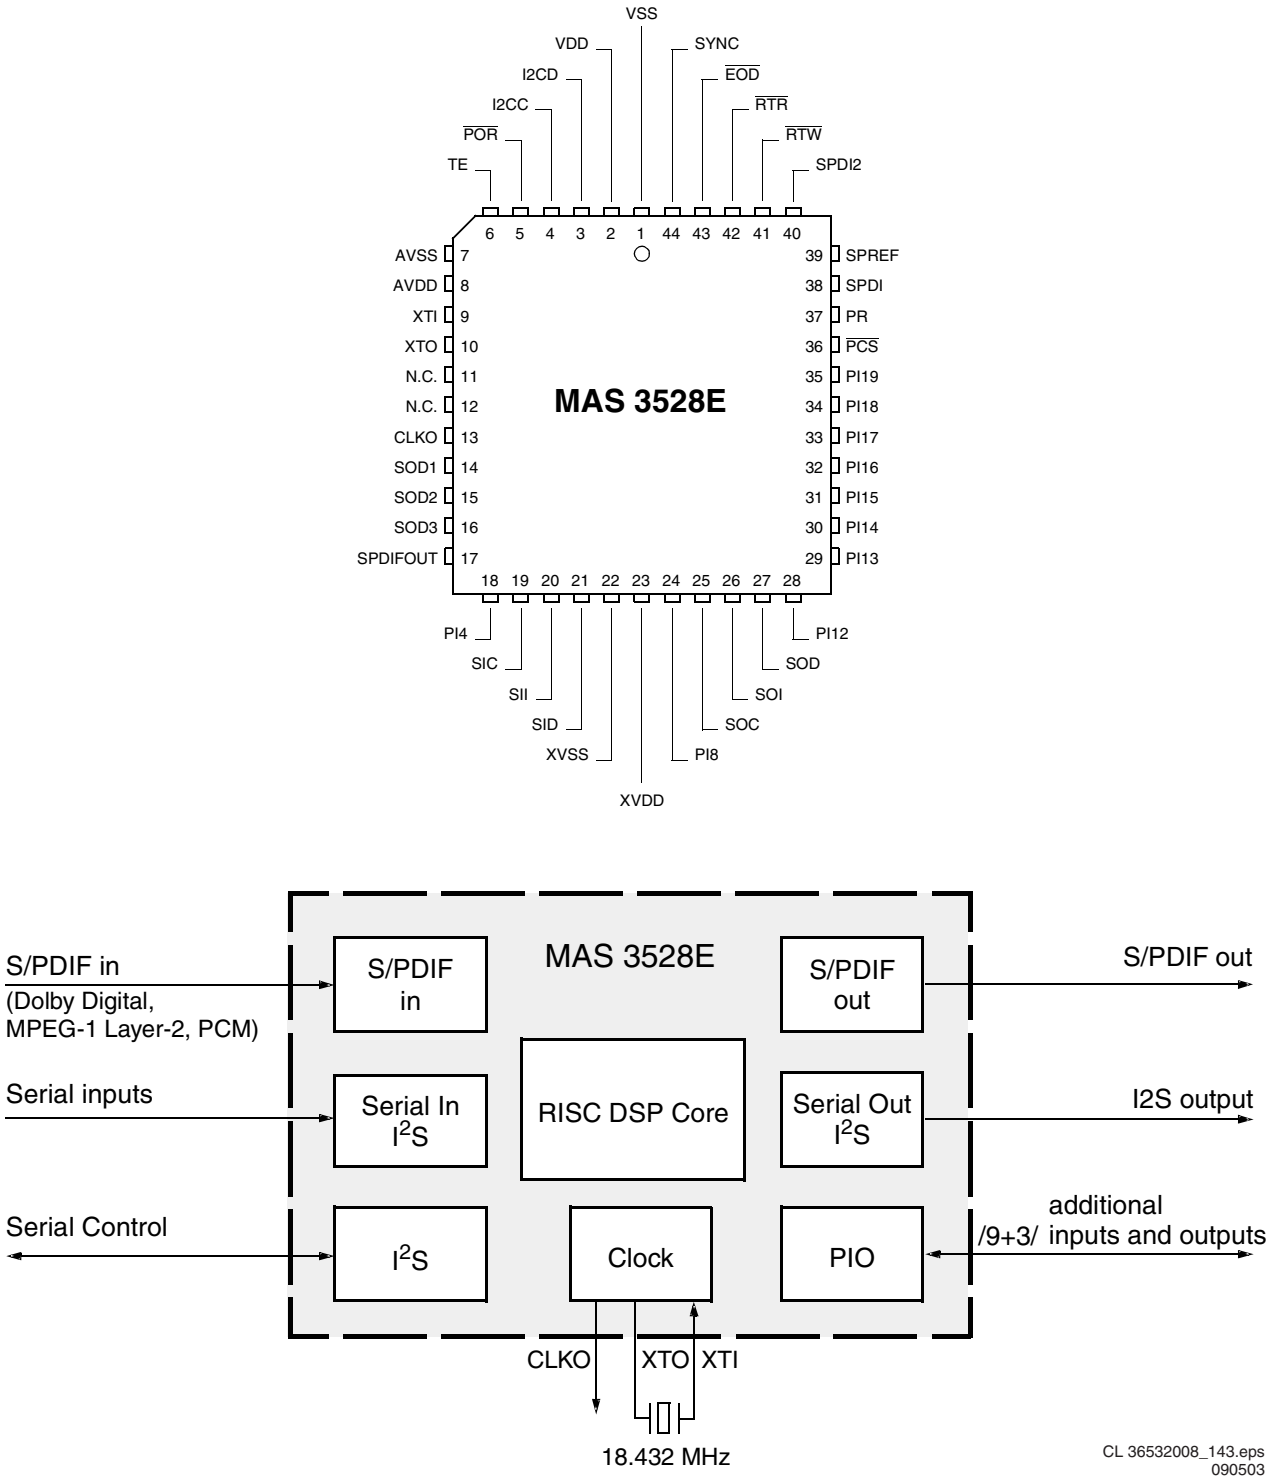
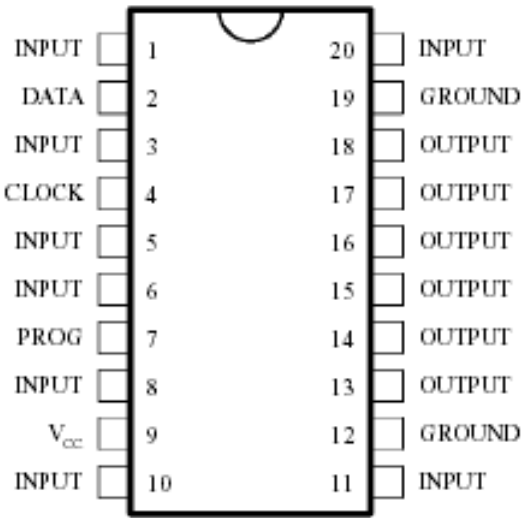


Figure 9-37 Internal Block Diagram and Pin Layout

9.13.3 Diagram B14A, TEA6415 (IC7I24)




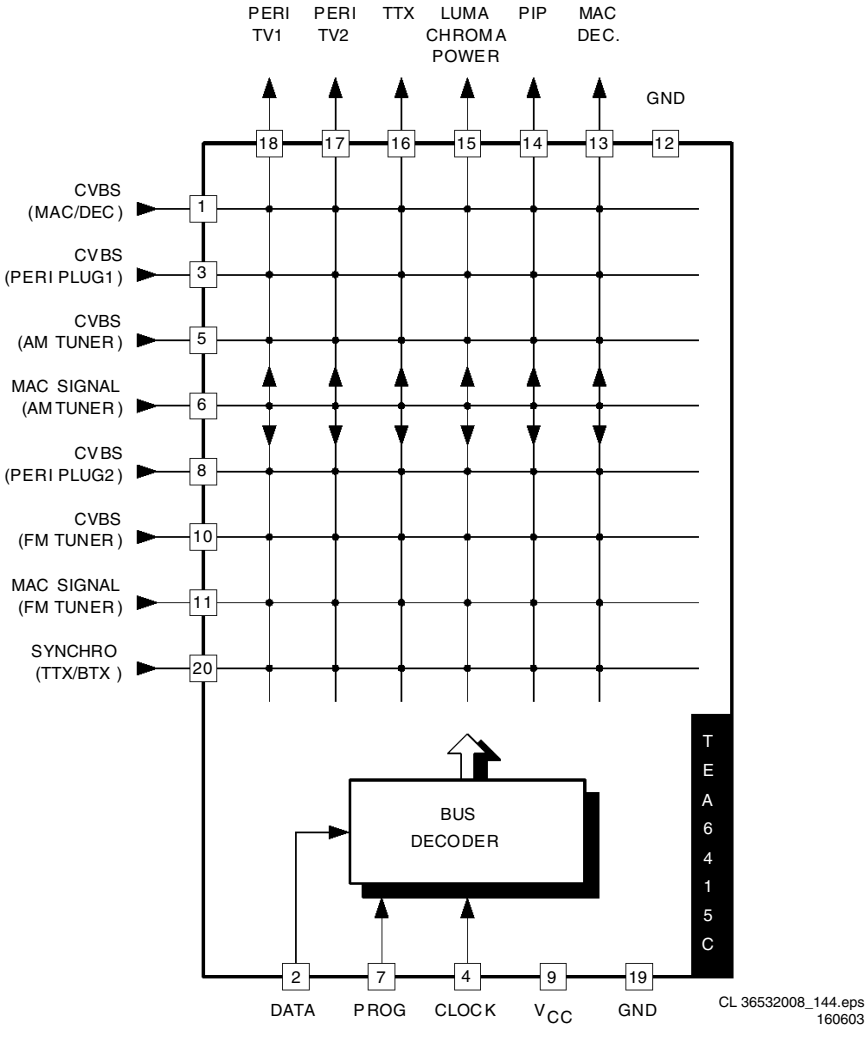


Figure 9-38 Internal Block Diagram and Pin Layout


9.13.4 Diagram B14C, M61323 (IC7I42)

PIN CONFIGURATION(TOP VIEW)

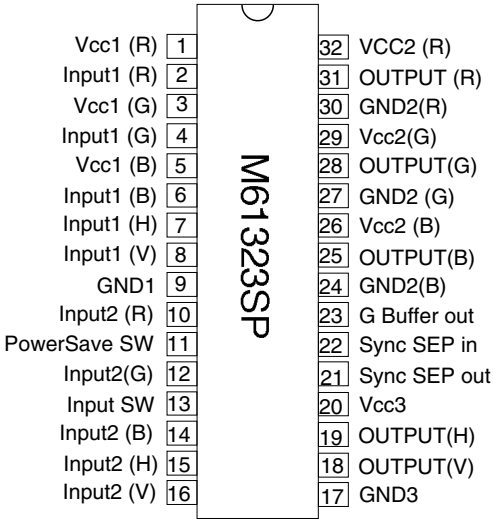


OUTLINE:32P4B

PIN CONFIGURATION(TOP VIEW)

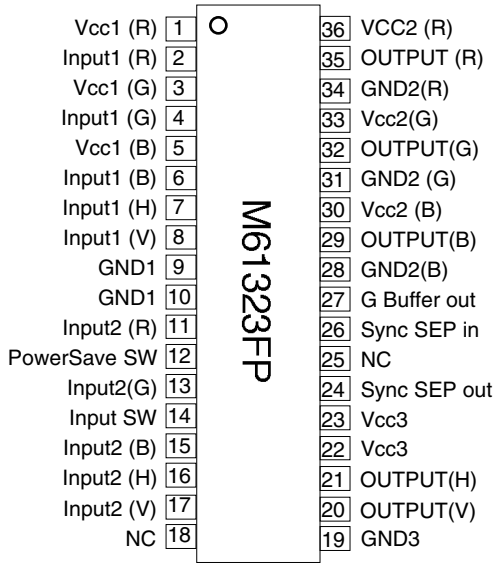

OUTLINE:36P2R

BLOCK DIAGRAM (M61323SP)

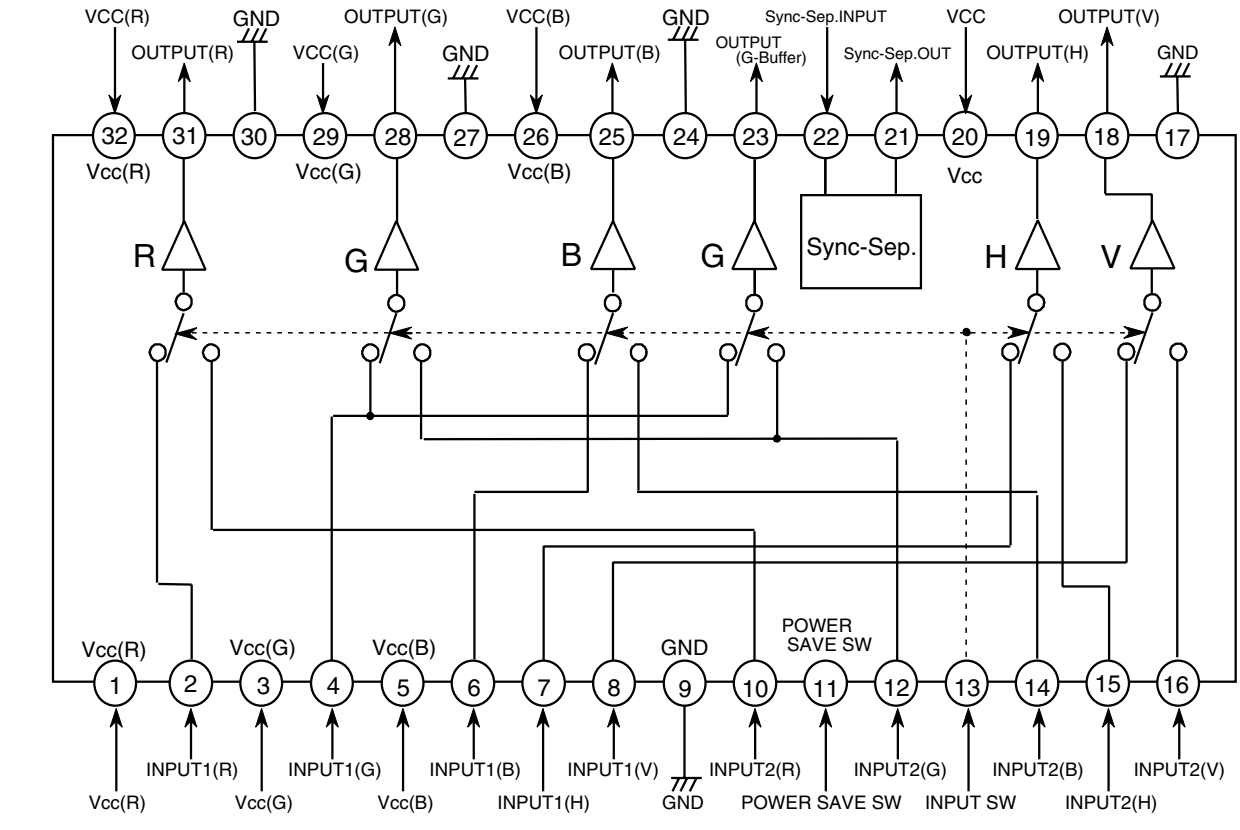



CL 36532008_145.eps
090503

Figure 9-39 Internal Block Diagram and Pin Layout

9.13.5 Diagram R, TSA5060ATS (IC7101)

Pin configuration.

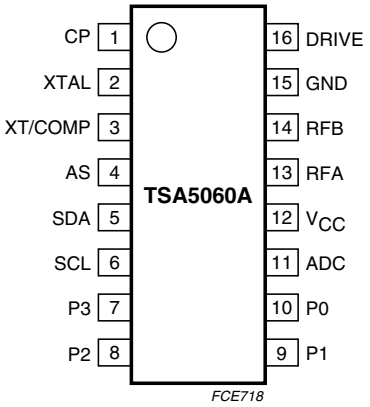

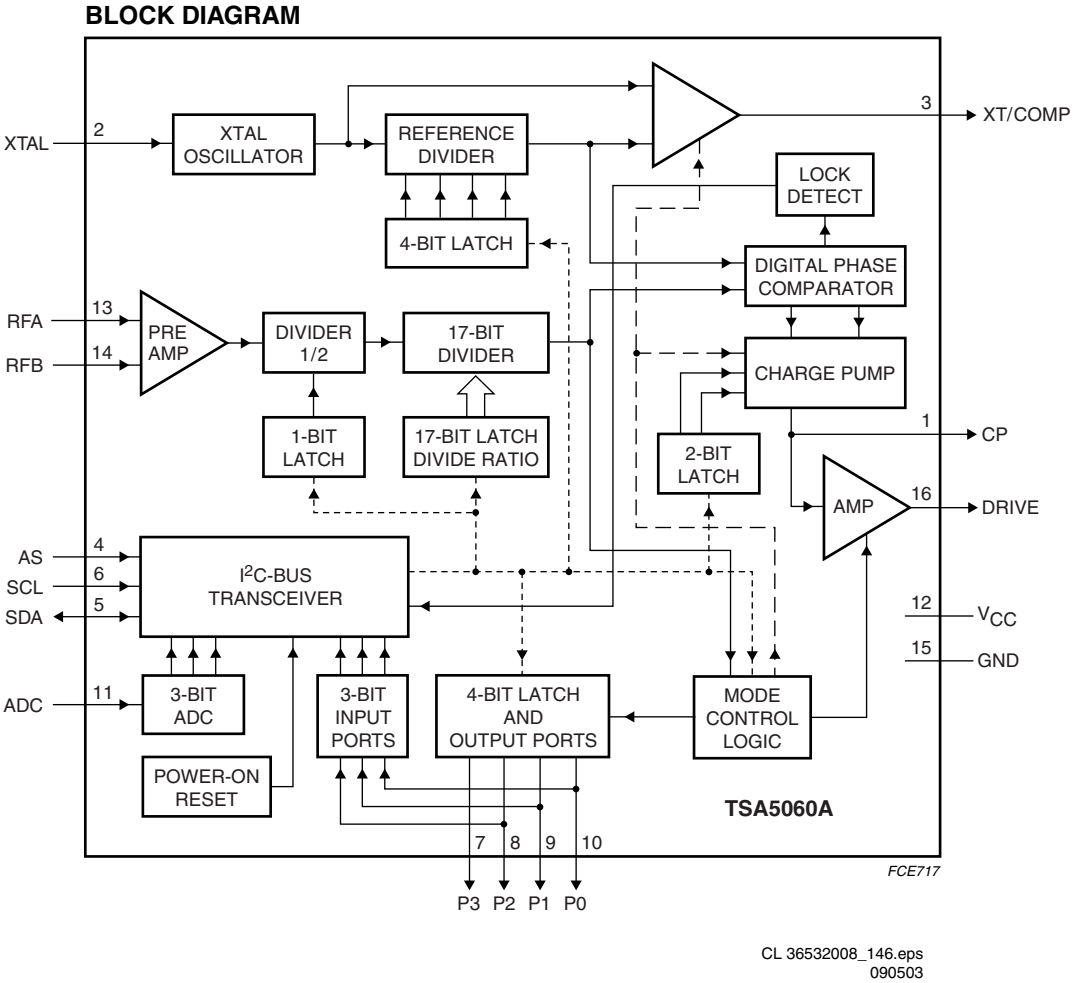

CL 36532008_146.eps
090503


Figure 9-40 Internal Block Diagram and Pin Layout

9.13.6 Diagram W, TDA1564 (IC7101)

PINNING

SYMBOL	PIN	DESCRIPTION
n.c.	1	not connected
MODE	2	mute/standby/operating
OUT1-	3	inverting output 1
OUT1+	4	non-inverting output 1
GND1	5	ground 1
GND2	6	ground 2
OUT2-	7	inverting output 2
OUT2+	8	non-inverting output 2
OC2	9	offset capacitor 2
n.c.	10	not connected
VP2	11	supply voltage 2
OC1	12	offset capacitor 1
IN2-	13	inverting input 2
IN2+	14	non-inverting input 2
DIAG	15	diagnostic
CSE	16	electrolytic capacitor for SE mode
IN1+	17	non-inverting input 1
IN1-	18	inverting input 1
CIN	19	common input
VP1	20	supply voltage 1

PIN CONFIGURATION.

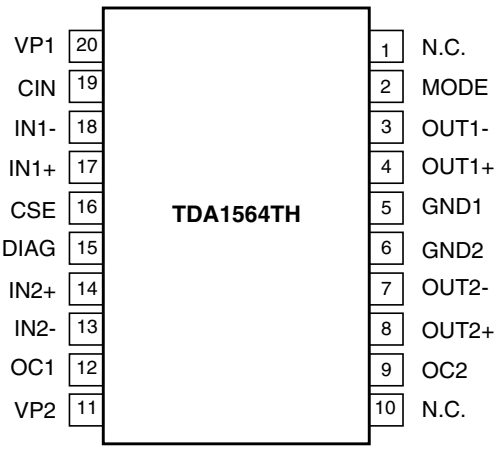

BLOCK DIAGRAM


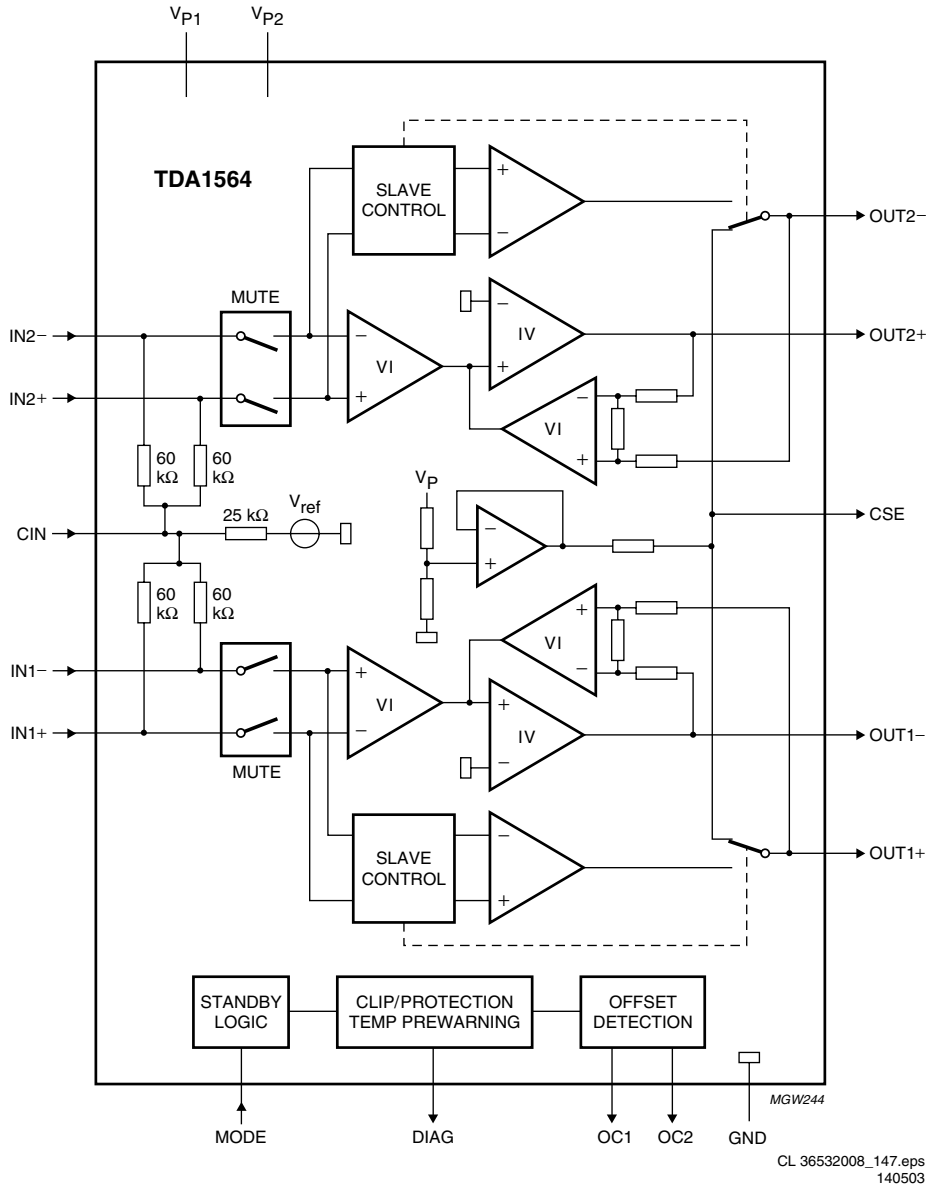



Figure 9-41 Internal Block Diagram and Pin Layout

9.13.7 Diagram T4, L4978D (IC7400)

BLOCK DIAGRAM

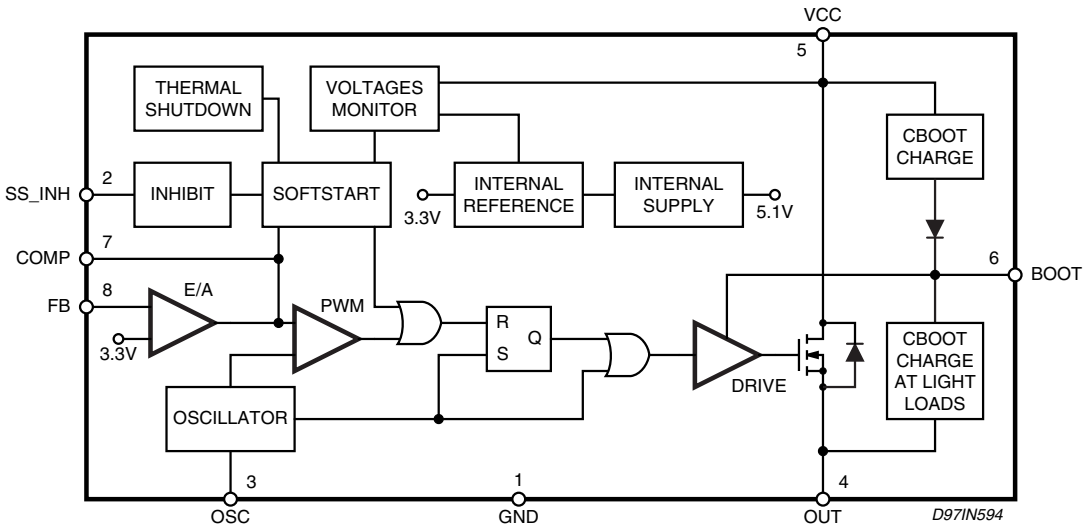

PIN CONNECTIONS

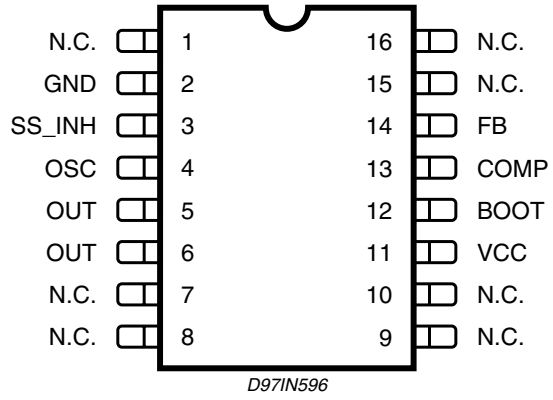

SO16W

PIN FUNCTIONS

SO (*)	Name	Function
2	GND	Ground
3	SS_INH	A logic signal (active low) disables the device (sleep mode operation). A capacitor connected between this pin and ground determines the soft start time. When this pin is grounded disables the device (driven by open collector/drain).
4	OSC	An external resistor connected between the unregulated input voltage and this pin and a capacitor connected from this pin to ground fix the switching frequency. (Line feed forward is automatically obtained)
5, 6	OUT	Stepdown regulator output
1	V_{CC}	Unregulated DC input voltage
12	BOOT	A capacitor connected between this pin and OUT allows to drive the internal DMOS Transistors
13	COMP	E/A output to be used for frequency compensation
14	FB	Stepdown feedback input. Connecting directly to this pin results in an output voltage of 3.3V. An external resistive divider is required for higher output voltages.

(*) Pins 1, 7, 8, 9, 10, 15 and 16 are not internally, electrically connected to the die.

CL 36532049_003.eps
100603

Figure 9-42 Internal Block Diagram and Pin Layout

10. Spare Parts List

Large Signal Panel [A]

Various

0010	4822 256 91879	Plastic holder
0011	3104 308 78231	Transistor cooling clip
0020	4822 492 70789	Transistor clamp
0030	3104 304 23001	LSP chassisframe
0037	3104 304 24131	LOT bracket
0050	4822 466 93461	Insulating plate 20 X 25
0051	4822 466 93461	Insulating plate 20 X 25
0052	3104 301 24181	Spring for Bracket
0054	3104 301 24181	Spring for Bracket
0056	3104 301 24181	Spring for Bracket
0060	3104 301 24181	Spring for Bracket
0065	3104 304 22031	LOT spacer
0066	3104 301 24181	Spring for Bracket
0067	3104 304 24921	Connecting part EMG2
0080	4822 492 70789	Transistor clamp
0320	4822 255 41371	Transistor clamp
0341	4822 492 63524	Transistor clamp
0395	4822 492 70789	Transistor clamp
0396	4822 492 70789	Transistor clamp
0505	4822 492 62076	Transistor clamp
1146	3104 311 00091	Cable 5P/560/5P
1147	4822 267 10637	Connector 5P m v 2.00
1205	2422 025 17682	Connector 40p M
1206	2422 025 17682	Connector 40p M
1417	4822 265 20723	Connector 2p m
1424	2422 025 11244	Connector 7p m
1491	4822 267 10973	Connector 1P m
1492	4822 267 10735	Connector 3p m
1498	2422 025 04849	Connector 2p m
1499	2422 025 04849	Connector 2p m
1501▲	4822 070 35002	Fuse 5A
1502	4822 267 10774	2P male red
1503▲	4822 070 14002	Fuse 4A
1505	2422 025 16374	Connector 2p m
1510	4822 267 10973	Connector 1P m
1511	4822 265 11253	Fuse holder 2p
1512	4822 265 11253	Fuse holder 2p
1520	3104 301 24181	Spring for Bracket
1521	3104 301 24181	Spring for Bracket
1550▲	2422 132 07411	Relay 1P 5V 5A
1590	4822 252 60151	Sparkgap dsp501
1601▲	2422 086 10919	Fuse 65V 125mA
1620	4822 267 10735	Connector 3p m
1625	2422 025 16382	Connector 3p m
1693	4822 267 10676	Connector 1P
1735	4822 267 10565	Connector 4p
1737	2422 025 16382	Connector 3p m
1738	2422 025 16383	Connector 3p m
1930▲	4822 252 51173	Fuse 1,0A
1936	2422 025 12485	Connector 11p m
1940	2422 025 12485	Connector 11p m
1943	4822 267 10748	Connector 3p m
1945	4822 267 10735	Connector 3p m
1946	4822 265 41391	Connector 9p m
1952	4822 267 10637	Connector 5P m v 2.00
1953	4822 267 10734	Connector 5p m
1955	4822 267 10735	Connector 3p m
1968▲	4822 252 51186	Fuse 2A
8000	3104 311 03272	EHT cable 640 mm
8147	3104 311 03221	Cable 5P/400/5P
8193▲	4822 320 20216	Focus cable 364 mm
8194▲	4822 320 20189	Cable HT-focus 44cm Rd
8400	2422 025 16691	Connector 3P male
8417	3104 311 04561	Cable 2P3/400/2P3
8424	3104 311 02991	Cable 7P/560/7P Wh
8498	3104 311 04531	Cable 2P/400/2P
8625	3104 311 04741	Cable 3P/180/3P
8737	3104 311 04682	Cable 2P3/680/2XPOSI
8940	3104 311 04651	Cable 11P/140/11P

⊣⊢

2100	4822 126 13841	1nF 20% 250V
2101	2222 370 65102	1nF 10% 400V
2102	4822 124 40207	100µF 20% 25V
2103	2020 552 94427	100pF 5% 50v 0603
2104	4822 122 31175	1nF 10% 500V
2105	2020 552 94427	100pF 5% 50v 0603
2106▲	4822 126 14152	680pF 10% 1kV
2107	4822 126 13599	3.3nF 10% 500V
2108	4822 121 70162	10nF 5% 400V
2109	4822 126 14472	1µF 10% 10V 0805
2110	4822 126 14472	1µF 10% 10V 0805
2111	4822 121 43526	47nF 5% 250V
2112	5322 126 11583	10nF 10% 50V 0603
2113	4822 126 10206	2.2nF 10% 500V
2113	4822 126 13599	3.3nF 10% 500V
2114	4822 121 10711	100nF 20% 275V
2115	4822 124 40764	22µF 100 V
2117	2020 021 91506	1000µF 20% 16V
2118	2020 021 91795	680µF 20% 25V
2119	2020 021 91794	1000µF 20% 16V
2121	4822 121 41856	22nF 5% 250V
2122	4822 121 41856	22nF 5% 250V
2123	2238 586 59812	100nF 20-80% 50V 0603
2124	4822 124 40248	10µF 20% 63V
2129	5322 126 11578	1nF 10% 50V 0603
2131	2238 916 15641	22nF 10% 25V 0603
2140	4822 124 40248	10µF 20% 63V
2141	4822 122 33177	10nF 20% 50V
2143	4822 122 31175	1nF 10% 500V
2144	4822 126 14472	1µF 10% 10V 0805
2145	4822 126 13881	470pF 5% 50V
2147	4822 124 41407	0.47µF 20% 63V
2149	4822 126 14472	1µF 10% 10V 0805
2150	5322 126 11583	10nF 10% 50V 0603
2152	4822 121 70162	10nF 5% 400V
2153	5322 122 31866	6.8nF 10% 63V
2154	3198 017 31530	15nF 20% 50V 0603
2155	4822 126 14585	100nF 10% 50V
2156	5322 126 11583	10nF 10% 50V 0603
2157	4822 121 42687	3.3nF 10% 63V
2159	4822 126 13881	470pF 5% 50V
2160	4822 124 21913	1µF 20% 63V
2161	5322 126 11583	10nF 10% 50V 0603
2162	4822 126 13881	470pF 5% 50V
2163	4822 124 40207	100µF 20% 25V
2400	4822 124 11575	47µF 20% 160V
2401	4822 121 42077	6.8nF 10% 400V
2402	2020 012 93596	22µF 20% 250V
2403	2238 916 15641	22nF 10% 25V 0603
2404	2238 916 15641	22nF 10% 25V 0603
2412	3198 024 44730	47nF 50V 0603
2413	4822 124 12255	10µF 20% 50V
2414	3198 024 44730	47nF 50V 0603
2415	4822 126 13883	220pF 5% 50V
2417	4822 126 14076	220nF 25V. 20%
2419▲	4822 126 14237	470pF 10% 2kV
2420▲	4822 121 70595	1.2nF 5% 2kV
2421	2038 301 00312	1.2µF 5% 250V
2425▲	4822 121 10526	9.1nF 5% 2kV
2426	4822 121 10658	24nF 5% 630V
2430	4822 126 10206	2.2nF 10% 500V
2431	4822 126 10206	2.2nF 10% 500V
2433	2022 333 00086	470nF 5% 250V
2440	2020 552 96448	1µF 10% 16V
2441	5322 122 32654	22nF 10% 63V
2442	5322 122 31866	6.8nF 10% 63V
2443	9965 000 09661	470pF 50V 10%
2445	5322 122 32654	22nF 10% 63V
2448	5322 122 32268	470pF 5% 63V
2450	4822 121 40434	330nF 10% 100V
2451	2020 012 93757	1000µF 20% 10V
2454	3198 017 31530	15nF 20% 50V 0603
2455	5322 126 11578	1nF 10% 50V 0603
2457	2020 552 96699	15nF 5% 25V
2458	4822 126 14241	330pF 50V 0603
2459	3198 016 31020	1nF 10% 25V 0603
2460	4822 124 81144	1000µF 16V
2461	4822 122 31169	1.5nF 10% 500V
2462	4822 124 80061	1000µF 20% 25V
2463	4822 122 31177	470pF 10% 500V
2464	4822 124 80061	1000µF 20% 25V
2465	4822 122 31177	470pF 10% 500V
2466	2238 586 59812	100nF 20-80% 50V 0603
2468▲	4822 122 50116	470pF 10% 1kV
2480	5322 126 11582	6.8nF 10% 63V
2482	3198 017 34730	47nF 16V 0603
2489	2222 580 16638	68nF 10% 50V
2490	4822 124 23432	100µF 20% 10V
2491	4822 124 81151	22µF 50V
2492	4822 124 23432	100µF 20% 10V
2493	4822 122 33891	3.3nF 10% 63V
2494	2238 780 15654	220nF 10% 16V
2495	2238 780 15654	220nF 10% 16V
2496	4822 122 33177	10nF 20% 50V
2497	4822 126 12105	33nF 5% 50V
2498	2020 552 96448	1µF 10% 16V
2499	5322 126 11579	3.3nF 10% 63V
2501▲	4822 126 14053	1nF 10% 2kV
2503	4822 121 51472	39nF 5% 250V
2504	2238 916 15641	22nF 10% 25V 0603
2505	2020 554 90173	2.2nF 20% 250V
2506	4822 121 43526	47nF 5% 250V
2507	4822 126 13589	470nF 275V
2508	4822 124 11913	22nF 20% 275V
2509	4822 124 11913	22nF 20% 275V
2510▲	4822 126 12263	220pF 10% 2kV
2511	4822 124 12417	2200µF 20% 25V
2512	4822 124 12417	2200µF 20% 25V
2513	4822 126 13881	470pF 5% 50V
2514	4822 126 14238	2.2nF 50V 0603
2515	4822 124 80096	47µF 200V
2516	2020 024 90743	220µF 20% 400V
2516	4822 124 12415	220µF 20% 400V
2517	4822 121 70162	10nF 5% 400V
2518	4822 126 13597	330pF 10% 500V
2520	4822 121 10711	100nF 20% 275V
2525	4822 126 14247	1.5nF 50V 0603
2526▲	2020 558 90571	2.2nF 10% 1kV
2527▲	4822 126 14237	470pF 10% 2kV
2528	4822 126 14472	1µF 10% 10V 0805
2530	4822 126 14472	1µF 10% 10V 0805
2531	4822 122 31169	1.5nF 10% 500V
2532	4822 126 14472	1µF 10% 10V 0805
2535	4822 126 13193	4.7nF 10% 63V
2537	4822 124 11913	22nF 20% 275V
2538	4822 122 33177	10nF 20% 50V
2539	4822 124 40248	10µF 20% 63V
2540	4822 124 21913	1µF 20% 63V
2541	4822 126 13597	330pF 10% 500V
2542	4822 124 12284	470µF 20% 25V
2543	4822 124 12284	470µF 20% 25V
2544	5322 126 11578	1nF 10% 50V 0603
2546	5322 126 10223	4.7nF 10% 63V
2547	5322 126 10223	4.7nF 10% 63V
2548	5322 126 10223	4.7nF 10% 63V
2549	5322 126 10223	4.7nF 10% 63V
2550	4822 126 13751	47nF 10% 63V
2551	4822 126 13751	47nF 10% 63V
2552	4822 126 13751	47nF 10% 63V
2553	4822 126 13751	47nF 10% 63V
2601	2238 586 59812	100nF 20-80% 50V 0603
2603	4822 126 13883	220pF 5% 50V
2604	4822 126 13473	220nF 80-20% 50V
2605	4822 126 13883	220pF 5% 50V
2620	4822 126 13473	220nF 80-20% 50V
2621	2238 586 59812	100nF 20-80% 50V 0603
2622	4822 124 40255	100µF 20% 63V
2623	4822 126 14238	2.2nF 50V 0603
2624	4822 121 51319	1µF 10% 63V
2625	4822 121 51319	1µF 10% 63V
2627	5322 124 40641	10µF 20% 100V
2628	4822 124 40255	100µF 20% 63V
2630	4822 126 14491	2.2µF -20+80% 10V 0805
2631	4822 126 14491	2.2µF -20+80% 10V 0805
2633	5322 126 11579	3.3nF 10% 63V
2635	2238 586 59812	100nF 20-80% 50V 0603
2642	4822 124 40255	100µF 20% 63V
2653	5322 126 11579	3.3nF 10% 63V
2656	2238 916 15641	22nF 10% 25V 0603
2657	2238 916 15641	22nF 10% 25V 0603
2659	2238 916 15641	22nF 10% 25V 0603
2660	5322 126 11578	1nF 10% 50V 0603
2661	5322 126 11582	6.8nF 10% 63V
2662	4822 126 13193	4.7nF 10% 63V
2702	3198 016 31020	1nF 10% 25V 0603
2704	3198 016 31020	1nF 10% 25V 0603
2705	4822 126 13482	470nF 80-20% 16V
2706	4822 126 14585	100nF 10% 50V
2707	4822 126 13879	220nF 20% 16V
2708	4822 126 14076	220nF 25V. 20%
2709	4822 126 13881	470pF 5% 50V
2710	4822 126 13881	470pF 5% 50V
2711	3198 016 31020	1nF 10% 25V 0603
2712	2020 552 96683	220nF 10% 50V
2713	4822 126 14076	220nF 25V. 20%
2714	4822 126 14549	33nF 16V 0603
2715	3198 016 31020	1nF 10% 25V 0603
2716	4822 126 14241	330pF 50V 0603
2717	5322 121 42498	680nF 5% 63V
2718	2238 861 18339	33pF 1% 50V
2719	3198 016 31020	1nF 10% 25V 0603
2720	4822 126 14076	220nF 25V. 20%
2721	4822 126 13881	470pF 5% 50V
2722	4822 126 13881	470pF 5% 50V
2723	3198 016 31020	1nF 10% 25V 0603
2724	2020 552 96683	220nF 10% 50V
2725	3198 016 31020	1nF 10% 25V 0603
2726	4822 126 14549	33nF 16V 0603
2727	3198 016 31020	1nF 10% 25V 0603
2728	4822 126 14241	330pF 50V 0603

2729	5322 121 42498	680nF 5% 63V
2730⚠	4822 126 14505	4.7nF 10% 2KV
2740	4822 121 51252	470nF 5% 63V
2741	2238 861 18339	33pF 1% 50V
2742	4822 126 14241	330pF 50V 0603
2743	4822 126 12105	33nF 5% 50V
2744	4822 126 12105	33nF 5% 50V
2745	4822 126 14241	330pF 50V 0603
2746	3198 016 31020	1nF 10% 25V 0603
2747	4822 126 13881	470pF 5% 50V
2748	2020 552 96683	220nF 10% 50V
2749	2020 552 96448	1µF 10% 16V
2750	2238 586 59812	100nF 20-80% 50V 0603
2751	4822 126 14585	100nF 10% 50V
2753	4822 126 14076	220nF 25V. 20%
2754	4822 126 14585	100nF 10% 50V
2755	3198 016 31020	1nF 10% 25V 0603
2756	4822 126 13881	470pF 5% 50V
2757	2020 552 96683	220nF 10% 50V
2758	5322 121 42498	680nF 5% 63V
2759	5322 126 10511	1nF 5% 50V
2760	5322 122 32268	470pF 5% 63V
2761	4822 126 13881	470pF 5% 50V
2762	4822 126 14076	220nF 25V. 20%
2763	4822 126 13879	220nF 20% 16V
2777	2020 552 96684	470nF 10% 25V
2778	4822 124 41751	47µF 20% 50V
2779	2020 552 96684	470nF 10% 25V
2780	2020 552 96684	470nF 10% 25V
2781	2020 552 96684	470nF 10% 25V
2782	2020 552 96684	470nF 10% 25V
2783	2020 552 96684	470nF 10% 25V
2784	2020 552 96684	470nF 10% 25V
2785	2020 552 96684	470nF 10% 25V
2786	2238 916 15641	22nF 10% 25V 0603
2787	2238 916 15641	22nF 10% 25V 0603
2788	2020 552 94427	100pF 5% 50v 0603
2789	2020 552 94427	100pF 5% 50v 0603
2790	2020 552 94427	100pF 5% 50v 0603
2794	2020 552 94427	100pF 5% 50v 0603
2795	2020 552 94427	100pF 5% 50v 0603
2796	2020 552 94427	100pF 5% 50v 0603
2797	2020 552 94427	100pF 5% 50v 0603
2798	2020 552 94427	100pF 5% 50v 0603
2941	4822 126 14585	100nF 10% 50V
2942	4822 126 14585	100nF 10% 50V
2943	4822 126 14585	100nF 10% 50V
2945	4822 126 14585	100nF 10% 50V
2946	4822 126 14585	100nF 10% 50V
2947	2020 021 90141	4.7µF 20% 50V
2948	4822 124 23432	100µF 20% 10V
2949	4822 124 23432	100µF 20% 10V

–WW–

3101	4822 053 20225	2.2MΩ 5% 0.25W
3104	4822 116 52195	47Ω 5% 0.5W
3105	4822 050 11002	1kΩ 1% 0.4W
3106	4822 050 11002	1kΩ 1% 0.4W
3107	4822 050 11002	1kΩ 1% 0.4W
3108	4822 053 10478	4.7Ω 5% 1W
3111	4822 053 10152	1.5kΩ 5% 1W
3113	4822 116 52186	22Ω 5% 0.5W
3114	4822 116 83872	220Ω 5% 0.5W
3115	4822 116 52283	4.7kΩ 5% 0.5W
3117	4822 116 52195	47Ω 5% 0.5W
3118	4822 053 10478	4.7Ω 5% 1W
3121	4822 051 30109	10Ω 5% 0.062W
3122	4822 051 30471	470Ω 5% 0.062W
3123	4822 116 52176	10Ω 5% 0.5W
3124	4822 116 52199	68Ω 5% 0.5W
3125	4822 116 52182	15Ω 5% 0.5W
3126	4822 050 21003	10kΩ 1% 0.6W
3127	4822 116 52289	5.6kΩ 5% 0.5W
3130	4822 116 52297	68kΩ 5% 0.5W
3132	4822 051 20333	33kΩ 5% 0.1W
3134	4822 051 30102	1kΩ 5% 0.062W
3135	4822 117 13577	330Ω 1% 0805 1.25W
3137	4822 116 52234	100kΩ 5% 0,5W
3138	4822 051 20334	330kΩ 5% 0,1W
3140	4822 051 30223	22kΩ 5% 0.062W
3141	4822 051 30471	470Ω 5% 0.062W
3144	4822 116 83883	470Ω 5% 0.5W
3145	4822 051 20472	4.7kΩ 5% 0.1W
3146	4822 051 20479	47Ω 5% 0.1W
3147	4822 051 20223	22kΩ 5% 0.1W
3148	4822 051 20229	22Ω 5% 0.1W
3149	4822 051 30103	10kΩ 5% 0.062W
3150	4822 117 11503	220Ω 1% 0.1W
3151	4822 117 10834	47kΩ 1% 0.1W
3152	4822 051 30102	1kΩ 5% 0.062W
3153	4822 051 30223	22kΩ 5% 0.062W
3155	4822 051 30101	100Ω 5% 0.062W
3159	4822 051 30479	47Ω 5% 0.062W
3160	4822 051 30102	1kΩ 5% 0.062W
3161	4822 051 30123	12kΩ 5% 0.062W
3162	4822 053 20106	10MΩ 5% 0.25W
3169	4822 051 30102	1kΩ 5% 0.062W
3170	4822 117 12925	47kΩ 1% 0.063W 0603
3171	4822 051 30101	100Ω 5% 0.062W
3172	4822 051 20333	33kΩ 5% 0.1W
3173	4822 051 20333	33kΩ 5% 0.1W
3175	4822 051 30103	10kΩ 5% 0.062W
3176	4822 051 30103	10kΩ 5% 0.062W
3210	4822 051 30102	1kΩ 5% 0.062W
3211	4822 051 30222	2.2kΩ 5% 0.062W
3212	4822 051 30101	100Ω 5% 0.062W
3213	4822 116 52182	15Ω 5% 0.5W
3261	4822 117 11373	100Ω 1% 0805
3262	4822 117 11373	100Ω 1% 0805
3400	4822 052 11108	1Ω 5% 0.5W
3401	2120 105 93473	27Ω 5% 3W
3402	4822 053 10121	120Ω 5% 1W
3403	4822 116 52175	100Ω 5% 0.5W
3404	4822 051 30471	470Ω 5% 0.062W
3406	4822 117 11373	100Ω 1% 0805
3407	4822 051 30103	10kΩ 5% 0.062W
3409	4822 050 11002	1kΩ 1% 0.4W
3410	4822 051 20479	47Ω 5% 0.1W
3411	4822 116 52193	39Ω 5% 0.5W
3412	4822 117 11817	1.2kΩ 1% 1/16W
3414	4822 051 30331	330Ω 5% 0.062W
3415	3198 012 31590	15Ω 5% 3W
3417	4822 116 52176	10Ω 5% 0.5W
3418	4822 050 25603	56kΩ 1% 0.6W
3419	4822 051 30474	470kΩ 5% 0.062W
3420	4822 051 30332	3.3kΩ 5% 0.062W
3421	4822 051 30474	470kΩ 5% 0.062W
3422	4822 051 30332	3.3kΩ 5% 0.062W
3423	4822 053 10688	6.8Ω 5% 1W
3425	4822 116 52176	10Ω 5% 0.5W
3426	4822 116 52176	10Ω 5% 0.5W
3427	4822 051 30563	56kΩ 5% 0.062W
3427	4822 117 11148	56kΩ 1% 0.1W
3428	4822 051 20684	680kΩ 5% 0.1W
3428	4822 051 30684	680kΩ 5% 0.062W
3430	4822 051 20274	270kΩ 5% 0.1W
3430	4822 051 20334	330kΩ 5% 0,1W
3430	4822 117 12889	270kΩ 1% 0.063W 0603
3431	2306 207 03151	150Ω 5% 0.5W
3432	4822 051 20564	560kΩ 5% 0.1W
3433	4822 117 13632	100kΩ 1% 0603 0.62W
3434	4822 051 20008	Jumper 0805
3434	4822 051 20274	270kΩ 5% 0.1W
3437	4822 051 20109	10Ω 5% 0.1W
3437	4822 117 12889	270kΩ 1% 0.063W 0603
3440	4822 051 30102	1kΩ 5% 0.062W
3441	4822 051 30223	22kΩ 5% 0.062W
3442	4822 051 30474	470kΩ 5% 0.062W
3443	4822 051 30684	680kΩ 5% 0.062W
3444	4822 051 20108	1Ω 5% 0.1W
3447	4822 117 11373	100Ω 1% 0805
3449	4822 052 10101	100Ω 5% 0.33W
3450	4822 116 52257	22kΩ 5% 0.5W
3451	4822 116 52299	7.5kΩ 5% 0,5W
3455	4822 117 12902	8.2kΩ 1% 0.063W 0603
3456	4822 117 12903	1.8kΩ 1% 0.063W 0603
3457	4822 051 30152	1.5kΩ 5% 0.062W
3458	4822 051 30471	470Ω 5% 0.062W
3459	4822 051 30272	2.7kΩ 5% 0.062W
3460	4822 052 10108	1Ω 5% 0.33W
3461	4822 052 10108	1Ω 5% 0.33W
3462	4822 052 11108	1Ω 5% 0.5W
3463	4822 052 11108	1Ω 5% 0.5W
3464	4822 052 11108	1Ω 5% 0.5W
3465	4822 052 11108	1Ω 5% 0.5W
3466	4822 051 30472	4.7kΩ 5% 0.062W
3467	4822 117 13632	100kΩ 1% 0603 0.62W
3472	4822 051 30393	39kΩ 5% 0.062W
3474	4822 051 30563	56kΩ 5% 0.062W
3475	4822 051 30472	4.7kΩ 5% 0.062W
3476	4822 116 83874	220kΩ 5% 0.5W
3478	4822 116 52175	100Ω 5% 0.5W
3479	4822 052 10478	4.7Ω 5% 0.33W
3480	4822 052 10478	4.7Ω 5% 0.33W
3481	2322 750 61001	100Ω 5% 1206
3482	4822 051 30221	220Ω 5% 0.062W
3483	4822 117 12903	1.8kΩ 1% 0.063W 0603
3485	4822 051 30471	470Ω 5% 0.062W
3486	2120 108 94004	7.5kΩ 1% 0603
3487	4822 117 12902	8.2kΩ 1% 0.063W 0603
3488	4822 050 21005	1MΩ 1% 0.6W
3489	4822 051 30103	10kΩ 5% 0.062W
3490	4822 051 30332	3.3kΩ 5% 0.062W
3491	4822 117 12925	47kΩ 1% 0.063W 0603
3492	4822 116 52175	100Ω 5% 0.5W
3493	4822 050 21504	150kΩ 1% 0.6W
3495	4822 050 21503	15kΩ 1% 0.6W
3496	4822 051 30272	2.7kΩ 5% 0.062W
3497	4822 051 30333	33kΩ 5% 0.062W
3501	4822 116 83872	220Ω 5% 0.5W
3504	4822 051 30222	2.2kΩ 5% 0.062W
3505	4822 116 52245	150kΩ 5% 0.5W
3506	4822 051 30562	5.6kΩ 5% 0.063W 0603
3507	4822 050 21604	160kΩ 1% 0.6W
3508	4822 116 52182	15Ω 5% 0.5W
3509⚠	2122 550 00158	VDR 1mA 612V
3510	5322 117 12487	1kΩ 1% 0.125W
3511	4822 053 11222	2.2kΩ 5% 2W
3512	4822 051 30334	330kΩ 5% 0.062W
3513	4822 053 20155	1.5MΩ 5% 0.25W
3514	4822 117 11744	0.22Ω 5% 1W
3515	4822 117 11744	0.22Ω 5% 1W
3517	4822 117 10834	47kΩ 1% 0.1W
3518	4822 053 20334	330kΩ 5% 0.25W
3519	4822 117 11817	1.2kΩ 1% 1/16W
3520	4822 053 11333	33k 5% 2W
3521	4822 053 21475	4.7MΩ 5% 0,5W
3522	4822 117 11507	6.8kΩ 1% 0.1W
3523	4822 051 20105	1MΩ 5% 0.1W
3524	4822 051 30333	33kΩ 5% 0.062W
3525	4822 051 30479	47Ω 5% 0.062W
3527	4822 117 11951	2kΩ 1% 0.1W
3528	4822 051 30103	10kΩ 5% 0.062W
3529	4822 051 30472	4.7kΩ 5% 0.062W
3530	4822 051 30102	1kΩ 5% 0.062W
3531	4822 051 20472	4.7kΩ 5% 0.1W
3532	4822 117 12925	47kΩ 1% 0.063W 0603
3533	4822 116 52182	15Ω 5% 0.5W
3534	4822 117 12925	47kΩ 1% 0.063W 0603
3535	4822 051 30479	47Ω 5% 0.062W
3536	4822 051 30152	1.5kΩ 5% 0.062W
3537	4822 052 10471	470Ω 5% 0,33W
3538	4822 051 20333	33kΩ 5% 0.1W
3539	4822 051 20393	39kΩ 5% 0.1W
3540	4822 050 21003	10kΩ 1% 0.6W
3541	4822 116 52186	22Ω 5% 0.5W
3543	4822 050 11002	1kΩ 1% 0.4W
3544	4822 051 20393	39kΩ 5% 0.1W
3545	4822 116 52244	15kΩ 5% 0.5W
3546	4822 050 21003	10kΩ 1% 0.6W
3547	4822 051 30221	220Ω 5% 0.062W
3549	4822 051 30393	39kΩ 5% 0.062W
3550⚠	2122 663 00018	PTC 4.7Ω 20%
3552	4822 117 12903	1.8kΩ 1% 0.063W 0603
3553	4822 051 30153	15kΩ 5% 0.062W
3554	4822 053 20106	10MΩ 5% 0.25W
3555	4822 116 52285	470kΩ 5% 0.5W
3556	4822 117 10834	47kΩ 1% 0.1W
3557	3198 021 52240	220kΩ 5% 0805
3558	4822 117 10834	47kΩ 1% 0.1W
3559	4822 050 21003	10kΩ 1% 0.6W
3560	4822 051 20105	1MΩ 5% 0.1W
3610	4822 051 30223	22kΩ 5% 0.062W
3611	4822 051 30222	2.2kΩ 5% 0.062W
3620	4822 116 80676	1Ω5 5% 0.5W
3621	4822 116 80676	1Ω5 5% 0.5W
3622	4822 116 80676	1Ω5 5% 0.5W
3623	4822 116 52251	18kΩ 5% 0.5W
3624	4822 052 10158	1Ω5 5% 0.33W
3625	4822 050 15609	56Ω 1% 0.4W
3625	4822 053 10121	120Ω 5% 1W
3626	4822 050 15609	56Ω 1% 0.4W
3626	4822 116 52199	68Ω 5% 0.5W
3626	4822 116 80176	1Ω 5% 0.5W
3627	4822 051 20223	22kΩ 5% 0.1W
3630	4822 051 30393	39kΩ 5% 0.062W
3631	4822 051 30222	2.2kΩ 5% 0.062W
3632	4822 051 30183	18kΩ 5% 0.062W
3633	4822 051 30563	56kΩ 5% 0.062W
3634	4822 116 52251	18kΩ 5% 0.5W
3635	4822 116 52219	330Ω 5% 0.5W
3636	4822 051 30223	22kΩ 5% 0.062W
3637	4822 051 30103	10kΩ 5% 0.062W
3638	4822 051 30474	470kΩ 5% 0.062W
3639	4822 051 30563	56kΩ 5% 0.062W
3640	4822 051 30222	2.2kΩ 5% 0.062W
3641	4822 116 83883	470Ω 5% 0.5W
3642	4822 101 11193	47k 30% 0.1W
3643	4822 051 30334	330kΩ 5% 0.062W
3644	4822 051 30221	220Ω 5% 0.062W
3645	4822 116 52245	150kΩ 5% 0.5W
3646	4822 117 12925	47kΩ 1% 0.063W 0603
3647	4822 051 20228	2.2Ω 5% 0.1W
3649	4822 051 30103	10kΩ 5% 0.062W
3652	4822 051 20479	47Ω 5% 0.1W
3653	4822 051 20223	22kΩ 5% 0.1W
3654	4822 051 20472	4.7kΩ 5% 0.1W
3655	4822 051 30103	10kΩ 5% 0.062W
3656	4822 117 11817	1.2kΩ 1% 1/16W
3657	4822 051 30223	22kΩ 5% 0.062W

3658	4822 051 30223	22kΩ 5% 0.062W
3659	4822 051 30222	2.2kΩ 5% 0.062W
3660	4822 051 30562	5.6kΩ 5% 0.063W 0603
3661	4822 116 52206	120Ω 5% 0.5W
3662	4822 051 30152	1.5kΩ 5% 0.062W
3663	4822 116 52213	180Ω 5% 0.5W
3664	4822 051 30333	33kΩ 5% 0.062W
3681	4822 116 52207	1.2kΩ 5% 0.5W
3682	4822 117 13632	100kΩ 1% 0603 0.62W
3683	4822 051 30103	10kΩ 5% 0.062W
3684	4822 051 30682	6.8kΩ 5% 0.062W
3685	4822 051 30273	27kΩ 5% 0.062W
3686	4822 051 30563	56kΩ 5% 0.062W
3687	4822 116 52207	1.2kΩ 5% 0.5W
3688	4822 051 20684	680kΩ 5% 0.1W
3690	4822 051 30183	18kΩ 5% 0.062W
3691	4822 117 11373	100Ω 1% 0805
3701	4822 051 30103	10kΩ 5% 0.062W
3702	4822 051 30103	10kΩ 5% 0.062W
3703	4822 051 30333	33kΩ 5% 0.062W
3704	4822 117 10833	10kΩ 1% 0.1W
3705	4822 051 20828	8.2Ω 5% 0.1W
3706	4822 051 30472	4.7kΩ 5% 0.062W
3707	4822 051 30683	68kΩ 5% 0.062W
3708	4822 051 30563	56kΩ 5% 0.062W
3709	4822 117 11503	220Ω 1% 0.1W
3710	4822 051 30223	22kΩ 5% 0.062W
3711	4822 050 11204	120kΩ 1% 0.4W
3712	4822 117 12706	10kΩ 1% 0.063W 0603
3713	4822 116 83884	47kΩ 5% 0.5W
3714	4822 117 12925	47kΩ 1% 0.063W 0603
3715	4822 117 12925	47kΩ 1% 0.063W 0603
3716	4822 117 12925	47kΩ 1% 0.063W 0603
3717	4822 117 13632	100kΩ 1% 0603 0.62W
3718	4822 117 13632	100kΩ 1% 0603 0.62W
3719	4822 117 11503	220Ω 1% 0.1W
3720	4822 117 11503	220Ω 1% 0.1W
3721	4822 051 30472	4.7kΩ 5% 0.062W
3722	4822 051 30683	68kΩ 5% 0.062W
3723	4822 051 30563	56kΩ 5% 0.062W
3724	4822 117 11503	220Ω 1% 0.1W
3725	4822 051 30223	22kΩ 5% 0.062W
3726	4822 117 11503	220Ω 1% 0.1W
3727	4822 117 11503	220Ω 1% 0.1W
3728	4822 116 52234	100kΩ 5% 0,5W
3729	4822 117 10837	100kΩ 1% 0.1W
3730	4822 117 11503	220Ω 1% 0.1W
3731	4822 117 11503	220Ω 1% 0.1W
3732	4822 051 30223	22kΩ 5% 0.062W
3733	4822 051 30223	22kΩ 5% 0.062W
3734	4822 051 20124	120kΩ 5% 0.1W
3735	4822 051 30683	68kΩ 5% 0.062W
3736	4822 051 30563	56kΩ 5% 0.062W
3737	4822 051 30472	4.7kΩ 5% 0.062W
3738	4822 051 20828	8.2Ω 5% 0.1W
3739	4822 051 30683	68kΩ 5% 0.062W
3740	4822 051 30472	4.7kΩ 5% 0.062W
3741	2322 704 61243	12k4 1% 0603
3742	4822 051 30563	56kΩ 5% 0.062W
3743	4822 117 11449	2.2kΩ 5% 0.1W 0805
3745	4822 051 30102	1kΩ 5% 0.062W
3746	4822 051 30223	22kΩ 5% 0.062W
3748	4822 051 30008	Jumper 0603
3749	4822 116 83883	470Ω 5% 0.5W
3750	4822 117 11449	2.2kΩ 5% 0.1W 0805
3751	4822 117 11449	2.2kΩ 5% 0.1W 0805
3752	4822 117 11449	2.2kΩ 5% 0.1W 0805
3790	4822 051 30392	3.9kΩ 5% 0.063W 0603
3791	4822 051 30392	3.9kΩ 5% 0.063W 0603
3792	4822 051 30153	15kΩ 5% 0.062W
3793	4822 051 30153	15kΩ 5% 0.062W
3794	4822 051 30153	15kΩ 5% 0.062W
3795	4822 051 30123	12kΩ 5% 0.062W
3796	4822 051 30392	3.9kΩ 5% 0.063W 0603
3797	4822 051 30562	5.6kΩ 5% 0.063W 0603
3798	4822 051 30153	15kΩ 5% 0.062W
3998	4822 050 11002	1kΩ 1% 0.4W
9111	4822 051 20008	Jumper 0805
9115	4822 051 20008	Jumper 0805
9129	4822 051 20008	Jumper 0805
9418	4822 051 20008	Jumper 0805
9421	4822 051 20008	Jumper 0805
9422	4822 051 30008	Jumper 0603
9424	4822 051 30008	Jumper 0603
9427	4822 051 30008	Jumper 0603
9428	4822 051 30008	Jumper 0603
9429	4822 051 30008	Jumper 0603
9430	4822 051 30008	Jumper 0603
9431	4822 051 30008	Jumper 0603
9432	4822 051 30008	Jumper 0603
9433	4822 051 30008	Jumper 0603
9434	4822 051 30008	Jumper 0603
9435	4822 051 30008	Jumper 0603
9436	4822 051 30008	Jumper 0603
9437	4822 051 30008	Jumper 0603
9438	4822 051 30008	Jumper 0603
9440	4822 051 30008	Jumper 0603
9441	4822 051 30008	Jumper 0603
9443	4822 051 30008	Jumper 0603
9481	4822 051 30008	Jumper 0603
9483	4822 051 30008	Jumper 0603
9499	4822 051 30008	Jumper 0603
9561	4822 051 20008	Jumper 0805
9621	4822 051 30008	Jumper 0603
9624	4822 051 30008	Jumper 0603
9676	4822 051 30008	Jumper 0603
9677	4822 051 20008	Jumper 0805
9702	4822 051 30008	Jumper 0603
9705	4822 051 20008	Jumper 0805
9706	4822 051 30471	470Ω 5% 0.062W
9707	4822 051 30008	Jumper 0603
9711	4822 051 30008	Jumper 0603
9713	4822 051 30008	Jumper 0603
9714	4822 051 20008	Jumper 0805
9716	4822 051 20008	Jumper 0805
9717	4822 051 30008	Jumper 0603
9903	4822 051 30008	Jumper 0603
9908	4822 051 20008	Jumper 0805
9918	4822 051 30008	Jumper 0603
9920	4822 051 30008	Jumper 0603
9921	4822 051 20008	Jumper 0805
9922	4822 051 20008	Jumper 0805
9924	4822 051 20008	Jumper 0805
9925	4822 051 20008	Jumper 0805
9927	4822 051 30008	Jumper 0603
9933	4822 051 20008	Jumper 0805
9949	4822 051 30008	Jumper 0603
9950	4822 051 30008	Jumper 0603
9959	4822 051 20008	Jumper 0805
9966	4822 051 20008	Jumper 0805
9981	4822 051 20008	Jumper 0805
9984	4822 051 20008	Jumper 0805
9986	4822 051 20008	Jumper 0805
9994	4822 051 30008	Jumper 0603

5101▲	3104 308 20851	Trans. BS28219-01
5101▲	8204 000 75921	Trans. BS28219-01
5102	4822 526 10704	Bead 45Ω at 50MHz
5103	4822 526 10704	Bead 45Ω at 50MHz
5104	4822 157 11411	Bead 83Ω at 100MHz
5105	4822 157 11716	Bead 30Ω at 100MHz
5106	4822 526 10704	Bead 45Ω at 50MHz
5107	4822 157 11411	Bead 83Ω at 100MHz
5108	4822 526 10704	Bead 45Ω at 50MHz
5110	4822 157 71736	10µH 10%
5112	4822 157 11411	Bead 83Ω at 100MHz
5131	4822 157 50964	100µH 20%
5132	4822 157 11716	Bead 30Ω at 100MHz
5400	4822 157 11869	33µH 10% LHL08
5401	2422 536 00059	12µH 10%
5402	3198 018 21510	150µH 10%
5410▲	3128 138 39091	Transformer CE165T
5411	4822 157 71097	0.56µH 10%
5421	3104 308 20691	Linearity coil 5µH 36"
5422	4822 146 11137	Bridge coil W7131-003
5423	4822 157 71097	0.56µH 10%
5425	4822 157 11411	Bead 83Ω at 100MHz
5426	4822 157 70826	2.4µH
5430▲	3104 308 20501	LOT 1392.9010A
5461	4822 157 11411	Bead 83Ω at 100MHz
5463	4822 157 11411	Bead 83Ω at 100MHz
5465	4822 157 11411	Bead 83Ω at 100MHz
5467	4822 157 11411	Bead 83Ω at 100MHz
5469	4822 157 11411	Bead 83Ω at 100MHz
5501▲	4822 157 11523	DMF-2405
5504▲	2422 549 44877	Filter 45mH DMF2845H
5504▲	3104 308 20861	Filt. 35mH DMF2835 B
5505	4822 157 11411	Bead 83Ω at 100MHz
5507	4822 157 11411	Bead 83Ω at 100MHz
5509	4822 157 11411	Bead 83Ω at 100MHz
5511	2422 549 44873	Filter mains 56mH
5512▲	3104 308 20841	Transf. BS41218-00
5512▲	8204 000 75911	Transf. BS41218-00
5513	4822 157 11869	33µH 10% LHL08
5514	4822 157 11869	33µH 10% LHL08
5515	4822 157 11869	33µH 10% LHL08
5517	4822 157 11411	Bead 83Ω at 100MHz
5518	4822 526 10704	Bead 45Ω at 50MHz
5519	4822 157 11716	Bead 30Ω at 100MHz
5520	4822 157 11411	Bead 83Ω at 100MHz
5620	4822 157 11771	0.09µH 10%
5621▲	3104 308 20571	Trans. S13974-03
5701	2422 536 00385	68µH 10%
5702	2422 536 00385	68µH 10%
5703	4822 157 11716	Bead 30Ω at 100MHz
5707	4822 157 11411	Bead 83Ω at 100MHz
5708	4822 157 11411	Bead 83Ω at 100MHz
5711	4822 157 11411	Bead 83Ω at 100MHz
5712	4822 157 11411	Bead 83Ω at 100MHz
5715	4822 157 11411	Bead 83Ω at 100MHz
5716	4822 157 11411	Bead 83Ω at 100MHz
5720	2422 536 00385	68µH 10%
5721	2422 536 00385	68µH 10%
5722	4822 157 11411	Bead 83Ω at 100MHz
5723	4822 157 11411	Bead 83Ω at 100MHz
5725	4822 157 11411	Bead 83Ω at 100MHz
5902	4822 157 11869	33µH 10% LHL08
5903	4822 157 10359	33µH 10%

6080	4822 130 11397	BAS316
6082	4822 130 11528	1PS76SB10
6084	4822 130 11522	UDZ15B
6103	4822 130 41601	BYV95A
6103	4822 130 42488	BYD33D
6104	9340 548 69115	PDZ27B
6105	4822 130 34281	BZX79-B15
6106	3198 010 52790	BZX79-B27
6107	4822 130 11572	STPS8H100F
6108	4822 130 11528	1PS76SB10
6109	4822 130 31083	BYW55
6110	4822 130 42606	BYD33J
6110	9340 418 70133	BYV27-600
6111	4822 130 11596	BYW29EX-200
6113	4822 130 11596	BYW29EX-200
6114	4822 130 41601	BYV95A
6114	4822 130 42488	BYD33D
6115	4822 130 11528	1PS76SB10
6116	3198 020 55680	BZX384-C5V6
6117	9340 548 71115	SM PDZ33B
6118	9340 548 71115	SM PDZ33B
6119	9340 548 71115	SM PDZ33B
6120	4822 130 30621	1N4148
6121	4822 130 30621	1N4148
6122	3198 010 53980	BZX79-B3V9
6130	9340 548 61115	PDZ12B
6131	4822 130 11397	BAS316
6132	4822 130 11416	PDZ6.8B
6133	4822 130 11397	BAS316
6134	4822 130 11397	BAS316
6141	4822 130 11522	UDZ15B
6142	4822 130 11528	1PS76SB10
6143	4822 130 11397	BAS316
6144	4822 130 11397	BAS316
6147	4822 130 33657	BZV85-C6V8
6148	4822 130 11397	BAS316
6149	3198 020 55680	BZX384-C5V6
6400	4822 130 70055	BYV27-400
6402	4822 130 11397	BAS316
6403	9340 548 52115	PDZ5.1B
6404	4822 130 11397	BAS316
6405	4822 130 34383	BZX79-B47
6406	4822 130 11397	BAS316
6407	4822 130 11397	BAS316
6408	4822 130 42488	BYD33D
6421	4822 130 10753	BY359X-1500
6422	4822 130 10218	BY229X-800
6442	4822 130 11522	UDZ15B
6455	4822 130 11397	BAS316
6456	5322 130 34337	BAV99
6457	9322 102 64685	UDZ2.7B
6458	3198 020 55680	BZX384-C5V6
6460	4822 130 41487	BYV95C
6462	9322 127 32682	BYW76-RAS15/10
6464	9322 127 32682	BYW76-RAS15/10
6480	4822 130 42488	BYD33D
6481	4822 130 11522	UDZ15B
6482	4822 130 11397	BAS316
6483	4822 130 11528	1PS76SB10
6493	4822 130 11528	1PS76SB10
6499	4822 130 11551	UDZS10B
6505	4822 130 34281	BZX79-B15
6506	4822 130 80622	BAT54
6507	4822 130 11397	BAS316
6509	4822 130 11397	BAS316
6510	4822 130 34142	BZX79-B33
6511	4822 130 11397	BAS316
6512	4822 130 11397	BAS316
6514	5322 130 31932	BZT03-C200
6515	4822 130 33657	BZV85-C6V8
6516	4822 130 11397	BAS316
6517	4822 130 11528	1PS76SB10
6518	9340 548 69115	PDZ27B
6519	4822 130 42488	BYD33D
6519	5322 130 31938	BYV27-200
6520	4822 130 30621	1N4148
6522	4822 130 11397	BAS316

6523	4822 130 80622	BAT54
6525▲	4822 130 10741	GBU6J
6530	4822 130 41487	BYV95C
6533	4822 130 80622	BAT54
6534	9322 165 72687	DTV1500MFP
6535	4822 130 11572	STPS8H100F
6536	4822 130 11572	STPS8H100F
6537	4822 130 11397	BAS316
6614	4822 130 11528	1PS76SB10
6615	4822 130 11397	BAS316
6616	4822 130 11397	BAS316
6617	4822 130 11397	BAS316
6618	4822 130 11397	BAS316
6619	4822 130 42488	BYD33D
6620	5322 130 31938	BYV27-200
6621	4822 130 42488	BYD33D
6622	5322 130 33635	BZV85-C8V2
6623	4822 130 11397	BAS316
6624	4822 130 11397	BAS316
6625	4822 130 11397	BAS316
6626	4822 130 11397	BAS316
6627	4822 130 11397	BAS316
6701	4822 130 11397	BAS316
6745	4822 130 11551	UDZS10B



7100	4822 130 44568	BC557B
7101	4822 130 40981	BC337-25
7102	4822 130 11417	STP3NB60FP
7103▲	9322 149 04682	TCET1102
7105	4822 130 44568	BC557B
7120	5322 130 60159	BC846B
7130	5322 130 60159	BC846B
7131	4822 130 11336	STP16NE06FP
7140	5322 130 60159	BC846B
7141	4822 130 11336	STP16NE06FP
7210	5322 130 60159	BC846B
7211	4822 130 42804	BC817-25
7408	5322 130 44647	BC368
7409	5322 130 60159	BC846B
7421	9340 210 30127	BU2520DX
7440	4822 209 70672	LM358N SEL.
7441	4822 130 60373	BC856B
7442	4822 130 60373	BC856B
7443	5322 130 60159	BC846B
7445	5322 130 60159	BC846B
7450	5322 209 61472	LM393M
7455	4822 209 73852	PMBT2369
7480	4822 130 11417	STP3NB60FP
7482▲	4822 130 11418	TCDT1102G
7486	5322 130 60159	BC846B
7487	5322 130 60159	BC846B
7501	5322 130 60159	BC846B
7502	4822 130 40981	BC337-25
7504	9322 171 30687	STP11NM60
7505	4822 130 60373	BC856B
7506	4822 209 14933	TL431IZ
7507	9322 149 04682	TCET1102
7508	4822 130 41646	BF423
7528	4822 130 40981	BC337-25
7529	4822 130 44461	BC546B
7530	5322 130 60159	BC846B
7611	5322 130 60159	BC846B
7612	5322 130 60159	BC846B
7613	4822 209 81397	TL431CLPST
7614	5322 130 60159	BC846B
7620	4822 209 90009	TDA8177
7641	5322 130 60159	BC846B
7652	5322 130 60159	BC846B
7653	5322 130 60159	BC846B
7654	4822 130 60373	BC856B
7680	4822 209 60956	TDA7052/N2
7681	5322 130 60159	BC846B
7682	5322 130 44647	BC368
7700	9322 163 86682	TDA7490L
7701	5322 130 60159	BC846B
7702	9322 163 86682	TDA7490L
7703	5322 130 60159	BC846B
7704	5322 130 60159	BC846B
7705	5322 130 60159	BC846B
7706	4822 130 60373	BC856B
7707	5322 130 60159	BC846B

Small Signal Panel [B]

Various

0031	3104 304 24941	SSB-Top frame
1001	2422 543 89022	Crystal 6MHz 20pF CX5F
1301	2422 540 98456	Resonator 12MHz
1305	2422 543 01184	Xtal 4.433619MHz 20pF
1308	2422 543 01183	Xtal 3.579545MHz 16pF
1402	2422 025 17103	Connector 3p m
1407	2422 549 44324	Filt. TPWCC04BS
1408	2422 549 44372	SAW 38.9MHz K3953L
1409	2422 549 44369	SAW 38.9MHz K9656L
1702	2422 540 98456	Resonator 12MHz
1A00	2422 543 89019	Crystal 18.432MHz 12pF
1I01	4822 267 10771	Socket 2 x SCART
1I03	2422 025 16194	Socket 8P for transmitter
1I04	4822 267 10771	Socket 2 x SCART
1I05	4822 267 11033	Socket CINCH 3P f
1I06	2422 026 05424	Socket CINCH 6P f
1I11	2422 025 17388	Connector 30p f
1I70	2422 025 16966	Connector 5P m SMD
1P00	2422 543 01184	Xtal 4.433619MHz 20pF
1P03	2422 543 01183	Xtal 3.579545MHz 16pF
1P04	2422 549 44369	SAW 38.9MHz K9656L
1P06	2422 549 44372	SAW 38.9MHz K3953L
1P09	2422 549 44324	Filt. TPWCC04BS
1P10	4822 242 81299	Filter 6.5 MHz
1P11	4822 242 10314	Filter 5.5 MHz
1P12	4822 242 81265	Filter 6.0 MHz
1S02	2422 025 17682	Connector 40p M
1S15	2422 025 17682	Connector 40p M
1T01▲	3139 147 19571	Tuner UV1318ST/A I-3
1T02	3139 147 19341	Tuner UV1318S/A I-3
1U01▲	2422 086 11021	Fuse SM T 800 mA 63V
1U02	2422 025 17104	Connector 7p m
8205	3104 311 05121	Cable 40P/180/40P
8206	3104 311 05301	Cable 40P/220/40P
8250	3104 311 05981	FFC Foil 30P/120/30P
8251	3104 311 03161	Cable 7P/340/7P KR



2002	4822 126 11669	27pF 5% 50V 0603
2003	4822 126 13879	220nF 20% 16V
2004	4822 126 13879	220nF 20% 16V
2005	2238 586 59812	100nF 20-80% 50V 0603
2006	2238 586 59812	100nF 20-80% 50V 0603
2007	2238 586 59812	100nF 20-80% 50V 0603
2008	2238 586 59812	100nF 20-80% 50V 0603
2010	4822 126 11785	47pF 5% 50V 0603
2011	4822 126 11785	47pF 5% 50V 0603
2012	4822 126 11785	47pF 5% 50V 0603
2013	2020 021 91557	100µF 20% 16V
2016	4822 124 12095	100µF 20% 16V
2017	2238 586 59812	100nF 20-80% 50V 0603
2018	2222 867 15339	33pF 5% 50V 0603
2019	2238 586 59812	100nF 20-80% 50V 0603
2020	4822 126 13883	220pF 5% 50V
2022	2238 586 59812	100nF 20-80% 50V 0603
2023	2238 586 59812	100nF 20-80% 50V 0603
2024	2238 586 59812	100nF 20-80% 50V 0603
2025	2238 586 59812	100nF 20-80% 50V 0603
2026	2238 586 59812	100nF 20-80% 50V 0603
2027	2238 586 59812	100nF 20-80% 50V 0603
2028	2238 586 59812	100nF 20-80% 50V 0603
2029	2238 586 59812	100nF 20-80% 50V 0603
2031	2238 586 59812	100nF 20-80% 50V 0603
2033	4822 126 14226	82pF 5% 50V 0603
2034	4822 126 14226	82pF 5% 50V 0603
2035	4822 126 14226	82pF 5% 50V 0603
2036	4822 126 14226	82pF 5% 50V 0603
2037	4822 126 14226	82pF 5% 50V 0603
2038	2238 586 59812	100nF 20-80% 50V 0603
2039	2238 586 59812	100nF 20-80% 50V 0603
2040	2238 586 59812	100nF 20-80% 50V 0603
2067	2238 586 59812	100nF 20-80% 50V 0603
2068	4822 126 14238	2.2nF 50V 0603
2071	2238 586 59812	100nF 20-80% 50V 0603
2072	2238 586 59812	100nF 20-80% 50V 0603
2073	2238 586 59812	100nF 20-80% 50V 0603
2074	2238 586 59812	100nF 20-80% 50V 0603
2302	2238 586 59812	100nF 20-80% 50V 0603
2303	4822 122 33177	10nF 20% 50V
2304	4822 122 33741	10pF 10% 50V
2305	2238 586 59812	100nF 20-80% 50V 0603
2306	4822 126 13881	470pF 5% 50V
2307	2238 586 59812	100nF 20-80% 50V 0603
2308	4822 122 33741	10pF 10% 50V
2312	2020 552 96659	33nF 5% 50V 1206
2313	2020 552 96685	100nF 5% 25V 1206
2314	2020 021 91557	100µF 20% 16V
2315	2238 586 59812	100nF 20-80% 50V 0603
2316	2238 586 59812	100nF 20-80% 50V 0603
2317	2020 552 96448	1µF 10% 16V
2318	2238 916 15641	22nF 10% 25V 0603
2319	5322 126 11578	1nF 10% 50V 0603
2320	4822 122 33741	10pF 10% 50V
2321	2238 586 59812	100nF 20-80% 50V 0603
2322	2238 586 59812	100nF 20-80% 50V 0603
2323	2238 586 59812	100nF 20-80% 50V 0603
2324	5322 126 11583	10nF 10% 50V 0603
2325	2238 586 59812	100nF 20-80% 50V 0603
2326	5322 126 11583	10nF 10% 50V 0603
2328	4822 122 33761	22pF 5% 50V
2329	2238 586 59812	100nF 20-80% 50V 0603
2330	2238 586 59812	100nF 20-80% 50V 0603
2331	2238 586 59812	100nF 20-80% 50V 0603
2332	2238 586 59812	100nF 20-80% 50V 0603
2333	4822 126 14491	2.2µF -20+80% 10V 0805
2334	2022 552 05615	2.2µF 10% 6.3V 0805
2335	5322 126 11578	1nF 10% 50V 0603
2336	2022 552 05615	2.2µF 10% 6.3V 0805
2340	2020 021 91557	100µF 20% 16V
2350	2238 586 59812	100nF 20-80% 50V 0603
2351	2238 586 59812	100nF 20-80% 50V 0603
2352	2238 586 59812	100nF 20-80% 50V 0603
2353	2238 586 59812	100nF 20-80% 50V 0603
2354	2238 586 59812	100nF 20-80% 50V 0603
2356	2238 586 59812	100nF 20-80% 50V 0603
2357	2238 586 59812	100nF 20-80% 50V 0603
2358	5322 126 11579	3.3nF 10% 63V
2359	4822 122 33752	15pF 5% 50V
2360	3198 016 31280	1.2pF 50V 0603
2361	3198 016 31280	1.2pF 50V 0603
2362	4822 126 11663	12pF 5% 50V 0603
2363	4822 126 13881	470pF 5% 50V
2365	2238 586 59812	100nF 20-80% 50V 0603
2366	2238 586 59812	100nF 20-80% 50V 0603
2367	2238 586 59812	100nF 20-80% 50V 0603
2368	2238 586 59812	100nF 20-80% 50V 0603
2369	2238 586 59812	100nF 20-80% 50V 0603
2370	2238 586 59812	100nF 20-80% 50V 0603
2371	4822 126 13193	4.7nF 10% 63V
2372	2020 552 96448	1µF 10% 16V
2373	2238 586 59812	100nF 20-80% 50V 0603
2374	4822 126 14491	2.2µF -20+80% 10V 0805
2375	2238 916 15641	22nF 10% 25V 0603
2376	2238 586 59812	100nF 20-80% 50V 0603
2377	2020 021 91557	100µF 20% 16V
2378	2238 586 59812	100nF 20-80% 50V 0603
2384	2238 586 59812	100nF 20-80% 50V 0603
2385	2238 586 59812	100nF 20-80% 50V 0603
2386	5322 126 11578	1nF 10% 50V 0603
2390	2238 586 59812	100nF 20-80% 50V 0603
2391	2238 586 59812	100nF 20-80% 50V 0603
2394	4822 126 14491	2.2µF -20+80% 10V 0805
2403	2238 586 59812	100nF 20-80% 50V 0603
2404	2020 552 96448	1µF 10% 16V
2405	4822 126 13193	4.7nF 10% 63V
2406	4822 126 13883	220pF 5% 50V
2407	4822 126 13956	68pF 5% 63V 0603
2408	3198 016 33380	3.3pF 50V 0603
2409	4822 126 14491	2.2µF -20+80% 10V 0805
2410	2020 021 91557	100µF 20% 16V
2411	2238 586 59812	100nF 20-80% 50V 0603
2412	4822 126 13193	4.7nF 10% 63V
2414	2020 021 91557	100µF 20% 16V
2415	2238 586 59812	100nF 20-80% 50V 0603
2417	3198 017 44740	470nF 10V 0603
2418	3198 016 35680	5.6pF 0.5pF 50V 0603
2422	2238 586 59812	100nF 20-80% 50V 0603
2424	2238 586 59812	100nF 20-80% 50V 0603
2425	2020 021 91557	100µF 20% 16V
2431	2238 586 59812	100nF 20-80% 50V 0603
2432	2238 586 59812	100nF 20-80% 50V 0603
2433	2238 586 59812	100nF 20-80% 50V 0603
2701	4822 122 33752	15pF 5% 50V
2704	4822 122 33752	15pF 5% 50V
2707	4822 122 33752	15pF 5% 50V
2709	2238 586 59812	100nF 20-80% 50V 0603
2710	2238 586 59812	100nF 20-80% 50V 0603
2711	2238 586 59812	100nF 20-80% 50V 0603
2712	2238 586 59812	100nF 20-80% 50V 0603
2713	4822 122 33761	22pF 5% 50V
2714	4822 122 33761	22pF 5% 50V
2716	2238 586 59812	100nF 20-80% 50V 0603
2717	4822 126 11663	12pF 5% 50V 0603
2718	4822 122 33752	15pF 5% 50V
2719	4822 122 33752	15pF 5% 50V
2720	4822 122 33752	15pF 5% 50V
2721	2020 552 94427	100pF 5% 50v 0603
2722	2020 552 94427	100pF 5% 50v 0603
2723	4822 126 14225	56pF 5% 50V 0603
2724	2020 552 94427	100pF 5% 50v 0603
2725	4822 126 11663	12pF 5% 50V 0603
2726	4822 126 11669	27pF 5% 50V 0603
2727	4822 126 11663	12pF 5% 50V 0603
2728	2020 021 91554	10µF 20% 16V
2729	2238 586 59812	100nF 20-80% 50V 0603
2730	2020 021 91557	100µF 20% 16V
2731	2238 586 59812	100nF 20-80% 50V 0603
2732	2238 586 59812	100nF 20-80% 50V 0603
2733	2238 586 59812	100nF 20-80% 50V 0603

2734	2238 586 59812	100nF 20-80% 50V 0603
2735	2238 586 59812	100nF 20-80% 50V 0603
2736	4822 126 11669	27pF 5% 50V 0603
2737	4822 126 11663	12pF 5% 50V 0603
2738	4822 126 11663	12pF 5% 50V 0603
2739	4822 126 11669	27pF 5% 50V 0603
2740	2238 916 15641	22nF 10% 25V 0603
2741	2238 916 15641	22nF 10% 25V 0603
2742	2238 916 15641	22nF 10% 25V 0603
2743	2238 586 59812	100nF 20-80% 50V 0603
2744	2238 586 59812	100nF 20-80% 50V 0603
2745	2238 586 59812	100nF 20-80% 50V 0603
2746	2238 586 59812	100nF 20-80% 50V 0603
2747	2238 586 59812	100nF 20-80% 50V 0603
2748	2238 586 59812	100nF 20-80% 50V 0603
2749	2020 021 91554	10µF 20% 16V
2750	2238 586 59812	100nF 20-80% 50V 0603
2751	2238 586 59812	100nF 20-80% 50V 0603
2752	2238 586 59812	100nF 20-80% 50V 0603
2753	2238 586 59812	100nF 20-80% 50V 0603
2754	2238 586 59812	100nF 20-80% 50V 0603
2755	2238 586 59812	100nF 20-80% 50V 0603
2756	2238 586 59812	100nF 20-80% 50V 0603
2757	2238 916 15641	22nF 10% 25V 0603
2760	2238 586 59812	100nF 20-80% 50V 0603
2761	2238 586 59812	100nF 20-80% 50V 0603
2762	2238 586 59812	100nF 20-80% 50V 0603
2763	2238 586 59812	100nF 20-80% 50V 0603
2764	2238 586 59812	100nF 20-80% 50V 0603
2765	2238 586 59812	100nF 20-80% 50V 0603
2766	2238 586 59812	100nF 20-80% 50V 0603
2767	2238 586 59812	100nF 20-80% 50V 0603
2768	2238 586 59812	100nF 20-80% 50V 0603
2769	2238 586 59812	100nF 20-80% 50V 0603
2770	2020 021 91554	10µF 20% 16V
2771	2238 586 59812	100nF 20-80% 50V 0603
2772	2020 021 91557	100µF 20% 16V
2773	2238 586 59812	100nF 20-80% 50V 0603
2774	2238 586 59812	100nF 20-80% 50V 0603
2775	2238 586 59812	100nF 20-80% 50V 0603
2776	2238 586 59812	100nF 20-80% 50V 0603
2777	2238 586 59812	100nF 20-80% 50V 0603
2778	2238 586 59812	100nF 20-80% 50V 0603
2779	2238 586 59812	100nF 20-80% 50V 0603
2780	2238 586 59812	100nF 20-80% 50V 0603
2781	2238 586 59812	100nF 20-80% 50V 0603
2782	2238 586 59812	100nF 20-80% 50V 0603
2783	2238 586 59812	100nF 20-80% 50V 0603
2784	2238 586 59812	100nF 20-80% 50V 0603
2785	2238 586 59812	100nF 20-80% 50V 0603
2786	2238 586 59812	100nF 20-80% 50V 0603
2787	2238 586 59812	100nF 20-80% 50V 0603
2788	2238 586 59812	100nF 20-80% 50V 0603
2789	2238 586 59812	100nF 20-80% 50V 0603
2790	2238 586 59812	100nF 20-80% 50V 0603
2791	2238 586 59812	100nF 20-80% 50V 0603
2792	2020 021 91554	10µF 20% 16V
2793	2238 586 59812	100nF 20-80% 50V 0603
2794	2020 021 91554	10µF 20% 16V
2795	2238 586 59812	100nF 20-80% 50V 0603
2796	2238 586 59812	100nF 20-80% 50V 0603
2797	2238 586 59812	100nF 20-80% 50V 0603
2798	2238 586 59812	100nF 20-80% 50V 0603
2799	2238 586 59812	100nF 20-80% 50V 0603
2800	2238 586 59812	100nF 20-80% 50V 0603
2801	2238 586 59812	100nF 20-80% 50V 0603
2802	2238 586 59812	100nF 20-80% 50V 0603
2803	2238 586 59812	100nF 20-80% 50V 0603
2804	2238 586 59812	100nF 20-80% 50V 0603
2805	2238 586 59812	100nF 20-80% 50V 0603
2806	2020 021 91557	100µF 20% 16V
2807	2238 586 59812	100nF 20-80% 50V 0603
2808	2020 021 91554	10µF 20% 16V
2809	2238 586 59812	100nF 20-80% 50V 0603
2810	2238 586 59812	100nF 20-80% 50V 0603
2811	2238 586 59812	100nF 20-80% 50V 0603
2812	2238 586 59812	100nF 20-80% 50V 0603
2813	2238 586 59812	100nF 20-80% 50V 0603
2814	2238 586 59812	100nF 20-80% 50V 0603
2815	4822 126 14223	2.2pF +-0.25pF 50V 0603
2816	4822 126 14223	2.2pF +-0.25pF 50V 0603
2817	2238 586 59812	100nF 20-80% 50V 0603
2818	4822 126 14223	2.2pF +-0.25pF 50V 0603
2819	2238 586 59812	100nF 20-80% 50V 0603
2820	2238 586 59812	100nF 20-80% 50V 0603
2821	2238 586 59812	100nF 20-80% 50V 0603
2822	2238 586 59812	100nF 20-80% 50V 0603
2823	5322 126 11578	1nF 10% 50V 0603
2824	5322 126 11578	1nF 10% 50V 0603
2825	2238 586 59812	100nF 20-80% 50V 0603
2826	2238 586 59812	100nF 20-80% 50V 0603
2827	2238 586 59812	100nF 20-80% 50V 0603
2828	2238 586 59812	100nF 20-80% 50V 0603
2829	2238 586 59812	100nF 20-80% 50V 0603
2830	2238 586 59812	100nF 20-80% 50V 0603
2831	4822 126 13956	68pF 5% 63V 0603
2832	2238 586 59812	100nF 20-80% 50V 0603
2833	2238 586 59812	100nF 20-80% 50V 0603
2835	2238 586 59812	100nF 20-80% 50V 0603
2838	2238 586 59812	100nF 20-80% 50V 0603
2843	2238 586 59812	100nF 20-80% 50V 0603
2845	2238 586 59812	100nF 20-80% 50V 0603
2846	2238 586 59812	100nF 20-80% 50V 0603
2847	2238 586 59812	100nF 20-80% 50V 0603
2848	2238 586 59812	100nF 20-80% 50V 0603
2851	2238 586 59812	100nF 20-80% 50V 0603
2853	2238 586 59812	100nF 20-80% 50V 0603
2854	2238 586 59812	100nF 20-80% 50V 0603
2855	2238 586 59812	100nF 20-80% 50V 0603
2857	2238 586 59812	100nF 20-80% 50V 0603
2859	2238 586 59812	100nF 20-80% 50V 0603
2860	2238 586 59812	100nF 20-80% 50V 0603
2861	2238 586 59812	100nF 20-80% 50V 0603
2864	2238 586 59812	100nF 20-80% 50V 0603
2865	2238 586 59812	100nF 20-80% 50V 0603
2866	2238 586 59812	100nF 20-80% 50V 0603
2867	2238 586 59812	100nF 20-80% 50V 0603
2870	2020 021 91554	10µF 20% 16V
2871	2020 021 91554	10µF 20% 16V
2872	2238 586 59812	100nF 20-80% 50V 0603
2874	2020 021 91554	10µF 20% 16V
2880	2020 021 91557	100µF 20% 16V
2881	4822 126 11669	27pF 5% 50V 0603
2884	2238 586 59812	100nF 20-80% 50V 0603
2885	4822 126 11663	12pF 5% 50V 0603
2886	2238 586 59812	100nF 20-80% 50V 0603
2887	2238 586 59812	100nF 20-80% 50V 0603
2888	2238 586 59812	100nF 20-80% 50V 0603
2889	2238 586 59812	100nF 20-80% 50V 0603
2890	2238 586 59812	100nF 20-80% 50V 0603
2891	2238 586 59812	100nF 20-80% 50V 0603
2892	2238 586 59812	100nF 20-80% 50V 0603
2893	2238 586 59812	100nF 20-80% 50V 0603
2894	2238 586 59812	100nF 20-80% 50V 0603
2895	2238 586 59812	100nF 20-80% 50V 0603
2896	2238 586 59812	100nF 20-80% 50V 0603
2897	2238 586 59812	100nF 20-80% 50V 0603
2898	2238 586 59812	100nF 20-80% 50V 0603
2899	2238 586 59812	100nF 20-80% 50V 0603
2A00	2020 552 96618	1nF 10% 50V 0402
2A01	2020 021 91557	100µF 20% 16V
2A02	2020 552 96448	1µF 10% 16V
2A03	2020 021 91557	100µF 20% 16V
2A04	2020 552 96448	1µF 10% 16V
2A05	2020 021 91557	100µF 20% 16V
2A06	2020 552 96618	1nF 10% 50V 0402
2A07	2020 021 91557	100µF 20% 16V
2A08	2020 552 96448	1µF 10% 16V
2A09	5322 126 11583	10nF 10% 50V 0603
2A10	2238 586 59812	100nF 20-80% 50V 0603
2A11	2238 586 59812	100nF 20-80% 50V 0603
2A12	2020 552 96618	1nF 10% 50V 0402
2A13	2020 552 96618	1nF 10% 50V 0402
2A14	2020 552 96618	1nF 10% 50V 0402
2A15	2020 021 91557	100µF 20% 16V
2A16	2238 586 59812	100nF 20-80% 50V 0603
2A17	2020 552 96618	1nF 10% 50V 0402
2A18	2020 021 91557	100µF 20% 16V
2A19	3198 017 41050	1µF 10V 0603
2A20	2020 552 96448	1µF 10% 16V
2A21	2238 586 59812	100nF 20-80% 50V 0603
2A22	2238 586 59812	100nF 20-80% 50V 0603
2A23	2238 586 59812	100nF 20-80% 50V 0603
2A25	4822 126 14324	33pF 5% 50V 0402
2A26	2238 586 59812	100nF 20-80% 50V 0603
2A27	2020 552 96618	1nF 10% 50V 0402
2A28	2238 869 15101	100pF 5% 50V 0402
2A29	2238 869 15101	100pF 5% 50V 0402
2A30	4822 126 14324	33pF 5% 50V 0402
2A31	2238 586 59812	100nF 20-80% 50V 0603
2A32	2238 869 15101	100pF 5% 50V 0402
2A33	2238 586 59812	100nF 20-80% 50V 0603
2A34	2238 869 15101	100pF 5% 50V 0402
2A35	2020 552 96618	1nF 10% 50V 0402
2A36	4822 126 14324	33pF 5% 50V 0402
2A37	2238 869 15101	100pF 5% 50V 0402
2A38	2238 869 15101	100pF 5% 50V 0402
2A39	2020 552 96448	1µF 10% 16V
2A40	2238 586 59812	100nF 20-80% 50V 0603
2A41	2020 021 91554	10µF 20% 16V
2A42	2020 021 91554	10µF 20% 16V
2A43	2020 021 91554	10µF 20% 16V
2A44	2238 586 59812	100nF 20-80% 50V 0603
2A45	5322 126 11583	10nF 10% 50V 0603
2A46	2020 552 96448	1µF 10% 16V
2A47	2020 552 96618	1nF 10% 50V 0402
2A48	2020 552 96618	1nF 10% 50V 0402
2A49	2020 552 96448	1µF 10% 16V
2A50	2020 552 96618	1nF 10% 50V 0402
2A51	2020 552 96618	1nF 10% 50V 0402
2A52	2020 552 96618	1nF 10% 50V 0402
2A54	2020 552 96618	1nF 10% 50V 0402
2A57	2020 552 96618	1nF 10% 50V 0402
2A59	2020 552 96448	1µF 10% 16V
2A60	2020 552 96618	1nF 10% 50V 0402
2A61	2020 552 96618	1nF 10% 50V 0402
2A62	2020 552 96448	1µF 10% 16V
2A63	2020 552 96618	1nF 10% 50V 0402
2A64	2238 586 59812	100nF 20-80% 50V 0603
2A65	2020 552 96618	1nF 10% 50V 0402
2A66	2020 552 96448	1µF 10% 16V
2A67	2020 552 96448	1µF 10% 16V
2A68	2020 552 96618	1nF 10% 50V 0402
2A69	2020 552 96448	1µF 10% 16V
2A70	2020 552 96448	1µF 10% 16V
2A71	2020 552 96448	1µF 10% 16V
2A72	2020 552 96448	1µF 10% 16V
2A73	2020 552 96618	1nF 10% 50V 0402
2A74	2020 552 96448	1µF 10% 16V
2A75	2020 552 96448	1µF 10% 16V
2A76	2238 586 59812	100nF 20-80% 50V 0603
2A77	2020 552 96618	1nF 10% 50V 0402
2A78	2020 552 96618	1nF 10% 50V 0402
2A79	2238 586 59812	100nF 20-80% 50V 0603
2A80	2020 552 96448	1µF 10% 16V
2A81	2020 552 96618	1nF 10% 50V 0402
2A82	3198 017 31530	15nF 20% 50V 0603
2A83	2238 586 59812	100nF 20-80% 50V 0603
2A84	2238 869 15101	100pF 5% 50V 0402
2A85	2238 869 15101	100pF 5% 50V 0402
2A86	2238 869 15101	100pF 5% 50V 0402
2A87	2020 552 96618	1nF 10% 50V 0402
2A88	2238 586 59812	100nF 20-80% 50V 0603
2A89	2020 552 96448	1µF 10% 16V
2A90	2020 021 91685	22µF 20% 16V
2A91	2020 552 96448	1µF 10% 16V
2A92	2020 552 96448	1µF 10% 16V
2A93	2238 869 15101	100pF 5% 50V 0402
2A94	2238 869 15101	100pF 5% 50V 0402
2A95	4822 126 13883	220pF 5% 50V
2A96	2238 869 15101	100pF 5% 50V 0402
2A97	2238 869 15101	100pF 5% 50V 0402
2A98	2238 869 15101	100pF 5% 50V 0402
2A99	4822 126 14324	33pF 5% 50V 0402
2AA0	2238 869 15101	100pF 5% 50V 0402
2AA1	2238 869 15101	100pF 5% 50V 0402
2AA5	4822 126 14324	33pF 5% 50V 0402
2AA6	2020 552 96618	1nF 10% 50V 0402
2AA7	2020 552 96618	1nF 10% 50V 0402
2AA8	2020 552 96618	1nF 10% 50V 0402
2AA9	3198 016 35680	5.6pF 0.5pF 50V 0603
2AB0	3198 016 35680	5.6pF 0.5pF 50V 0603
2AB2	2020 552 96618	1nF 10% 50V 0402
2AB3	2020 552 96448	1µF 10% 16V
2AB4	2020 552 96448	1µF 10% 16V
2AB5	2020 021 91554	10µF 20% 16V
2AB8	2020 552 96448	1µF 10% 16V
2AB9	4822 122 33741	10pF 10% 50V
2AC0	4822 122 33741	10pF 10% 50V
2AD0	2020 552 96618	1nF 10% 50V 0402
2AD1	2020 552 96448	1µF 10% 16V
2AD3	2020 552 96448	1µF 10% 16V
2AD4	2020 552 96448	1µF 10% 16V
2AD5	2020 552 96618	1nF 10% 50V 0402
2AD6	2020 552 96618	1nF 10% 50V 0402
2AD7	2020 552 96618	1nF 10% 50V 0402
2AD8	4822 122 33741	10pF 10% 50V
2AD9	2020 552 96618	1nF 10% 50V 0402
2AE0	4822 122 33741	10pF 10% 50V
2AE1	4822 122 33741	10pF 10% 50V
2AE2	2020 552 96618	1nF 10% 50V 0402
2AE3	5322 126 11583	10nF 10% 50V 0603
2AE4	2238 586 59812	100nF 20-80% 50V 0603
2AE5	5322 126 11583	10nF 10% 50V 0603
2AE6	2238 586 59812	100nF 20-80% 50V 0603
2AE8	2238 586 59812	100nF 20-80% 50V 0603
2AF0	5322 126 11583	10nF 10% 50V 0603
2AF3	2020 021 91557	100µF 20% 16V
2AF4	2238 586 59812	100nF 20-80% 50V 0603
2AK0	2020 552 96448	1µF 10% 16V
2AK1	2020 552 96618	1nF 10% 50V 0402
2AK2	2020 552 96448	1µF 10% 16V
2AK3	2020 552 96618	1nF 10% 50V 0402
2AK4	2020 552 96448	1µF 10% 16V
2AK5	2020 552 96618	1nF 10% 50V 0402
2AK6	2238 586 59812	100nF 20-80% 50V 0603
2AK7	2020 021 91554	10µF 20% 16V
2AK8	2020 021 91554	10µF 20% 16V
2AK9	2020 021 91554	10µF 20% 16V
2AL0	2238 586 59812	100nF 20-80% 50V 0603
2AL1	2020 552 96448	1µF 10% 16V
2AL2	2020 552 96448	1µF 10% 16V

2AL3	2020 552 96618	1nF 10% 50V 0402
2AL4	2020 552 96618	1nF 10% 50V 0402
2AL5	2238 869 15101	100pF 5% 50V 0402
2AL6	2238 869 15101	100pF 5% 50V 0402
2AL8	2020 552 96448	1µF 10% 16V
2AL9	4822 126 14324	33pF 5% 50V 0402
2ALA	2020 552 96618	1nF 10% 50V 0402
2AM0	4822 126 14324	33pF 5% 50V 0402
2AM1	2238 586 59812	100nF 20-80% 50V 0603
2AM2	2238 586 59812	100nF 20-80% 50V 0603
2AM3	2020 552 96618	1nF 10% 50V 0402
2AM4	2238 869 15101	100pF 5% 50V 0402
2AM5	2020 552 96448	1µF 10% 16V
2AM6	2238 586 59812	100nF 20-80% 50V 0603
2AM7	2020 552 96618	1nF 10% 50V 0402
2AM8	2238 869 15101	100pF 5% 50V 0402
2AM9	4822 126 14324	33pF 5% 50V 0402
2AN0	2020 552 96448	1µF 10% 16V
2AN1	4822 126 14324	33pF 5% 50V 0402
2AN2	3198 016 31020	1nF 10% 25V 0603
2AN3	4822 122 33741	10pF 10% 50V
2AN4	4822 122 33741	10pF 10% 50V
2AN5	2238 586 59812	100nF 20-80% 50V 0603
2AN6	2020 021 91554	10µF 20% 16V
2AN7	5322 126 11583	10nF 10% 50V 0603
2AN8	4822 122 33741	10pF 10% 50V
2AN9	4822 122 33741	10pF 10% 50V
2C00	2238 586 59812	100nF 20-80% 50V 0603
2C01	2238 586 59812	100nF 20-80% 50V 0603
2C02	2238 586 59812	100nF 20-80% 50V 0603
2I01	2238 586 59812	100nF 20-80% 50V 0603
2I04	4822 126 13879	220nF 20% 16V
2I05	4822 126 13879	220nF 20% 16V
2I07	4822 126 13879	220nF 20% 16V
2I09	2020 552 94427	100pF 5% 50v 0603
2I10	2020 552 94427	100pF 5% 50v 0603
2I11	2020 552 94427	100pF 5% 50v 0603
2I12	4822 126 14241	330pF 50V 0603
2I13	2020 552 94427	100pF 5% 50v 0603
2I14	2020 552 94427	100pF 5% 50v 0603
2I15	4822 126 14241	330pF 50V 0603
2I16	2020 552 94427	100pF 5% 50v 0603
2I17	2020 552 94427	100pF 5% 50v 0603
2I18	2020 552 94427	100pF 5% 50v 0603
2I19	2020 552 94427	100pF 5% 50v 0603
2I20	4822 126 14241	330pF 50V 0603
2I21	2020 552 94427	100pF 5% 50v 0603
2I22	2020 552 94427	100pF 5% 50v 0603
2I23	2020 552 94427	100pF 5% 50v 0603
2I24	2020 552 94427	100pF 5% 50v 0603
2I25	4822 126 14241	330pF 50V 0603
2I26	2020 552 94427	100pF 5% 50v 0603
2I27	2020 552 94427	100pF 5% 50v 0603
2I28	2020 552 94427	100pF 5% 50v 0603
2I29	2020 552 94427	100pF 5% 50v 0603
2I30	2020 552 94427	100pF 5% 50v 0603
2I31	4822 124 23002	10µF 20% 16V
2I32	4822 124 23002	10µF 20% 16V
2I33	2020 552 94427	100pF 5% 50v 0603
2I34	2020 552 94427	100pF 5% 50v 0603
2I35	2020 552 94427	100pF 5% 50v 0603
2I36	2020 552 94427	100pF 5% 50v 0603
2I38	2020 552 96448	1µF 10% 16V
2I41	2020 552 96448	1µF 10% 16V
2I42	2020 552 94427	100pF 5% 50v 0603
2I44	2020 552 94427	100pF 5% 50v 0603
2I46	3198 016 31020	1nF 10% 25V 0603
2I47	3198 016 31020	1nF 10% 25V 0603
2I71	2020 552 96448	1µF 10% 16V
2I72	2020 552 96448	1µF 10% 16V
2I73	2020 552 96448	1µF 10% 16V
2I74	2020 552 96448	1µF 10% 16V
2I75	2020 552 96448	1µF 10% 16V
2I76	2020 552 96448	1µF 10% 16V
2I77	2020 552 96448	1µF 10% 16V
2I78	2020 552 96448	1µF 10% 16V
2I79	5322 124 41945	22µF 20% 35V SMD
2I80	2020 552 96448	1µF 10% 16V
2I81	2020 552 96448	1µF 10% 16V
2I82	2020 552 96448	1µF 10% 16V
2I83	2020 552 96448	1µF 10% 16V
2I84	2020 552 96448	1µF 10% 16V
2I85	2020 552 96448	1µF 10% 16V
2I99	2020 552 96448	1µF 10% 16V
2IA0	2020 552 96448	1µF 10% 16V
2IA1	2020 552 96448	1µF 10% 16V
2IA2	2020 552 96448	1µF 10% 16V
2IA3	2238 586 59812	100nF 20-80% 50V 0603
2IA4	2020 552 96448	1µF 10% 16V
2IA5	2020 021 91557	100µF 20% 16V
2IA7	2020 552 96448	1µF 10% 16V
2IA9	2020 021 91557	100µF 20% 16V
2IC0	4822 124 23002	10µF 20% 16V
2IC1	4822 124 23002	10µF 20% 16V
2IC2	4822 124 23002	10µF 20% 16V
2IC3	2238 586 59812	100nF 20-80% 50V 0603
2IC4	2238 586 59812	100nF 20-80% 50V 0603
2IC9	4822 126 13881	470pF 5% 50V
2IE0	4822 126 13879	220nF 20% 16V
2IG1	2238 586 59812	100nF 20-80% 50V 0603
2IH0	2238 586 59812	100nF 20-80% 50V 0603
2IH1	2238 586 59812	100nF 20-80% 50V 0603
2IH3	3198 016 31020	1nF 10% 25V 0603
2IJ0	4822 126 13881	470pF 5% 50V
2IJ1	2020 552 94427	100pF 5% 50v 0603
2IJ4	2238 586 59812	100nF 20-80% 50V 0603
2P00	2238 586 59812	100nF 20-80% 50V 0603
2P01	4822 124 12095	100µF 20% 16V
2P02	2238 586 59812	100nF 20-80% 50V 0603
2P03	4822 126 13193	4.7nF 10% 63V
2P04	4822 126 13193	4.7nF 10% 63V
2P06	4822 126 13883	220pF 5% 50V
2P07	4822 126 13956	68pF 5% 63V 0603
2P08	3198 016 32780	2.7pF 10% 50V 0603
2P10	2238 586 59812	100nF 20-80% 50V 0603
2P11	2238 586 59812	100nF 20-80% 50V 0603
2P12	2238 586 59812	100nF 20-80% 50V 0603
2P13	2238 586 59812	100nF 20-80% 50V 0603
2P14	2238 586 59812	100nF 20-80% 50V 0603
2P15	2238 586 59812	100nF 20-80% 50V 0603
2P16	2238 586 59812	100nF 20-80% 50V 0603
2P17	3198 017 44740	470nF 10V 0603
2P18	3198 016 35680	5.6pF 0.5pF 50V 0603
2P19	2238 586 59812	100nF 20-80% 50V 0603
2P20	2020 552 96448	1µF 10% 16V
2P21	4822 126 14491	2.2µF -20+80% 10V 0805
2P23	2238 586 59812	100nF 20-80% 50V 0603
2P24	2238 586 59812	100nF 20-80% 50V 0603
2P25	4822 124 23002	10µF 20% 16V
2P26	2238 916 15641	22nF 10% 25V 0603
2P27	4822 126 14491	2.2µF -20+80% 10V 0805
2P28	2238 586 59812	100nF 20-80% 50V 0603
2P29	3198 017 41050	1µF 10V 0603
2P30	4822 126 13193	4.7nF 10% 63V
2P31	2238 586 59812	100nF 20-80% 50V 0603
2P32	2238 586 59812	100nF 20-80% 50V 0603
2P33	2238 586 59812	100nF 20-80% 50V 0603
2P34	2238 586 59812	100nF 20-80% 50V 0603
2P35	2238 586 59812	100nF 20-80% 50V 0603
2P36	5322 126 11579	3.3nF 10% 63V
2P37	4822 122 33752	15pF 5% 50V
2P38	3198 016 31280	1.2pF 50V 0603
2P43	4822 126 11663	12pF 5% 50V 0603
2P44	3198 016 31280	1.2pF 50V 0603
2P45	2238 586 59812	100nF 20-80% 50V 0603
2P46	2238 586 59812	100nF 20-80% 50V 0603
2P47	2238 586 59812	100nF 20-80% 50V 0603
2P48	4822 126 11785	47pF 5% 50V 0603
2P57	3198 017 34730	47nF 16V 0603
2P58	3198 017 34730	47nF 16V 0603
2P60	3198 017 41050	1µF 10V 0603
2P64	3198 017 41050	1µF 10V 0603
2P65	4822 124 12095	100µF 20% 16V
2P66	2238 586 59812	100nF 20-80% 50V 0603
2P70	2238 586 59812	100nF 20-80% 50V 0603
2P71	4822 124 23002	10µF 20% 16V
2P72	4822 126 14491	2.2µF -20+80% 10V 0805
2P73	2020 552 96448	1µF 10% 16V
2P74	2238 586 59812	100nF 20-80% 50V 0603
2P75	2020 552 96448	1µF 10% 16V
2P78	2238 586 59812	100nF 20-80% 50V 0603
2P79	2238 586 59812	100nF 20-80% 50V 0603
2P80	4822 124 12095	100µF 20% 16V
2P81	2238 586 59812	100nF 20-80% 50V 0603
2P83	3198 017 34730	47nF 16V 0603
2P85	3198 017 34730	47nF 16V 0603
2P90	4822 124 12095	100µF 20% 16V
2P98	4822 124 12095	100µF 20% 16V
2P99	4822 124 12095	100µF 20% 16V
2PA0	3198 017 41050	1µF 10V 0603
2PA1	4822 122 33753	150pF 5% 50V
2PA2	2238 586 59812	100nF 20-80% 50V 0603
2PA3	4822 122 33753	150pF 5% 50V
2PA4	2238 586 59812	100nF 20-80% 50V 0603
2PA5	4822 122 33753	150pF 5% 50V
2PA6	2238 586 59812	100nF 20-80% 50V 0603
2PA7	2238 586 59812	100nF 20-80% 50V 0603
2PA8	2238 586 59812	100nF 20-80% 50V 0603
2PA9	4822 124 23002	10µF 20% 16V
2PB0	3198 017 41050	1µF 10V 0603
2PB1	4822 122 33753	150pF 5% 50V
2PB2	2238 586 59812	100nF 20-80% 50V 0603
2PB3	2238 586 59812	100nF 20-80% 50V 0603
2PB4	4822 122 33753	150pF 5% 50V
2PB6	2238 586 59812	100nF 20-80% 50V 0603
2PB7	2238 586 59812	100nF 20-80% 50V 0603
2PB8	4822 124 23002	10µF 20% 16V
2PB9	2238 586 59812	100nF 20-80% 50V 0603
2PC0	4822 124 23002	10µF 20% 16V
2PC1	2238 586 59812	100nF 20-80% 50V 0603
2PC2	2238 586 59812	100nF 20-80% 50V 0603
2PC4	2238 586 59812	100nF 20-80% 50V 0603
2PC5	2238 586 59812	100nF 20-80% 50V 0603
2PC7	2238 586 59812	100nF 20-80% 50V 0603
2PC8	2238 586 59812	100nF 20-80% 50V 0603
2PC9	2238 586 59812	100nF 20-80% 50V 0603
2PD0	4822 124 23002	10µF 20% 16V
2PD1	2238 586 59812	100nF 20-80% 50V 0603
2PD3	2238 586 59812	100nF 20-80% 50V 0603
2PD4	2238 586 59812	100nF 20-80% 50V 0603
2PD5	4822 124 23002	10µF 20% 16V
2PD6	4822 124 23002	10µF 20% 16V
2PD7	2238 586 59812	100nF 20-80% 50V 0603
2PD9	2238 586 59812	100nF 20-80% 50V 0603
2PE4	2238 586 59812	100nF 20-80% 50V 0603
2PE5	2238 586 59812	100nF 20-80% 50V 0603
2PE6	2238 586 59812	100nF 20-80% 50V 0603
2PE7	2238 586 59812	100nF 20-80% 50V 0603
2PE8	2238 586 59812	100nF 20-80% 50V 0603
2PE9	3198 017 41050	1µF 10V 0603
2PF1	4822 124 23002	10µF 20% 16V
2PF2	2238 586 59812	100nF 20-80% 50V 0603
2PF3	4822 122 33753	150pF 5% 50V
2PF7	4822 124 23002	10µF 20% 16V
2PF8	4822 124 23002	10µF 20% 16V
2PF9	4822 124 23002	10µF 20% 16V
2S01	2238 586 59812	100nF 20-80% 50V 0603
2S02	2238 586 59812	100nF 20-80% 50V 0603
2S03	2238 586 59812	100nF 20-80% 50V 0603
2S04	2238 586 59812	100nF 20-80% 50V 0603
2S05	2238 586 59812	100nF 20-80% 50V 0603
2S22	3198 017 44740	470nF 10V 0603
2S42	4822 051 30759	75Ω 5% 0.062W
2T01	2020 021 91642	470µF 20% 16V
2T02	3198 024 44730	47nF 50V 0603
2T03	2020 021 91642	470µF 20% 16V
2T04	3198 024 44730	47nF 50V 0603
2T05	2020 021 91642	470µF 20% 16V
2T06	5322 126 11583	10nF 10% 50V 0603
2T09	3198 017 34730	47nF 16V 0603
2T10	3198 017 34730	47nF 16V 0603
2T12	2238 586 59812	100nF 20-80% 50V 0603
2T13	5322 126 11583	10nF 10% 50V 0603
2T14	5322 126 11583	10nF 10% 50V 0603
2T15	3198 017 34730	47nF 16V 0603
2T16	3198 017 34730	47nF 16V 0603
2U03	4822 126 14043	1µF 20% 16V
2U04	4822 126 13482	470nF 80-20% 16V
2U05	5322 126 11578	1nF 10% 50V 0603
2U06	2020 021 91642	470µF 20% 16V
2U07	4822 126 14226	82pF 5% 50V 0603
2U08	2020 021 91642	470µF 20% 16V
2U09	5322 126 11578	1nF 10% 50V 0603
2U10	2020 021 91642	470µF 20% 16V
2U11	5322 126 11578	1nF 10% 50V 0603
2U12	5322 126 11583	10nF 10% 50V 0603
2U13	3198 017 44740	470nF 10V 0603
2U14	4822 126 13482	470nF 80-20% 16V
2U15	4822 124 12095	100µF 20% 16V
2U16	4822 126 13193	4.7nF 10% 63V
2U17	4822 126 13482	470nF 80-20% 16V
2U18	5322 122 33861	120pF10% 50V
2U19	2238 586 59812	100nF 20-80% 50V 0603
2U20	4822 126 14491	2.2µF -20+80% 10V 0805
2U21	4822 126 13482	470nF 80-20% 16V
2U22	4822 126 14491	2.2µF -20+80% 10V 0805
2U23	4822 124 12095	100µF 20% 16V
2U24	5322 126 11578	1nF 10% 50V 0603
2U25	2238 586 59812	100nF 20-80% 50V 0603
2U26	2238 586 59812	100nF 20-80% 50V 0603
2U27	5322 126 11582	6.8nF 10% 63V
2U28	5322 126 11582	6.8nF 10% 63V
2U30	5322 122 33861	120pF10% 50V
2U31	4822 124 12095	100µF 20% 16V
2U32	5322 126 11579	3.3nF 10% 63V

⌐WW⌐

3001	4822 051 30472	4.7kΩ 5% 0.062W
3002	4822 051 30472	4.7kΩ 5% 0.062W
3003	4822 117 13525	24kΩ 1% 0.62W 0603
3005	4822 051 30103	10kΩ 5% 0.062W
3006	4822 051 30471	470Ω 5% 0.062W
3007	3198 031 14710	4 x 470Ω 5% 1206
3008	4822 117 13526	150Ω 5% 0.63W
3009	4822 051 30689	68Ω 5% 0.063W 0603
3010	4822 051 30103	10kΩ 5% 0.062W
3011	4822 051 30103	10kΩ 5% 0.062W
3012	3198 031 11010	4 x 100Ω 5% 1206
3013	4822 051 30103	10kΩ 5% 0.062W
3014	4822 051 30682	6.8kΩ 5% 0.062W

3015	4822 051 30474	470kΩ 5% 0.062W
3016	4822 051 30152	1.5kΩ 5% 0.062W
3017	4822 051 30472	4.7kΩ 5% 0.062W
3018	4822 051 30103	10kΩ 5% 0.062W
3019	4822 051 30472	4.7kΩ 5% 0.062W
3020	4822 051 30103	10kΩ 5% 0.062W
3021	4822 051 30103	10kΩ 5% 0.062W
3024	4822 051 30273	27kΩ 5% 0.062W
3025	4822 051 30221	220Ω 5% 0.062W
3026	4822 051 30472	4.7kΩ 5% 0.062W
3027	4822 117 12925	47kΩ 1% 0.063W 0603
3029	3198 031 11010	4 x 100Ω 5% 1206
3031	3198 031 11010	4 x 100Ω 5% 1206
3033	4822 051 30103	10kΩ 5% 0.062W
3034	3198 031 11010	4 x 100Ω 5% 1206
3035	3198 031 11010	4 x 100Ω 5% 1206
3039	4822 051 30008	Jumper 0603
3040	4822 051 30472	4.7kΩ 5% 0.062W
3042	4822 051 30472	4.7kΩ 5% 0.062W
3047	4822 051 30008	Jumper 0603
3048	3198 031 11010	4 x 100Ω 5% 1206
3049	3198 031 11010	4 x 100Ω 5% 1206
3050	3198 031 11010	4 x 100Ω 5% 1206
3051	3198 031 11010	4 x 100Ω 5% 1206
3052	3198 031 11010	4 x 100Ω 5% 1206
3053	4822 051 30103	10kΩ 5% 0.062W
3054	3198 031 11010	4 x 100Ω 5% 1206
3055	3198 031 11010	4 x 100Ω 5% 1206
3056	3198 031 11010	4 x 100Ω 5% 1206
3057	3198 031 11010	4 x 100Ω 5% 1206
3059	2322 704 66201	620Ω 1% 0603
3061	3198 031 11010	4 x 100Ω 5% 1206
3062	4822 051 30103	10kΩ 5% 0.062W
3064	3198 031 11010	4 x 100Ω 5% 1206
3065	4822 051 30472	4.7kΩ 5% 0.062W
3066	4822 117 12925	47kΩ 1% 0.063W 0603
3067	4822 051 30474	470kΩ 5% 0.062W
3068	4822 051 30272	2.7kΩ 5% 0.062W
3069	4822 051 30272	2.7kΩ 5% 0.062W
3072	3198 031 11010	4 x 100Ω 5% 1206
3073	3198 031 14710	4 x 470Ω 5% 1206
3074	3198 031 14710	4 x 470Ω 5% 1206
3076	3198 031 14710	4 x 470Ω 5% 1206
3078	3198 031 14710	4 x 470Ω 5% 1206
3079	4822 051 30272	2.7kΩ 5% 0.062W
3080	4822 051 30472	4.7kΩ 5% 0.062W
3081	4822 051 30471	470Ω 5% 0.062W
3082	3198 031 11010	4 x 100Ω 5% 1206
3083	3198 031 11010	4 x 100Ω 5% 1206
3084	4822 051 30103	10kΩ 5% 0.062W
3085	3198 031 11010	4 x 100Ω 5% 1206
3086	3198 031 11010	4 x 100Ω 5% 1206
3087	4822 051 30101	100Ω 5% 0.062W
3088	4822 051 30222	2.2kΩ 5% 0.062W
3089	4822 051 30101	100Ω 5% 0.062W
3090	3198 031 14710	4 x 470Ω 5% 1206
3091	4822 051 30008	Jumper 0603
3092	4822 051 30222	2.2kΩ 5% 0.062W
3093	4822 051 30103	10kΩ 5% 0.062W
3094	4822 117 12925	47kΩ 1% 0.063W 0603
3095	4822 117 12925	47kΩ 1% 0.063W 0603
3096	4822 117 12925	47kΩ 1% 0.063W 0603
3097	4822 051 30471	470Ω 5% 0.062W
3099	3198 031 14710	4 x 470Ω 5% 1206
3100	4822 051 30221	220Ω 5% 0.062W
3101	4822 051 30221	220Ω 5% 0.062W
3102	3198 031 11010	4 x 100Ω 5% 1206
3301	4822 117 13632	100kΩ 1% 0603 0.62W
3302	4822 051 30102	1kΩ 5% 0.062W
3303	4822 117 13632	100kΩ 1% 0603 0.62W
3304▲	2322 750 63908	3.9Ω 5% Fuse 1206
3306	4822 051 30221	220Ω 5% 0.062W
3307	4822 051 30183	18kΩ 5% 0.062W
3308	4822 051 20474	470kΩ 5% 0.1W
3310	4822 051 30563	56kΩ 5% 0.062W
3311	4822 117 13632	100kΩ 1% 0603 0.62W
3312	4822 117 13632	100kΩ 1% 0603 0.62W
3313	4822 117 13632	100kΩ 1% 0603 0.62W
3314	4822 051 30103	10kΩ 5% 0.062W
3315	4822 051 30102	1kΩ 5% 0.062W
3316	4822 117 10834	47kΩ 1% 0.1W
3317	4822 051 30221	220Ω 5% 0.062W
3318	4822 051 30102	1kΩ 5% 0.062W
3319	4822 051 30102	1kΩ 5% 0.062W
3320	4822 051 30101	100Ω 5% 0.062W
3321	4822 051 30101	100Ω 5% 0.062W
3322	4822 051 10102	1kΩ 2% 0.25W
3323	4822 117 12925	47kΩ 1% 0.063W 0603
3324	4822 051 30472	4.7kΩ 5% 0.062W
3327	4822 117 13632	100kΩ 1% 0603 0.62W
3328	4822 051 30393	39kΩ 5% 0.062W
3329	4822 117 13568	6.8Ω 5% 1206
3331	4822 051 30102	1kΩ 5% 0.062W
3333	4822 051 30102	1kΩ 5% 0.062W
3334	4822 051 30102	1kΩ 5% 0.062W
3336	4822 051 30102	1kΩ 5% 0.062W
3337	3198 031 08210	820Ω 5% 0,5W
3338	4822 051 30681	680Ω 5% 0.062W
3340	4822 051 30101	100Ω 5% 0.062W
3341	4822 051 30101	100Ω 5% 0.062W
3342	4822 051 30101	100Ω 5% 0.062W
3343	4822 051 20683	68kΩ 5% 0.1W
3344	4822 051 30222	2.2kΩ 5% 0.062W
3345	4822 051 30103	10kΩ 5% 0.062W
3346	4822 051 30333	33kΩ 5% 0.062W
3347	4822 051 30223	22kΩ 5% 0.062W
3348	4822 051 30222	2.2kΩ 5% 0.062W
3349	4822 051 30472	4.7kΩ 5% 0.062W
3356	4822 051 30222	2.2kΩ 5% 0.062W
3357	4822 051 30392	3.9kΩ 5% 0.063W 0603
3362	4822 051 30392	3.9kΩ 5% 0.063W 0603
3363	4822 051 30102	1kΩ 5% 0.062W
3364	3198 031 16840	4X680kΩ 5% 1206
3365	4822 051 30472	4.7kΩ 5% 0.062W
3366	4822 051 30221	220Ω 5% 0.062W
3367	4822 051 30221	220Ω 5% 0.062W
3368	3198 021 32250	2.2MΩ 5% 0603
3369	3198 031 08210	820Ω 5% 0,5W
3370	4822 051 30101	100Ω 5% 0.062W
3371	4822 051 30479	47Ω 5% 0.062W
3372	4822 051 30471	470Ω 5% 0.062W
3373	4822 051 30008	Jumper 0603
3374	4822 051 30008	Jumper 0603
3375	4822 051 30008	Jumper 0603
3376	4822 051 30101	100Ω 5% 0.062W
3377	4822 051 30101	100Ω 5% 0.062W
3378	4822 051 30153	15kΩ 5% 0.062W
3379	4822 051 30008	Jumper 0603
3380	4822 051 30101	100Ω 5% 0.062W
3381	4822 051 30008	Jumper 0603
3382	4822 051 30561	560Ω 5% 0.062W
3383	4822 051 30681	680Ω 5% 0.062W
3384	3198 031 08210	820Ω 5% 0,5W
3385	4822 051 30471	470Ω 5% 0.062W
3386	4822 117 12891	220kΩ 1% 0.063W 0603
3389	4822 051 30681	680Ω 5% 0.062W
3390	4822 051 30221	220Ω 5% 0.062W
3391	4822 051 30103	10kΩ 5% 0.062W
3393	4822 117 13632	100kΩ 1% 0603 0.62W
3394	4822 051 30472	4.7kΩ 5% 0.062W
3400	4822 117 11152	4.7Ω 5% 0.062W
3402▲	2322 750 63908	3.9Ω 5% Fuse 1206
3403	4822 051 30101	100Ω 5% 0.062W
3404	4822 051 30561	560Ω 5% 0.062W
3405	4822 051 30102	1kΩ 5% 0.062W
3406	2322 702 60279	27Ω 5% 0.1W 0603
3408	4822 051 30101	100Ω 5% 0.062W
3411	4822 051 30272	2.7kΩ 5% 0.062W
3412	4822 117 11152	4.7Ω 5% 0.062W
3414	4822 051 30472	4.7kΩ 5% 0.062W
3415	4822 051 30222	2.2kΩ 5% 0.062W
3418	4822 051 30391	390Ω 5% 0.062W
3419	2120 108 91909	39Ω 5% 0603
3435	4822 051 30472	4.7kΩ 5% 0.062W
3436	4822 051 30181	180Ω 5% 0.062W
3437	4822 051 30471	470Ω 5% 0.062W
3439	4822 051 30391	390Ω 5% 0.062W
3441	4822 051 30562	5.6kΩ 5% 0.063W 0603
3445	4822 051 30121	120Ω 5% 0.062W
3463	4822 051 30472	4.7kΩ 5% 0.062W
3468	4822 117 13632	100kΩ 1% 0603 0.62W
3472	4822 051 30223	22kΩ 5% 0.062W
3473	4822 051 30102	1kΩ 5% 0.062W
3474	4822 051 30109	10Ω 5% 0.062W
3475	5322 117 11726	10Ω 5%
3476	4822 051 30561	560Ω 5% 0.062W
3703	4822 051 30271	270Ω 5% 0.062W
3704	5322 117 13047	330Ω 1% 0.063W 0603
3705	5322 117 13047	330Ω 1% 0.063W 0603
3709	4822 051 30101	100Ω 5% 0.062W
3710	4822 051 30101	100Ω 5% 0.062W
3711	4822 117 12925	47kΩ 1% 0.063W 0603
3712	4822 117 12925	47kΩ 1% 0.063W 0603
3713	4822 051 30181	180Ω 5% 0.062W
3714	4822 051 30181	180Ω 5% 0.062W
3715	4822 051 30181	180Ω 5% 0.062W
3716	4822 117 13632	100kΩ 1% 0603 0.62W
3717	4822 117 13632	100kΩ 1% 0603 0.62W
3718	4822 117 13632	100kΩ 1% 0603 0.62W
3719	4822 051 30332	3.3kΩ 5% 0.062W
3720	4822 051 30103	10kΩ 5% 0.062W
3721	4822 117 12917	1Ω 5% 0.062W 0603
3725	4822 051 30332	3.3kΩ 5% 0.062W
3726	4822 117 11817	1.2kΩ 1% 1/16W
3727	4822 051 30151	150Ω 5% 0.062W
3728	4822 051 30151	150Ω 5% 0.062W
3729	4822 051 30689	68Ω 5% 0.063W 0603
3730	3198 031 06810	680Ω 5% 0.01W 0402
3731	4822 051 30472	4.7kΩ 5% 0.062W
3733	4822 051 30472	4.7kΩ 5% 0.062W
3735	4822 117 12917	1Ω 5% 0.062W 0603
3736	4822 051 30101	100Ω 5% 0.062W
3737	4822 051 30102	1kΩ 5% 0.062W
3738	4822 051 30102	1kΩ 5% 0.062W
3739	3198 031 01530	15kΩ 5% 0.01W 0402
3740	4822 051 30102	1kΩ 5% 0.062W
3741	4822 051 30183	18kΩ 5% 0.062W
3742	4822 051 30183	18kΩ 5% 0.062W
3744	4822 051 30222	2.2kΩ 5% 0.062W
3745	4822 051 30102	1kΩ 5% 0.062W
3746	4822 051 30392	3.9kΩ 5% 0.063W 0603
3747	4822 051 30154	150kΩ 5% 0.062W
3748	4822 117 12891	220kΩ 1% 0.063W 0603
3749	4822 051 30392	3.9kΩ 5% 0.063W 0603
3750	4822 051 30332	3.3kΩ 5% 0.062W
3751	4822 051 30472	4.7kΩ 5% 0.062W
3752	4822 117 12917	1Ω 5% 0.062W 0603
3753	4822 117 12917	1Ω 5% 0.062W 0603
3754	4822 051 30101	100Ω 5% 0.062W
3755	4822 051 30472	4.7kΩ 5% 0.062W
3756	4822 117 12902	8.2kΩ 1% 0.063W 0603
3757	4822 051 30479	47Ω 5% 0.062W
3758	4822 051 30472	4.7kΩ 5% 0.062W
3759	4822 051 30221	220Ω 5% 0.062W
3762	4822 051 30101	100Ω 5% 0.062W
3763	4822 117 12139	22Ω 5% 0.062W
3764	4822 051 30109	10Ω 5% 0.062W
3768	2350 033 10101	4X100Ω 5%
3769	2350 033 10101	4X100Ω 5%
3770	4822 117 13545	100Ω 1% 0402
3771	4822 117 12971	15Ω 5% 0.62W 0603
3772	4822 117 12971	15Ω 5% 0.62W 0603
3773	4822 117 12925	47kΩ 1% 0.063W 0603
3774	4822 117 12925	47kΩ 1% 0.063W 0603
3775	2350 033 10101	4X100Ω 5%
3776	2350 033 10101	4X100Ω 5%
3781	4822 117 12925	47kΩ 1% 0.063W 0603
3782	4822 117 12925	47kΩ 1% 0.063W 0603
3783	4822 117 12925	47kΩ 1% 0.063W 0603
3785	4822 117 13577	330Ω 1% 0805 1.25W
3786	4822 117 13577	330Ω 1% 0805 1.25W
3787	4822 117 13577	330Ω 1% 0805 1.25W
3788	5322 117 13034	1.5kΩ 1% 0.063W 0603
3789	5322 117 13043	220Ω 1% 0.063W 0603
3790	5322 117 13059	560Ω 1% 0.063W 0603
3791	5322 117 13049	470Ω 1% 0.063W 0603
3792	4822 051 30102	1kΩ 5% 0.062W
3793	4822 051 30222	2.2kΩ 5% 0.062W
3800	5322 117 13058	150Ω 1% 0.063W 0603
3801	4822 051 30102	1kΩ 5% 0.062W
3802	5322 117 13058	150Ω 1% 0.063W 0603
3803	5322 117 13058	150Ω 1% 0.063W 0603
3804	4822 051 30102	1kΩ 5% 0.062W
3805	5322 117 13049	470Ω 1% 0.063W 0603
3806	5322 117 13049	470Ω 1% 0.063W 0603
3807	5322 117 13068	82Ω 1% 0.063W 0603
3808	5322 117 13057	820Ω 1% 0.063W 0603
3809	5322 117 13043	220Ω 1% 0.063W 0603
3810	4822 051 30391	390Ω 5% 0.062W
3811	4822 051 30759	75Ω 5% 0.062W
3812	4822 051 30759	75Ω 5% 0.062W
3813	4822 051 30391	390Ω 5% 0.062W
3814	4822 051 30759	75Ω 5% 0.062W
3815	4822 051 30759	75Ω 5% 0.062W
3816	4822 051 30391	390Ω 5% 0.062W
3817	4822 051 30759	75Ω 5% 0.062W
3818	4822 051 30759	75Ω 5% 0.062W
3819	4822 051 30759	75Ω 5% 0.062W
3820	4822 051 30759	75Ω 5% 0.062W
3821	4822 051 30759	75Ω 5% 0.062W
3822	4822 051 30759	75Ω 5% 0.062W
3823	4822 051 30759	75Ω 5% 0.062W
3824	4822 051 30759	75Ω 5% 0.062W
3825	5322 117 13058	150Ω 1% 0.063W 0603
3826	5322 117 13058	150Ω 1% 0.063W 0603
3827	5322 117 13058	150Ω 1% 0.063W 0603
3828	4822 051 30339	33Ω 5% 0.062W
3829	4822 117 12971	15Ω 5% 0.62W 0603
3830	4822 117 13545	100Ω 1% 0402
3831	4822 117 13545	100Ω 1% 0402
3832	4822 117 13545	100Ω 1% 0402
3833	4822 117 13545	100Ω 1% 0402
3834	4822 117 13545	100Ω 1% 0402
3836	4822 117 13545	100Ω 1% 0402
3837	4822 117 13545	100Ω 1% 0402
3838	4822 117 13545	100Ω 1% 0402
3839	4822 117 13545	100Ω 1% 0402
3840	4822 117 13545	100Ω 1% 0402
3841	4822 117 13545	100Ω 1% 0402
3842	4822 117 13545	100Ω 1% 0402
3843	4822 117 13545	100Ω 1% 0402
3844	4822 117 13545	100Ω 1% 0402

3845	4822 117 13545	100Ω 1% 0402
3A00	4822 051 30223	22kΩ 5% 0.062W
3A01	3198 031 04720	4.7kΩ 5% 0402
3A02	4822 117 13545	100Ω 1% 0402
3A03	4822 117 13568	6.8Ω 5% 1206
3A05	4822 117 13545	100Ω 1% 0402
3A06	4822 117 13545	100Ω 1% 0402
3A08	4822 117 13545	100Ω 1% 0402
3A09	4822 117 13601	22kΩ 5% 0402
3A11	4822 117 11297	100kΩ 5% 0.1W
3A12	3198 031 04730	47Ω 5% 0402
3A13	3198 031 04730	47Ω 5% 0402
3A14	3198 031 04730	47Ω 5% 0402
3A15	4822 117 11297	100kΩ 5% 0.1W
3A16	4822 117 13545	100Ω 1% 0402
3A17	4822 117 13545	100Ω 1% 0402
3A18	3198 031 04730	47Ω 5% 0402
3A19	4822 117 13545	100Ω 1% 0402
3A20	4822 117 11297	100kΩ 5% 0.1W
3A21	4822 117 12903	1.8kΩ 1% 0.063W 0603
3A22	4822 117 13632	100kΩ 1% 0603 0.62W
3A23	3198 031 06830	68kΩ 5% 0.01W 0402
3A25	4822 051 30331	330Ω 5% 0.062W
3A26	3198 031 06830	68kΩ 5% 0.01W 0402
3A27	3198 031 06820	6.8kΩ 5% 0.01W 0402
3A28	3198 031 06820	6.8kΩ 5% 0.01W 0402
3A29	4822 051 30331	330Ω 5% 0.062W
3A30	4822 117 12925	47kΩ 1% 0.063W 0603
3A31	4822 117 13548	1kΩ 5% 0402
3A32	4822 117 13545	100Ω 1% 0402
3A33	4822 117 13545	100Ω 1% 0402
3A34	4822 117 13545	100Ω 1% 0402
3A35	4822 051 30105	1MΩ 5% 0.062W
3A36	4822 117 13545	100Ω 1% 0402
3A37	4822 117 13545	100Ω 1% 0402
3A38	4822 051 30101	100Ω 5% 0.062W
3A39	4822 117 13545	100Ω 1% 0402
3A3A	4822 117 13545	100Ω 1% 0402
3A3B	4822 117 13545	100Ω 1% 0402
3A3E	4822 117 13545	100Ω 1% 0402
3A3F	4822 117 13545	100Ω 1% 0402
3A40	4822 117 13632	100kΩ 1% 0603 0.62W
3A42	3198 031 03320	3.3kΩ 5% 0402
3A43	4822 117 13545	100Ω 1% 0402
3A44	4822 117 13545	100Ω 1% 0402
3A45	3198 031 04730	47Ω 5% 0402
3A46	4822 117 11297	100kΩ 5% 0.1W
3A47	3198 031 04730	47Ω 5% 0402
3A48	4822 117 11297	100kΩ 5% 0.1W
3A49	3198 031 04730	47Ω 5% 0402
3A50	4822 117 13545	100Ω 1% 0402
3A51	3198 031 04730	47Ω 5% 0402
3A52	3198 031 03930	39kΩ 5% 0402
3A53	3198 031 03930	39kΩ 5% 0402
3A55	3198 031 04720	4.7kΩ 5% 0402
3A56	3198 031 04720	4.7kΩ 5% 0402
3A66	4822 117 11297	100kΩ 5% 0.1W
3A70	4822 117 13545	100Ω 1% 0402
3A71	4822 117 13545	100Ω 1% 0402
3A72	4822 117 13545	100Ω 1% 0402
3A73	4822 117 13602	2.2kΩ 5% 0.01W 0402
3A74	4822 051 30759	75Ω 5% 0.062W
3A75	4822 117 13602	2.2kΩ 5% 0.01W 0402
3A76	4822 051 30332	3.3kΩ 5% 0.062W
3A77	4822 051 30759	75Ω 5% 0.062W
3A78	4822 051 30101	100Ω 5% 0.062W
3A81	4822 117 13545	100Ω 1% 0402
3A82	4822 117 13545	100Ω 1% 0402
3A83	4822 117 13545	100Ω 1% 0402
3A84	4822 051 30689	68Ω 5% 0.063W 0603
3AA0	3198 031 04730	47Ω 5% 0402
3AA1	3198 031 04730	47Ω 5% 0402
3AA2	4822 051 30101	100Ω 5% 0.062W
3AA4	3198 031 04730	47Ω 5% 0402
3AA5	4822 117 11297	100kΩ 5% 0.1W
3AA6	3198 031 06820	6.8kΩ 5% 0.01W 0402
3AA7	3198 031 06830	68kΩ 5% 0.01W 0402
3AA9	3198 031 06820	6.8kΩ 5% 0.01W 0402
3AB0	3198 031 04730	47Ω 5% 0402
3AB2	3198 031 04730	47Ω 5% 0402
3AB3	4822 117 11297	100kΩ 5% 0.1W
3AB5	3198 031 06830	68kΩ 5% 0.01W 0402
3AB6	4822 117 11297	100kΩ 5% 0.1W
3AB7	3198 031 06820	6.8kΩ 5% 0.01W 0402
3AB8	3198 031 06830	68kΩ 5% 0.01W 0402
3AB9	3198 031 06820	6.8kΩ 5% 0.01W 0402
3AC8	4822 117 13545	100Ω 1% 0402
3C00	4822 051 30222	2.2kΩ 5% 0.062W
3C01	4822 051 30109	10Ω 5% 0.062W
3C03	4822 051 30103	10kΩ 5% 0.062W
3C04	4822 051 30103	10kΩ 5% 0.062W
3C05	4822 051 30471	470Ω 5% 0.062W
3C08	4822 051 30103	10kΩ 5% 0.062W
3C09	4822 051 30103	10kΩ 5% 0.062W
3I04	4822 117 13545	100Ω 1% 0402
3I05	4822 117 13545	100Ω 1% 0402
3I06	4822 117 11927	75Ω 1% 0.1W
3I08	3198 031 01090	10Ω 5% 0.01W 0402
3I09	3198 031 06830	68kΩ 5% 0.01W 0402
3I11	3198 031 05610	560Ω 5% 0.01W 0402
3I12	4822 117 13543	470Ω 5% 0402
3I13	3198 031 05610	560Ω 5% 0.01W 0402
3I14	4822 117 13543	470Ω 5% 0402
3I15	3198 031 05610	560Ω 5% 0.01W 0402
3I16	4822 117 13543	470Ω 5% 0402
3I17	3198 031 05610	560Ω 5% 0.01W 0402
3I18	4822 117 13543	470Ω 5% 0402
3I23	4822 117 11297	100kΩ 5% 0.1W
3I25	4822 117 13605	Jumper 0402
3I34	4822 117 13601	22kΩ 5% 0402
3I35	4822 051 30101	100Ω 5% 0.062W
3I36	4822 117 13601	22kΩ 5% 0402
3I37	4822 051 30101	100Ω 5% 0.062W
3I38	3198 031 08220	8.2kΩ 5% 0,5W
3I39	3198 031 02720	2.7kΩ 5% 0,01W 0402
3I40	4822 051 30759	75Ω 5% 0.062W
3I41	4822 117 13545	100Ω 1% 0402
3I42	4822 117 13601	22kΩ 5% 0402
3I43	4822 051 30101	100Ω 5% 0.062W
3I44	4822 117 13601	22kΩ 5% 0402
3I45	4822 051 30101	100Ω 5% 0.062W
3I46	3198 031 08220	8.2kΩ 5% 0,5W
3I47	3198 031 02720	2.7kΩ 5% 0,01W 0402
3I48	4822 051 30759	75Ω 5% 0.062W
3I49	4822 117 13545	100Ω 1% 0402
3I50	4822 051 30151	150Ω 5% 0.062W
3I51	4822 051 30101	100Ω 5% 0.062W
3I52	4822 051 30151	150Ω 5% 0.062W
3I53	4822 051 30101	100Ω 5% 0.062W
3I54	4822 117 13545	100Ω 1% 0402
3I55	4822 051 30759	75Ω 5% 0.062W
3I56	4822 117 13545	100Ω 1% 0402
3I57	4822 051 30759	75Ω 5% 0.062W
3I58	4822 117 13545	100Ω 1% 0402
3I59	4822 051 30759	75Ω 5% 0.062W
3I60	4822 051 30759	75Ω 5% 0.062W
3I61	4822 051 30101	100Ω 5% 0.062W
3I62	4822 051 30101	100Ω 5% 0.062W
3I63	3198 031 03920	3.9kΩ 5% 0402
3I64	3198 031 08220	8.2kΩ 5% 0,5W
3I65	4822 051 30101	100Ω 5% 0.062W
3I66	4822 051 30759	75Ω 5% 0.062W
3I67	4822 051 30759	75Ω 5% 0.062W
3I68	4822 117 13545	100Ω 1% 0402
3I69	4822 051 30151	150Ω 5% 0.062W
3I70	4822 051 30101	100Ω 5% 0.062W
3I71	4822 051 30151	150Ω 5% 0.062W
3I72	4822 051 30101	100Ω 5% 0.062W
3I73	4822 117 13605	Jumper 0402
3I75	4822 117 13545	100Ω 1% 0402
3I76	4822 117 13545	100Ω 1% 0402
3I77	4822 051 30759	75Ω 5% 0.062W
3I78	4822 051 30759	75Ω 5% 0.062W
3I79	4822 051 30101	100Ω 5% 0.062W
3I80	4822 051 30101	100Ω 5% 0.062W
3I81	3198 031 08220	8.2kΩ 5% 0,5W
3I82	3198 031 03920	3.9kΩ 5% 0402
3I83	4822 117 13545	100Ω 1% 0402
3I84	4822 051 30759	75Ω 5% 0.062W
3I85	4822 117 13545	100Ω 1% 0402
3I86	4822 051 30759	75Ω 5% 0.062W
3I87	4822 117 13545	100Ω 1% 0402
3I89	4822 051 30151	150Ω 5% 0.062W
3I90	4822 051 30101	100Ω 5% 0.062W
3I91	4822 051 30151	150Ω 5% 0.062W
3I92	4822 051 30101	100Ω 5% 0.062W
3I94	4822 051 30271	270Ω 5% 0.062W
3I95	4822 051 30101	100Ω 5% 0.062W
3I96	4822 051 30271	270Ω 5% 0.062W
3I97	4822 051 30101	100Ω 5% 0.062W
3I98	4822 117 11297	100kΩ 5% 0.1W
3I99	4822 051 30271	270Ω 5% 0.062W
3IA0	4822 117 13545	100Ω 1% 0402
3IA1	4822 117 11297	100kΩ 5% 0.1W
3IA2	4822 051 30101	100Ω 5% 0.062W
3IA3	4822 117 13601	22kΩ 5% 0402
3IA4	4822 117 13548	1kΩ 5% 0402
3IA5	4822 117 13548	1kΩ 5% 0402
3IA6	4822 051 30102	1kΩ 5% 0.062W
3IA7	4822 051 30102	1kΩ 5% 0.062W
3IA8	4822 051 30102	1kΩ 5% 0.062W
3IA9	4822 051 30102	1kΩ 5% 0.062W
3IB0	4822 051 30102	1kΩ 5% 0.062W
3IB1	4822 117 12925	47kΩ 1% 0.063W 0603
3IB2	4822 051 30101	100Ω 5% 0.062W
3IB4	4822 051 30223	22kΩ 5% 0.062W
3IB5	4822 051 30103	10kΩ 5% 0.062W
3IB7	4822 051 30151	150Ω 5% 0.062W
3IB9	4822 117 12925	47kΩ 1% 0.063W 0603
3IC0	4822 051 30151	150Ω 5% 0.062W
3IC1	4822 117 13574	1.5Ω 5% 1206
3IC2	4822 117 13601	22kΩ 5% 0402
3IC3	4822 117 13601	22kΩ 5% 0402
3IC4	4822 051 30101	100Ω 5% 0.062W
3IC6	4822 051 30101	100Ω 5% 0.062W
3IC7	4822 051 30151	150Ω 5% 0.062W
3ID0	3198 031 04720	4.7kΩ 5% 0402
3ID3	4822 051 30101	100Ω 5% 0.062W
3IH5	4822 117 13601	22kΩ 5% 0402
3IH6	4822 117 13601	22kΩ 5% 0402
3IH7	4822 117 13606	10kΩ 5% 0.01W 0402
3IH8	3198 031 04730	47Ω 5% 0402
3IH9	3198 031 04730	47Ω 5% 0402
3II0	4822 117 13606	10kΩ 5% 0.01W 0402
3II1	4822 117 13601	22kΩ 5% 0402
3II2	4822 117 13601	22kΩ 5% 0402
3II3	3198 031 04730	47Ω 5% 0402
3II4	3198 031 04730	47Ω 5% 0402
3IJ0	4822 117 13545	100Ω 1% 0402
3IJ1	4822 117 13545	100Ω 1% 0402
3IJ3	4822 117 13601	22kΩ 5% 0402
3IJ4	4822 117 13601	22kΩ 5% 0402
3IK0	4822 051 30008	Jumper 0603
3IK2	4822 117 13601	22kΩ 5% 0402
3IK3	4822 117 13601	22kΩ 5% 0402
3IK4	4822 117 11927	75Ω 1% 0.1W
3IK5	4822 117 11927	75Ω 1% 0.1W
3IK7	4822 117 11152	4.7Ω 5% 0.062W
3IK9	4822 051 30759	75Ω 5% 0.062W
3IN2	4822 051 30759	75Ω 5% 0.062W
3IN3	4822 051 30759	75Ω 5% 0.062W
3IN4⚠	2322 750 63908	3.9Ω 5% Fuse 1206
3IN5	4822 117 13601	22kΩ 5% 0402
3IN6	4822 117 13601	22kΩ 5% 0402
3IO5	4822 117 13606	10kΩ 5% 0.01W 0402
3IO6	4822 117 13606	10kΩ 5% 0.01W 0402
3IP0	4822 117 12902	8.2kΩ 1% 0.063W 0603
3IP1	4822 117 11817	1.2kΩ 1% 1/16W
3IP2	4822 051 30221	220Ω 5% 0.062W
3IP3	4822 051 30759	75Ω 5% 0.062W
3IP4	4822 051 30221	220Ω 5% 0.062W
3IP5	4822 117 11748	2.2Ω 1206 5%
3IP6	4822 051 30102	1kΩ 5% 0.062W
3IP7	4822 051 30272	2.7kΩ 5% 0.062W
3IQ0	4822 051 30109	10Ω 5% 0.062W
3IQ1	4822 051 30561	560Ω 5% 0.062W
3IR0	4822 051 30223	22kΩ 5% 0.062W
3IR1	4822 051 30223	22kΩ 5% 0.062W
3IR2	3198 031 04730	47Ω 5% 0402
3IR3	3198 031 04730	47Ω 5% 0402
3IR4	4822 117 13605	Jumper 0402
3IR6	3198 031 07590	75Ω 5% 0402
3IR7	3198 031 07590	75Ω 5% 0402
3IR8	4822 117 13596	220Ω 5% 0.01W 0402
3IS2	4822 051 30101	100Ω 5% 0.062W
3IS3	4822 051 30101	100Ω 5% 0.062W
3IS4	4822 051 30101	100Ω 5% 0.062W
3IS5	4822 051 30101	100Ω 5% 0.062W
3IS6	4822 051 30101	100Ω 5% 0.062W
3IS8	4822 051 30223	22kΩ 5% 0.062W
3IS9	4822 051 30223	22kΩ 5% 0.062W
3IT0	4822 117 12925	47kΩ 1% 0.063W 0603
3IT1	4822 117 12925	47kΩ 1% 0.063W 0603
3IT2	4822 117 12925	47kΩ 1% 0.063W 0603
3IT3	4822 117 12925	47kΩ 1% 0.063W 0603
3IT4	4822 117 12925	47kΩ 1% 0.063W 0603
3IT7	4822 117 13545	100Ω 1% 0402
3P00⚠	2322 750 63908	3.9Ω 5% Fuse 1206
3P01	4822 117 11748	2.2Ω 1206 5%
3P02	4822 117 11151	1Ω 5%
3P03	4822 051 30222	2.2kΩ 5% 0.062W
3P04	4822 051 30472	4.7kΩ 5% 0.062W
3P05	4822 051 30562	5.6kΩ 5% 0.063W 0603
3P06	4822 051 30101	100Ω 5% 0.062W
3P07	4822 051 30272	2.7kΩ 5% 0.062W
3P08	4822 051 30472	4.7kΩ 5% 0.062W
3P11	4822 051 30479	47Ω 5% 0.062W
3P16	4822 051 30472	4.7kΩ 5% 0.062W
3P18	4822 051 30479	47Ω 5% 0.062W
3P22	4822 051 30101	100Ω 5% 0.062W
3P23	4822 051 30101	100Ω 5% 0.062W
3P24	4822 051 30153	15kΩ 5% 0.062W
3P25	4822 051 30391	390Ω 5% 0.062W
3P26	4822 051 30471	470Ω 5% 0.062W
3P27	4822 051 30181	180Ω 5% 0.062W
3P28	4822 051 30391	390Ω 5% 0.062W
3P29	4822 117 13632	100kΩ 1% 0603 0.62W
3P30	4822 051 30101	100Ω 5% 0.062W
3P31	4822 051 30471	470Ω 5% 0.062W
3P32	4822 051 30561	560Ω 5% 0.062W
3P34	4822 051 30479	47Ω 5% 0.062W
3P35	4822 051 30471	470Ω 5% 0.062W

3P36	4822 051 30102	1kΩ 5% 0.062W
3P40	4822 051 30121	120Ω 5% 0.062W
3P44	4822 051 30101	100Ω 5% 0.062W
3P48	4822 117 13545	100Ω 1% 0402
3P58	4822 117 13545	100Ω 1% 0402
3P59	4822 117 13545	100Ω 1% 0402
3P61	4822 051 30273	27kΩ 5% 0.062W
3P62	4822 117 13545	100Ω 1% 0402
3P63	4822 117 13545	100Ω 1% 0402
3P64	4822 117 13545	100Ω 1% 0402
3P65	4822 117 13545	100Ω 1% 0402
3P66	4822 117 13545	100Ω 1% 0402
3P67	3198 031 04720	4.7kΩ 5% 0402
3P68	3198 031 04720	4.7kΩ 5% 0402
3P69	3198 031 04720	4.7kΩ 5% 0402
3P70	3198 031 04720	4.7kΩ 5% 0402
3P72	3198 031 04720	4.7kΩ 5% 0402
3P74	4822 117 11748	2.2Ω 1206 5%
3P75	4822 117 13545	100Ω 1% 0402
3P85	3198 031 04720	4.7kΩ 5% 0402
3P86	4822 117 13606	10kΩ 5% 0.01W 0402
3P87	4822 117 13606	10kΩ 5% 0.01W 0402
3P88⚠	2322 750 63908	3.9Ω 5% Fuse 1206
3P90	4822 051 30561	560Ω 5% 0.062W
3P91	4822 051 30561	560Ω 5% 0.062W
3P92	4822 051 30561	560Ω 5% 0.062W
3PA0	4822 117 13596	220Ω 5% 0.01W 0402
3PA1	4822 117 13545	100Ω 1% 0402
3PA3	4822 117 13545	100Ω 1% 0402
3PA7	4822 117 13545	100Ω 1% 0402
3PA8	4822 117 13596	220Ω 5% 0.01W 0402
3PA9	4822 051 30393	39kΩ 5% 0.062W
3PB2	3198 031 01520	1.2kΩ 5% 0.01W 0402
3PB4	3198 031 01520	1.2kΩ 5% 0.01W 0402
3PB6	4822 117 11817	1.2kΩ 1% 1/16W
3PB7	4822 117 13545	100Ω 1% 0402
3PB8	4822 117 12903	1.8kΩ 1% 0.063W 0603
3PB9	3198 031 03320	3.3kΩ 5% 0402
3PC0	3198 031 03320	3.3kΩ 5% 0402
3PC1	4822 117 13545	100Ω 1% 0402
3PC2	4822 117 13545	100Ω 1% 0402
3PC4	3198 031 06810	680Ω 5% 0.01W 0402
3PC5	4822 051 30472	4.7kΩ 5% 0.062W
3PC6	4822 051 30393	39kΩ 5% 0.062W
3PC7	4822 117 13596	220Ω 5% 0.01W 0402
3PC8	4822 117 13545	100Ω 1% 0402
3PD0	4822 117 13596	220Ω 5% 0.01W 0402
3PD2	4822 117 13545	100Ω 1% 0402
3PD3	4822 117 12903	1.8kΩ 1% 0.063W 0603
3PD5	3198 031 03320	3.3kΩ 5% 0402
3PD7	4822 117 11817	1.2kΩ 1% 1/16W
3PD8	3198 031 03320	3.3kΩ 5% 0402
3PD9	3198 031 03320	3.3kΩ 5% 0402
3PE0	3198 031 01520	1.2kΩ 5% 0.01W 0402
3PE2	3198 031 01520	1.2kΩ 5% 0.01W 0402
3PE9	4822 117 13597	330Ω 5% 0402 0.01W
3PF0	3198 031 01210	120Ω 5% 0.01W 0402
3PF1	3198 031 01520	1.2kΩ 5% 0.01W 0402
3PF2	4822 051 30271	270Ω 5% 0.062W
3PF3	3198 031 03320	3.3kΩ 5% 0402
3PF4	4822 117 13601	22kΩ 5% 0402
3PF5	4822 051 30102	1kΩ 5% 0.062W
3PF6	3198 031 05610	560Ω 5% 0.01W 0402
3PF7	4822 117 13545	100Ω 1% 0402
3PF8	3198 031 08210	820Ω 5% 0,5W
3PF9	4822 051 30121	120Ω 5% 0.062W
3PG0	3198 031 05610	560Ω 5% 0.01W 0402
3PG1	4822 051 30689	68Ω 5% 0.063W 0603
3PG2	3198 031 06810	680Ω 5% 0.01W 0402
3PG3	3198 031 06810	680Ω 5% 0.01W 0402
3PG4	3198 031 06810	680Ω 5% 0.01W 0402
3PG5	3198 031 06810	680Ω 5% 0.01W 0402
3PG6	3198 031 06810	680Ω 5% 0.01W 0402
3PH1	4822 117 13546	47Ω 0402 5%
3PH2	4822 117 13546	47Ω 0402 5%
3PH3	4822 117 13546	47Ω 0402 5%
3PH4	4822 117 13546	47Ω 0402 5%
3PH5	4822 117 13546	47Ω 0402 5%
3PH6	4822 117 13546	47Ω 0402 5%
3PH7	4822 117 13546	47Ω 0402 5%
3PH8	4822 117 13546	47Ω 0402 5%
3PH9	4822 117 13546	47Ω 0402 5%
3S01	2422 549 43062	Bead 600Ω at 100MHz
3S02	2422 549 43062	Bead 600Ω at 100MHz
3S03	2422 549 43062	Bead 600Ω at 100MHz
3S04	2422 549 43062	Bead 600Ω at 100MHz
3S05	2422 549 43062	Bead 600Ω at 100MHz
3S06	2422 549 43062	Bead 600Ω at 100MHz
3S07	2422 549 43062	Bead 600Ω at 100MHz
3S08	2422 549 43062	Bead 600Ω at 100MHz
3S09	2422 549 43062	Bead 600Ω at 100MHz
3S10	2422 549 43062	Bead 600Ω at 100MHz
3U01	4822 051 30102	1kΩ 5% 0.062W
3U02	4822 051 30102	1kΩ 5% 0.062W
3U03	4822 051 30333	33kΩ 5% 0.062W
3U04	4822 051 20121	120Ω 5% 0,1W
3U05	4822 051 30102	1kΩ 5% 0.062W
3U06	4822 051 30471	470Ω 5% 0.062W
3U07	4822 117 12139	22Ω 5% 0.062W
3U08	5322 117 13034	1.5kΩ 1% 0.063W 0603
3U09	4822 051 30562	5.6kΩ 5% 0.063W 0603
3U10	4822 051 30109	10Ω 5% 0.062W
3U11	4822 051 30121	120Ω 5% 0.062W
3U12	4822 117 12925	47kΩ 1% 0.063W 0603
3U13	4822 051 30103	10kΩ 5% 0.062W
3U14	4822 051 30102	1kΩ 5% 0.062W
3U15	5322 117 13042	3.9kΩ 1% 0.063W 0603
3U16	4822 051 30479	47Ω 5% 0.062W
3U17	4822 117 13608	4.7Ω 5% 0603 0.62W
3U18	5322 117 13018	1kΩ 1% 0.063W 0603
3U19	4822 051 30472	4.7kΩ 5% 0.062W
3U20	5322 117 13018	1kΩ 1% 0.063W 0603
3U21	4822 117 12925	47kΩ 1% 0.063W 0603
3U22	4822 051 30271	270Ω 5% 0.062W
3U23	4822 051 30121	120Ω 5% 0.062W
3U24	4822 051 30223	22kΩ 5% 0.062W
3U25	4822 117 12891	220kΩ 1% 0.063W 0603
3U26	4822 051 30223	22kΩ 5% 0.062W
3U27	4822 051 30103	10kΩ 5% 0.062W
3U28	4822 117 12925	47kΩ 1% 0.063W 0603
3U29	4822 051 30109	10Ω 5% 0.062W
3U30	4822 051 20121	120Ω 5% 0,1W
3U31	4822 051 20121	120Ω 5% 0,1W
3U32	4822 051 30183	18kΩ 5% 0.062W
3U33	4822 051 30103	10kΩ 5% 0.062W
3U34	4822 051 30334	330kΩ 5% 0.062W
3U35	4822 051 30103	10kΩ 5% 0.062W
3U36	4822 051 30222	2.2kΩ 5% 0.062W
3U37	4822 051 30223	22kΩ 5% 0.062W
3U38	4822 051 30222	2.2kΩ 5% 0.062W
3U39	4822 051 30223	22kΩ 5% 0.062W
3U40	4822 117 12891	220kΩ 1% 0.063W 0603
3U41	4822 051 30102	1kΩ 5% 0.062W
3U42	4822 051 30103	10kΩ 5% 0.062W
3U43	4822 051 30223	22kΩ 5% 0.062W
3U44	4822 051 30105	1MΩ 5% 0.062W
3U45	4822 051 30105	1MΩ 5% 0.062W
3U46	5322 117 13029	47kΩ 1% 0.063W 0603
3U47	4822 051 30223	22kΩ 5% 0.062W
3U48	4822 051 30103	10kΩ 5% 0.062W
3U49	4822 051 30223	22kΩ 5% 0.062W
3U50	4822 051 30103	10kΩ 5% 0.062W
3U51	4822 051 30339	33Ω 5% 0.062W
9016	4822 051 30008	Jumper 0603
9302	4822 051 30008	Jumper 0603
9303	4822 051 30008	Jumper 0603
9304	4822 051 30008	Jumper 0603
9318	4822 051 30008	Jumper 0603
9322	4822 051 30008	Jumper 0603
9406	4822 051 30008	Jumper 0603
9410	4822 051 30008	Jumper 0603
9413	4822 051 30008	Jumper 0603
9416	4822 051 30008	Jumper 0603
9417	4822 051 30008	Jumper 0603
9418	4822 051 30008	Jumper 0603
9419	4822 051 30008	Jumper 0603
9420	4822 051 30008	Jumper 0603
9702	4822 051 30008	Jumper 0603
9704	4822 051 30008	Jumper 0603
9712	4822 051 30008	Jumper 0603
9714	4822 051 30008	Jumper 0603
9716	4822 051 30008	Jumper 0603
9717	4822 051 30008	Jumper 0603
9721	4822 051 30008	Jumper 0603
9723	4822 051 30008	Jumper 0603
9725	4822 051 30008	Jumper 0603
9727	4822 051 30008	Jumper 0603
9728	4822 051 30008	Jumper 0603
9729	4822 051 30008	Jumper 0603
9731	4822 051 30008	Jumper 0603
9733	4822 051 30008	Jumper 0603
9735	4822 051 30008	Jumper 0603
9740	4822 051 30008	Jumper 0603
9741	4822 117 12662	4 x 10Ω 5%
9744	4822 051 30008	Jumper 0603
9747	4822 051 30008	Jumper 0603
9754	4822 051 30008	Jumper 0603
9760	4822 051 30008	Jumper 0603
9761	4822 051 30008	Jumper 0603
9762	4822 051 30008	Jumper 0603
9763	4822 051 30008	Jumper 0603
9764	4822 051 30008	Jumper 0603
9765	4822 051 30008	Jumper 0603
9767	4822 051 30008	Jumper 0603
9768	4822 051 30008	Jumper 0603
9769	4822 051 30008	Jumper 0603
9A02	4822 117 13605	Jumper 0402
9A03	4822 117 13605	Jumper 0402
9A09	4822 051 20008	Jumper 0805
9I08	4822 117 13605	Jumper 0402
9I13	4822 051 30008	Jumper 0603
9I16	4822 051 30008	Jumper 0603
9I32	4822 117 13605	Jumper 0402
9I33	4822 117 13605	Jumper 0402
9I34	4822 117 13605	Jumper 0402
9I35	4822 117 13605	Jumper 0402
9I36	4822 117 13605	Jumper 0402
9I37	4822 117 13605	Jumper 0402
9I48	4822 117 13605	Jumper 0402
9I49	4822 117 13605	Jumper 0402
9I80	4822 117 13605	Jumper 0402
9I84	4822 117 13605	Jumper 0402
9I85	4822 117 13605	Jumper 0402
9I86	4822 117 13605	Jumper 0402
9I88	4822 117 13605	Jumper 0402
9I93	4822 117 13605	Jumper 0402
9IA2	4822 117 13605	Jumper 0402
9P02	4822 051 30008	Jumper 0603
9P03	4822 051 30008	Jumper 0603
9P05	4822 051 30008	Jumper 0603
9P09	4822 051 30008	Jumper 0603
9P12	4822 051 30008	Jumper 0603
9P13	4822 051 30008	Jumper 0603
9P15	4822 051 30008	Jumper 0603
9P17	4822 051 30008	Jumper 0603
9P24	4822 117 13605	Jumper 0402
9P28	4822 051 30008	Jumper 0603
9P29	4822 051 30008	Jumper 0603
9P52	4822 117 13605	Jumper 0402
9P53	4822 117 13605	Jumper 0402
9P54	4822 117 13605	Jumper 0402
9P55	4822 117 13605	Jumper 0402
9P57	4822 117 13605	Jumper 0402
9P60	4822 117 13605	Jumper 0402
9P63	4822 117 13605	Jumper 0402
9P64	4822 117 13605	Jumper 0402
9P69	4822 117 13605	Jumper 0402
9P70	4822 117 13605	Jumper 0402
9P71	4822 117 13605	Jumper 0402
9PA2	4822 117 13605	Jumper 0402
9PA7	4822 117 13605	Jumper 0402
9PB1	4822 117 13605	Jumper 0402
9PB2	4822 051 20008	Jumper 0805
9PB4	4822 051 30008	Jumper 0603
9PB5	4822 051 30008	Jumper 0603
9S01	4822 051 30008	Jumper 0603
9S02	4822 051 30008	Jumper 0603
9S03	4822 051 30008	Jumper 0603
9S04	4822 051 30008	Jumper 0603
9S05	4822 051 30008	Jumper 0603
9S06	4822 051 30008	Jumper 0603
9S07	4822 051 30008	Jumper 0603
9S08	4822 051 30008	Jumper 0603
9S09	4822 051 30008	Jumper 0603
9S11	4822 051 30008	Jumper 0603
9S12	4822 051 30008	Jumper 0603
9S13	4822 051 30008	Jumper 0603
9S14	4822 051 30008	Jumper 0603
9S15	4822 051 30008	Jumper 0603
9S16	4822 051 30008	Jumper 0603
9S17	4822 051 30008	Jumper 0603
9S18	4822 051 30008	Jumper 0603
9S19	4822 051 30008	Jumper 0603
9S20	4822 051 30008	Jumper 0603
9S21	4822 051 30008	Jumper 0603
9S22	4822 051 30008	Jumper 0603
9S23	4822 051 30008	Jumper 0603
9S24	4822 051 30008	Jumper 0603
9S25	4822 051 30008	Jumper 0603
9S26	4822 051 30008	Jumper 0603
9S27	4822 051 30008	Jumper 0603
9S28	4822 051 30008	Jumper 0603
9S29	4822 051 30008	Jumper 0603
9S65	4822 051 30008	Jumper 0603
9T01	4822 051 30223	22kΩ 5% 0.062W
9T02	4822 051 30223	22kΩ 5% 0.062W
9T04	4822 051 30008	Jumper 0603
9T06	4822 051 30008	Jumper 0603
9T07	4822 051 30008	Jumper 0603
9T08	4822 051 30008	Jumper 0603
9T09	4822 051 30008	Jumper 0603
9T10	4822 051 30008	Jumper 0603
9T11	4822 051 30008	Jumper 0603
9T12	4822 051 30008	Jumper 0603
9T13	4822 051 20008	Jumper 0805
9T14	4822 051 20008	Jumper 0805
9T15	4822 051 30008	Jumper 0603
9T16	4822 051 30008	Jumper 0603
9U01	4822 051 30008	Jumper 0603
9U03	4822 051 30008	Jumper 0603
9U08	4822 051 30008	Jumper 0603

5301	4822 157 11876	6.8µH 10% 0805
5302	4822 157 11876	6.8µH 10% 0805
5313	4822 051 20008	Jumper 0805
5314	4822 051 20008	Jumper 0805
5315	4822 051 20008	Jumper 0805
5401	3198 018 56880	6.8µH 10% 0603
5403	2422 549 44461	Coil trim. 40.4MHz 5CCE
5404	2422 535 95427	Bead 120Ω at 100MHz
5405	2422 535 95427	Bead 120Ω at 100MHz
5406	3198 018 52280	2.2µH 10% 0603
5408	2422 549 44983	Coil trim. 78MHz 5CCB
5411	3198 018 32770	0.27µH 10% 0805
5415	4822 157 11716	Bead 30Ω at 100MHz
5416	4822 157 11716	Bead 30Ω at 100MHz
5700	4822 157 71304	1µH 10% 0805
5701	4822 157 71304	1µH 10% 0805
5702	4822 157 71304	1µH 10% 0805
5705	4822 156 21729	Bead 1kΩ at 100MHz
5706	4822 157 11716	Bead 30Ω at 100MHz
5710	4822 157 11716	Bead 30Ω at 100MHz
5711	4822 157 11716	Bead 30Ω at 100MHz
5712	4822 156 21729	Bead 1kΩ at 100MHz
5713	4822 157 11716	Bead 30Ω at 100MHz
5714	4822 157 71206	Bead 600Ω at 100MHz
5716	4822 156 21729	Bead 1kΩ at 100MHz
5717	4822 156 21729	Bead 1kΩ at 100MHz
5718	4822 157 11716	Bead 30Ω at 100MHz
5719	4822 156 21729	Bead 1kΩ at 100MHz
5722	4822 157 11716	Bead 30Ω at 100MHz
5723	4822 157 11716	Bead 30Ω at 100MHz
5724	4822 156 21729	Bead 1kΩ at 100MHz
5725	4822 157 11716	Bead 30Ω at 100MHz
5726	4822 156 21729	Bead 1kΩ at 100MHz
5727	4822 156 21729	Bead 1kΩ at 100MHz
5728	4822 157 11716	Bead 30Ω at 100MHz
5729	4822 157 11716	Bead 30Ω at 100MHz
5731	4822 156 21729	Bead 1kΩ at 100MHz
5736	4822 157 11876	6.8µH 10% 0805
5737	4822 156 21729	Bead 1kΩ at 100MHz
5739	4822 157 10586	2.2µH 10% 0805
5740	4822 157 10586	2.2µH 10% 0805
5741	4822 157 10586	2.2µH 10% 0805
5742	4822 157 11716	Bead 30Ω at 100MHz
5743	4822 157 11716	Bead 30Ω at 100MHz
5744	4822 157 11716	Bead 30Ω at 100MHz
5745	4822 157 11716	Bead 30Ω at 100MHz
5746	4822 157 11716	Bead 30Ω at 100MHz
5747	4822 157 11716	Bead 30Ω at 100MHz
5749	4822 157 11716	Bead 30Ω at 100MHz
5750	4822 157 11716	Bead 30Ω at 100MHz
5751	4822 157 11716	Bead 30Ω at 100MHz
5752	4822 157 11716	Bead 30Ω at 100MHz
5753	4822 157 11716	Bead 30Ω at 100MHz
5754	4822 157 11716	Bead 30Ω at 100MHz
5755	4822 157 11716	Bead 30Ω at 100MHz
5756	4822 157 11716	Bead 30Ω at 100MHz
5757	4822 157 11716	Bead 30Ω at 100MHz
5A00	4822 157 11716	Bead 30Ω at 100MHz
5A01	4822 157 11716	Bead 30Ω at 100MHz
5A03	4822 157 11716	Bead 30Ω at 100MHz
5A04	2422 549 43769	Bead 30Ω at 100MHz
5A05	2422 549 43769	Bead 30Ω at 100MHz
5A06	4822 157 11716	Bead 30Ω at 100MHz
5A10	2422 549 43769	Bead 30Ω at 100MHz
5A11	2422 549 43769	Bead 30Ω at 100MHz
5A12	2422 549 43769	Bead 30Ω at 100MHz
5A13	2422 549 43769	Bead 30Ω at 100MHz
5A14	2422 549 43769	Bead 30Ω at 100MHz
5A15	2422 549 43769	Bead 30Ω at 100MHz
5A16	2422 549 43769	Bead 30Ω at 100MHz
5A17	2422 549 43769	Bead 30Ω at 100MHz
5A18	2422 549 43769	Bead 30Ω at 100MHz
5A19	4822 157 11828	22µH 20% 0805
5A20	4822 157 11716	Bead 30Ω at 100MHz
5A21	4822 157 11716	Bead 30Ω at 100MHz
5A23	2422 549 43769	Bead 30Ω at 100MHz
5A24	2422 549 43769	Bead 30Ω at 100MHz
5A31	2422 549 43769	Bead 30Ω at 100MHz
5A32	2422 549 43769	Bead 30Ω at 100MHz
5A33	2422 549 43769	Bead 30Ω at 100MHz
5A38	4822 157 11716	Bead 30Ω at 100MHz
5A60	2422 549 43769	Bead 30Ω at 100MHz
5A61	2422 549 43769	Bead 30Ω at 100MHz
5A62	2422 549 43769	Bead 30Ω at 100MHz
5A63	2422 549 43769	Bead 30Ω at 100MHz
5A64	2422 549 43769	Bead 30Ω at 100MHz
5A65	2422 549 43769	Bead 30Ω at 100MHz
5A66	2422 549 43769	Bead 30Ω at 100MHz
5A67	2422 549 43769	Bead 30Ω at 100MHz
5P00	4822 157 11716	Bead 30Ω at 100MHz
5P01	4822 157 11716	Bead 30Ω at 100MHz
5P02	3198 018 33370	0.33µH 10% 0805
5P03	4822 157 11876	6.8µH 10% 0805
5P04	3198 018 56880	6.8µH 10% 0603
5P06	4822 157 10586	2.2µH 10% 0805
5P07	2422 549 44461	Coil trim. 40.4MHz 5CCE
5P08	2422 549 44983	Coil trim. 78MHz 5CCB
5P09	4822 157 11716	Bead 30Ω at 100MHz
5P10	4822 157 11716	Bead 30Ω at 100MHz
5P51	4822 157 11716	Bead 30Ω at 100MHz
5PA0	4822 157 71694	0.82µH 10%
5PA1	3198 018 31290	12µH 10%
5PA2	4822 157 10977	4.7µH 10%
5PA3	4822 157 10977	4.7µH 10%
5PA4	4822 157 71694	0.82µH 10%
5PA5	3198 018 31290	12µH 10%
5PA6	3198 018 31290	12µH 10%
5PA7	3198 018 31290	12µH 10%
5PA8	3198 018 31290	12µH 10%
5PA9	4822 157 11716	Bead 30Ω at 100MHz
5PB0	4822 157 11716	Bead 30Ω at 100MHz
5S01	4822 157 11716	Bead 30Ω at 100MHz
5S02	4822 157 11716	Bead 30Ω at 100MHz
5S03	4822 157 11716	Bead 30Ω at 100MHz
5S04	4822 157 11716	Bead 30Ω at 100MHz
5S05	4822 157 11716	Bead 30Ω at 100MHz
5T02	2422 535 94134	10µH 20% 0805
5T03	2422 535 94134	10µH 20% 0805
5U01▲	3104 308 20661	Transformer BD13118-02 Y
5U02	2422 535 94134	10µH 20% 0805
5U03	4822 157 11716	Bead 30Ω at 100MHz
5U04	4822 157 11716	Bead 30Ω at 100MHz
5U05	2422 535 94134	10µH 20% 0805
5U06	2422 535 94134	10µH 20% 0805

6001	4822 130 80622	BAT54
6002	4822 130 11397	BAS316
6003	4822 130 80622	BAT54
6004	4822 130 80622	BAT54
6005	4822 130 11422	PLVA2650A
6303	4822 130 11594	BZX284-C47
6304	4822 130 11397	BAS316
6306	3198 020 55680	BZX384-C5V6
6307	4822 130 11528	1PS76SB10
6309	4822 130 11397	BAS316
6310	4822 130 11416	PDZ6.8B
6311	9340 548 67115	PDZ22B
6312	4822 130 11397	BAS316
6313	9340 548 67115	PDZ22B
6314	4822 130 11397	BAS316
6317	4822 130 11397	BAS316
6319	4822 130 11397	BAS316
6334	4822 130 11397	BAS316
6403	9340 552 30115	BA591
6830	4822 130 11397	BAS316
6831	4822 130 11397	BAS316
6832	4822 130 11397	BAS316
6833	4822 130 11397	BAS316
6834	4822 130 11397	BAS316
6836	4822 130 11397	BAS316
6837	4822 130 11397	BAS316
6838	4822 130 11397	BAS316
6839	4822 130 11397	BAS316
6840	4822 130 11397	BAS316
6841	4822 130 11397	BAS316
6842	4822 130 11397	BAS316
6843	4822 130 11397	BAS316
6844	4822 130 11397	BAS316
6845	4822 130 11397	BAS316
6A00	4822 130 11551	UDZS10B
6A01	4822 130 10838	UDZ3.3B
6A02	4822 130 11397	BAS316
6I10	4822 130 11416	PDZ6.8B
6I11	4822 130 11416	PDZ6.8B
6I12	4822 130 11416	PDZ6.8B
6I13	4822 130 11416	PDZ6.8B
6I14	9340 548 61115	PDZ12B
6I15	4822 130 11416	PDZ6.8B
6I16	4822 130 11416	PDZ6.8B
6I17	4822 130 11416	PDZ6.8B
6I18	4822 130 11416	PDZ6.8B
6I19	4822 130 11416	PDZ6.8B
6I20	9340 548 61115	PDZ12B
6I21	4822 130 11416	PDZ6.8B
6I22	4822 130 11416	PDZ6.8B
6I23	4822 130 11416	PDZ6.8B
6I24	4822 130 11416	PDZ6.8B
6I25	4822 130 11416	PDZ6.8B
6I26	4822 130 11416	PDZ6.8B
6I27	4822 130 11416	PDZ6.8B
6I28	4822 130 11416	PDZ6.8B
6I29	4822 130 11416	PDZ6.8B
6I30	4822 130 11416	PDZ6.8B
6I31	4822 130 11416	PDZ6.8B
6I32	4822 130 11416	PDZ6.8B
6I33	4822 130 11416	PDZ6.8B
6I34	4822 130 11416	PDZ6.8B
6I35	4822 130 11416	PDZ6.8B
6I36	4822 130 11416	PDZ6.8B
6I37	4822 130 11416	PDZ6.8B
6I38	4822 130 11416	PDZ6.8B
6I39	4822 130 11416	PDZ6.8B
6I40	4822 130 11416	PDZ6.8B
6I41	4822 130 11416	PDZ6.8B
6I42	4822 130 11416	PDZ6.8B
6I43	4822 130 11416	PDZ6.8B
6I44	4822 130 11416	PDZ6.8B
6I45	4822 130 11416	PDZ6.8B
6I46	4822 130 11416	PDZ6.8B
6I47	4822 130 11416	PDZ6.8B
6I48	4822 130 11416	PDZ6.8B
6I49	9340 548 61115	PDZ12B
6I50	4822 130 11416	PDZ6.8B
6I51	4822 130 11416	PDZ6.8B
6I52	4822 130 11416	PDZ6.8B
6I53	4822 130 11416	PDZ6.8B
6I54	4822 130 11416	PDZ6.8B
6I55	4822 130 11416	PDZ6.8B
6I56	4822 130 11416	PDZ6.8B
6I57	4822 130 11416	PDZ6.8B
6I58	4822 130 11416	PDZ6.8B
6I59	4822 130 11416	PDZ6.8B
6I60	4822 130 11416	PDZ6.8B
6I61	4822 130 11416	PDZ6.8B
6I62	4822 130 11416	PDZ6.8B
6I63	4822 130 11416	PDZ6.8B
6I64	4822 130 11416	PDZ6.8B
6I65	4822 130 11416	PDZ6.8B
6I66	4822 130 11416	PDZ6.8B
6I67	4822 130 11416	PDZ6.8B
6I68	4822 130 11416	PDZ6.8B
6I69	4822 130 11416	PDZ6.8B
6I70	4822 130 11416	PDZ6.8B
6I73	4822 130 11416	PDZ6.8B
6I74	4822 130 11416	PDZ6.8B
6I76	4822 130 11416	PDZ6.8B
6I77	4822 130 11416	PDZ6.8B
6IA0	9340 548 61115	PDZ12B
6IA6	4822 130 11397	BAS316
6IA7	4822 130 11397	BAS316
6P03	9340 552 30115	BA591
6PA1	4822 130 11397	BAS316
6PB1	4822 130 11397	BAS316
6PB2	4822 130 11397	BAS316
6PB3	4822 130 11397	BAS316
6PB4	4822 130 11397	BAS316
6PB5	4822 130 11397	BAS316
6PB6	4822 130 11397	BAS316
6PB7	4822 130 11397	BAS316
6PB8	4822 130 11397	BAS316
6PB9	4822 130 11397	BAS316
6T01	4822 130 11397	BAS316
6T02	4822 130 11397	BAS316
6T03	4822 130 11397	BAS316
6T04	4822 130 11397	BAS316
6T08	4822 130 11027	BZX284-C33
6U01	4822 130 11397	BAS316
6U03	4822 130 11397	BAS316
6U04	4822 130 11397	BAS316
6U05	9340 548 61115	PDZ12B
6U06	9322 184 73668	1SMA5915B
6U07	4822 130 11416	PDZ6.8B
6U08	4822 130 80622	BAT54
6U09	4822 130 80622	BAT54
6U10	4822 130 11522	UDZ15B
6U11	4822 130 11397	BAS316

7001	9352 684 81557	SAA5801H/015
7002	3198 010 42320	BC857BW
7003	3198 010 42310	BC847BW
7004	3198 010 42310	BC847BW
7005	9322 172 45668	LF33ABDT
7007	9322 157 20668	MSM51V18165F-60J
7008	3198 010 42310	BC847BW
7009	3198 010 42310	BC847BW
7010	3198 010 42320	BC857BW
7011	9322 156 81668	M24C32-WMN6TNKSA
7012	9322 156 72668	M29W400BT-90N1
7013	3198 010 42310	BC847BW
7014	3198 010 42320	BC857BW
7015	4822 209 73852	PMBT2369
7016	4822 209 73852	PMBT2369

7017	4822 130 10255	MUN2213
7018	9352 115 40118	74LVC245APW
7019	9352 115 40118	74LVC245APW
7301	9352 681 65518	TDA9330N3
7303	3198 010 42320	BC857BW
7304	9340 310 30215	PDTC144ET
7307	9352 630 99118	TDA9181T
7309	3198 010 42310	BC847BW
7310	9340 425 20115	BC847BS
7312	9340 310 30215	PDTC144ET
7316	3198 010 42320	BC857BW
7317	3198 010 42320	BC857BW
7318	3198 010 42320	BC857BW
7319	3198 010 42320	BC857BW
7320	3198 010 42310	BC847BW
7322	3198 010 42310	BC847BW
7323	9352 625 24518	TDA9321H/N2
7402	3198 010 42310	BC847BW
7403	5322 130 60159	BC846B
7407	4822 130 60373	BC856B
7410	3198 010 42310	BC847BW
7411	5322 130 60159	BC846B
7414	3198 010 42310	BC847BW
7415	3198 010 42310	BC847BW
7703	4822 209 73852	PMBT2369
7706	9322 142 88668	LF25CDT
7707	5322 130 60159	BC846B
7708	5322 130 60159	BC846B
7709	5322 130 60159	BC846B
7710	5322 130 60159	BC846B
7711	2422 486 80938	Socket 32p f
7712	9351 870 00118	74HC573PW
7713	9352 688 09557	SAA4978H/V204
7714	9965 000 02179	MS81V04160-25TB
7715	4822 209 73852	PMBT2369
7717	9322 183 81668	MSM54V12222B-25JS
7718	9352 695 58557	SAA4993H/V1
7719	9322 183 81668	MSM54V12222B-25JS
7720	9322 160 50668	LD1117DT25
7722	9965 000 02179	MS81V04160-25TB
7723	9965 000 02179	MS81V04160-25TB
7724	9322 188 08702	T8F24EF-0002 EAGLE
7725	4822 209 73852	PMBT2369
7727	9322 170 14668	LF15ABDT
7728	5322 130 42718	BFS20
7729	5322 130 42718	BFS20
7730	5322 130 42718	BFS20
7731	5322 130 42718	BFS20
7732	5322 130 42718	BFS20
7733	5322 130 42718	BFS20
7999	3104 317 44671	Software (check Prod.Surv.)
7A00	4822 209 30095	LM833D
7A01	3198 010 42310	BC847BW
7A02⚠	9322 192 90702	MSP4410G-QI-C11
7A03	4822 209 30095	LM833D
7A06	5322 209 16349	TDA7309D
7A07	9322 183 05668	TS482ID
7A08	4822 130 60373	BC856B
7A09	4822 130 60373	BC856B
7A10	9340 425 20115	BC847BS
7A30⚠	9322 194 55668	MAS3529H-PR-C4
7A31	3198 010 42310	BC847BW
7A61	4822 209 30095	LM833D
7A62	4822 209 30095	LM833D
7A63⚠	9322 186 24671	DPL4519G-QI-C3
7I00	3198 010 42310	BC847BW
7I01	9340 425 20115	BC847BS
7I02	9340 425 20115	BC847BS
7I03	9340 425 20115	BC847BS
7I04	9340 425 20115	BC847BS
7I05	3198 010 42320	BC857BW
7I07	4822 130 60142	BC869
7I08	9340 425 10115	BC857BS
7I09	3198 010 42310	BC847BW
7I17	9322 116 87668	TEA6422D
7I20	9351 869 40118	74HC4053PW
7I22	9340 425 20115	BC847BS
7I23	9340 425 20115	BC847BS
7I24	9322 105 08668	TEA6415CD
7I25	9351 869 40118	74HC4053PW
7I32	9351 869 40118	74HC4053PW
7I35	3198 010 42310	BC847BW
7I36	3198 010 42310	BC847BW
7I37	3198 010 42320	BC857BW
7I38	3198 010 42320	BC857BW
7I44	9340 425 20115	BC847BS
7P00	5322 130 60159	BC846B
7P04	4822 130 60373	BC856B
7P05	5322 130 60159	BC846B
7P06	3198 010 42310	BC847BW
7P07	3198 010 42310	BC847BW
7P08	3198 010 42310	BC847BW
7P09	9352 625 24518	TDA9321H/N2
7P54	4822 209 12776	TDA8601T/C1
7P55	9350 399 00118	TDA9820T/V1
7P56	4822 209 17345	M62320FP
7P57	9351 869 40118	74HC4053PW
7PA0	3198 010 42310	BC847BW
7PA1	3198 010 42310	BC847BW
7PA2	3198 010 42310	BC847BW
7PA5	3198 010 42310	BC847BW
7PA6	9352 639 83557	SAB9083H/N4
7PA7	3198 010 42310	BC847BW
7PA8	3198 010 42310	BC847BW
7PA9	3198 010 42310	BC847BW
7PB1	9352 457 50115	74HC1G32GW
7PB2	3198 010 42310	BC847BW
7PB5	3198 010 42310	BC847BW
7PB6	3198 010 42310	BC847BW
7U01	4822 130 60373	BC856B
7U02	4822 130 60373	BC856B
7U03	9322 091 04668	SI4410DY
7U04	9322 091 04668	SI4410DY
7U05	4822 130 60373	BC856B
7U06	9340 425 20115	BC847BS
7U07	3198 010 42320	BC857BW
7U08	4822 130 42804	BC817-25
7U09	4822 130 42804	BC817-25
7U10	5322 130 60159	BC846B
7U11	5322 130 60159	BC846B
7U12	5322 130 60159	BC846B
7U13	3198 010 42310	BC847BW
7U14	3198 010 42310	BC847BW
7U15	3198 010 42320	BC857BW

AC Power Panel [E]

Various

0040	3104 304 25481	Mainsknob TDL
0046	3104 304 23471	Bracket mains unit FL11
0151	4822 256 91766	LED holder
0160	4822 256 91766	LED holder
0170	4822 256 10562	Photo diode holder
0201	2422 025 16268	Connector 2p m
0202	2422 025 16268	Connector 2p m
0241	2422 025 06354	Connector 9p m
0248	4822 267 10567	Connector 4P
1040	9322 155 82667	IR receiver TSOP2236
1051	2422 128 02972	Mains switch
1060	3104 328 27321	MS Panel
8202	3104 311 02571	Cable 2p3/680/2p3
8241	3104 311 04981	Cable 9p/820/9p
8245	3104 311 06391	Cable 4P/1000/4P HR WH

⊣⊢

2040	4822 124 41584	100µF 20% 10V
2060	4822 124 81151	22µF 50V
2070	3198 017 44740	470nF 10V 0603
2071	4822 124 40248	10µF 20% 63V
2080	2238 586 59812	100nF 20-80% 50V 0603

⊣WW⊢

3040	4822 117 13577	330Ω 1% 0805 1.25W
3041	4822 051 30103	10kΩ 5% 0.062W
3042	4822 051 30682	6.8kΩ 5% 0.062W
3043	4822 051 30471	470Ω 5% 0.062W
3052	4822 051 30331	330Ω 5% 0.062W
3057	4822 053 21335	3.3MΩ 5% 0.5W
3060	4822 051 30103	10kΩ 5% 0.062W
3061	4822 117 13577	330Ω 1% 0805 1.25W
3062	4822 117 11373	100Ω 1% 0805
3063	4822 051 30103	10kΩ 5% 0.062W
3064	4822 117 11373	100Ω 1% 0805
3066	4822 053 21335	3.3MΩ 5% 0.5W
3070	4822 051 30475	4.7MΩ 5% 0,062W 0603
3071	4822 051 30475	4.7MΩ 5% 0,062W 0603
3072	4822 051 30102	1kΩ 5% 0.062W
3073	4822 051 30332	3.3kΩ 5% 0.062W
3074	4822 051 30103	10kΩ 5% 0.062W
3075	4822 051 30472	4.7kΩ 5% 0.062W
3078	4822 051 30332	3.3kΩ 5% 0.062W
3080	4822 051 30103	10kΩ 5% 0.062W
3081	4822 051 30222	2.2kΩ 5% 0.062W
3082	4822 116 52176	10Ω 5% 0.5W
3998	4822 050 11002	1kΩ 1% 0.4W
9000	4822 051 30008	Jumper 0603
9005	4822 051 30008	Jumper 0603
9006	4822 051 30008	Jumper 0603
9007	4822 051 30008	Jumper 0603
9041	4822 051 30008	Jumper 0603
9042	4822 051 30008	Jumper 0603
9050	4822 051 30008	Jumper 0603
9051	4822 051 30008	Jumper 0603
9052	4822 051 30008	Jumper 0603



6050	5322 130 83903	TLRC114
6060	9322 191 72682	VS LTL353UBJ
6061	4822 130 30621	1N4148
6070	4822 130 11595	BPW46



7060	5322 130 60159	BC846B
7061	5322 130 60159	BC846B
7070	4822 209 70672	LM358N SEL.
7080	4822 130 40981	BC337-25
7081	5322 130 60159	BC846B

CRT Panel [F]

Various

0032	4822 492 70788	IC clamp
0034	4822 492 70788	IC clamp
0036	4822 492 70788	IC clamp
1298	2422 500 80063	Connector CRT 10p f
1424	2422 025 11244	Connector 7p m
1434	4822 267 10973	Connector 1P m
1483	2422 025 16382	Connector 3p m
1940	2422 025 12485	Connector 11p m

⊣⊢

2312	4822 126 14585	100nF 10% 50V
2313	4822 124 12373	47µF 20% 250V
2318	2238 916 15641	22nF 10% 25V 0603
2320	2252 648 08032	10nf 20% 500V
2324⚠	5322 121 44356	4.7nF 5% 2kV
2338	4822 121 40518	100nF 10% 250V
2339	4822 121 40518	100nF 10% 250V
2340	4822 121 40518	100nF 10% 250V
2341	2238 586 59812	100nF 20-80% 50V 0603
2342	4822 126 14241	330pF 50V 0603
2347	4822 124 80791	470µF 20% 16V
2348	5322 126 11583	10nF 10% 50V 0603
2358	4822 124 80791	470µF 20% 16V
2359	5322 126 11583	10nF 10% 50V 0603
2403	4822 124 41584	100µF 20% 10V
2404	4822 124 41584	100µF 20% 10V
2405	4822 122 31177	470pF 10% 500V
2409	5322 126 11583	10nF 10% 50V 0603
2410	2238 916 15641	22nF 10% 25V 0603
2411	2238 916 15641	22nF 10% 25V 0603
2420	2222 930 56627	2.2nF 10% 200V 0805
2428	3198 017 42230	22nF 50V
2435	2020 557 90734	22nF 10% 250V
2436	2020 012 93596	22µF 20% 250V
2437	5322 126 11578	1nF 10% 50V 0603
2438	2222 930 56627	2.2nF 10% 200V 0805
2439	2020 557 90734	22nF 10% 250V
2501	2238 586 59812	100nF 20-80% 50V 0603
2503	2238 586 59812	100nF 20-80% 50V 0603
2505	2238 586 59812	100nF 20-80% 50V 0603
2510	4822 126 14585	100nF 10% 50V
2511	4822 126 14585	100nF 10% 50V
2512	4822 122 30043	10nF 80% 63V

⊣WW⊢

3304	4822 052 10102	1kΩ 5% 0.33W
3305	4822 052 10108	1Ω 5% 0.33W
3310	4822 051 10102	1kΩ 2% 0.25W
3334	4822 050 11002	1kΩ 1% 0.4W
3338	3198 013 04710	470Ω 20% 0.5W
3339	3198 013 04710	470Ω 20% 0.5W
3340	3198 013 04710	470Ω 20% 0.5W
3341	4822 052 11479	47Ω 5% 0.5W
3345	4822 116 52191	33Ω 5% 0.5W
3347	3198 013 01520	1.5kΩ 2% 0.5W
3348	4822 117 13016	VDR 1mA/50V
3349	3198 013 01020	1kΩ 2% 0.5W
3350	4822 116 52175	100Ω 5% 0.5W
3351	4822 116 52175	100Ω 5% 0.5W
3352	4822 116 52175	100Ω 5% 0.5W
3356	4822 051 10102	1kΩ 2% 0.25W
3401	4822 053 11101	100Ω 5% 2W
3402	4822 116 52176	10Ω 5% 0.5W
3403	4822 052 10108	1Ω 5% 0.33W
3404	4822 052 10108	1Ω 5% 0.33W
3410	4822 051 30471	470Ω 5% 0.062W

3411	4822 117 11148	56kΩ 1% 0.1W
3412	4822 117 11148	56kΩ 1% 0.1W
3413	4822 051 30471	470Ω 5% 0.062W
3416	4822 051 20333	33kΩ 5% 0.1W
3417	4822 051 20333	33kΩ 5% 0.1W
3422	4822 051 30008	Jumper 0603
3448	4822 051 20333	33kΩ 5% 0.1W
3449	4822 117 11817	1.2kΩ 1% 1/16W
3451	4822 051 30102	1kΩ 5% 0.062W
3453	4822 051 30103	10kΩ 5% 0.062W
3454	4822 051 20333	33kΩ 5% 0.1W
3456	4822 051 30332	3.3kΩ 5% 0.062W
3458	4822 117 12139	22Ω 5% 0.062W
3459	4822 051 30101	100Ω 5% 0.062W
3460	4822 117 12139	22Ω 5% 0.062W
3465	4822 051 30008	Jumper 0603
3471	4822 117 11817	1.2kΩ 1% 1/16W
3473	4822 116 80176	1Ω 5% 0.5W
3474	4822 051 30103	10kΩ 5% 0.062W
3478	4822 116 80176	1Ω 5% 0.5W
3488	4822 051 30008	Jumper 0603
3489	4822 051 30109	10Ω 5% 0.062W
3492	4822 051 30008	Jumper 0603
3501	4822 051 10102	1kΩ 2% 0.25W
3501	4822 117 10361	680Ω 1% 0.1W
3502	4822 051 30331	330Ω 5% 0.062W
3506	4822 051 30471	470Ω 5% 0.062W
3507	4822 051 30008	Jumper 0603
3510	4822 116 52219	330Ω 5% 0.5W
3511	4822 051 10102	1kΩ 2% 0.25W
3511	4822 117 10361	680Ω 1% 0.1W
3512	4822 051 30331	330Ω 5% 0.062W
3516	4822 117 13632	100kΩ 1% 0603 0.62W
3517	4822 051 30102	1kΩ 5% 0.062W
3518	4822 051 30008	Jumper 0603
3520	4822 116 52226	560Ω 5% 0.5W
3521	4822 051 10102	1kΩ 2% 0.25W
3521	4822 117 10361	680Ω 1% 0.1W
3522	4822 051 30331	330Ω 5% 0.062W
3526	4822 051 30471	470Ω 5% 0.062W
3527	4822 051 30008	Jumper 0603
3530	4822 116 52228	680Ω 5% 0.5W
3532	4822 051 30471	470Ω 5% 0.062W
3533	4822 051 30008	Jumper 0603
3535	4822 051 20008	Jumper 0805
3536	4822 051 20008	Jumper 0805
3537	4822 051 20008	Jumper 0805
3539	4822 051 10102	1kΩ 2% 0.25W
3539	4822 117 10361	680Ω 1% 0.1W
3541	4822 051 10102	1kΩ 2% 0.25W
3541	4822 117 10361	680Ω 1% 0.1W
3543	4822 051 10102	1kΩ 2% 0.25W
3543	4822 117 10361	680Ω 1% 0.1W
3544	4822 116 52285	470kΩ 5% 0.5W
3545	4822 051 30109	10Ω 5% 0.062W
3546	4822 051 30109	10Ω 5% 0.062W
3547	4822 051 30109	10Ω 5% 0.062W
3999	4822 117 11817	1.2kΩ 1% 1/16W
9301	4822 051 30008	Jumper 0603
9303	4822 051 30008	Jumper 0603
9305	4822 051 30008	Jumper 0603
9306	4822 051 30008	Jumper 0603
9307	4822 051 30008	Jumper 0603
9308	4822 051 30008	Jumper 0603
9314	4822 051 30008	Jumper 0603
9323	4822 051 30008	Jumper 0603
9324	4822 051 30008	Jumper 0603
9325	4822 051 30008	Jumper 0603
9402	4822 051 30008	Jumper 0603
9403	4822 051 30008	Jumper 0603
9406	4822 051 20008	Jumper 0805
9408	4822 051 30008	Jumper 0603
9409	4822 051 30008	Jumper 0603
9428	4822 051 30008	Jumper 0603
9432	4822 051 30008	Jumper 0603
9437	4822 051 30008	Jumper 0603
9450	4822 051 20008	Jumper 0805
9452	4822 051 20008	Jumper 0805
9453	4822 051 20008	Jumper 0805

5300▲	3104 308 20571	Trans. S13974-03
5304	4822 526 10704	Bead 45Ω at 50MHz
5305▲	2422 549 42896	Bead 120Ω at 100MHz
5308	4822 157 11867	5.6µH 5%
5309	4822 157 11867	5.6µH 5%
5310	4822 157 50964	100µH 20%
5400	4822 157 71467	39µH 10%
5500▲	2722 122 00337	D.Line 70ns SDL-5135
5501▲	2722 122 00337	D.Line 70ns SDL-5135
5502▲	2722 122 00337	D.Line 70ns SDL-5135

6301	9340 553 52115	BAS321
6302	9340 553 52115	BAS321
6303	9340 553 52115	BAS321
6305	9340 553 52115	BAS321
6306	9340 553 52115	BAS321
6307	9340 553 52115	BAS321
6401	4822 130 11397	BAS316
6402	4822 130 11397	BAS316
6403	4822 130 11397	BAS316
6404	4822 130 11397	BAS316
6405	3139 120 52021	BYV29X-500
6407	4822 130 11397	BAS316
6420	5322 130 34337	BAV99
6421	5322 130 34337	BAV99
6422	5322 130 34337	BAV99
6426	4822 130 30613	BAW62
6427	4822 130 30613	BAW62
6428	4822 130 30613	BAW62
6430	9340 548 61115	PDZ12B
6431	4822 130 11397	BAS316
6432	9340 553 52115	BAS321
6500	4822 130 11397	BAS316
6501	4822 130 11397	BAS316
6502	4822 130 11397	BAS316
6503	4822 130 41601	BYV95A

7330	9352 694 46112	TDA6118JF/N1
7340	9352 694 46112	TDA6118JF/N1
7350	9352 694 46112	TDA6118JF/N1
7414	5322 130 62804	BCP53
7415	5322 130 63033	BCP56
7422	5322 130 42718	BFS20
7427	5322 130 60159	BC846B
7428	4822 130 60373	BC856B
7429	5322 130 63033	BCP56
7430	5322 130 62804	BCP53
7500	5322 130 42718	BFS20
7501	5322 130 60159	BC846B
7503	5322 130 42718	BFS20
7504	5322 130 60159	BC846B
7506	5322 130 42718	BFS20
7507	5322 130 60159	BC846B

DC Shift Panel [G]

Various

0317	4822 265 20723	Connector 2p m
0318	4822 265 20723	Connector 2p m
1430	2422 086 10581	Fuse 400mA 65V
8317	3104 311 01421	Cable 2p3/220/2p3

2430	4822 122 31177	470pF 10% 500V
2431	4822 122 31177	470pF 10% 500V

5430	3128 138 38911	DC-shift coil CU15

6432	9340 317 00133	BYD33V
6433	9340 317 00133	BYD33V

Horizontal DAF Panel [I]

Various

0034	3104 304 23041	DAF bracket EMGS
1417	4822 265 20723	Connector 2p m
1418	2422 025 16374	Connector 2p m
1419	4822 265 20723	Connector 2p m
1491	3104 311 02452	Cable 1P/340/1P
1497	4822 267 10973	Connector 1P m

2800▲	2222 375 90188	390pF 5% 2kV
2821	2222 479 90166	68nF 5% 400V
2890▲	2222 375 90188	390pF 5% 2kV

3998	4822 116 52207	1.2kΩ 5% 0.5W

5800▲	2422 531 02437	Transformer S21975-03
5801	2422 531 02435	Transformer C948-02

DVD Eject Button [K]

Various

0052	3104 304 25611	DVD eject button TDL
0202	4822 256 91766	LED holder
1200	4822 276 13775	Switch
1264	2422 025 16601	3p male
8264	3104 311 04671	Cable 3p/1200/3p

9200	4822 051 30008	Jumper 0603

6200	4822 130 11423	PLVA2656A
6202	9322 191 72682	VS LTL353UBJ

LCD Panel [L]

Various

0154	3104 307 99931	LCD window assy
0155	3104 307 99971	LCD top cover assy
0156	3104 308 10641	LCD bottom cover assy

Side I/O Panel [O]

Various

0205	3104 304 25621	Side I/O bracket TDL
1016	3104 328 26481	Side I/O assy
1326	4822 267 10975	Connector 3p
1327	4822 267 31014	Socket headphone
1328	2422 026 05133	Connector SVHS 4p f
1936	2422 025 12485	Connector 11p m
8936	3104 311 04121	Cable 11P/680/11P

2803	5322 126 10733	680pF 5% 50V
2804	5322 122 32531	100pF 5% 50V
2805	5322 122 32531	100pF 5% 50V
2806	5322 126 10733	680pF 5% 50V
2807	4822 126 14076	220nF 25V. 20%
2813	4822 124 22652	2.2µF 20% 50V
2832	5322 122 31863	330pF 5% 63V
2834	5322 122 31863	330pF 5% 63V
2840	4822 122 33177	10nF 20% 50V
2841	4822 122 33177	10nF 20% 50V

3803	4822 050 11002	1kΩ 1% 0.4W
3804	4822 050 11002	1kΩ 1% 0.4W
3808	4822 051 20008	Jumper 0805
3809	4822 051 20008	Jumper 0805
3814	4822 117 10833	10kΩ 1% 0.1W
3816	4822 051 20008	Jumper 0805
3826	4822 116 52199	68Ω 5% 0.5W
3827	4822 116 52199	68Ω 5% 0.5W
3828	4822 116 52199	68Ω 5% 0.5W
3829	4822 116 52199	68Ω 5% 0.5W
3830	4822 050 21003	10kΩ 1% 0.6W
3835	4822 116 52175	100Ω 5% 0.5W
3842	4822 050 21003	10kΩ 1% 0.6W
4800	4822 051 20008	Jumper 0805
4801	4822 051 20008	Jumper 0805
4802	4822 051 20008	Jumper 0805
4803	4822 051 20008	Jumper 0805

6801	9322 129 38685	BZM55-C6V8
6802	9322 129 38685	BZM55-C6V8

6803	9322 129 40685	BZM55-C10
6804	9322 129 40685	BZM55-C10
6805	9322 129 40685	BZM55-C10
6806	9322 129 40685	BZM55-C10
6807	9322 129 38685	BZM55-C6V8
6808	9322 129 38685	BZM55-C6V8

Top Control Panel [P]

Various

1207	4822 267 10565	Connector 4p
1411	2422 549 44534	Filter 4.5MHz
1701	4822 276 13775	Switch
1702	4822 276 13775	Switch
1703	4822 276 13775	Switch
1704	4822 276 13775	Switch
1705	4822 276 13775	Switch

3008	4822 117 10845	620Ω 1% 0.1W
3010	4822 117 11534	1.1kΩ 1% 0.1W
3011	4822 117 11951	2kΩ 1% 0.1W
3013	4822 117 13528	200Ω 1% 0.125W 0805
3014	4822 051 20391	390Ω 5% 0.1W
3017	4822 117 13577	330Ω 1% 0805 1.25W
3018	4822 117 13577	330Ω 1% 0805 1.25W
3019	4822 117 13577	330Ω 1% 0805 1.25W
3020	4822 117 13577	330Ω 1% 0805 1.25W
3021	4822 117 13577	330Ω 1% 0805 1.25W
3022	4822 117 13577	330Ω 1% 0805 1.25W
3023	4822 117 13577	330Ω 1% 0805 1.25W
3024	4822 117 13577	330Ω 1% 0805 1.25W
3025	4822 117 13577	330Ω 1% 0805 1.25W
3026	4822 117 13577	330Ω 1% 0805 1.25W

6001	9322 190 20685	LED C930UBK
6002	9322 190 20685	LED C930UBK
6003	9322 190 20685	LED C930UBK
6004	9322 190 20685	LED C930UBK
6005	9322 190 20685	LED C930UBK
6006	9322 190 20685	LED C930UBK
6007	9322 190 20685	LED C930UBK
6008	9322 190 20685	LED C930UBK
6009	9322 190 20685	LED C930UBK
6010	9322 190 20685	LED C930UBK

Auto Scavem [SC]

Various

0085	3104 304 24971	Bracket autoscavem
1440	2422 025 12485	Connector 11p m
1940	2422 025 12485	Connector 11p m
1955	4822 267 10735	Connector 3p m
8440	3104 311 05131	Cable 11P/480/11P
8440	3104 311 05882	Cable 11P/400/11P

2000	4822 126 14223	2.2pF +-0.25pF 50V 0603
2002	4822 126 13887	4.7pF 50V
2003	4822 126 13887	4.7pF 50V
2004	3198 016 31080	1pF 25% 50V 0603
2006	2238 586 59812	100nF 20-80% 50V 0603
2008	2238 916 15641	22nF 10% 25V 0603
2010	2238 586 59812	100nF 20-80% 50V 0603
2012	2238 916 15641	22nF 10% 25V 0603
2014	2238 916 15641	22nF 10% 25V 0603
2016	4822 122 33741	10pF 10% 50V
2020	2238 916 15641	22nF 10% 25V 0603
2038	2238 916 15641	22nF 10% 25V 0603
2040	4822 126 14225	56pF 5% 50V 0603
2041	5322 122 32163	5.6pF 20% 100V
2208	4822 124 41584	100µF 20% 10V
2600	4822 124 80791	470µF 20% 16V
2602	5322 122 32654	22nF 10% 63V
2605	3198 017 41050	1µF 10V 0603
2607	5322 122 32654	22nF 10% 63V

3000	4822 051 30101	100Ω 5% 0.062W
3002	4822 051 30101	100Ω 5% 0.062W
3004	4822 051 30101	100Ω 5% 0.062W
3006	4822 051 30102	1kΩ 5% 0.062W
3008	4822 051 30102	1kΩ 5% 0.062W
3010	4822 051 30102	1kΩ 5% 0.062W
3012	4822 051 30332	3.3kΩ 5% 0.062W
3014	4822 117 12903	1.8kΩ 1% 0.063W 0603
3016	4822 117 12902	8.2kΩ 1% 0.063W 0603
3018	4822 051 30681	680Ω 5% 0.062W
3020	4822 051 30471	470Ω 5% 0.062W
3022	4822 051 30393	39kΩ 5% 0.062W
3024	4822 051 30273	27kΩ 5% 0.062W
3028	4822 051 30223	22kΩ 5% 0.062W
3030	4822 051 30683	68kΩ 5% 0.062W
3032	4822 117 12903	1.8kΩ 1% 0.063W 0603
3034	4822 051 30222	2.2kΩ 5% 0.062W
3036	4822 051 30332	3.3kΩ 5% 0.062W
3038	4822 051 30561	560Ω 5% 0.062W
3040	4822 117 12925	47kΩ 1% 0.063W 0603
3042	4822 051 30682	6.8kΩ 5% 0.062W
3044	4822 051 30102	1kΩ 5% 0.062W
3046	4822 051 30102	1kΩ 5% 0.062W
3048	4822 051 30102	1kΩ 5% 0.062W
3050	4822 051 30561	560Ω 5% 0.062W
3052	4822 051 30561	560Ω 5% 0.062W
3054	4822 051 30102	1kΩ 5% 0.062W
3056	4822 051 30102	1kΩ 5% 0.062W
3058	4822 051 30471	470Ω 5% 0.062W
3060	4822 051 30471	470Ω 5% 0.062W
3062	4822 051 30222	2.2kΩ 5% 0.062W
3064	4822 117 12971	15Ω 5% 0.62W 0603
3066	4822 117 12902	8.2kΩ 1% 0.063W 0603
3068	4822 051 30681	680Ω 5% 0.062W
3070	4822 117 12902	8.2kΩ 1% 0.063W 0603
3072	4822 051 30152	1.5kΩ 5% 0.062W
3074	4822 051 30101	100Ω 5% 0.062W
3076	4822 117 11817	1.2kΩ 1% 1/16W
3078	4822 051 30102	1kΩ 5% 0.062W
3093	4822 051 30152	1.5kΩ 5% 0.062W
3106	4822 051 30472	4.7kΩ 5% 0.062W
3108	4822 051 30273	27kΩ 5% 0.062W
3110	4822 051 30392	3.9kΩ 5% 0.063W 0603
3112	4822 051 30222	2.2kΩ 5% 0.062W
3114	4822 051 30101	100Ω 5% 0.062W
3116	4822 051 30102	1kΩ 5% 0.062W
3118	4822 051 30103	10kΩ 5% 0.062W
3120	4822 051 30103	10kΩ 5% 0.062W
3500	4822 051 30101	100Ω 5% 0.062W
3502	4822 051 30101	100Ω 5% 0.062W
3600	4822 117 13574	1.5Ω 5% 1206
3999	4822 051 30152	1.5kΩ 5% 0.062W
9002	4822 051 30008	Jumper 0603
9010	4822 051 30008	Jumper 0603
9020	4822 051 30008	Jumper 0603
9033	4822 116 52175	100Ω 5% 0.5W
9045	4822 051 30008	Jumper 0603
9046	4822 051 30008	Jumper 0603
9047	4822 051 30008	Jumper 0603

5600	4822 157 11867	5.6µH 5%
5601	4822 157 11867	5.6µH 5%

6000	5322 130 80119	BBY40

7000	4822 130 60373	BC856B
7002	4822 130 60373	BC856B
7004	4822 130 60373	BC856B
7006	5322 130 42718	BFS20
7008	4822 130 60373	BC856B
7010	5322 130 42718	BFS20
7012	5322 130 42718	BFS20
7014	4822 130 60383	BF824
7016	5322 130 42718	BFS20
7018	5322 130 42718	BFS20
7020	4822 130 60383	BF824
7022	5322 130 42718	BFS20
7024	5322 130 42718	BFS20
7026	5322 130 42718	BFS20
7040	5322 130 42718	BFS20
7042	4822 130 60383	BF824
7500	5322 209 90559	TDA8444T/N4

Interface Panel [T]

Various

0203	3104 304 25191	TDL panel support
1005▲	3103 308 54861	Tuner ECO6 AS/02 RDS
1120	4822 265 11515	Connector 8P f
1146	4822 267 10637	Connector 5P m v 2.00
1250	2422 025 17388	Connector 30p f
1253	2422 025 18092	Connector 30p f
1260	2422 025 18004	Connector 24p m
1280	4822 267 10734	Connector 5p m
1300	2422 128 02866	Switch 50mA 12V
1400▲	2422 543 01288	Crystal 20MHz
1401▲	2422 086 11021	Fuse SM T 800 mA 63V
1402▲	2422 086 11009	Fuse T1.A 63V 2410
1406▲	2422 543 01287	crystal 4.332MHz
1U02	2422 025 17104	Connector 7p m
8120	3104 311 05341	FFC Foil 8P/60/8P
8260	3104 311 05261	Cable 24P/1000/24P
8952	3104 311 03171	Cable 5P/280/5P KR

2006	3198 035 71040	100nF 10% 16V 0402
2007	4822 124 23002	10µF 20% 16V
2008	3198 035 71040	100nF 10% 16V 0402
2009	4822 124 23002	10µF 20% 16V
2010	3198 035 71040	100nF 10% 16V 0402
2011	4822 124 23002	10µF 20% 16V
2012	4822 122 33761	22pF 5% 50V
2013	4822 122 33761	22pF 5% 50V
2014	4822 126 13879	220nF 20% 16V
2015	4822 126 13879	220nF 20% 16V
2016	2238 586 59812	100nF 20-80% 50V 0603
2017	2238 916 15641	22nF 10% 25V 0603
2018	4822 124 12095	100µF 20% 16V
2019	2238 586 59812	100nF 20-80% 50V 0603
2020	5322 126 11583	10nF 10% 50V 0603
2022	5322 126 11583	10nF 10% 50V 0603
2023	4822 124 80151	47µF 20% 16V
2024	4822 124 80151	47µF 20% 16V
2025	2238 869 15101	100pF 5% 50V 0402
2026	2238 586 59812	100nF 20-80% 50V 0603
2027	2238 586 59812	100nF 20-80% 50V 0603
2028	2238 916 15641	22nF 10% 25V 0603
2029	2238 586 59812	100nF 20-80% 50V 0603
2030	4822 126 13881	470pF 5% 50V
2031	4822 126 13881	470pF 5% 50V
2032	4822 126 13881	470pF 5% 50V
2033	4822 126 13881	470pF 5% 50V
2034	4822 124 23002	10µF 20% 16V
2100	4822 126 14249	560pF 10% 50V 0603
2101	3198 035 71040	100nF 10% 16V 0402
2102	3198 035 71040	100nF 10% 16V 0402
2103	2020 552 96618	1nF 10% 50V 0402
2105	2020 552 96448	1µF 10% 16V
2109	2020 552 96448	1µF 10% 16V
2110	2020 552 96448	1µF 10% 16V
2111	2222 867 15339	33pF 5% 50V 0603
2112	3198 035 71040	100nF 10% 16V 0402
2113	2020 552 96448	1µF 10% 16V
2114	2022 552 05615	2.2µF 10% 6.3V 0805
2115	3198 035 71040	100nF 10% 16V 0402
2116	2222 867 15339	33pF 5% 50V 0603
2117	2238 586 59812	100nF 20-80% 50V 0603
2118	4822 126 11785	47pF 5% 50V 0603
2119	4822 126 14226	82pF 5% 50V 0603
2121	2020 552 96448	1µF 10% 16V
2122	2020 552 96448	1µF 10% 16V
2124	4822 126 14241	330pF 50V 0603
2125	4822 124 80151	47µF 20% 16V
2127	2020 552 96448	1µF 10% 16V
2128	2020 552 96448	1µF 10% 16V
2303	4822 124 80151	47µF 20% 16V
2320	3198 035 71040	100nF 10% 16V 0402
2400	2238 586 59812	100nF 20-80% 50V 0603
2401	2020 021 91642	470µF 20% 16V
2402	2238 586 59812	100nF 20-80% 50V 0603
2403	2020 021 91642	470µF 20% 16V
2404	4822 126 14238	2.2nF 50V 0603
2405	5322 124 41945	22µF 20% 35V SMD
2406	4822 126 14238	2.2nF 50V 0603
2407	2238 586 59812	100nF 20-80% 50V 0603
2408	2238 586 59812	100nF 20-80% 50V 0603
2409	2238 916 15641	22nF 10% 25V 0603
2410	2238 916 15641	22nF 10% 25V 0603
2413	2020 021 91642	470µF 20% 16V
2414	2020 552 94427	100pF 5% 50v 0603
2415	2238 586 59812	100nF 20-80% 50V 0603
2417	2020 552 96326	220nF 10% 16V

2418	2238 586 59812	100nF 20-80% 50V 0603
2419	2020 024 90166	10µF 20% 35V
2420	4822 124 80151	47µF 20% 16V
2421	2238 916 15641	22nF 10% 25V 0603
2422	2020 024 90166	10µF 20% 35V
2423	2020 024 90166	10µF 20% 35V

3002	4822 051 30105	1MΩ 5% 0.062W
3003	3198 031 11010	4 x 100Ω 5% 1206
3004	3198 031 11010	4 x 100Ω 5% 1206
3005	4822 117 13545	100Ω 1% 0402
3006	4822 051 30105	1MΩ 5% 0.062W
3007	4822 051 30333	33kΩ 5% 0.062W
3008	4822 117 12925	47kΩ 1% 0.063W 0603
3009	2322 702 60824	820kΩ 5% 0603
3010	4822 051 30105	1MΩ 5% 0.062W
3011	4822 051 30105	1MΩ 5% 0.062W
3012	4822 051 30105	1MΩ 5% 0.062W
3013	4822 117 13632	100kΩ 1% 0603 0.62W
3014	4822 051 30102	1kΩ 5% 0.062W
3017	3198 031 03390	33Ω 1% 0402
3018	4822 117 13606	10kΩ 5% 0.01W 0402
3019	4822 117 13606	10kΩ 5% 0.01W 0402
3020	4822 117 13543	470Ω 5% 0402
3021	4822 117 13545	100Ω 1% 0402
3022	4822 117 13606	10kΩ 5% 0.01W 0402
3023	4822 117 13543	470Ω 5% 0402
3024	4822 117 13545	100Ω 1% 0402
3025	4822 117 13548	1kΩ 5% 0402
3026	4822 117 13606	10kΩ 5% 0.01W 0402
3027	3198 031 01530	15kΩ 5% 0.01W 0402
3029	4822 117 13606	10kΩ 5% 0.01W 0402
3030	4822 117 13545	100Ω 1% 0402
3031	4822 117 13545	100Ω 1% 0402
3032	4822 117 13545	100Ω 1% 0402
3033	4822 117 13545	100Ω 1% 0402
3034	4822 117 13545	100Ω 1% 0402
3035	4822 117 13545	100Ω 1% 0402
3037	4822 117 13601	22kΩ 5% 0402
3039	4822 117 13545	100Ω 1% 0402
3040	4822 117 13545	100Ω 1% 0402
3041	4822 117 13545	100Ω 1% 0402
3042	4822 117 11151	1Ω 5%
3043	4822 117 13545	100Ω 1% 0402
3044	4822 117 10833	10kΩ 1% 0.1W
3046	4822 117 13545	100Ω 1% 0402
3047	4822 117 13545	100Ω 1% 0402
3048	4822 051 20472	4.7kΩ 5% 0.1W
3049	4822 051 30102	1kΩ 5% 0.062W
3050	4822 051 30102	1kΩ 5% 0.062W
3051	4822 051 30102	1kΩ 5% 0.062W
3054	4822 117 13606	10kΩ 5% 0.01W 0402
3057	4822 117 13606	10kΩ 5% 0.01W 0402
3059	4822 117 13606	10kΩ 5% 0.01W 0402
3060	3198 031 06820	6.8kΩ 5% 0.01W 0402
3063	4822 117 13545	100Ω 1% 0402
3064	4822 117 13545	100Ω 1% 0402
3065	4822 117 13606	10kΩ 5% 0.01W 0402
3066	4822 117 13548	1kΩ 5% 0402
3067	4822 117 13606	10kΩ 5% 0.01W 0402
3068	4822 117 13606	10kΩ 5% 0.01W 0402
3069	4822 117 13606	10kΩ 5% 0.01W 0402
3070	4822 117 13606	10kΩ 5% 0.01W 0402
3071	4822 117 13606	10kΩ 5% 0.01W 0402
3072	4822 117 10833	10kΩ 1% 0.1W
3073	4822 117 13606	10kΩ 5% 0.01W 0402
3074	4822 117 13606	10kΩ 5% 0.01W 0402
3075	4822 117 13545	100Ω 1% 0402
3076	3198 031 03910	390Ω 1% 0402
3078	4822 117 11151	1Ω 5%
3082	4822 051 30471	470Ω 5% 0.062W
3083	4822 051 30681	680Ω 5% 0.062W
3084	4822 051 30102	1kΩ 5% 0.062W
3102	4822 051 30223	22kΩ 5% 0.062W
3103	4822 117 13543	470Ω 5% 0402
3104	4822 117 11297	100kΩ 5% 0.1W
3105	4822 117 13548	1kΩ 5% 0402
3106	3198 031 04730	47Ω 5% 0402
3107	4822 117 13606	10kΩ 5% 0.01W 0402
3108	4822 117 11297	100kΩ 5% 0.1W
3109	4822 117 11297	100kΩ 5% 0.1W
3110	4822 117 13545	100Ω 1% 0402
3111	3198 031 04730	47Ω 5% 0402
3112	4822 117 13545	100Ω 1% 0402
3113	4822 051 30333	33kΩ 5% 0.062W
3115	4822 051 30333	33kΩ 5% 0.062W
3116	4822 051 30333	33kΩ 5% 0.062W
3117	4822 117 11297	100kΩ 5% 0.1W
3119	3198 031 04740	470 kΩ 5% 0402
3120	4822 051 30333	33kΩ 5% 0.062W
3121	4822 117 13632	100kΩ 1% 0603 0.62W
3125	3198 031 04740	470 kΩ 5% 0402
3126	2322 705 87564	560kΩ 5% 0402
3127	3198 031 04720	4.7kΩ 5% 0402
3128	4822 051 30333	33kΩ 5% 0.062W
3129	3198 031 01540	150kΩ 5% 0402
3130	4822 117 13632	100kΩ 1% 0603 0.62W
3133	3198 031 01540	150kΩ 5% 0402
3134	4822 051 30153	15kΩ 5% 0.062W
3135	4822 051 30153	15kΩ 5% 0.062W
3136	4822 117 11297	100kΩ 5% 0.1W
3137	4822 117 13632	100kΩ 1% 0603 0.62W
3138	4822 051 30152	1.5kΩ 5% 0.062W
3139	5322 117 11726	10Ω 5%
3140	5322 117 11726	10Ω 5%
3142	4822 117 13632	100kΩ 1% 0603 0.62W
3143	4822 117 13632	100kΩ 1% 0603 0.62W
3144	4822 117 13632	100kΩ 1% 0603 0.62W
3146	4822 117 13632	100kΩ 1% 0603 0.62W
3321	4822 117 13545	100Ω 1% 0402
3322	4822 117 13545	100Ω 1% 0402
3323	4822 117 13545	100Ω 1% 0402
3324	3198 031 01530	15kΩ 5% 0.01W 0402
3327	3198 031 01530	15kΩ 5% 0.01W 0402
3329	3198 031 01530	15kΩ 5% 0.01W 0402
3330	3198 031 01530	15kΩ 5% 0.01W 0402
3332	3198 031 01530	15kΩ 5% 0.01W 0402
3333	4822 051 30153	15kΩ 5% 0.062W
3338	4822 051 30221	220Ω 5% 0.062W
3400	4822 051 30223	22kΩ 5% 0.062W
3401	4822 117 12902	8.2kΩ 1% 0.063W 0603
3402	4822 117 11449	2.2kΩ 5% 0.1W 0805
3403	4822 117 10353	150Ω 1% 0.1W
3404	4822 051 30392	3.9kΩ 5% 0.063W 0603
3405	4822 051 30102	1kΩ 5% 0.062W
3406	4822 117 13632	100kΩ 1% 0603 0.62W
3407	4822 051 30153	15kΩ 5% 0.062W
3408	4822 051 30221	220Ω 5% 0.062W
3409	4822 051 30102	1kΩ 5% 0.062W
3410	4822 117 11503	220Ω 1% 0.1W
3411	3198 031 08220	8.2kΩ 5% 0,5W
3418	4822 051 30562	5.6kΩ 5% 0.063W 0603
3419	4822 117 13606	10kΩ 5% 0.01W 0402
3420	4822 051 30102	1kΩ 5% 0.062W
3421	4822 117 13632	100kΩ 1% 0603 0.62W
3422	4822 117 11297	100kΩ 5% 0.1W
3423	4822 117 11297	100kΩ 5% 0.1W
3424	4822 117 10833	10kΩ 1% 0.1W
3426	3198 031 08220	8.2kΩ 5% 0,5W
3427	2322 704 61303	13kΩ 1% 0603
3428	4822 051 30562	5.6kΩ 5% 0.063W 0603
3429	4822 051 30562	5.6kΩ 5% 0.063W 0603
3430	4822 117 13606	10kΩ 5% 0.01W 0402
3431	4822 117 12706	10kΩ 1% 0.063W 0603
3432	4822 117 13548	1kΩ 5% 0402
3433	4822 051 30392	3.9kΩ 5% 0.063W 0603
3434	4822 051 20182	1.8kΩ 5% 0.1W
3999	4822 117 13606	10kΩ 5% 0.01W 0402
9002	4822 051 30008	Jumper 0603
9003	4822 051 30008	Jumper 0603
9005	4822 051 30008	Jumper 0603
9097	4822 051 20008	Jumper 0805
9123	4822 051 30008	Jumper 0603
9300	4822 117 13605	Jumper 0402
9301	4822 117 13605	Jumper 0402
9317	4822 051 30008	Jumper 0603
9320	4822 117 13605	Jumper 0402

5000	4822 157 11716	Bead 30Ω at 100MHz
5100	4822 157 11716	Bead 30Ω at 100MHz
5101	4822 157 11716	Bead 30Ω at 100MHz
5102	2422 549 43062	Bead 600Ω at 100MHz
5103	2422 549 43062	Bead 600Ω at 100MHz
5104	2422 549 43062	Bead 600Ω at 100MHz
5105	2422 549 43062	Bead 600Ω at 100MHz
5106	2422 549 43062	Bead 600Ω at 100MHz
5400	4822 157 11716	Bead 30Ω at 100MHz
5401	4822 157 11716	Bead 30Ω at 100MHz
5402	2422 535 94134	10µH 20% 0805
5403	2422 535 94134	10µH 20% 0805
5406	2422 536 00261	47µH 20%

6000	4822 130 11423	PLVA2656A
6001	4822 130 11423	PLVA2656A
6002	4822 130 11423	PLVA2656A
6003	4822 130 11423	PLVA2656A
6004	4822 130 11423	PLVA2656A
6005	4822 130 11423	PLVA2656A
6006	4822 130 11423	PLVA2656A
6007	4822 130 11397	BAS316
6008	4822 130 11423	PLVA2656A
6009	4822 130 11397	BAS316
6010	4822 130 11397	BAS316
6012	4822 130 11397	BAS316
6013	4822 130 11397	BAS316
6014	4822 130 11397	BAS316
6015	9340 548 61115	PDZ12B
6101	5322 130 34331	BAV70
6400▲	9322 165 17668	STPS2L30A
6403	4822 130 11397	BAS316
6404	4822 130 11397	BAS316
6405	4822 130 80622	BAT54
6406	9340 548 61115	PDZ12B
6408	9340 548 52115	PDZ5.1B
6409	9340 548 61115	PDZ12B
6410	4822 130 11397	BAS316
6411	3198 020 55680	BZX384-C5V6
6412	4822 130 11397	BAS316
6413	4822 130 11397	BAS316
6414	9340 548 61115	PDZ12B

7001	5322 130 60159	BC846B
7002▲	9352 674 48518	P89C664HBA/00
7003	5322 130 60159	BC846B
7004	9351 546 30118	PCF1252-1T/F4
7005▲	9322 158 57668	LF90CPT
7006	5322 209 70225	LM393D
7007	9322 091 04668	SI4410DY
7009▲	9322 178 31668	L9997ND
7010	4822 130 60373	BC856B
7011	9322 156 81668	M24C32-WMN6TNKSA
7100▲	9352 613 91118	SAA6588T/V2
7101	4822 209 30095	LM833D
7103	9351 869 40118	74HC4053PW
7105	3198 010 42310	BC847BW
7106	9340 425 20115	BC847BS
7306	5322 209 33172	PCF8574AT
7400▲	9322 163 74668	L4978D
7401	3198 010 42310	BC847BW
7402	4822 130 42804	BC817-25
7404	9340 560 36235	BSH111
7405	3198 010 42320	BC857BW
7406	3198 010 42310	BC847BW
7407▲	9322 181 15668	IRFR9024N
7408	9340 425 20115	BC847BS
7409	9322 091 04668	SI4410DY
7410	3198 010 42310	BC847BW

Radio Tuner Panel [RAD]

Various

1102	4822 267 10283	YKD31-0432
1103	4822 265 31184	S2B-XH-A-BK
1110	2422 542 90071	FM frontend FE450-G01
1120	4822 265 11515	Connector 8P f

2102	4822 126 14305	100nF 10% 16V 0603
2106	2020 800 00204	Trim. 2.2pF- 4.2pF 100V
2107	4822 121 51319	1µF 10% 63V
2108	4822 122 31765	100pF 2% 63V
2109	4822 122 33741	10pF 10% 50V
2120	4822 122 33761	22pF 5% 50V
2122	5322 126 11579	3.3nF 10% 63V
2123	2238 861 18391	390pF 5% 50V 0805
2125	2238 861 18561	560pF 5% 50V 0805
2127	4822 126 13879	220nF 20% 16V
2128	4822 124 40248	10µF 20% 63V
2129	4822 124 41584	100µF 20% 10V
2130	4822 126 14494	22nF 10% 25V 0603
2131	3198 017 44740	470nF 10V 0603
2132	3198 017 44740	470nF 10V 0603
2133	4822 124 21913	1µF 20% 63V
2134	2020 552 94387	18nF 5% 50V 0603
2134	3198 017 31530	15nF 20% 50V 0603
2135	3198 017 31530	15nF 20% 50V 0603
2135	4822 122 33893	18nF 10% 63V
2136	4822 126 13879	220nF 20% 16V
2137	4822 126 13879	220nF 20% 16V
2138	4822 124 22652	2.2µF 20% 50V
2139	4822 122 33752	15pF 5% 50V
2140	4822 126 14226	82pF 5% 50V 0603
2141	4822 126 14305	100nF 10% 16V 0603
2143	4822 126 13879	220nF 20% 16V
2144	4822 124 21913	1µF 20% 63V
2145	4822 126 13883	220pF 5% 50V

2146	4822 122 33575	220pF 5% 63V
2147	4822 122 33575	220pF 5% 63V
2148	4822 122 33127	2.2nF 10% 63V
2149	4822 126 11671	33pF 5% 50V 0603
2150	4822 126 13838	100nF 80-20% 50V
2159	4822 126 11671	33pF 5% 50V 0603
2162	4822 124 81151	22µF 50V
2163	4822 126 14305	100nF 10% 16V 0603
2164	3198 017 44740	470nF 10V 0603
2165	4822 126 14305	100nF 10% 16V 0603
2166	5322 122 31647	1nF 10% 63V
2167	4822 126 11663	12pF 5% 50V 0603
2169	4822 126 14238	2.2nF 50V 0603
2180	5322 126 11583	10nF 10% 50V 0603
2191	4822 124 41584	100µF 20% 10V

3105	4822 051 30221	220Ω 5% 0.062W
3108	4822 051 30222	2.2kΩ 5% 0.062W
3109	4822 051 30472	4.7kΩ 5% 0.062W
3123	4822 051 30472	4.7kΩ 5% 0.062W
3125	4822 051 30103	10kΩ 5% 0.062W
3128	4822 051 30222	2.2kΩ 5% 0.062W
3130	4822 117 12968	820Ω 5% 0.62W
3131	4822 117 12968	820Ω 5% 0.62W
3132	4822 051 30479	47Ω 5% 0.062W
3134	4822 051 30223	22kΩ 5% 0.062W
3135	4822 051 30102	1kΩ 5% 0.062W
3137	4822 051 30223	22kΩ 5% 0.062W
3141	4822 051 30563	56kΩ 5% 0.062W
3142	4822 100 12159	100k 30%
3143	4822 051 30223	22kΩ 5% 0.062W
3144	4822 051 30102	1kΩ 5% 0.062W
3145	4822 051 30222	2.2kΩ 5% 0.062W
3146	4822 117 12139	22Ω 5% 0.062W
3150	4822 051 30103	10kΩ 5% 0.062W
3151	4822 051 30683	68kΩ 5% 0.062W
3152	4822 051 30471	470Ω 5% 0.062W
3153	4822 051 30471	470Ω 5% 0.062W
3154	4822 051 30331	330Ω 5% 0.062W
3155	4822 051 30151	150Ω 5% 0.062W
3158	4822 051 30471	470Ω 5% 0.062W
3159	4822 051 30471	470Ω 5% 0.062W
3160	4822 051 30471	470Ω 5% 0.062W
3161	4822 051 30223	22kΩ 5% 0.062W
3167	4822 051 20121	120Ω 5% 0,1W
3168	4822 051 30121	120Ω 5% 0.062W
3169	4822 051 30154	150kΩ 5% 0.062W
3171	4822 117 12925	47kΩ 1% 0.063W 0603
3172	4822 051 30562	5.6kΩ 5% 0.063W 0603
3176	4822 051 30333	33kΩ 5% 0.062W
3180	4822 051 30103	10kΩ 5% 0.062W
3190	4822 051 30121	120Ω 5% 0.062W
3191	4822 051 30121	120Ω 5% 0.062W
3192	4822 051 30331	330Ω 5% 0.062W
3193	4822 051 30331	330Ω 5% 0.062W
3194	4822 051 30222	2.2kΩ 5% 0.062W
3195	4822 051 30101	100Ω 5% 0.062W
4105	4822 051 20008	Jumper 0805
4106	4822 051 30008	Jumper 0603
4107	4822 051 20008	Jumper 0805

5103	2422 549 44107	Ind var 252KHz
5109	4822 157 71639	7MJA10H-A-TF21
5110	4822 242 70665	Filter 10.7M
5111	2422 549 44023	Ind var450KHz
5112	4822 157 70302	F7MCS-12216N
5114	4822 157 70302	F7MCS-12216N
5115	4822 157 71636	Birdie coil
5118	2422 535 95881	0.1µH 5% 1008
5119	4822 157 11443	2µH 10.7MHz
5121	4822 242 10261	T6252F00 (75KHz)
5122	2422 549 44108	Ind var 796KHz
5123	2422 549 44108	Ind var 796KHz

6105	4822 130 83075	HN1V02H-B
6106	4822 130 83757	BAS216
6107	9340 386 90115	BZX284-C11
6120	4822 130 83757	BAS216

7101	9351 772 20557	TEA5762H/V1
7103	5322 130 42756	BC857C
7104	4822 130 40855	BC337
7105	4822 130 40855	BC337
7109	4822 130 60373	BC856B
7110	4822 130 60373	BC856B
7112	4822 130 44503	BC547C
7122	5322 130 42755	BC847C
7124	5322 130 42755	BC847C

11. Revision List

First release

NOTES



This Service Manual are the Manufacturer's intellectual property
The design and the way the documents are selected, placed and related in this data base are the author's intellectual property
eturuta@gmail.com