Self Diagnosis Supported model

SERVICE MANUAL

FE-2 CHASSIS

MODEL	COMMANDER	DEST	CHASSIS NO.
KV-28EW20B	RM-887	FR	SCC-Q54N-A
KV-28EW20E	RM-887	ESP	SCC-Q53P-A

MODEL	COMMANDER	DEST	CHASSIS NO.
KV-28EW20U	RM-887	UK	SCC-Q52M-A

FD Trinitron



KV-28EW20



RM-887

TRINITRON ® COLOR TV

SONY®

TABLE OF CONTENTS

Section	Title	Page
	Specifications	3
	Connectors	4
	Self Diagnostic Software	5
1. GENERAL		
	Switching on the TV and Automatically Tuning	6
	Introducing and Using the Menu System	7
	Menu Guide	7
	Teletext	10
	Connecting Optional Equipment	10
	Using Optional Equipment	11
	Lifting the TV Set	11
	Specifications	12
	Troubleshooting	12
2. DISASSEMBLY		
2-1.	Rear Cover Removal	13
2-2.	F6 and H8 Board Removal	13
2-3.	Chassis Removal and Refitting	13
2-4.	Side Control Module Removal	14
2-5.	H2 Board Removal	14
2-6.	Service Position	14
2-7.	Wire Dressing	14
2-8.	Picture Tube Removal	15
	Bottom Plates	16
3. SET-UP ADJUSTMENTS		
3-1.	Beam Landing	17
3-2.	Convergence	18
3-3.	Focus Adjustment	20
3-4.	Screen (G2), White Balance	20
4. CIRCUIT ADJUSTMENTS		
4-1.	Electrical Adjustments	21
4-2.	Test Mode 1	23
4-3.	Test Mode 2	23
5. DIAGRAMS		
5-1.	Block Diagrams (1)	25
	Block Diagrams (2)	26
5-2.	Circuit Board Location	27
5-3.	Schematic Diagrams and Printed Wiring Boards	27
	* A Board Schematic	29
	* A Board PWB	31
	* C Board Schematic	32
	* C Board PWB	33
	* F6 Board Schematic	32
	* F6 Board PWB	33
	* VM Board Schematic	34
	* VM Board PWB	33
	* D2 Board Schematic	34
	* D2 Board PWB	33
	* D3 Board Schematic	35
	* D3 Board PWB	36
	* H8 Board Schematic	35
	* H8 Board PWB	36
	* H2 Board Schematic	35
	* H2 Board PWB	36
	* F3 Board Schematic	35
	* F3 Board PWB	36
5-4.	Semiconductors	37
5-5.	IC Blocks	39
6. EXPLODED VIEWS		
6-1.	Chassis	40
6-2.	Picture Tube	41
7. ELECTRICAL PARTS LIST		42

CAUTION

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR THE CARBON PAINTED ON THE CRT, AFTER REMOVAL OF THE ANODE CAP.

WARNING !!

AN ISOLATION TRANSFORMER SHOULD BE USED DURING ANY SERVICE WORK TO AVOID POSSIBLE SHOCK HAZARD DUE TO LIVE CHASSIS, THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE POWER LINE.

SAFETY-RELATED COMPONENT WARNING !!

COMPONENTS IDENTIFIED BY SHADING AND MARKED ⚠ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION

APRES AVOIR DECONNECTE LE CAP DE'LANODE, COURT-CIRCUITER L'ANODE DU TUBE CATHODIQUE ET CELUI DE L'ANODE DU CAP AU CHASSIS METALLIQUE DE L'APPAREIL, OU AU COUCHE DE CARBONE PEINTE SUR LE TUBE CATHODIQUE OU AU BLINDAGE DU TUBE CATHODIQUE.

ATTENTION !!

AFIN D'EVITER TOUT RISQUE D'ELECTROCUTION PROVENANT D'UN CHÁSSIS SOUS TENTION, UN TRANSFORMATEUR D'ISOLEMENT DOIT ETRE UTILISÈ LORS DE TOUT DÈPANNAGE LE CHÁSSIS DE CE RÈCEPTEUR EST DIRECTMENT RACCORDÈ Á L'ALIMENTATION SECTEUR.

ATTENTION AUX COMPOSANTS RELATIFS Á LA SECURITÈ!!

LES COMPOSANTS IDENTIFIÈS PAR UNE TRAME ET PAR UNE MARQUE ⚠ SUR LES SCHÈMAS DE PRINCIPE, LES VUES EXPLOSÈES ET LES LISTES DE PIECES SONT D'UNE IMPORTANCE CRITIQUE POUR LA SÈCURITÈ DU FONCTIONNEMENT, NE LES REMPLACER QUE PAR DES COMPSANTS SONY DONT LE NUMÈRO DE PIÈCE EST INDIQUÈ DANS LE PRÈSENT MANUEL OU DANS DES SUPPLÈMENTS PUBLIÈS PAR SONY.

ITEM MODEL	Television System	Stereo System	Channel Coverage	Color System
B	B/G/H, D/K, I, L	GERMAN/NICAM Stereo	VHF : E2-E12, R1-R12, S01-S03, F02-F10, B-Q UHF : E21-E69, F21-F69, B21-B69, R21-R69 CABLE TV : S01-S20 HYPER : S21-S41	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)
E	B/G/H	GERMAN/NICAM Stereo	VHF : E2-E12, R1-R12, S01-S03 UHF : E21-E69, R21-R69 CABLE TV : S01-S20 HYPER : S21-S41	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)
U	I	NICAM Stereo	UHF : B21-B69	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)

Picture Tube	Flat Display FD Trinitron Approx 71cm (28 inches) (Approx 66cm picture measured diagonally).	**Sound output**	
		Right and Left speaker	2x14W (Music Power) 2x7W (RMS)
Input/Output Terminals [REAR]		**General Specifications**	
1: 21-pin Euro connector (CENELEC standard)	Inputs for Audio and Video signals. Inputs for RGB. Outputs of TV Video and Audio signals.	Power Requirements	220 - 240V
		Power Consumption	90W
2: 21-pin Euro connector	Inputs for Audio and Video signals. Inputs for RGB. Outputs of TV Video and Audio signals. (Monitor Out)	Dimensions	Approx 796 x 518 x 522mm
		Weight	Approx 44.5kg
Phono Jacks	Output Connectors variable for Audio Signals.	Supplied Accessories	RM-887 Remote Commander (1) IEC designated R6 battery (2)
		Other Features	Auto Noise Reduction, Virtual Dolby, DQP & DF, Teletext
Input/Output Terminals [SIDE]		**Remote Control System : Infrared Control**	
Headphone jack	stereo mini jack	Power requirements	3V dc 2 batteries IEC designation R6 (size AA)
Audio inputs	phono jacks		
Video inputs	phono jacks		
S Video input	4 pin DIN		
Design and specifications are subject to change without notice.			


Model Name Item	KV-28EW20B	KV-28EW20E	KV-28EW20U
PAP	OFF	OFF	OFF
PIP	OFF	OFF	OFF
RGB Priority	ON	ON	ON
Woofer Box	OFF	OFF	OFF
Scart 1	ON	ON	ON
Scart 2	ON	ON	ON
Front in (3)	ON	ON	ON
Scart 4	OFF	OFF	OFF
Projector	OFF	OFF	OFF
Norm B/G	ON	ON	OFF
Norm I	ON	OFF	ON
Norm D/K	ON	OFF	OFF
Norm AUS	OFF	OFF	OFF
Norm L	ON	OFF	OFF
Norm SAT	OFF	OFF	OFF
Norm M	OFF	OFF	OFF
Teletext	ON	ON	ON
Nicam Stereo	ON	ON	ON

WARNING (UK Models only)

The flexible mains lead is supplied connected to a **B.S. 1363** fused plug having a fuse of **5 AMP** rating. Should the fuse need to be replaced, use a **5 AMP FUSE** approved by ASTA to **BS 1362**, ie one that carries the ASTA mark.


IF THE PLUG SUPPLIED WITH THIS APPLIANCE IS NOT SUITABLE FOR THE OUTLET SOCKETS IN YOUR HOME, IT SHOULD BE CUT OFF AND AN APPROPRIATE PLUG FITTED. THE PLUG SEVERED FROM THE MAINS LEAD MUST BE DESTROYED AS A PLUG WITH BARED WIRES IS DANGEROUS IF ENGAGED IN A LIVE SOCKET.

When an alternative type of plug is used, it should be fitted with a **5 AMP FUSE**, otherwise the circuit should be protected by a **5 AMP FUSE** at the distribution board.

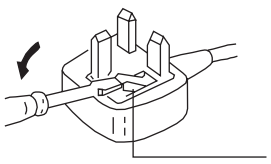

How to replace the fuse.
Open the fuse compartment with a screwdriver blade and replace the fuse.


21 pin connector

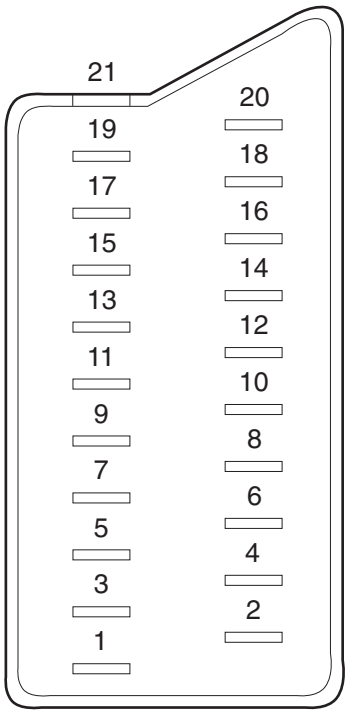

Pin No	1	2	4	Signal	Signal level
1	○	○	○	Audio output B (right)	Standard level : 0.5V rms Output impedence : Less than 1kohm*
2	○	○	○	Audio output B (right)	Standard level : 0.5V rms Output impedence : More than 10kohm*
3	○	○	○	Audio output A (left)	Standard level : 0.5V rms Output impedence : Less than 1kohm*
4	○	○	○	Ground (audio)	
5	○	○	○	Ground (blue)	
6	○	○	○	Audio input A (left)	Standard level : 0.5V rms Output impedence : More than 10kohm*
7	○	●	●	Blue input	0.7 +/- 3dB, 75 ohms positive
8	○	○	○	Function select (AV control)	High state (9.5-12V) : Part mode Low state (0-2V) : TV mode Input impedence : More than 10K ohms Input capacitance : Less than 2nF
9	○	○	○	Ground (green)	
10	○	○	○	Open	
11	○	●	●	Green	Green signal : 0.7 +/- 3dB, 75 ohms, positive
12	○	○	○	Open	
13	○	○	○	Ground (red)	
14	○	○	○	Ground (blanking)	
15	○	–	–	Red input	0.7 +/- 3dB, 75 ohms, positive
	–	○	○	(S signal Chroma input)	0.3 +/- 3dB, 75 ohms, positive
16	○	●	●	Blanking input (Ys signal)	High state (1-3V) Low state (0-0.4V) Input impedence : 75 ohms
17	○	○	○	Ground (video output)	
18	○	○	○	Ground (video input)	
19	○	○	○	Video output	1V +/- 3dB, 75ohms, positive sync 0.3V (-3+10dB)
20	○	–	–	Video input	1V +/- 3dB, 75ohms, positive sync 0.3V (-3+10dB)
	–	○	○	Video input Y (S signal)	1V +/- 3dB, 75ohms, positive sync 0.3V (-3+10dB)
21	○	○	○	Common ground (plug, shield)	

○ Connected ● Not Connected (open) * at 20Hz - 20kHz

Rear Connection Panel

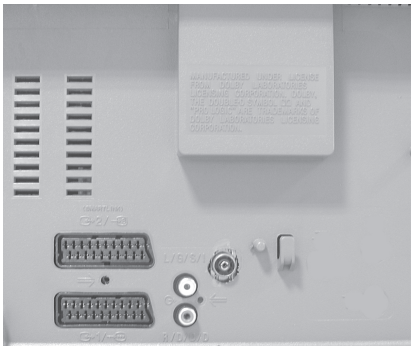

Side Connection Panel

S-Video socket



S Video socket pin configuration		
Pin No	**Signal**	**Signal Level**
1	Ground	-
2	Ground	-
3	Y (S signal) input	1V+/- 3dB 75ohm, positive Sync. 0.3V -3 +10dB
4	C (S signal) input	0.3V+/- 3dB 75ohm, positive Sync.


FE-2 SELF DIAGNOSTIC SOFTWARE

The identification of errors within the FE-2 chassis is triggered in one of two ways :- 1: Busy or 2: Device failure to respond to IIC. In the event of one of these situations arising the software will first try to release the bus if busy (Failure to do so will report with a continuous flashing LED) and then communicate with each device in turn to establish if a device is faulty. If a device is found to be faulty the relevant device number will be displayed through the LED (Series of flashes which must be counted) See table 1., non fatal errors are reported using this method. Each time the software detects an error it is stored within the NVM. See Table 2.

Table 1


Error Message	LED Code
No error	00
Reserved	01
OCP (Over Current Protection)	02
Not Used	03
No Vertical Sync	04
IKR Error at power on	05
IIC bus clock and/or data lines low at power on	06
NVM no IIC bus acknowledge at power on	07
Not Used	08
Tuner no acknowledge at power on	09
Sound Processor Error	10
Jungle controller 8 volts error	11

Flash Timing Example : e.g. error number 3

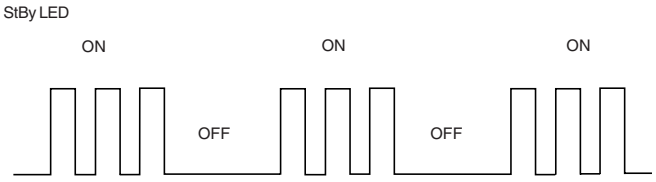

How to enter into Table 2

1. Turn on the main power switch of the TV set and enter into the 'Stanby Mode'.
2. Press the following sequence of buttons on the Remote Commander.

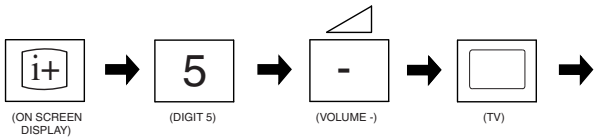

3. The following table will be displayed indicating the error count.

Table 2

ERROR MENU			
E02	OCP	(0, 255)	0
E03	OVP N/A	(0, 255)	0
E04	VSYNC	(0, 255)	0
E05	IKR	(0, 255)	0
E06	IIC	(0, 255)	0
E07	NVM	(0, 255)	0
E08	JUNGLE	(0, 255)	0
E09	TUNER	(0, 255)	0
E10	SOUNDP	(0, 255)	0
E11	8V	(0, 255)	0
WORKING TIME			
HOURS			2
MINUTES			11


Note: To clear the error count data press '80' on the Remote commander.

The operating instructions mentioned here are partial abstracts from the 'Operating Instruction Manual'. The page numbers of the 'Operating Instruction Manual' remain as in the manual.


Switching On the TV and Automatically Tuning

ⓘ The first time you switch on your TV, a sequence of menu screens appear on the TV enabling you to: 1) choose the language of the menu screen, 2) adjust the picture slant 3) search and store all available channels (TV Broadcast) and 4) change the order in which the channels (TV Broadcast) appear on the screen.
However, if you need to change any of these settings at a later date, you can do that by selecting the appropriate option in the (Set Up menu) or by pressing the Auto Start Up Button on the TV set.

1 Connect the TV plug to the mains socket (220-240V AC, 50Hz) The first time the TV set is connected, it is usually turned on. If the TV is off, press the ⏻ on/off button on the TV set to turn on the TV.
The first time you switch on the TV, a **Language** menu displays automatically on the TV screen.

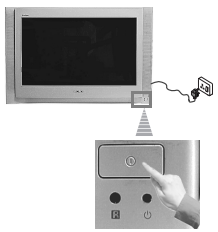


2 Press the ▼ or ▲ button on the remote control to select the language, then press the **OK** button to confirm your selection. From now on all the menus will appear in the selected language.

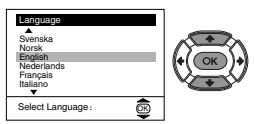

3 Because of the earth's magnetism, the picture might slant. The **Picture Rotation** menu allows you to correct the picture slants if it is necessary.


a) If it is not necessary, press ▼ or ▲ to select **Not necessary** and press **OK**.

b) If it is necessary, press ▼ or ▲ to select **Adjust now**, then press **OK** and correct any slant of the picture between –5 and +5 by pressing ▼ or ▼ . Finally press **OK** to store.




continued...

4 The Auto Tuning menu appears on the screen. Press the **OK** button to select **Yes**.




5 The TV starts to automatically search and store all available broadcast channels for you.

⚠ This procedure could take some minutes. Please be patient and do not press any buttons, otherwise the automatic tuning will not be completed.



⚠ If no channels were found during the auto tuning process then a new menu appears automatically on the screen asking you to connect the aerial. Please connect the aerial (see page 6) and press **OK**. The auto tuning process will start again.



6 ⓘ After all available channels are captured and stored, the **Programme Sorting** menu appears automatically on the screen enabling you to change the order in which the channels appear on the screen.


a) If you wish to keep the broadcast channels in the tuned order, go to step 7.


b) If you wish to store the channels in a different order:

1 Press the ▼ or ▲ button to select the programme number with the channel (TV Broadcast) you wish to rearrange, then press the ▶ button.

2 Press the ▼ or ▲ button to select the new programme number position for your selected channel (TV Broadcast), then press ◀ .

3 Repeat steps b)1 and b)2 if you wish to change the order of the other channels.

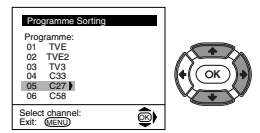

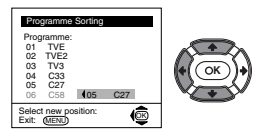

7 Press the **MENU** button to remove the menu from the screen.



Your TV is now ready for use

GB

Introducing and Using the Menu System

Your TV uses an on-screen menu system to guide you through the operations. Use the following buttons on the Remote Control to operate the menu system:

1 Press the **MENU** button to switch the first level menu on.



2 • To highlight the desired menu or option, press ▼ or ▲ .
• To enter to the selected menu or option, press ▶ .
• To return to the last menu or option, press ◀ .
• To alter settings of your selected option, press ▼ / ▲ / ◀ or ▶ .
• To confirm and store your selection, press **OK**.




3 Press the **MENU** button to remove the menu from the screen.



GB

Menu Guide

Level 1 **Level 2** **Level 3 / Function**



PICTURE ADJUSTMENT

The "Picture Adjustment" menu allows you to alter the picture adjustments.


To do this: after selecting the item you want to alter press ▶ . then press repeatedly ▼ / ▲ / ◀ or ▶ to adjust it and finally press **OK** to store the new adjustment.
This menu also allows you to customise the picture mode based on the programme you are watching:

- ▼ **Personal** (for individual settings).
- ▼ **Live** (for live broadcast programmes, DVD and Digital Set Top Box receivers).
- ▼ **Movie** (for films).

- ***Brightness, Colour*** *and* ***Sharpness*** *can only be altered if "Personal" mode is selected.*
- ***Hue*** *is only available for NTSC colour signal (e.g: USA video tapes).*
- *Select* ***Reset*** *and press* ***OK*** *to reset the picture to the factory preset levels.*

continued...


Level 1 **Level 2** **Level 3 / Function**

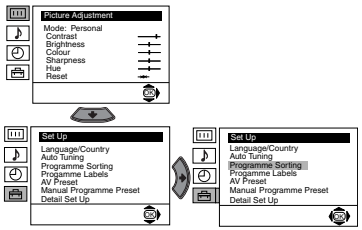

PROGRAMME SORTING

The "Programme Sorting" option in the "Set Up" menu allows you to change the order in which the channels (TV Broadcast) appear on the screen.

To do this: after selecting the option, press ▶ and then proceed in the same way as in step 6 b) of the section "Switching On the TV and Automatically Tuning".

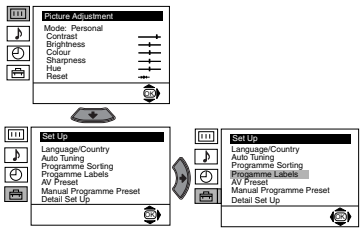


PROGRAMME LABELS

The "Programme Labels" option in the "Set Up" menu allows you to name a broadcast channel using up to five characters (letters or numbers).

To do this:

1 After selecting the option, press ▶ , then press ▼ or ▲ to select the programme number with the channel you wish to name.
2 Press ▶ . With the first element of the **Label** column highlighted, press ▼ or ▲ to select a letter or number (select "-" for a blank), then press ▶ to confirm this character. Select the other four characters in the same way. Finally press **OK** to store.

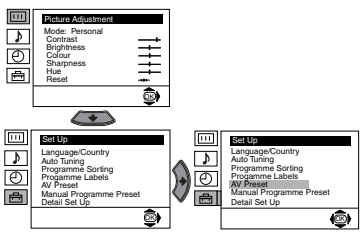

AV PRESET

The "AV Preset" option in the "Set Up" menu allows you to designate a name to the external equipment you have connected to the sockets of this TV.


To do this:

1 After selecting the option, press ▶ , then press ▼ or ▲ to select the input source you wish to name (**AV1** and **AV2** are for the rear Scarts and **AV3** for side connectors). Then press ▶ .

2 In the label column automatically appears a label:

a) If you want to use one of the 6 predefined labels (**CABLE, GAME, CAM, DVD, VIDEO** or **SAT**), press ▼ or ▲ to select the desired label and finally press **OK** to store.
b) If you want to set a different label, select **Edit** and press ▶ . Then with the first element highlighted, press ▼ or ▲ to select a letter, number or "-" for a blank, then press ▶ to confirm this character. Select the other four characters in the same way and finally press **OK** to store.

continued...

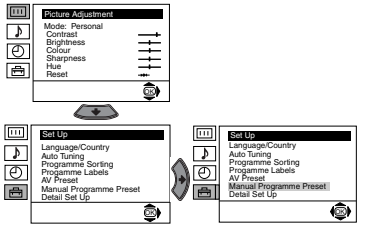

MANUAL PROGRAMME PRESET

The "Manual Programme Preset" option in the "Set Up" menu allows you to:

a) Preset channels or a video input source one by one to the programme order of your choice. To do this:

1 After selecting the "Manual Programme Preset" option, press ➡ then with **Programme** option highlighted press ➡ .
Press ⬇ or ⬆ to select on which programme number you want to preset the channel (for VCR, select programme number "0"). Then press ⬅ .

2 After selecting the **Channel** option, press ➡ . Then press the number buttons to enter directly the channel number of the TV Broadcast or the channel of the VCR signal. If you do not know the channel number, press ⬇ or ⬆ to search for it. When you tune the desired channel, press **OK** twice to store.

Repeat all the above steps to tune and store more channels.


b) Label a channel using up to five characters.

To do this: Highlighting the **Programme** option, press the **PROG +/-** button to select the programme number with the channel you wish to name. When the programme you want to name appears on the screen, select the **Label** option and press ➡ . Next press ⬇ or ⬆ to select a letter, number or "-" for a blank. Press ➡ to confirm this character. Select the other four characters in the same way. After selecting all the characters, press **OK** twice to store.

continued...

GB

Level 1 Level 2 Level 3 / Function

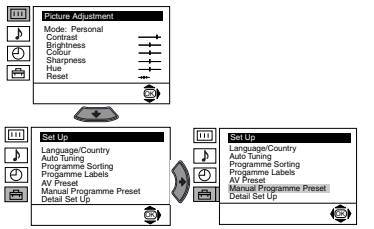

c) Normally the automatic fine tuning (AFT) is operating, however you can manually fine tune the TV to obtain a better picture if the picture is distorted.


To do this: while watching the channel (TV Broadcast) you wish to fine tune, select the **AFT** option and press ➡ . Next press ⬇ or ⬆ to adjust the fine tuning between -15 and +15. Finally press **OK** twice to store.

d) Skip any unwanted programme numbers when they are selected with the PROG +/- buttons.

To do this: Highlighting the **Programme** option, press the **PROG +/-** button to select the programme number you want to skip. When the programme you want to skip appears on the screen, select the **Skip** option and press ➡ . Next press ⬇ or ⬆ to select **Yes**. Finally press **OK** twice to confirm and store.

To cancel this function afterwards, select "No" instead of "Yes" in the step above.

continued...

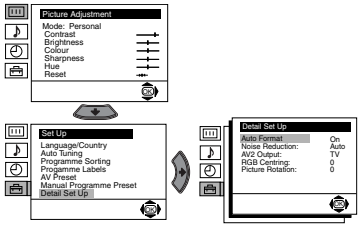

The “Auto Format” option in the “Detail Set Up” menu allows you to automatically change the aspect ratio of the screen.

To do this: after selecting the option, press ▶. Then press ▼ or ▲ to select **On** (if you wish the TV set to automatically switch the screen format according to the broadcast signal) or **Off** (if you wish to keep your preference). Finally press **OK** to store.

ⓘ Even if you have selected “On” or “Off” in the “Auto Format” option, you can always modify the format of the screen by pressing ⊞ repeatedly on the remote control to select one of the following formats:


14:9: Compromise between 4:3 and 16:9 picture size.

Zoom: Widescreen format for letterbox movies.


Wide: For 16:9 broadcast.

Smart: Imitation of wide screen effect for 4:3 broadcast.

4:3: Conventional 4:3 picture size, full picture information.

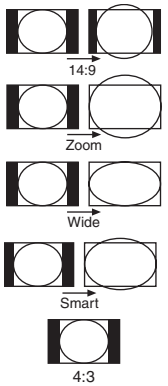

ⓘ In “Smart”, “Zoom” and “14:9” modes, parts of the top and bottom of the screen are cut off. Press ▼ or ▲ to adjust the position of the image on the screen (e.g. to read subtitles).

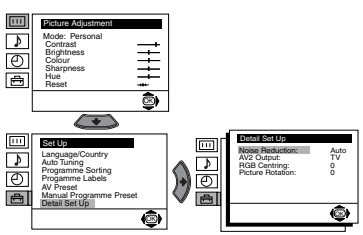

NOISE REDUCTION


The “Noise Reduction” option in the “Detail Set Up” menu allows you to automatically reduce the picture noise visible in the broadcast signal.

To do this: after selecting the option, press ▶. Then press ▼ or ▲ to select **Auto**. Finally press **OK** to confirm and store.

To cancel this function afterwards, select “Off” instead of “Auto” in the step above.

continued...

GB

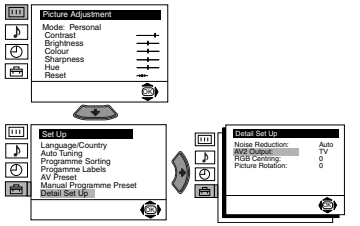

AV2 OUTPUT


The “AV2 Output” option in the “Detail Set Up” menu allows you to select the source to be output from the Scart connector 2/ to be output. You can record from this Scart any signal coming from the TV or from external equipment connected to the Scart connector 1/ or side connectors 3 and **3**.

ⓘ If your VCR supports Smartlink, this procedure is not necessary.

To do this: after selecting the option, press ▶. Then press ▼ or ▲ to select the desired output signal: **TV, AV1, AV3, YC3** or **AUTO**.

⚠ If you select “AUTO”, the output signal will always be the same one that is displayed on the screen.


⚠ If you have connected a decoder to the Scart 2/ or to a VCR connected to this Scart, please remember to change back the “AV2 Output” to “AUTO” or “TV” for correct unscrambling.

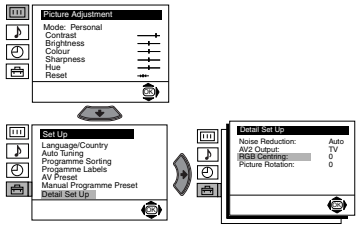

RGB CENTRING

When connecting an RGB source, such as a “PlayStation”, you may need to readjust the horizontal position of the picture. In that case, you can readjust it through the “RGB Centring” option in the “Detail Set Up”.

To do this: while watching an RGB source select the “RGB Centring” option and press ▶. Then press ▼ or ▲ to adjust the centre of the picture between –10 and +10. Finally press **OK** to confirm and store.

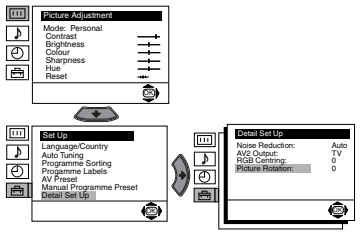

PICTURE ROTATION

Because of the earth’s magnetism, the picture might slant. In this case, you can correct the picture slant by using the option “Picture Rotation” in the “Detail Set Up” menu.

To do this: after selecting the option, press ▶. Then press ▼ or ▲ to correct any slant of the picture between -5 and +5 and finally press **OK** to store.

Teletext

Teletext is an information service transmitted by most TV stations. The index page of the teletext service (usually page 100) gives you information on how to use the service. To operate teletext, use the remote control buttons as indicated below.

Make sure to use a channel (TV Broadcast) with a strong signal, otherwise teletext errors may occur.

To Switch On Teletext :

After selecting the TV channel which carries the teletext service you wish to view, press .



To Select a Teletext page:

Input 3 digits for the page number, using the numbered buttons.

- *If you have made a mistake, retype the correct page number.*
- *If the counter on the screen continues searching, it is because this page is not available. In that case, input another page number*

To access the next or preceding page:

Press **PROG +** ( ) or **PROG -** ( ).

To superimpose teletext on to the TV:

Whilst you are viewing teletext, press . Press it again to cancel teletext mode.

To freeze a teletext page:

Some teletext pages have sub-pages which follow on automatically. To stop them, press . Press it again to cancel the freeze.

To reveal concealed information (e.g: answer to a quiz):

Press . Press it again to conceal the information.

To Switch Off Teletext:

Press .


Fastext

Fastext service lets you access pages with one button push.
While you are in Teletext mode and Fastext is broadcast, a colour coded menu appears at the bottom of the teletext page. Press the colour button (red, green, yellow or blue) to access the corresponding page.

GB

Connecting Optional Equipment

Using the following instructions you can connect a wide range of optional equipment to your TV set. (Connecting cables are not supplied).

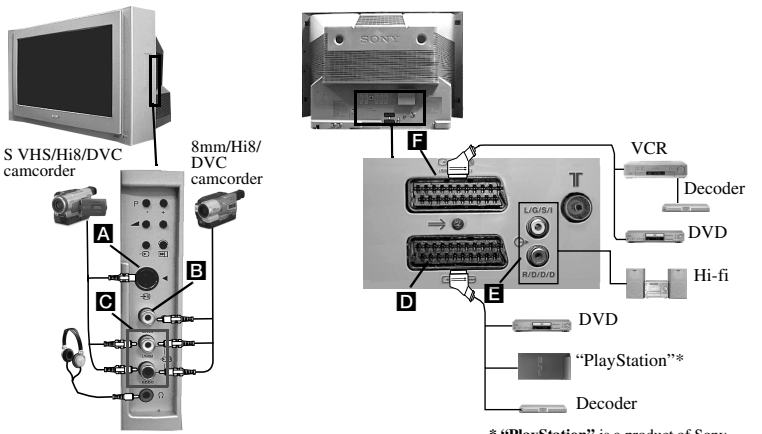

When you connect the headphones, the TV speakers will automatically be muted

*** "PlayStation"** is a product of Sony Computer Entertainment, Inc.
*** "PlayStation"** is a trademark of Sony Computer Entertainment, Inc.

To avoid picture distorsion, do not connect external equipment to connectors **A** and **B** at the same time.

Connecting a VCR:

To connect a VCR, please refer to the section "Connecting the aerial and VCR" of this instruction manual. We recommend you connect your VCR using a scart lead. If you do not have a scart lead, tune in the VCR test signal to the TV programme number "0" by using the "Manual Programme Preset" option. (for details of how to manually programme these presets, see page 13, step a).
Refer to your VCR instruction manual to find out how to find the output channel of your VCR.

Connecting a VCR that supports Smartlink:

Smartlink is a direct link between the TV set and the VCR. For more information on Smartlink, please refer to the instruction manual of your VCR.
If you use a VCR that supports Smartlink, please connect the VCR by using a Scart lead to the Scart 2/ **F**.

continued...

Connecting to external Audio Equipment:

Plug in your Hi-Fi equipment to the audio output sockets **E** if you wish to amplify the audio output from TV. Next, using the menu system, select the “Sound Adjustment” menu. Enter the “Detail Adjustment” option and set “TV Speakers” to “Off”.

ⓘ The audio level of the external speakers can be modified by pressing the volume buttons on the remote control. Also treble and bass settings can be modified through the “Sound Adjustment” menu.

Using Optional Equipment

1 Connect your equipment to the designated TV socket, as indicated in the previous page.

2 Switch on the connected equipment.

3 To watch the picture of the connected equipment, press the ⊖ button repeatedly until the correct input symbol appears on the screen.

Symbol Input Signals

- ⊖1 • Audio / video input signal through the Scart connector **D**
- ⊷ • RGB input signal through the Scart connector **D**. This symbol appears only if a RGB source has been connected.
- ⊖2 • Audio / video input signal through the Scart connector **F**.
- ⊖S2 • S Video input signal through the Scart connector **F**.
- ⊖3 • Video input signal through the phono socket **B** and Audio input signal through **C**.
- ⊖S3 • S Video Input signal through the front S Video input jack **A** and Audio signal through **C**.

4 Press ▢ button on the remote control to return to the normal TV picture.

For Mono Equipment


Connect the phono plug to the L/G/S/I socket on the front of the TV and select ⊖3 or ⊖S3 input signal using the instructions above. Finally, refer to the “Sound Adjustment” section of this manual and select “Dual Sound” “A” on the sound menu screen.


GB

Lifting the TV Set

4-091-583-**12**

409158312

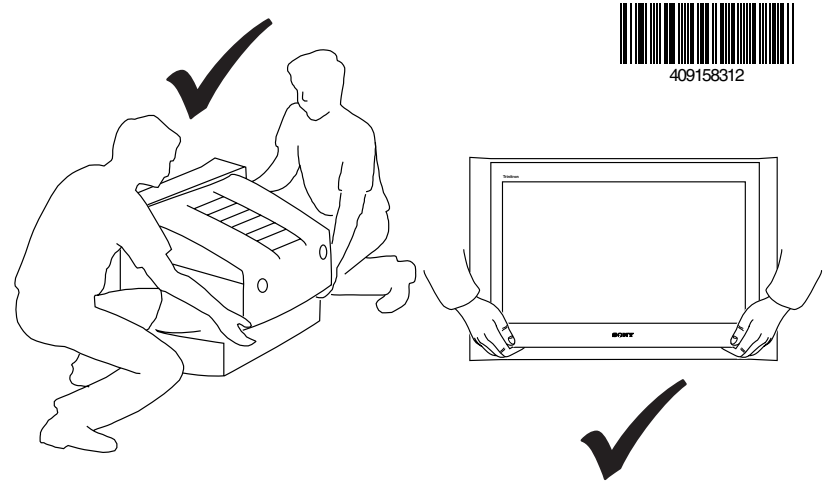

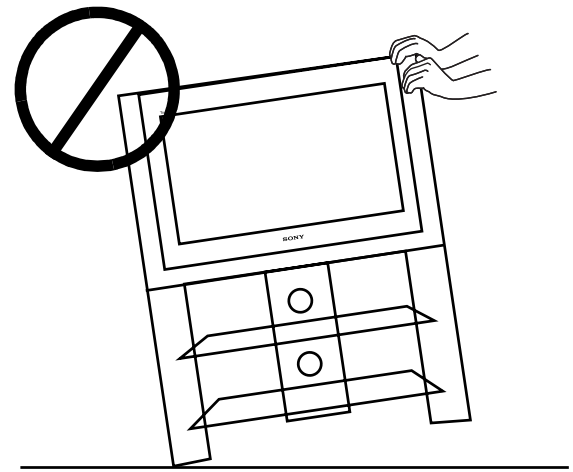

Specifications

TV system:
I

Colour system:
PAL, SECAM
NTSC 3.58, 4.43 (only Video In)

Channel Coverage:
lI: UHF B21-B69

Picture Tube:
Flat Display FD Trinitron WIDE
28" (approx. 71 cm. measured diagonally)

Rear Terminals

/	21-pin scart connector (CENELEC standard) including audio/video input, RGB input, TV audio/video output.
2/	21-pin Scart connector
(SMARTLINK)	(CENELEC standard) including audio / video input, S video input, selectable audio/ video output and Smartlink interface.
	audio outputs (Left/Right) - phono jacks

Side Terminals

- 3 S Video input – 4 pin DIN
- 3 video input – phono jack
- 3 audio input – phono jacks
- headphones jack

Sound Output:
2 x 14 W (music power)
2 x 7W (RMS)

Power Consumption:
90 W

Standby Power Consumption:
0.54 W

Dimensions (w x h x d) :
Approx.796 x 518 x 522 mm.

Weight:
44.5 Kg.

Accessories supplied:
1 Remote Control (RM-887)
2 Batteries (IEC designated)

Other features:

- Teletext, Fastext, TOPtext
- Sleep Timer
- Smartlink (direct link between your TV set and a compatible VCR. For more information on Smartlink, please refer to the Instruction Manual of your VCR).
- TV system Autodetection.
- Auto Format.

Troubleshooting


Here are some simple solutions to the problems which may affect the picture and sound.

Problem	Solution
No picture (screen is dark) and no sound.	• Check the aerial connection. • Plug the TV in and press the button on the front of the TV. • If the standby indicator is on, press **TV** I/ button on the remote control.
Poor or no picture (screen is dark), but good sound.	• Using the menu system, select the "Picture Adjustment" menu and select "Reset" to return to the factory settings.
No picture or no menu information from equipment connected to the Scart connector.	• Check that the optional equipment is on and press the button repeatedly on the remote control until the correct input symbol is displayed on the screen.
Good picture, no sound.	• Press the +/- button on the remote control. • Check that "TV Speakers" is "On" on the Sound Adjustment" menu. • Check that headphones are not connected.
No colour on colour programmes.	• Using the menu system, select the "Picture Adjustment" menu and select "Reset" to return to factory settings.
Distorted picture when changing programmes or selecting teletext.	• Turn off any equipment connected to the Scart connector on the rear of the TV.
Picture slanted	• Using the menu system, select the "Picture Rotation" option in the "Detail Set Up" menu to correct the picture slant.
Noisy picture when viewing a TV channel.	• Using the menu system, select the "Manual Programme Preset" menu and adjust Fine Tuning (AFT) to obtain better picture reception. • Using the menu system, select the "Noise Reduction" option in the "Detail Set Up" menu and select "Auto" to reduce the noise in the picture
No unscrambling or unstable picture whilst viewing a scrambling channel with a decoder connected through the Scart connector 2/.	• Using the menu system, select the "Set Up" menu. Then enter to "Detail Set Up" option and set "AV2 Output" to "TV".
Remote control does not function.	• Replace the batteries.
The standby indicator on the TV flashes.	• Contact your nearest Sony service centre.

If you continue to experience problems, have your TV serviced by qualified personnel. Never open the casing yourself.


GB


2-1. Rear Cover Removal

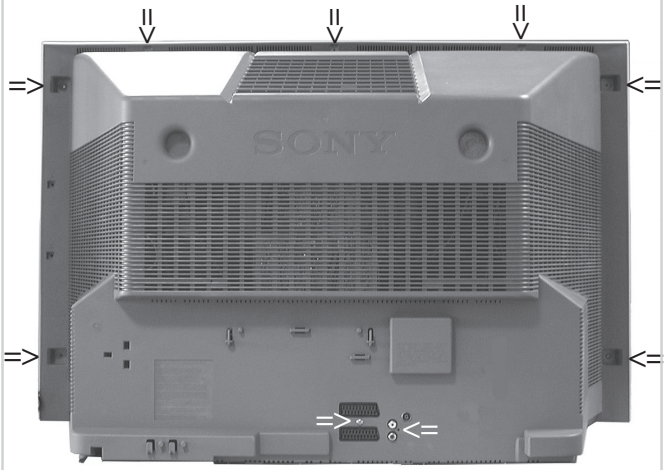

Remove the rear cover fixing screws indicated and withdraw the rear cover from the beznet.


2-2. F6 and H8 Board Removal

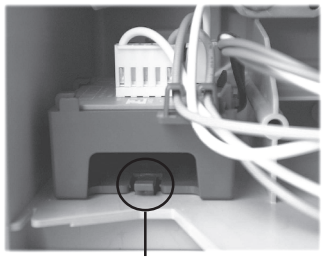

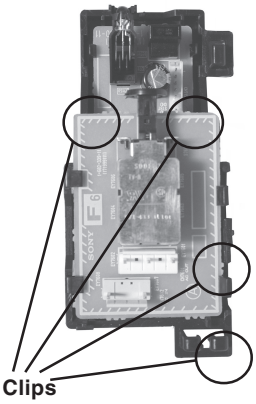


Release the clip circled and pull the F6 bracket towards the rear of the set. The bracket can then be removed to allow access to the boards.
To remove the F6 and H8 Boards release the clips circled and ease the boards gently away from the support bracket.

2-3. Chassis Removal and Refitting

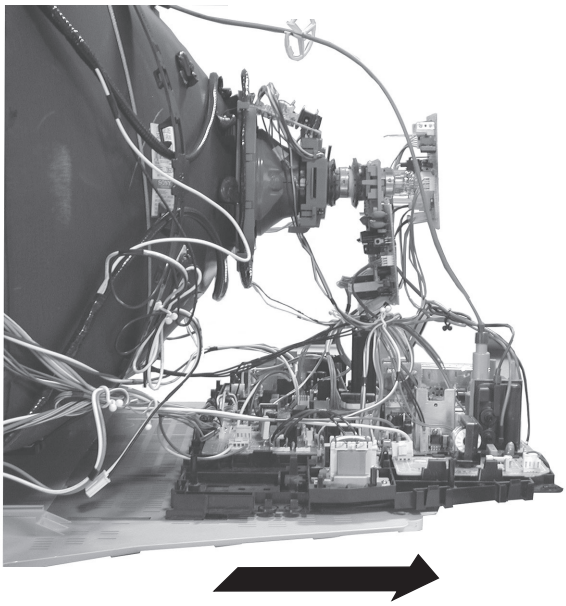


To remove lift the main bracket rear slightly and slide the chassis away from the beznet. Ensure that the interconnecting leads are released from their purse locks to prevent damage being caused.

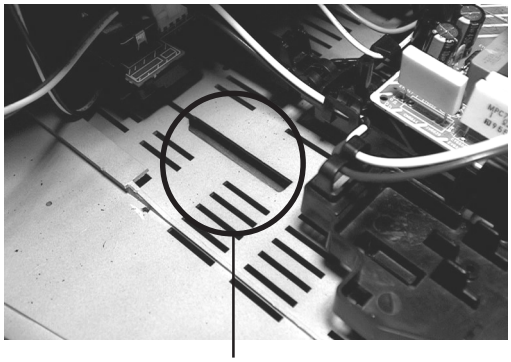


When refitting the chassis ensure that the main bracket is located in the beznet guide slots before sliding the chassis forwards. Refit the interconnecting leads in their respective purse locks.

2-4. Side Control Module Removal

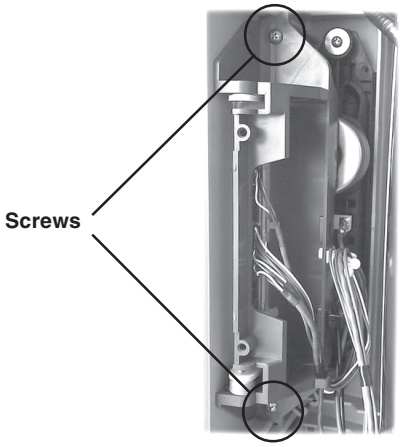


Remove the two screws fixing the user control module to the side of the set. The control module can then be removed by sliding it towards the rear of the set allowing access to the H2 Board.

2-5. H2 Board Removal

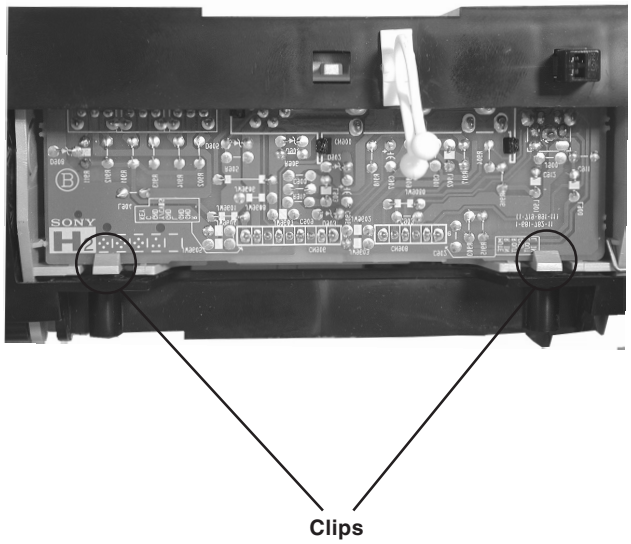


To remove the H2 board release the two clips circled and ease the board gently away from the support bracket.

2-6. Service Position

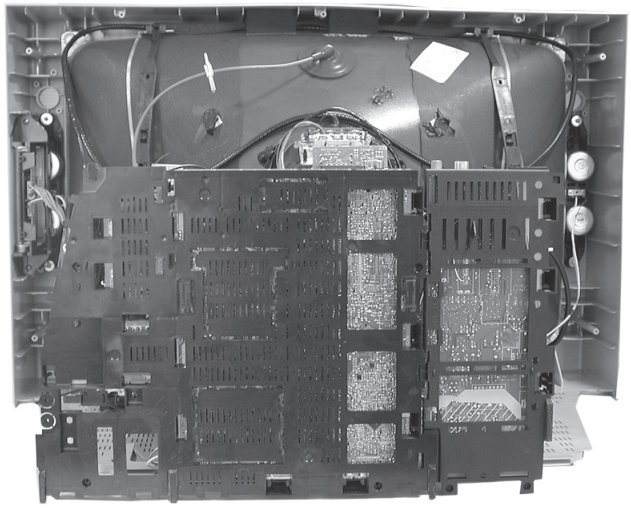

Position the chassis as indicated to access the solder side of the PWB's. To gain access to the A Board follow the instructions on page 16. [Removal and Replacement of the main bracket bottom plates].

2-7. Wire Dressing

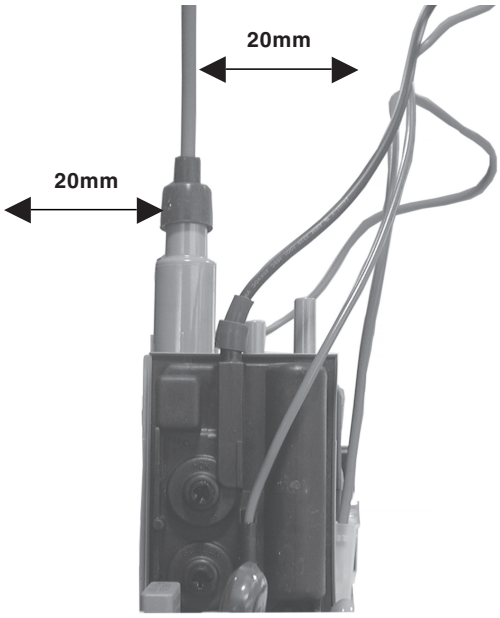



Ensure that wires do not touch heatsinks and high temperature hotspots. All wires must be kept at a minimum distance of 20mm away from the EHT lead

2-8. Picture Tube Removal

WARNING:
BEFORE REMOVING
THE ANODE CAP

High voltage remains in the CRT even after the power is disconnected. To avoid electric shock, discharge CRT ***before*** attempting to remove the anode cap. Short between anode and CRT coated earth ground strap.

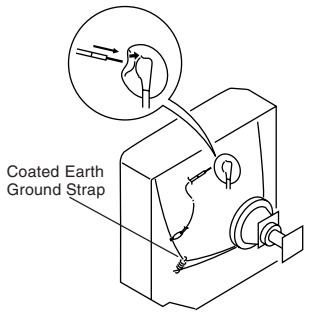


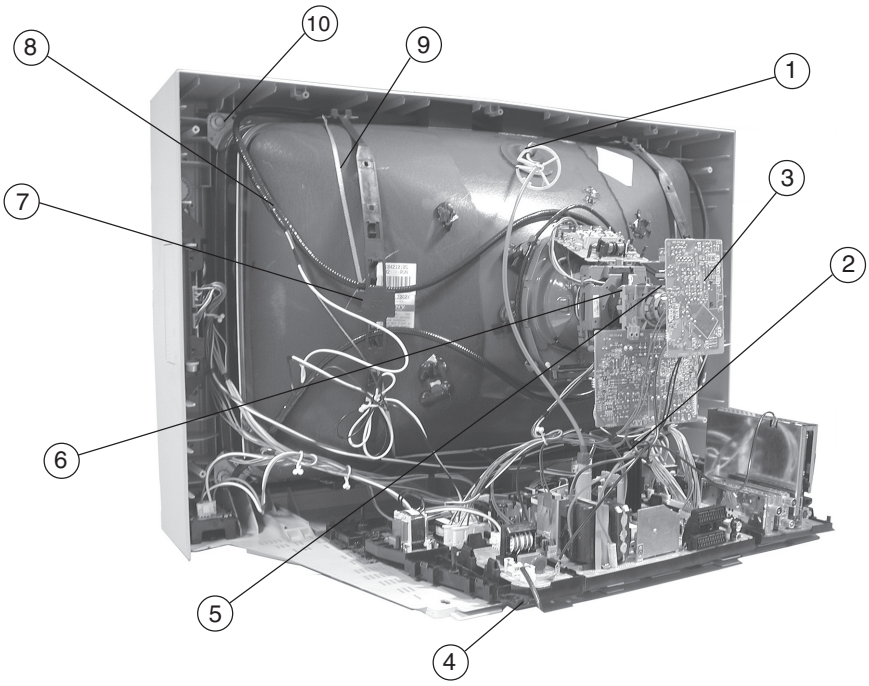

1. Discharge the anode of the CRT and remove the anode cap.
2. Unplug all interconnecting leads from the Deflection yoke, neck assy, degaussing coils and CRT grounding strap.
3. Remove the C Board from the CRT.
4. Remove the chassis assembly.
5. Loosen the Neck assembly fixing screw and remove.
6. Loosen the Deflection yoke fixing screw and remove.
7. Place the set with the CRT face down on a cushion and remove the Degaussing Coil holders.
8. Remove the Degaussing Coils.
9. Remove the CRT grounding strap and spring tentioners.
10. Unscrew the four CRT fixing screws [located on each CRT corner] and remove the CRT.
    [Take care not to handle the CRT by the neck.]

Removal of the Anode-Cap

*** REMOVING PROCEDURES.**

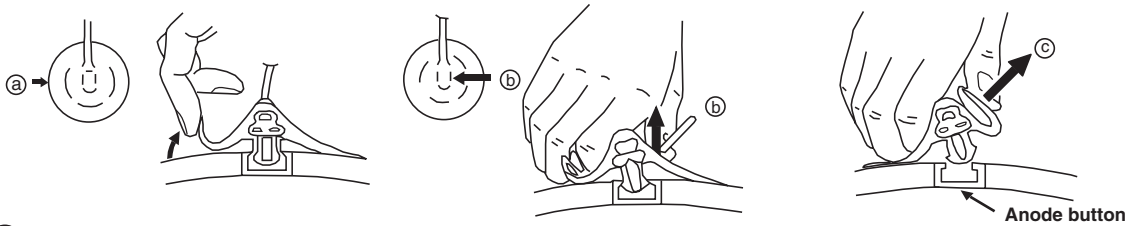


① Turn up one side of the rubber cap in the direction indicated by the arrow ⓐ

② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow ⓑ

③ When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling it up in the direction of the arrow ⓒ

How to handle the Anode-Cap

1. To prevent damaging the surface of the anode-cap do not use sharp materials.
2. Do not apply too great a pressure on the rubber, as this may cause damage to the anode connector.
3. A metal fitting called a shatter hook terminal is fitted inside the rubber cap.
4. Do not turn the rubber foot over excessively, this may cause damage if the shatter hook sticks out.

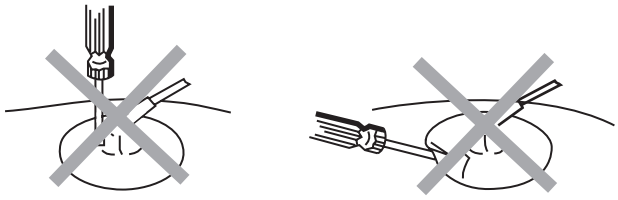


REMOVAL AND REPLACEMENT OF THE MAIN-BRACKET BOTTOM PLATES.

(1) REMOVING THE PLATES

In the event of servicing being required to the solder side of the A Board printed wiring board, the bottom plates fitted to the main chassis bracket require to be removed.
This is performed by cutting the gates with a sharp wire cutter at the locations indicated by the arrows.

Note : There are 3 plates fitted to the main bracket and secured by3 gates.
Only remove the necessary plate to gain access to the printed wiring board.

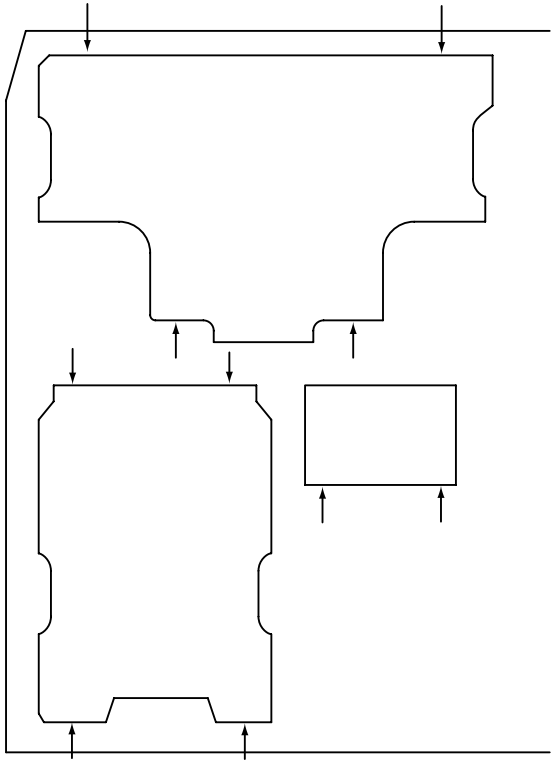


⚠ For safety reasons, on no account should the plates be removed and not refitted after servicing.

(2) REFITTING THE PLATES

Because the plates differ in size it is important that the correct plates are refitted in their original location.

Please note that the plates need to be rotated 180 degrees from their cut position to allow the tabs to be fitted into their catch positions.

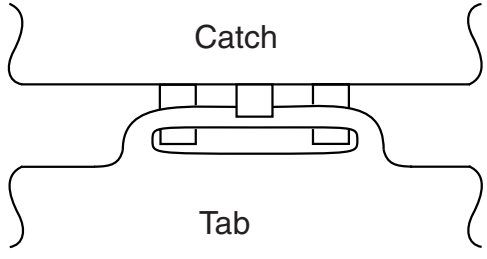

SECTION 3 SET-UP ADJUSTMENTS

- When complete readjustment is necessary or a new picture tube is installed, carry out the following adjustments.
- Unless there are specific instructions to the contrary, carry out these adjustments with the rated power supply.
- Unless there are specific instructions to the contrary, set the controls and switches to the following settings :

Contrast ..... 80% [or remote control normal]

Brightness 50%

Carry out the adjustments in the following order :

3-1. Beam Landing.
3-2. Convergence.
3-3. Focus.
3-4. White Balance.

Note : Test equipment required.
1. Color bar/pattern generator.
2. Degausser.
3. Oscilloscope.
4. Digital multimeter.

Preparation:

1. In order to reduce the influence of geomagnetism on the set's picture tube, face it in an easterly or westerly direction.
2. Switch on the set's power and degauss with the degausser.

3-1. Beam Landing

1. Input an all white signal from the pattern generator. Set the Contrast and Brightness to normal.
2. Set the pattern generator raster signal to Red.
3. Move the deflection yoke forward and adjust with the purity control so that the Red is at the centre and the Blue and Green take up equally sized areas on each side of the screen. [See Fig.3-1 - 3-3].
4. Move the deflection yoke backwards and adjust so that the entire screen becomes Red. [See Fig.3-1]
5. Switch the raster signal to Blue, then to Green and verify the condition.
6. When the position of the deflection yoke has been determined, fasten the deflection yoke with the screws.
7. If the beam does not land correctly in all the corners, use a magnet to correct it. [See Fig.3-4]

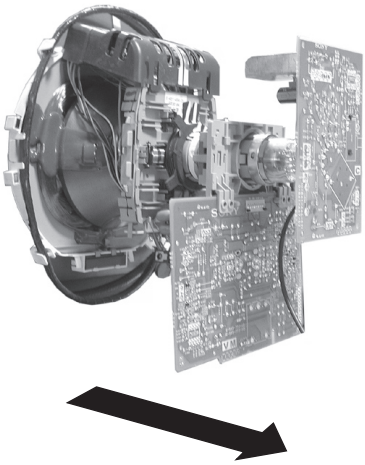


Fig. 3-1.

Caution :

High voltages are present on the Deflection yoke terminals - take care when handling the Deflection yoke whilst carrying out adjustments.

Fig. 3-2.

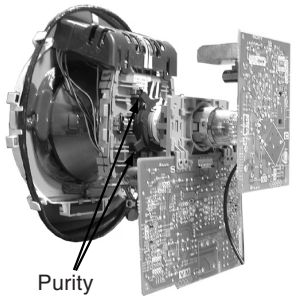
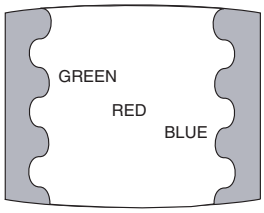


Fig. 3-3.



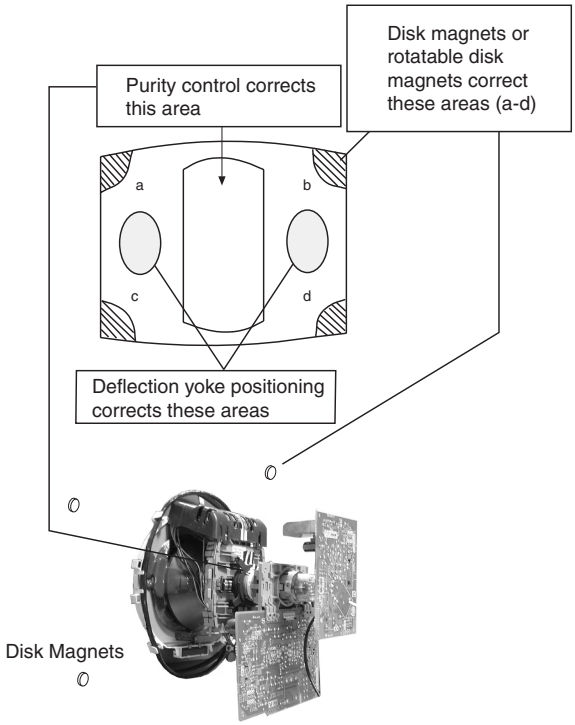


Fig.3-4

3-2. Convergence

Preparation:

- Before starting this adjustment, adjust the focus, horizontal size and vertical size.
- Minimize the Brightness setting.
- Input a dot pattern from the pattern generator.

Horizontal and Vertical Static Convergence


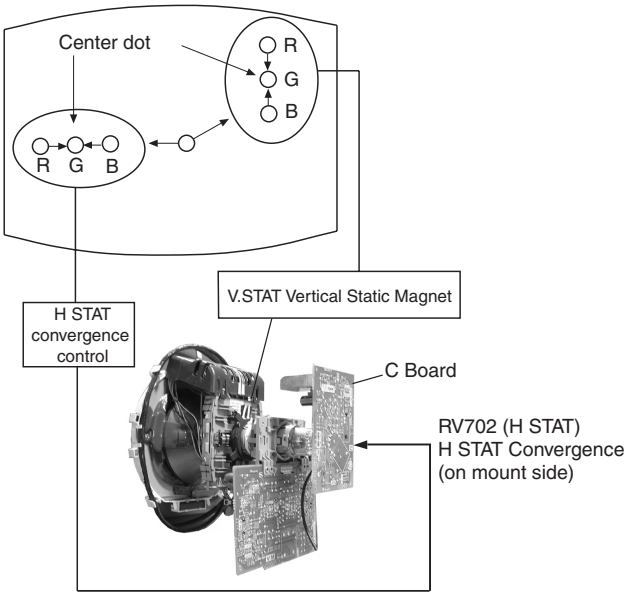



Fig.3-5

1. [Moving horizontally], adjust the H.STAT control so that the Red, Green and Blue points are on top of each other at the centre of the screen.
2. [Moving vertically], adjust the V.STAT magnet so that the Red, Green and Blue points are on top of each other at the centre of the screen.
3. If the H.STAT variable resistor is unable to bring the Red, Green and Blue points together at the centre of the screen, adjust the horizontal convergence with the H.STAT variable resistor and the V.STAT magnet in the manner indicated below.
   [In this case, the H.STAT variable resistor and the V.STAT magnet influence each other].


   - Tilt the V.STAT magnet and adjust the static convergence by opening or closing the V.STAT magnet.

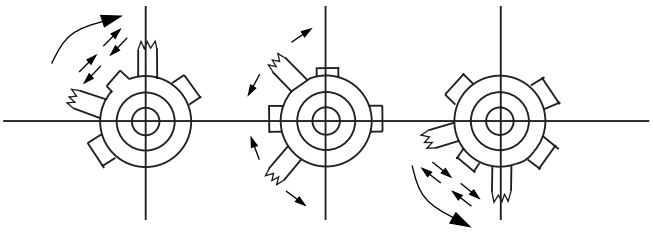

4. If the V.STAT magnet is moved in the direction of the (a) and (b) arrows, the Red, Green and Blue points move as indicated below.

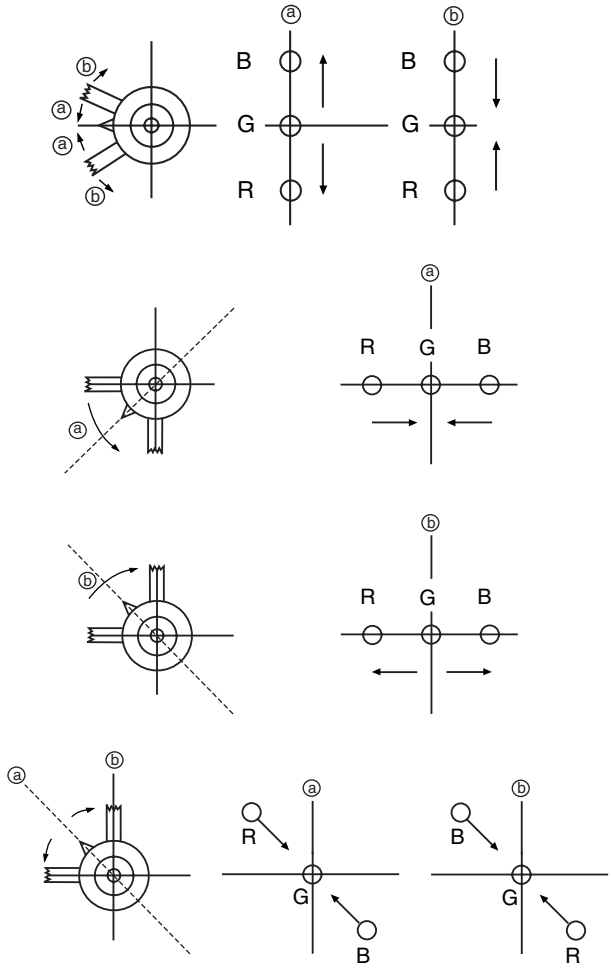

Operation of the BMC (Hexapole) magnet.

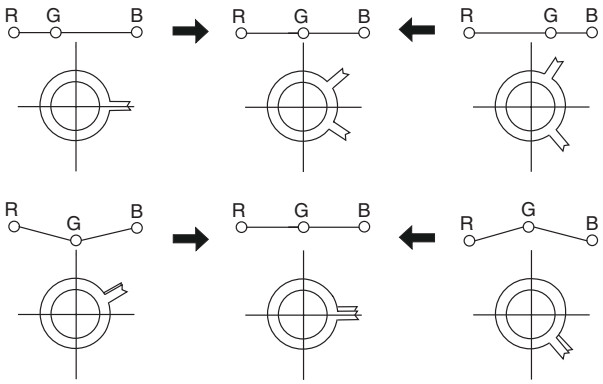


The movement of the magnets interact with each other and so the respective dot position should be monitored while carrying out this adjustment.
Use the H.STAT VR to adjust the Red, Green and Blue dots so that they coincide at the centre of the screen
(by moving the dots in the horizontal direction).

Geometry Adjustment.


Preparation:

Before starting this adjustment, adjust the horizontal and vertical static convergence.


1. Remove the deflection yoke spacer.
2. Tilt the deflection yoke as indicated in the figure below and optimise the geometry.
   Tilting the DY Up and Down will balance the upper and lower pin adjustment.
   Tilting the DY Left and Right will balance the H-Trap adjustment.
3. Re-install the deflection yoke spacer.

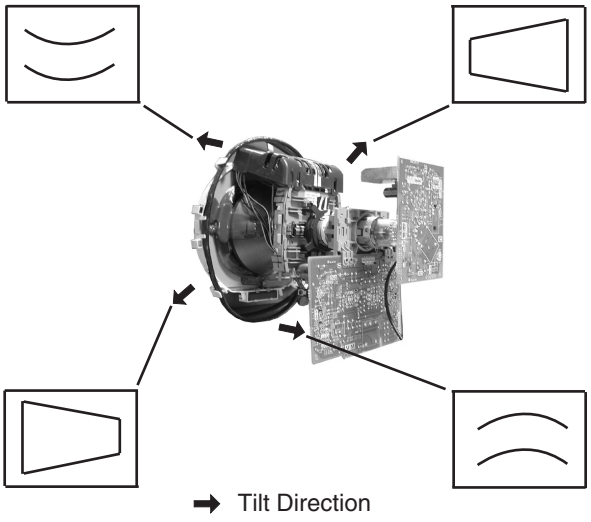


HTIL Adjustment

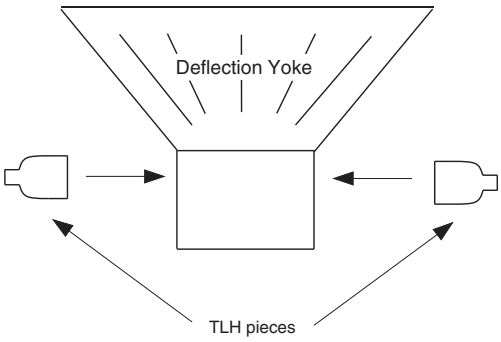

HTIL correction can be performed by adding a TLH correction assembly to the Deflection yoke.

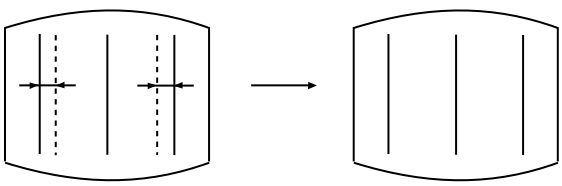

YCH Adjustment





TLV Adjustment




Screen Corner Convergence

If you are unable to adjust the corner convergence properly, this can be corrected with the use of permalloy magnets.

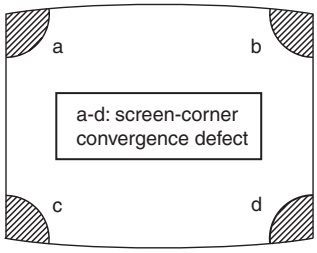

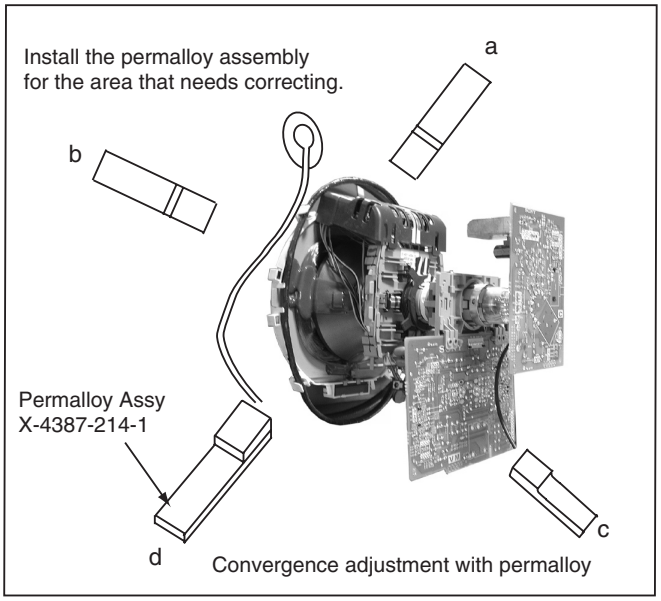


Layout of each control

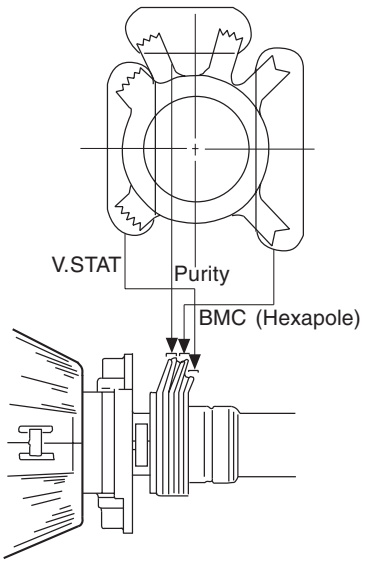

3-3. Focus Adjustment

1. Receive a television broadcast signal.
2. Normalize the picture setting.
3. Adjust the focus control located on the flyback transformer to obtain the best focus at the centre of the screen.
   Bring only the centre area of the screen into focus, the magenta-ring appears on the screen. In this case, adjust the focus to optimize the screen uniformly.

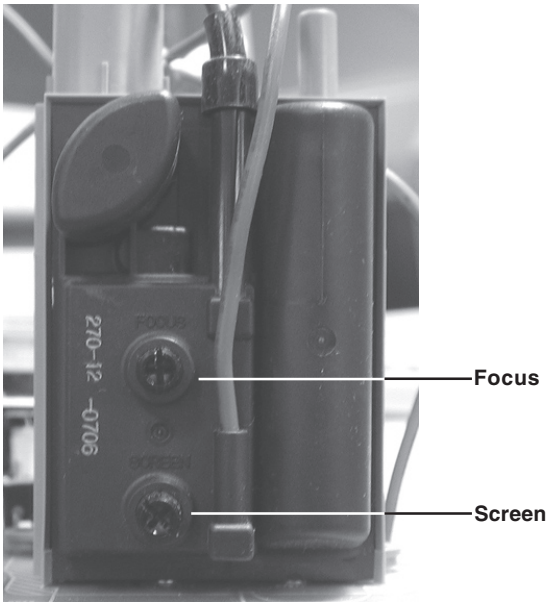

3-4. Screen (G2), White Balance

[Adjustment in the service mode using the remote commander]

G2 adjustment

1. Input a dot signal from the pattern generator.
2. Enter the 'Service Mode' by pressing 'TEST', 'TEST' and '38' (TT-38) on the remote commander, to set up the G2 service adjustment mode.
3. Whilst watching the picture, adjust the G2 control [SCREEN] located on the Flyback Transformer to the point where the OSD menu indication shows "OK".

White balance adjustment for TV mode

1. Input an all-white signal from the pattern generator.
2. Enter into the 'Service Mode' by pressing 'TEST', 'TEST' and 'MENU' on the Service Commander.
3. Select 'Service' from the on screen menu display and press the right arrow button on the remote commander.
4. The 'Service' menu will appear on the screen.
   [See Page 21]
5. Set the 'Contrast' to MAX.
6. Set the 'R-Drive' to 25.
7. Adjust the 'G-Drive' and the 'B-Drive' so that the white balance becomes optimum.
8. Press the 'OK' button to write the data for each item.
9. Set the 'Contrast' to MIN.
10. Adjust the 'G-Cutoff', and the 'R-Cutoff' with the left and right buttons on the remote commander so that the white balance becomes optimum.
11. Press the 'OK' button to write the data for each item.


SECTION 4 CIRCUIT ADJUSTMENTS

4-1. Electrical Adjustments

Service adjustments to this model can be performed using the supplied remote Commander RM-887.

How to enter into the Service Mode

1. Turn on the main power switch and enter into the stand-by mode.
2. Press the following sequence of buttons on the Remote Commander.

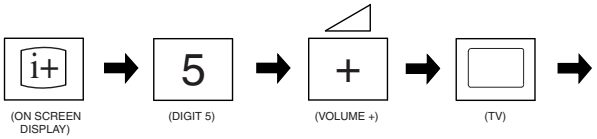

'TT—' will appear in the upper right corner of the screen. Other status information will also be displayed.

3. Press 'MENU' on the remote commander to obtain the following menu on the screen.

```
Geometry
Service
Design
Status
Sound
IF adjust
Error Menu

FE-2 Stereo v3.44
Factory data    02h   93h
MSP Device : MSP3411G
```

4. Move to the corresponding adjustment item using the up or down arrow buttons on the Remote Commander.
5. Press the right arrow button to enter into the required menu item.
6. Press the 'Menu' button on the Remote Commander to quit the Service Mode when all adjustments have been completed.

Note :

- Before performing any adjustments ensure that the correct model has been selected in the 'Model Setting' menu.
- After carrying out the service adjustments, to prevent the customer accessing the 'Service Menu' switch the TV set OFF and then ON.

ERROR MENU

E02	OCP	(0, 255)	0
E03	OVP N/A	(0, 255)	0
E04	VSYNC	(0, 255)	0
E05	IKR	(0, 255)	0
E06	IIC	(0, 255)	0
E07	NVM	(0, 255)	0
E08	JUNGLE	(0, 255)	0
E09	TUNER	(0, 255)	0
E10	SOUNDP	(0, 255)	0
E11	8V	(0, 255)	0

WORKING TIME

HOURS	2
MINUTES	11

SERVICE

Offset-R	(0, 63)	Adj
Offset-G	(0, 63)	Adj
R-Drive	(0, 63)	31
G-Drive	(0, 63)	Adj
B-Drive	(0, 63)	Adj
Peak-Freq	(0, 3)	0
Luma-Delay	(0, 15)	8
SC0	(0, 3)	3
White-Peak	(0, 15)	15
Subcont	(0, 15)	8
Subright	(0, 63)	30
Subcol	(0, 63)	Adj
Subsharp	(0, 63)	25
Cutoff Br.	(0, 63)	31
Br OSD	(0, 15)	10
Br TXT	(0, 15)	7

GEOMETRY

V-Linearity	(0, 63)	Adj
V-Scroll	(0, 63)	32
Left-HBlk	(0, 15)	10
Right-HBlk	(0, 15)	7
V-Angle	(0, 63)	Adj
V-Bow	(0, 63)	Adj
H-Centre	(0, 63)	Adj
H-Size	(0, 63)	Adj
Pin-Amp	(0, 63)	Adj
U-Corner-Pin	(0, 63)	Adj
L-Corner-Pin	(0, 63)	Adj
Pin Phase	(0, 63)	Adj
V-Slope	(0, 63)	40
V-Size	(0, 63)	Adj
S-Correction	(0, 63)	Adj
V-Centre	(0, 63)	Adj
V-Zoom	(0, 63)	27
Magenta	(0, 63)	31

IF ADJUST

AGC Adjust	(-16, +15)	+0
Automute		1
Audio Gain		0
L Gating		0

Sub Brightness Adjustment


1. Input a Monoscope pattern.
2. Press 'TEST' 'TEST' 13 on the Remote Commander.
3. Adjust the 'Sub-Brightness' data so that there is barely a difference between the 0 IRE and 10 IRE signal levels.

Sub Contrast Adjustment

1. Input a video signal that contains a small 100% white area on a black background.
2. Connect an digital voltmeter to Pin 10 of J701 [C Board].
3. Adjust the Sub-Contrast ['TT11'] to obtain a voltage of 105 +/- 5V.

Sub Colour Adjustment


1. Receive a PAL colour bar signal.
2. Connect an oscilloscope to Pin 3 of CN003 [A Board].
3. Enter into the 'Service' service menu.
4. Adjust the 'Sub Colour' data so that the Cyan, Magenta and Blue colour bars are of equal levels as indicated below.

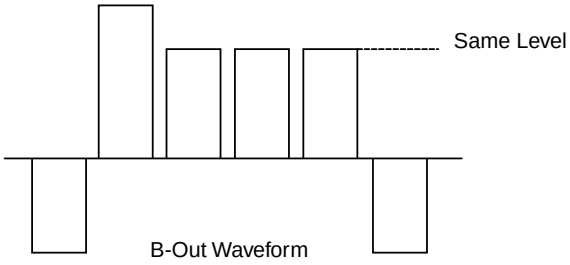

Tuner AGC Adjustment

Note:
There should be no need to adjust the AGC as this is pre-adjusted during manufacture of the FRONTEND. If the AGC does need adjustment then follow steps 1. to 4. below.

1. Receive a signal of 62dBuV / 75 ohm terminated via the tuner antenna socket.
2. Connect a voltmeter to pin1 of TU101 [print side of A Board] or to the AGC pin of CN001 [mount side of A Board].
3. Confirm that the AGC voltage is 3.5volts +/- 0.3volts.
4. If adjustment is required, then re-adjust the AGC variable resistor (located at the top rear of the FRONTEND) to obtain a voltage of 3.5V +/- 0.3V.

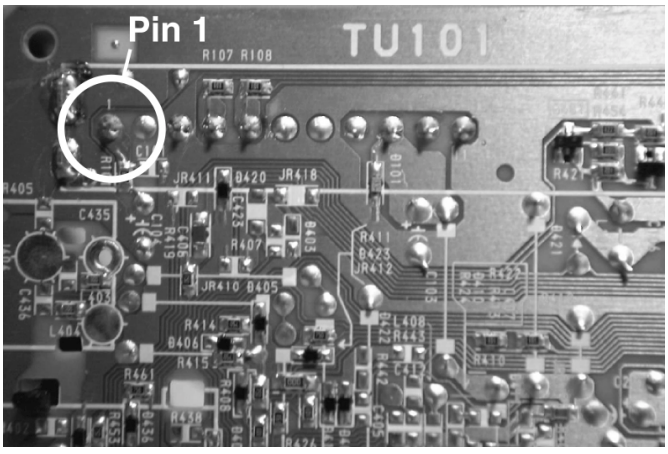


[Print side of A board]

Deflection System Adjustment

1. Enter into the 'Geometry' service menu.
2. Select and adjust each item in order to obtain the optimum image.

GEOMETRY		
V-Linearity	(0, 63)	Adj
V-Scroll	(0, 63)	32
Left-HBlk	(0, 15)	8
Right-HBlk	(0, 15)	6
V-Angle	(0, 63)	Adj
V-Bow	(0, 63)	Adj
H-Centre	(0, 63)	Adj
H-Size	(0, 63)	Adj
Pin-Amp	(0, 63)	Adj
U-Corner-Pin	(0, 63)	Adj
L-Corner-Pin	(0, 63)	Adj
Pin Phase	(0, 63)	Adj
V-Slope	(0, 63)	35
V-Size	(0, 63)	Adj
S-Correction	(0, 63)	Adj
V-Centre	(0, 63)	Adj
V-Zoom	(0, 63)	23
Magenta	(0, 63)	31

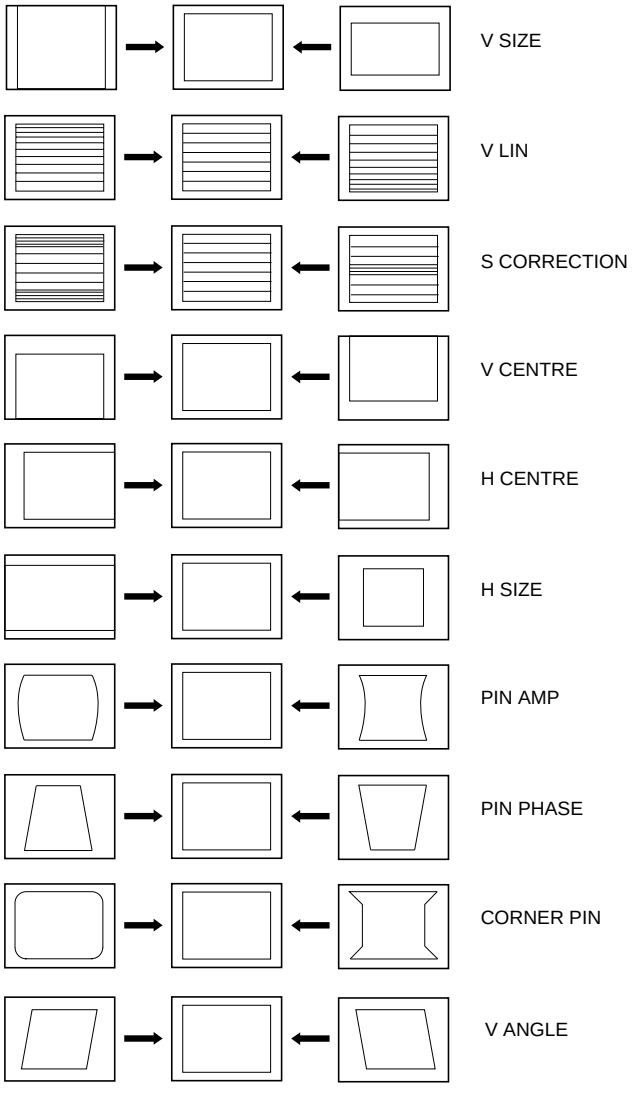

4-2. TEST MODE 1:

Test Mode 1 is available by pressing the 'TEST' button once, OSD 'T' appears. The functions described below are available by selecting the indicated keys. The 'T' is released automatically after each command is executed.


KEY	T-MODE FUNCTION
volume +	volume maximum
volume -	Picture minimum
picture +	Picture maximum
picture -	Picture minimum
colour up	colour maximum
colour down	colour minimum
brightness - bright	brightness maximum
brightness - dark	brightness minimum
hue - purplish	hue - purplish
hue - greenish	hue - greenish
sharpness - sharp	sharpness maximum
sharpness - soft	sharpness minimum
balance left	balance full left
balance right	balance full right
treble up	treble maximum
treble down	treble minimum
bass up	bass maximum
bass down	bass minimum


4-3. TEST MODE 2:


Test Mode 2 is available by pressing the 'TEST' button twice, OSD 'TT' appears. The functions described below are available by selecting the two numbers. To release the 'Test mode 2', press 00, 10, 20 ... twice or switch the TV set into Stand-by mode. In 'TT Menu' mode, it is possible to remove the Menu from the screen by pressing the Speaker Off button once. Pressing the Speaker OFF button a second time will cause the Menu to reappear. The function is kept even when the menu is not displayed on screen !!.


00	'TT' mode off
01	Picture maximum
02	Picture minimum
03	Set speaker/headphone Volume to 35%
04	Set speaker/headphone Volume to 50%
05	Set speaker/headphone Volume to 65%
06	Set speaker/headphone Volume to 80%
07	Ageing mode
08	Shipping Condition
11	Sub picture adjustment
12	Sub colour adjustment
13	Sub Brightness adjustment
14	Text H Position adjustment
15	Rotation Coil Test
16	Picture level 50%
19	Factory Mode Enable/Disable
21	Destination ADEKR
22	Destination BL
23	Destination ADEKR
24	Destination U
25	Destination ADEKR
26	Destination BL
27	Destination ADEKR
28	Destination ADEKR
31	Auto Shutoff Enable/Disable
33	Rotation ON/OFF
35	Toggle Wide Mode
36	Velocity Modulation (VM) OFF/ON test
38	G2 adjustment
39	AVCnrelease timing delay enable/disable
41	Re-initialise NVM
43	Select Dual A sound
44	Select Dual B sound
45	Select Mono sound
46	Select Stereo sound
48	Set NVM as non virgin
49	Set NVM as virgin
51	Virtual Dolby on/off
52	Subwoofer / MPB (Bass enhancement) Enable
53	FM over-modulation enable/disable
54	Dot structure C/M (chroma trap)
55	Tuner selection (SONY/ALPS)
56	BBE enable/disable
57	BBE menu line enable/disable
58	Dolby-BBE combination (BBE is Off when Dolby is On, and vice versa)
59	Line 318 disappear problem C/M enable/disable
61	Auto AGC Adjustment
62	AM from baseband enable/disable
63	Enable/Disable YC3 connector
64	Enable/Disable RGB priority
65	RGB auto-detect enable/disable
66	On timer enable/disable
67	Manual AGC Adjustment
68	Enable/Disable X26 countermeasure (N problem)
69	Enable/Disable ACI feature. -> deleted
71	Force PAL video
72	Un-force PAL (restore normal video condition)
73	Enable Zweiton D/K2 system (6.5/6.74)
74	Enable Zweiton D/K3 system (6.5/5.74)
75	MSP error detection method
78	Balance full left
79	Balance full right
87	Local keys test
89	Enable/Disable watchdog
91	Set 14:9 zoom mode
92	Set SMART zoom mode
93	Set 16:9 zoom mode
94	Set ZOOM mode
95	Set 4:3 zoom mode
99	Display Error and Working Time menu


5-1. BLOCK DIAGRAMS (1)

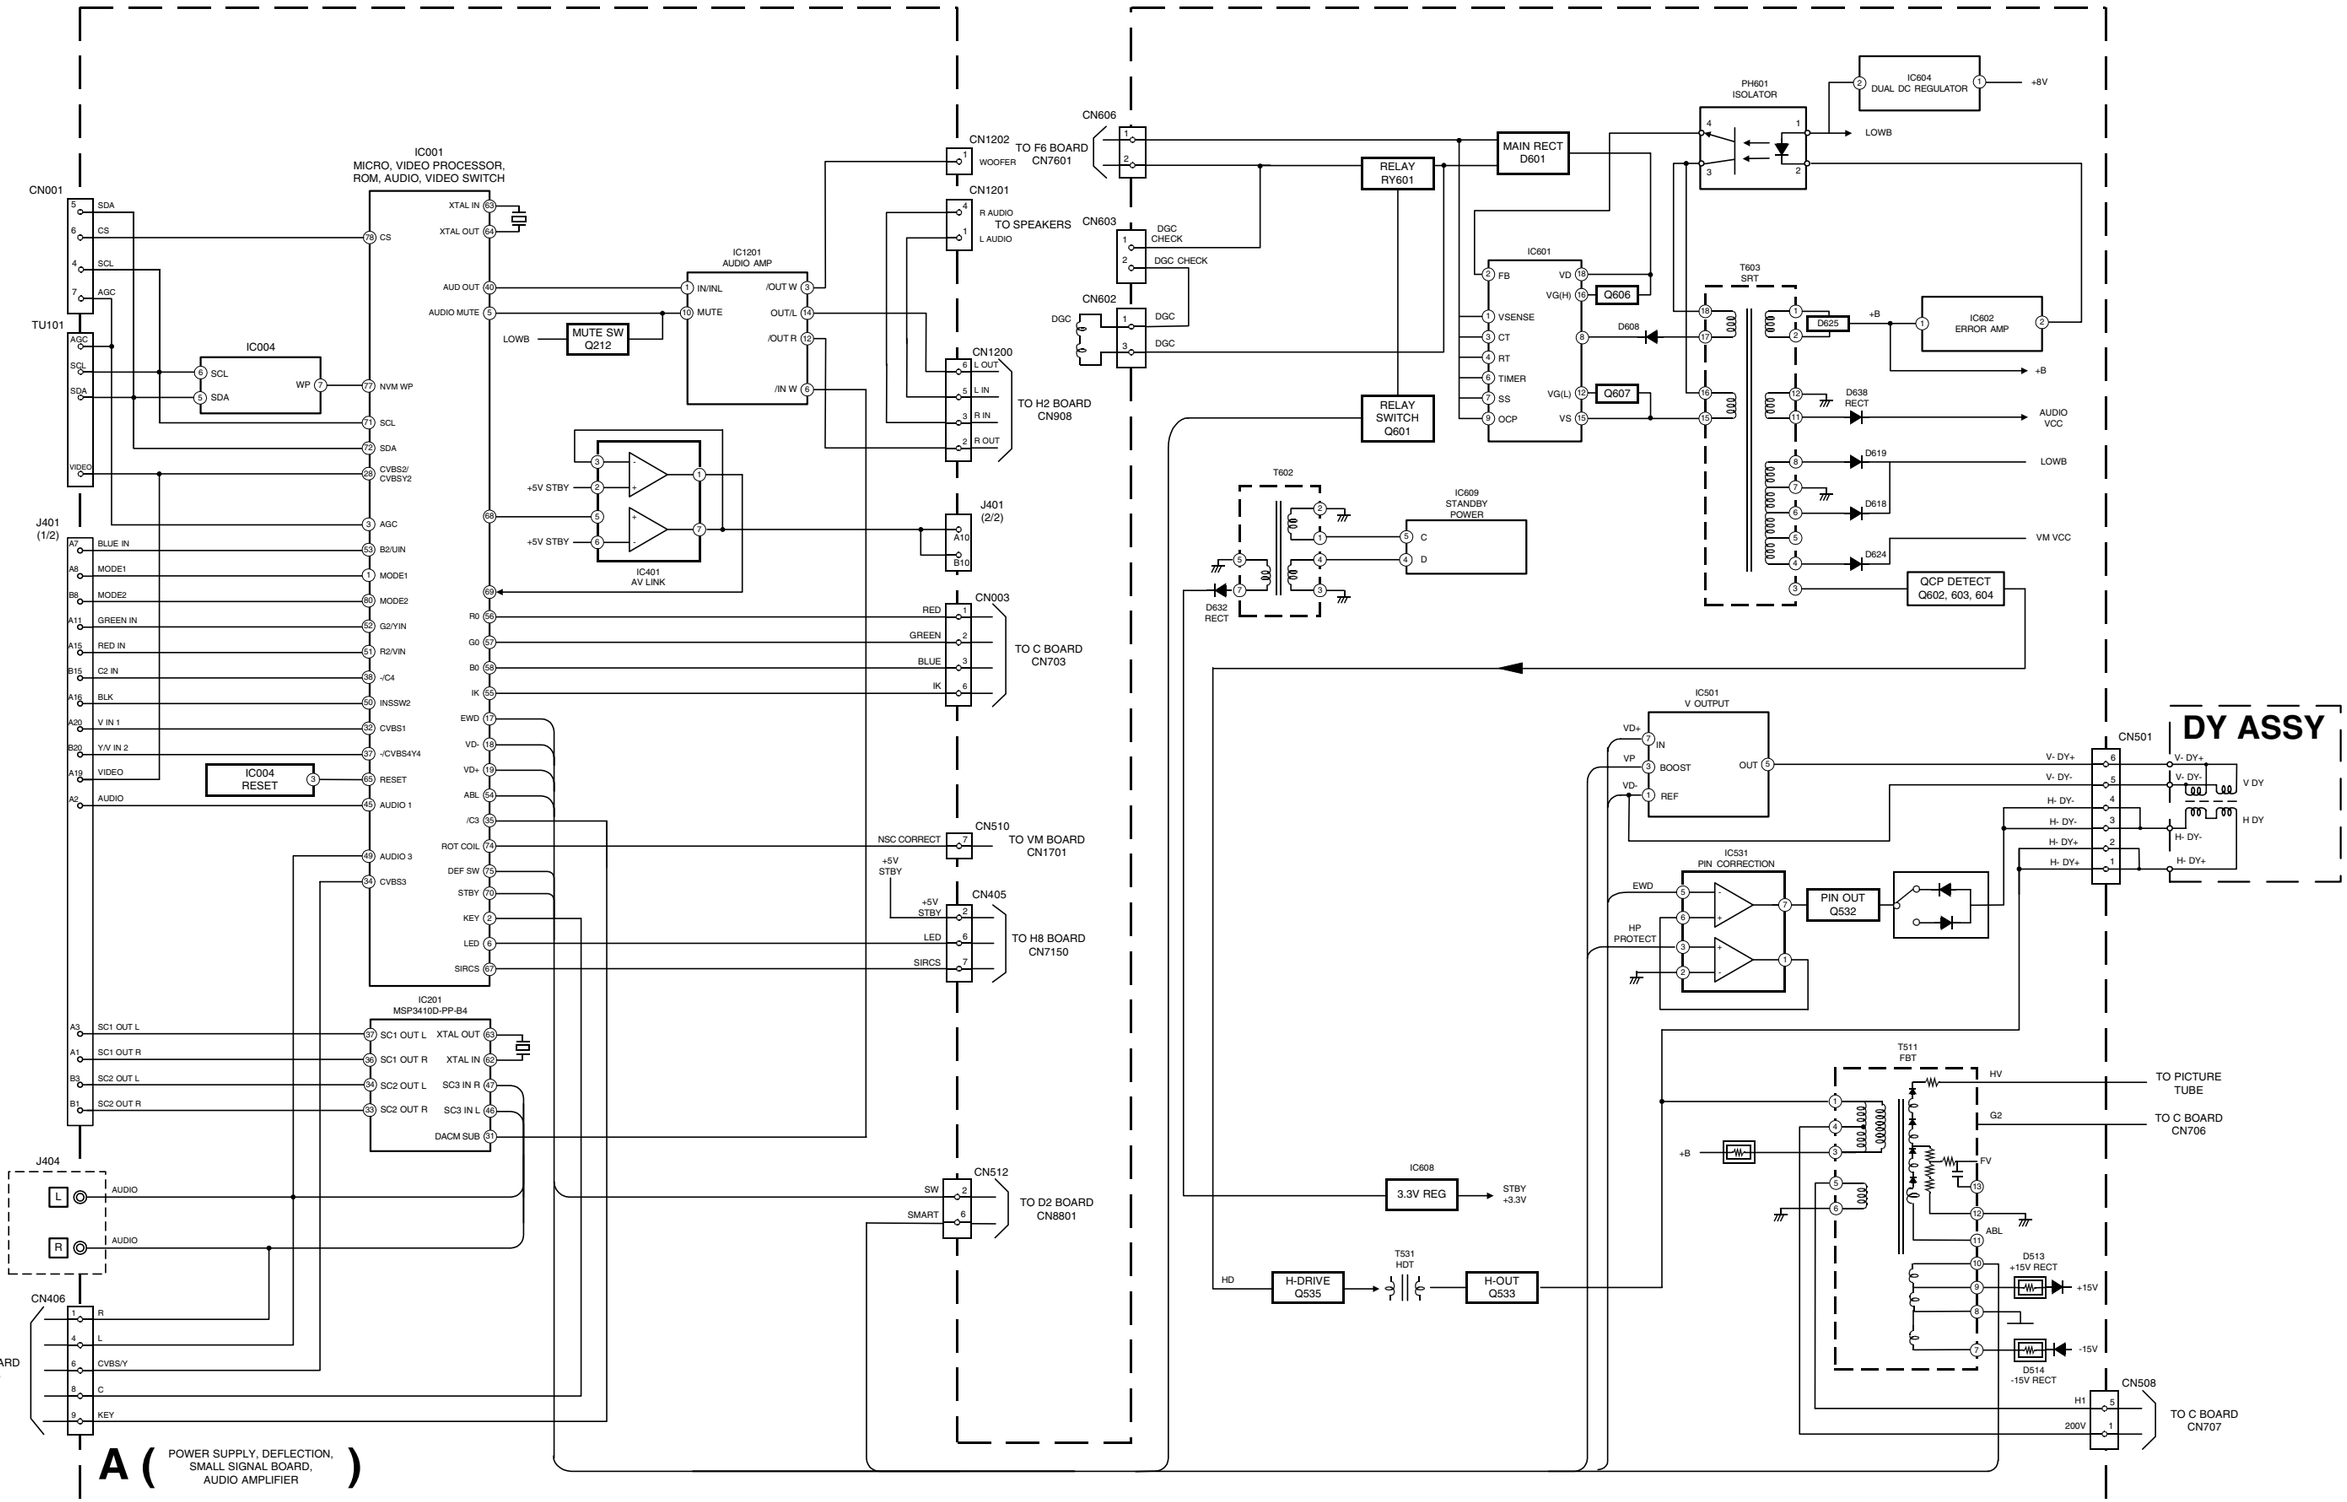


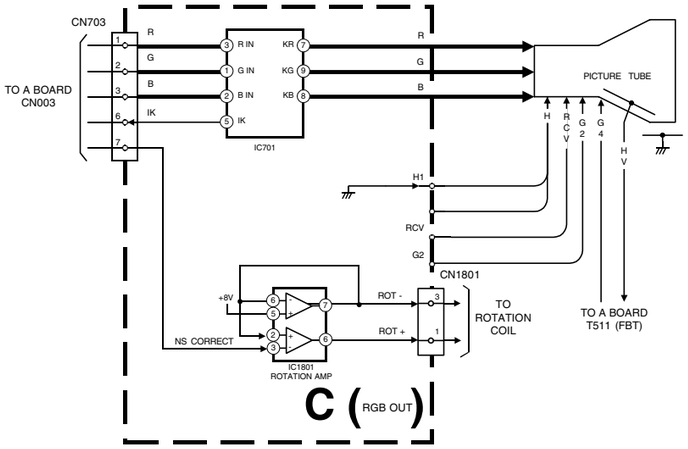

CN703
TO A BOARD CN003
R
G
B
IK
R IN
G IN
B IN
IK
KR
KG
KB
IC701
PICTURE TUBE
H
RCV
G2
G4
HV
H1
CN1801
+8V
ROT -
ROT +
NS CORRECT
IC1801 ROTATION AMP
TO ROTATION COIL
TO A BOARD T511 (FBT)
C (RGB OUT)

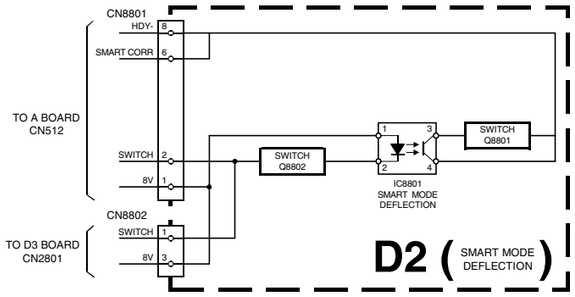

CN8801
HDY-
SMART CORR
SWITCH
8V
TO A BOARD CN512
SWITCH Q8802
SWITCH Q8801
IC8801 SMART MODE DEFLECTION
CN8802
TO D3 BOARD CN2801
D2 (SMART MODE DEFLECTION)

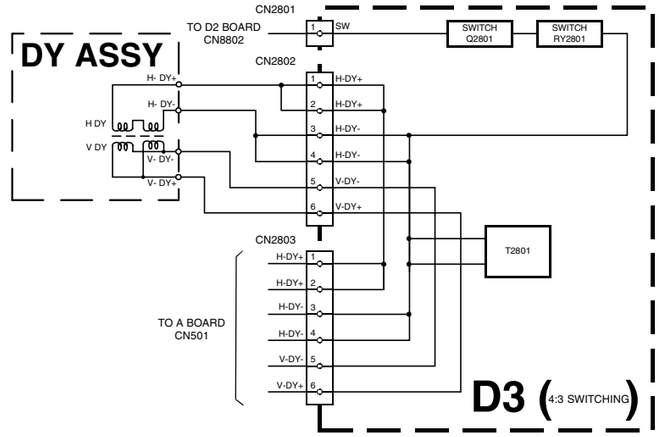

DY ASSY
CN2801
TO D2 BOARD CN8802
SW
SWITCH Q2801
SWITCH RY2801
CN2802
H- DY+
H- DY-
H DY
V DY
V- DY-
V- DY+
H-DY+
H-DY-
V-DY-
V-DY+
CN2803
T2801
TO A BOARD CN501
D3 (4:3 SWITCHING)

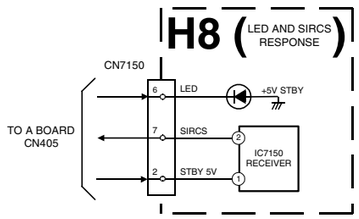
H8 (LED AND SIRCS RESPONSE)
CN7150
TO A BOARD CN405
LED
+5V STBY
SIRCS
STBY 5V
IC7150 RECEIVER

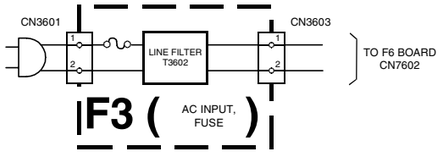

CN3601
CN3603
LINE FILTER T3602
TO F6 BOARD CN7602
F3 (AC INPUT, FUSE)

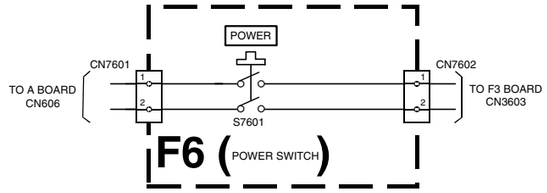
POWER
CN7601
TO A BOARD CN606
CN7602
TO F3 BOARD CN3603
S7601
F6 (POWER SWITCH)

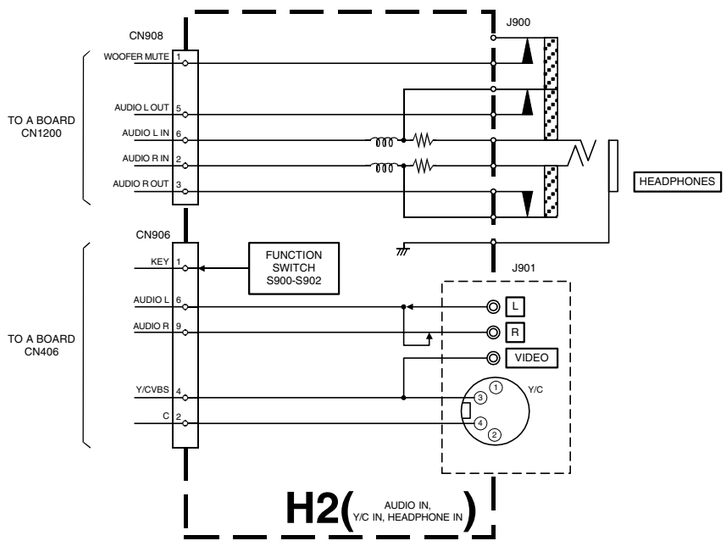
CN908
J900
WOOFER MUTE
AUDIO L OUT
AUDIO L IN
AUDIO R IN
AUDIO R OUT
TO A BOARD CN1200
HEADPHONES
CN906
KEY
FUNCTION SWITCH S900-S902
AUDIO L
AUDIO R
Y/CVBS
C
TO A BOARD CN406
J901
L
R
VIDEO
Y/C
H2(AUDIO IN, Y/C IN, HEADPHONE IN)

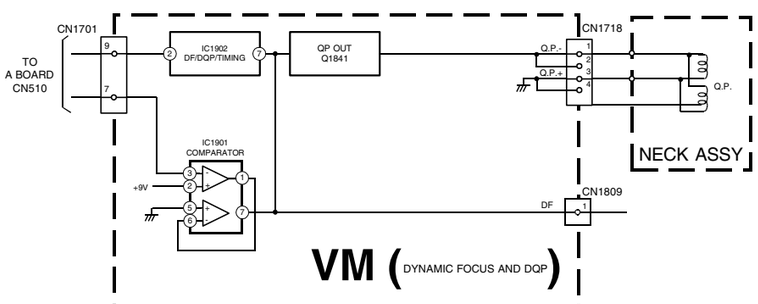
CN1701
TO A BOARD CN510
IC1902 DF/DQP/TIMING
QP OUT Q1841
CN1718
Q.P.-
Q.P.+
Q.P.
NECK ASSY
IC1901 COMPARATOR
+9V
CN1809
DF
VM (DYNAMIC FOCUS AND DQP)

5-2. CIRCUIT BOARD LOCATION

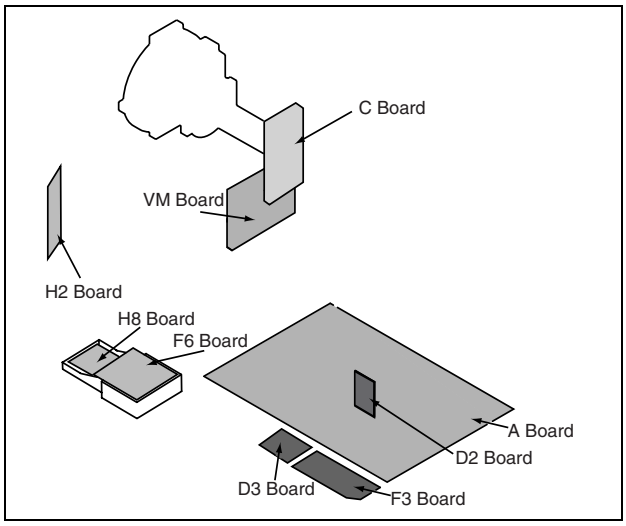

5-3. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS

Note :

- All capacitors are in µF unless otherwise noted.
- pF : µµF 50WV or less are not indicated except for electrolytic types.
- Indication of resistance, which does not have one for rating electrical power, is as follows.

Pitch : 5mm
Electrical power rating : 1/4W

- Chip resistors are 1/10W
- All resistors are in ohms.
  k = 1000 ohms, M = 1000,000 ohms
- : nonflammable resistor.
- : fusible resistor.
- : internal component.
- : panel designation or adjustment for repair.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- All voltages are in Volts.
- Readings are taken with a 10Mohm digital mutimeter.
- Readings are taken with a color bar input signal.
- Voltage variations may be noted due to normal production tolerences.
- : B + bus.
- : B - bus.
- : RF signal path.
- : earth - ground.
- : earth - chassis.

Reference Information

RESISTOR	**RN**	: METAL FILM
	RC	: SOLID
	FPRD	: NON FLAMMABLE CARBON
	FUSE	: NON FLAMMABLE FUSIBLE
	RS	: NON FLAMMABLE METAL OXIDE
	RB	: NON FLAMMABLE CEMENT
	RW	: NON FLAMMABLE WIREWOUND
		: ADJUSTMENT RESISTOR
COIL	**LF-8L**	: MICRO INDUCTOR
CAPACITOR	**TA**	: TANTALUM
	PS	: STYROL
	PP	: POLYPROPYLENE
	PT	: MYLAR
	MPS	: METALIZED POLYESTER
	MPP	: METALIZED POLYPROPYLENE
	ALB	: BIPOLAR
	ALT	: HIGH TEMPERATURE
	ALR	: HIGH RIPPLE


Note : The components identified by shading and marked ⚠ are critical for safety. Replace only with the part numbers specified in the parts list.

Note : Les composants identifiés par une trame et par une marque ⚠ sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces de numéro spécifié. specified.

~ A Board IC Voltage Table~

Ref No	Pin No	Voltage (V)	Ref No	Pin No	Voltage (V)
IC001	1	0	IC001	67	4.8
	2	3.2		68	0.4
	3	2.9		69	0
	5	0		70	0
	6	2.0		71	0
	8	2.3		72	0
	9	8.0		73	7.1
	10	5.0		74	5.0
	12	0		75	8.1
	13	0		76	-3.5
	14	4.0		77	0
	16	1.4		78	3.2
	17	1.5		79	3.2
	18	0		80	0
	19	0	IC501	1	0.3
	20	3.8		3	-12.6
	21	3.8		5	0.2
	22	5.0		6	13.9
	26	0		7	0.3
	28	3.5	IC531	1	1.4
	29	3.6		2	2.3
	30	1.9		3	1.8
	31	0.3		5	2.4
	32	3.6		6	1.6
	34	1.9		7	6.4
	35	1.4	IC601	1	-80.4
	36	3.9		2	-80.5
	38	1.8		3	-80.2
	40	3.3		4	-80.2
	42	3.3		5	-81.5
	43	1.4		6	-81.6
	45	0		7	-77.8
	46	0		9	-81.8
	47	3.6		10	-76
	48	2.8		11	-81.9
	49	2.3		12	-79.4
	50	0.2		14	16.5
	51	2.5		15	11
	52	2.5		16	14.4
	53	2.5		18	86.4
	54	2.1	IC1201	1	11
	55	5.2		3	4.9
	56	3.0		5	0
	57	3.1		6	0
	58	3.1		7	11.3
	59	3.2		9	0.3
	62	0		10	0
	63	0		12	0
	64	0		14	11.35
	65	0			

~ A Board Waveforms ~

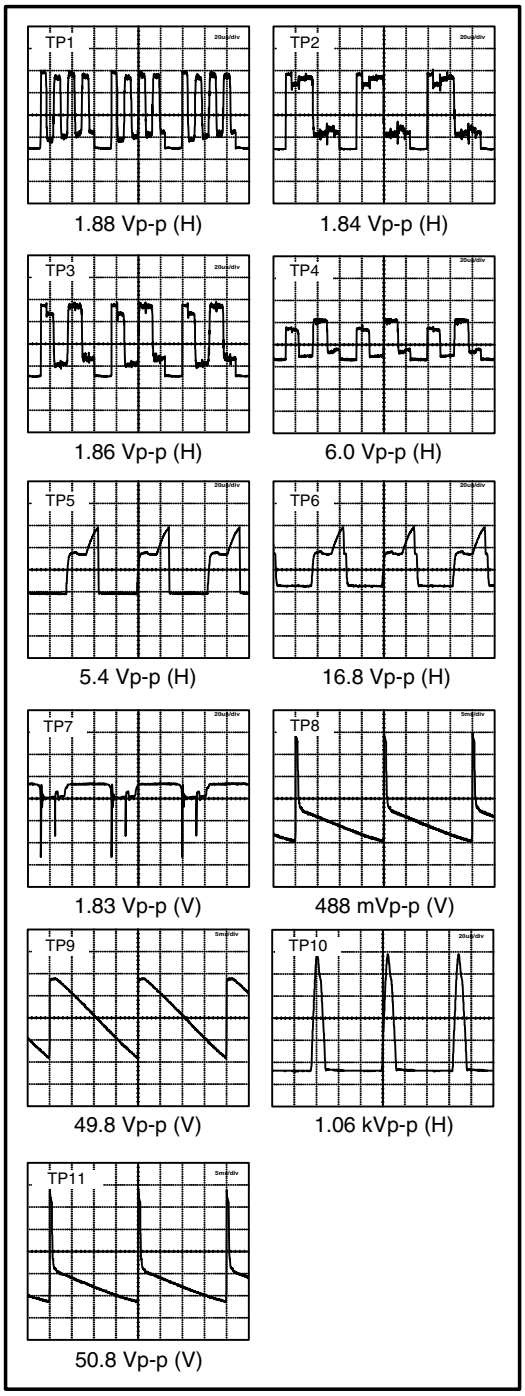


~ A Board Semiconductor Voltage Table ~


Ref	(e)	(b)	(c)	Ref	(e)	(b)	(c)
Q013	0	0.7	0	Q604	0	0	2.5
Q016	0	0	3.3	Q608	0	0	5.6
Q212	0	0.7	0	Q609	5.6	5.6	0
Q401	4.8	4.2	1.8				
Q411	1.1	1.7	4.2	**Ref**	**(s)**	**(g)**	**(d)**
Q601	5.6	4.8	5.3	Q606	10.9	14.5	86.7
Q602	14.2	5.1	8	Q607	-82.4	-79.9	10.9
Q603	8	8	0	Q535	0	2.5	95.2

~ A Board Difference Table ~


Ref	KV-28EW20B	KV-28EW20E	KV-28EW20U
TU101	1-693-555-14	1-693-556-14	1-693-557-14

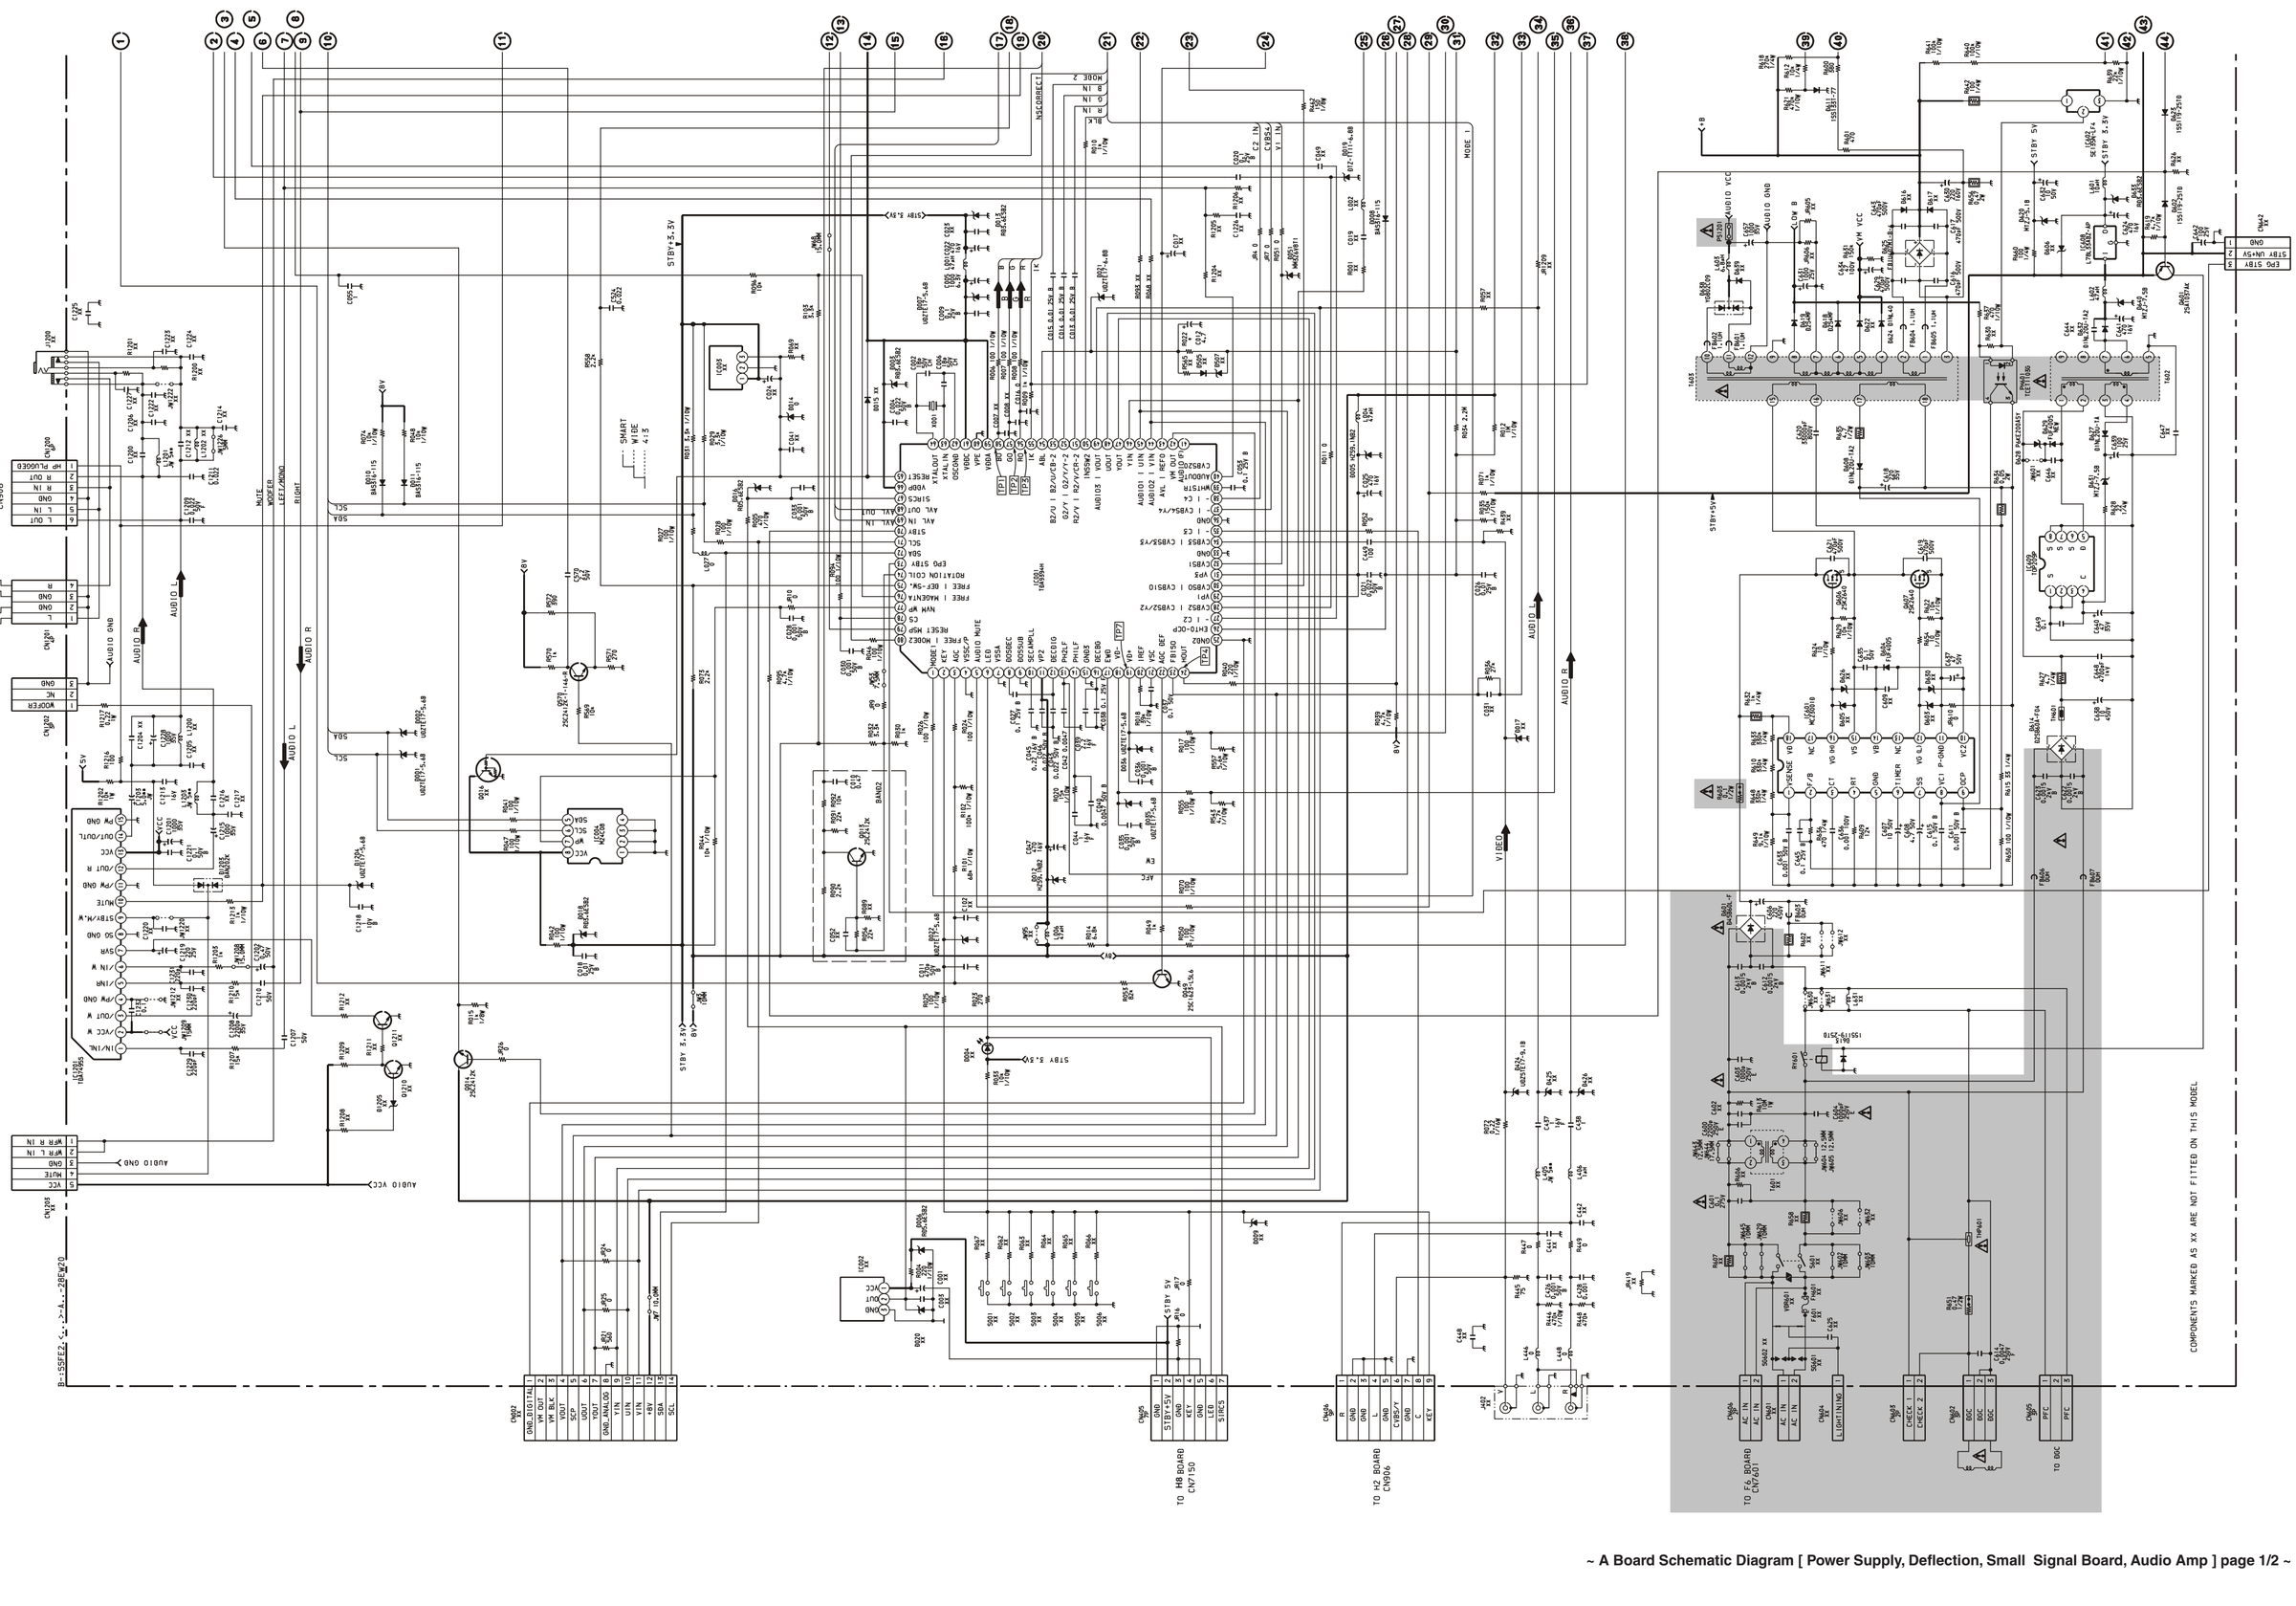

~ A Board Schematic Diagram [Power Supply, Deflection, Small Signal Board, Audio Amp] page 1/2 ~

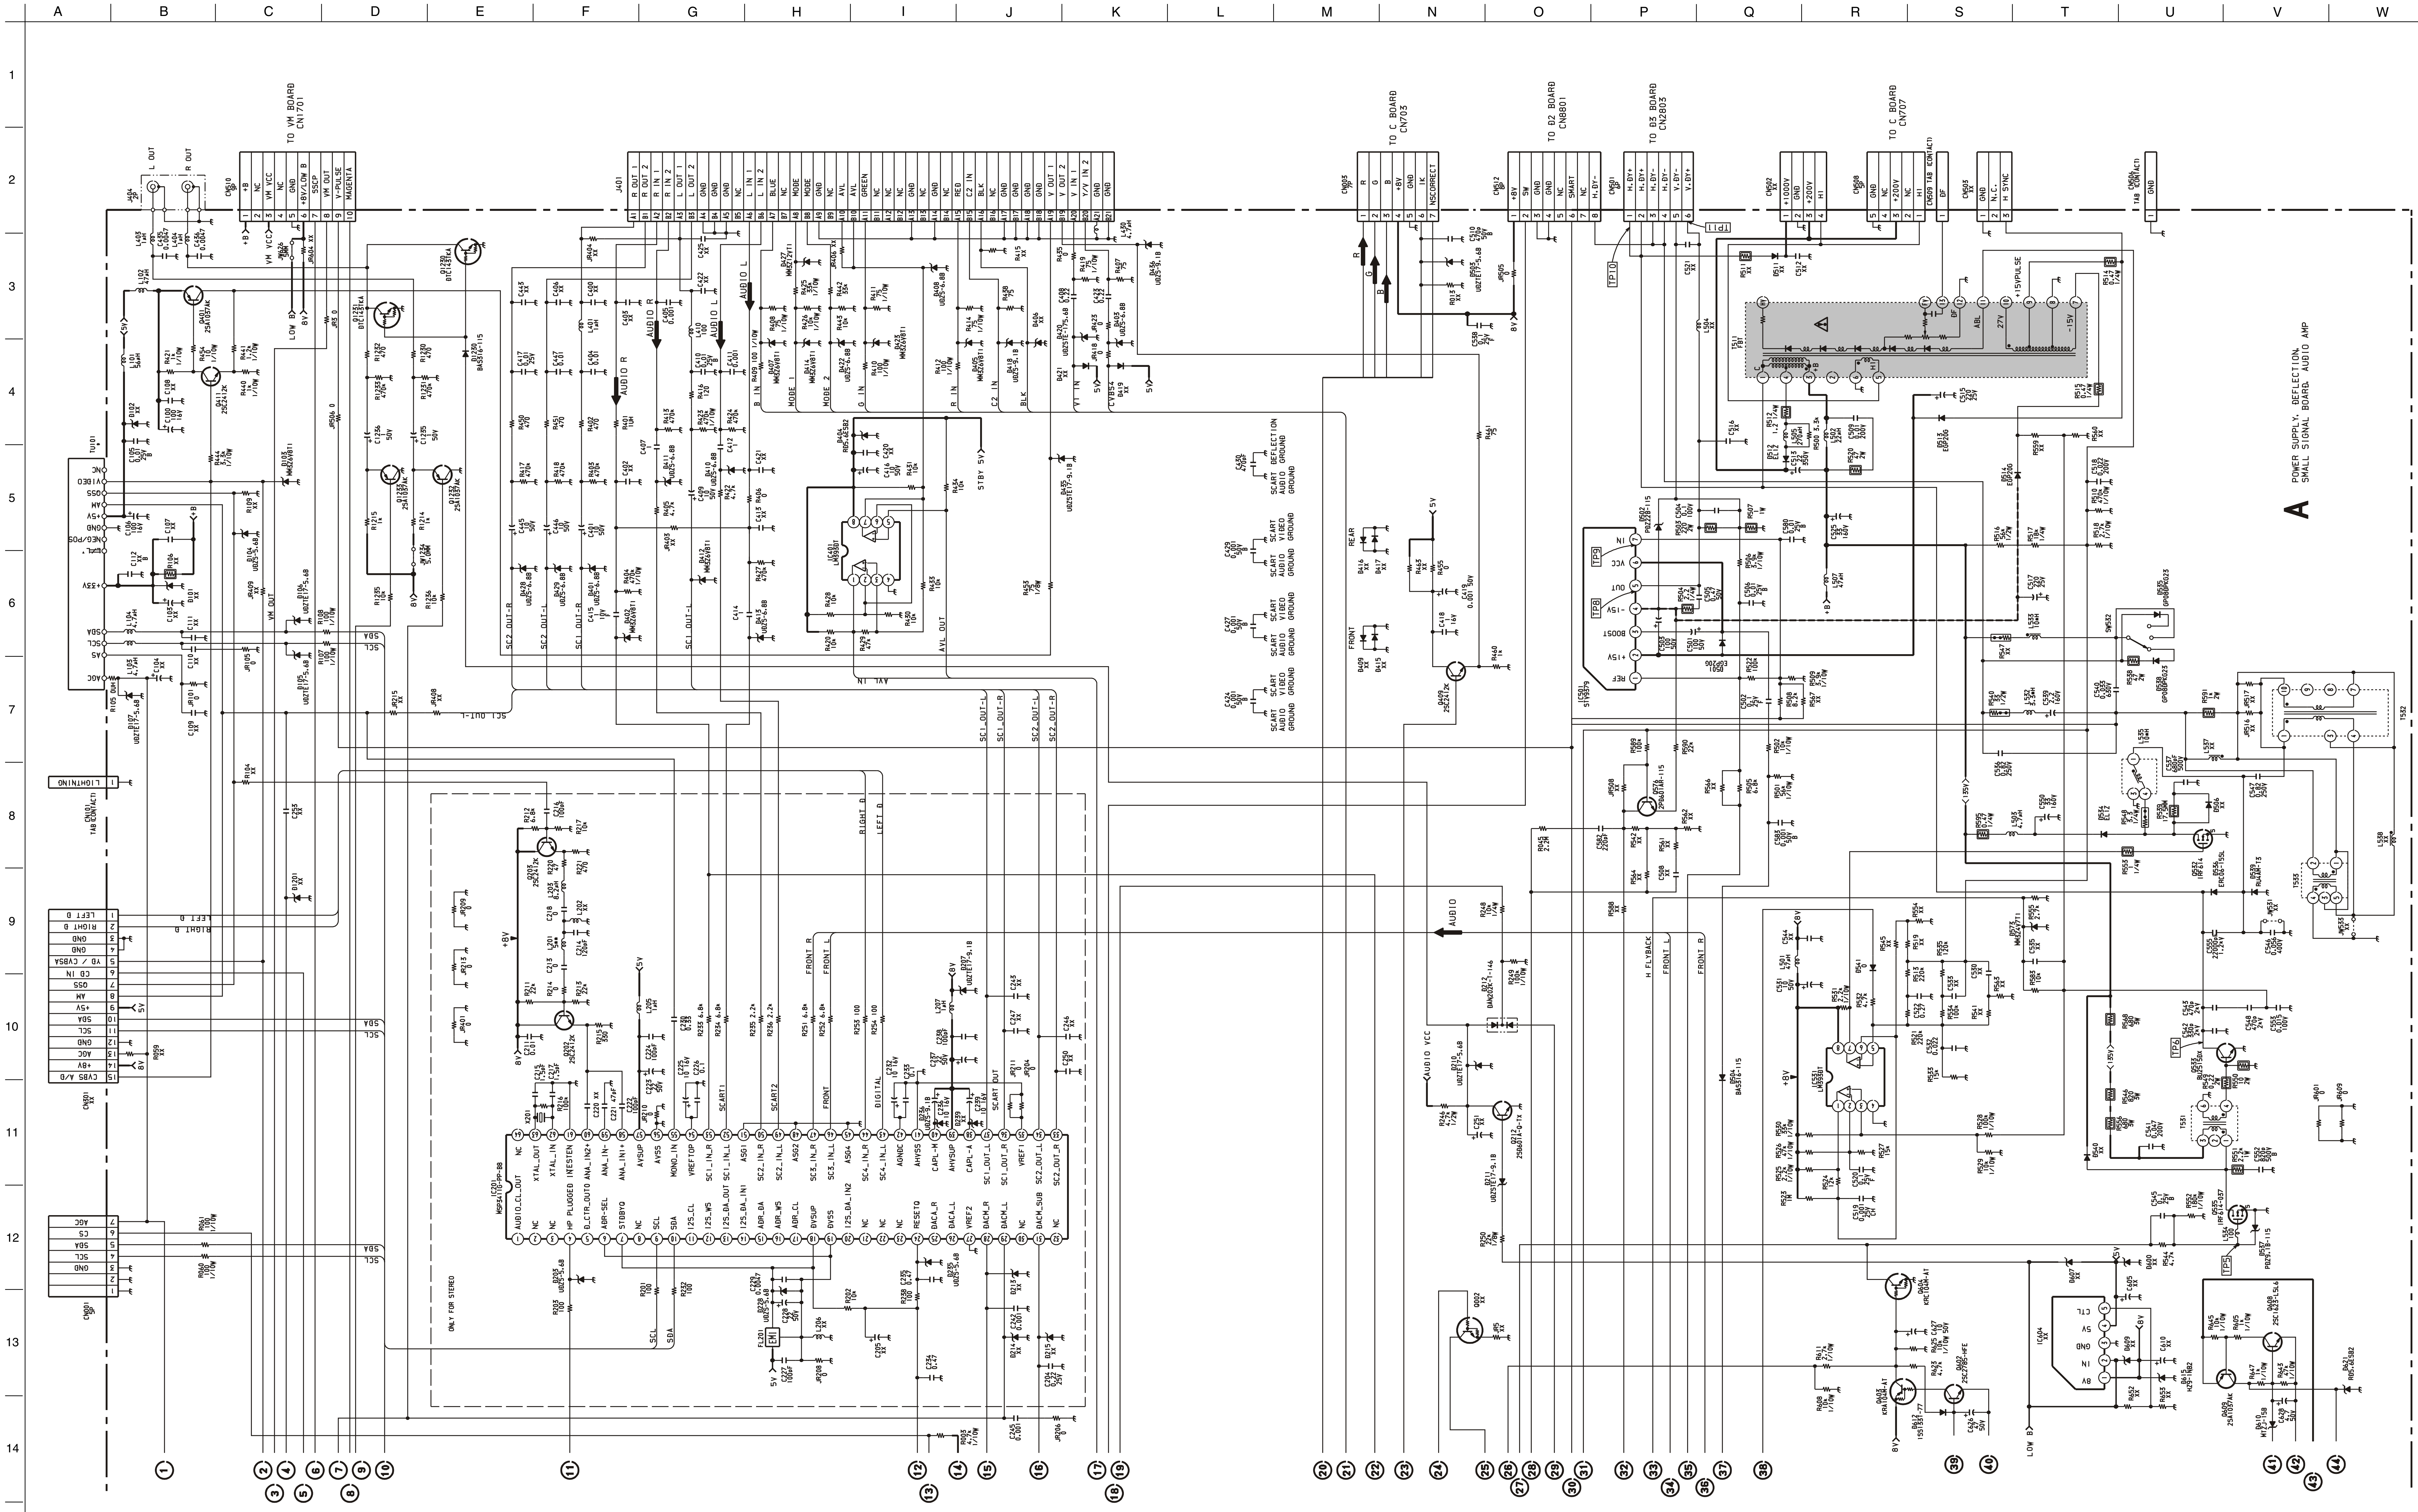

~ A Board Schematic Diagram [Power Supply, Deflection, Small Signal Board, Audio Amp] page 2/2 ~

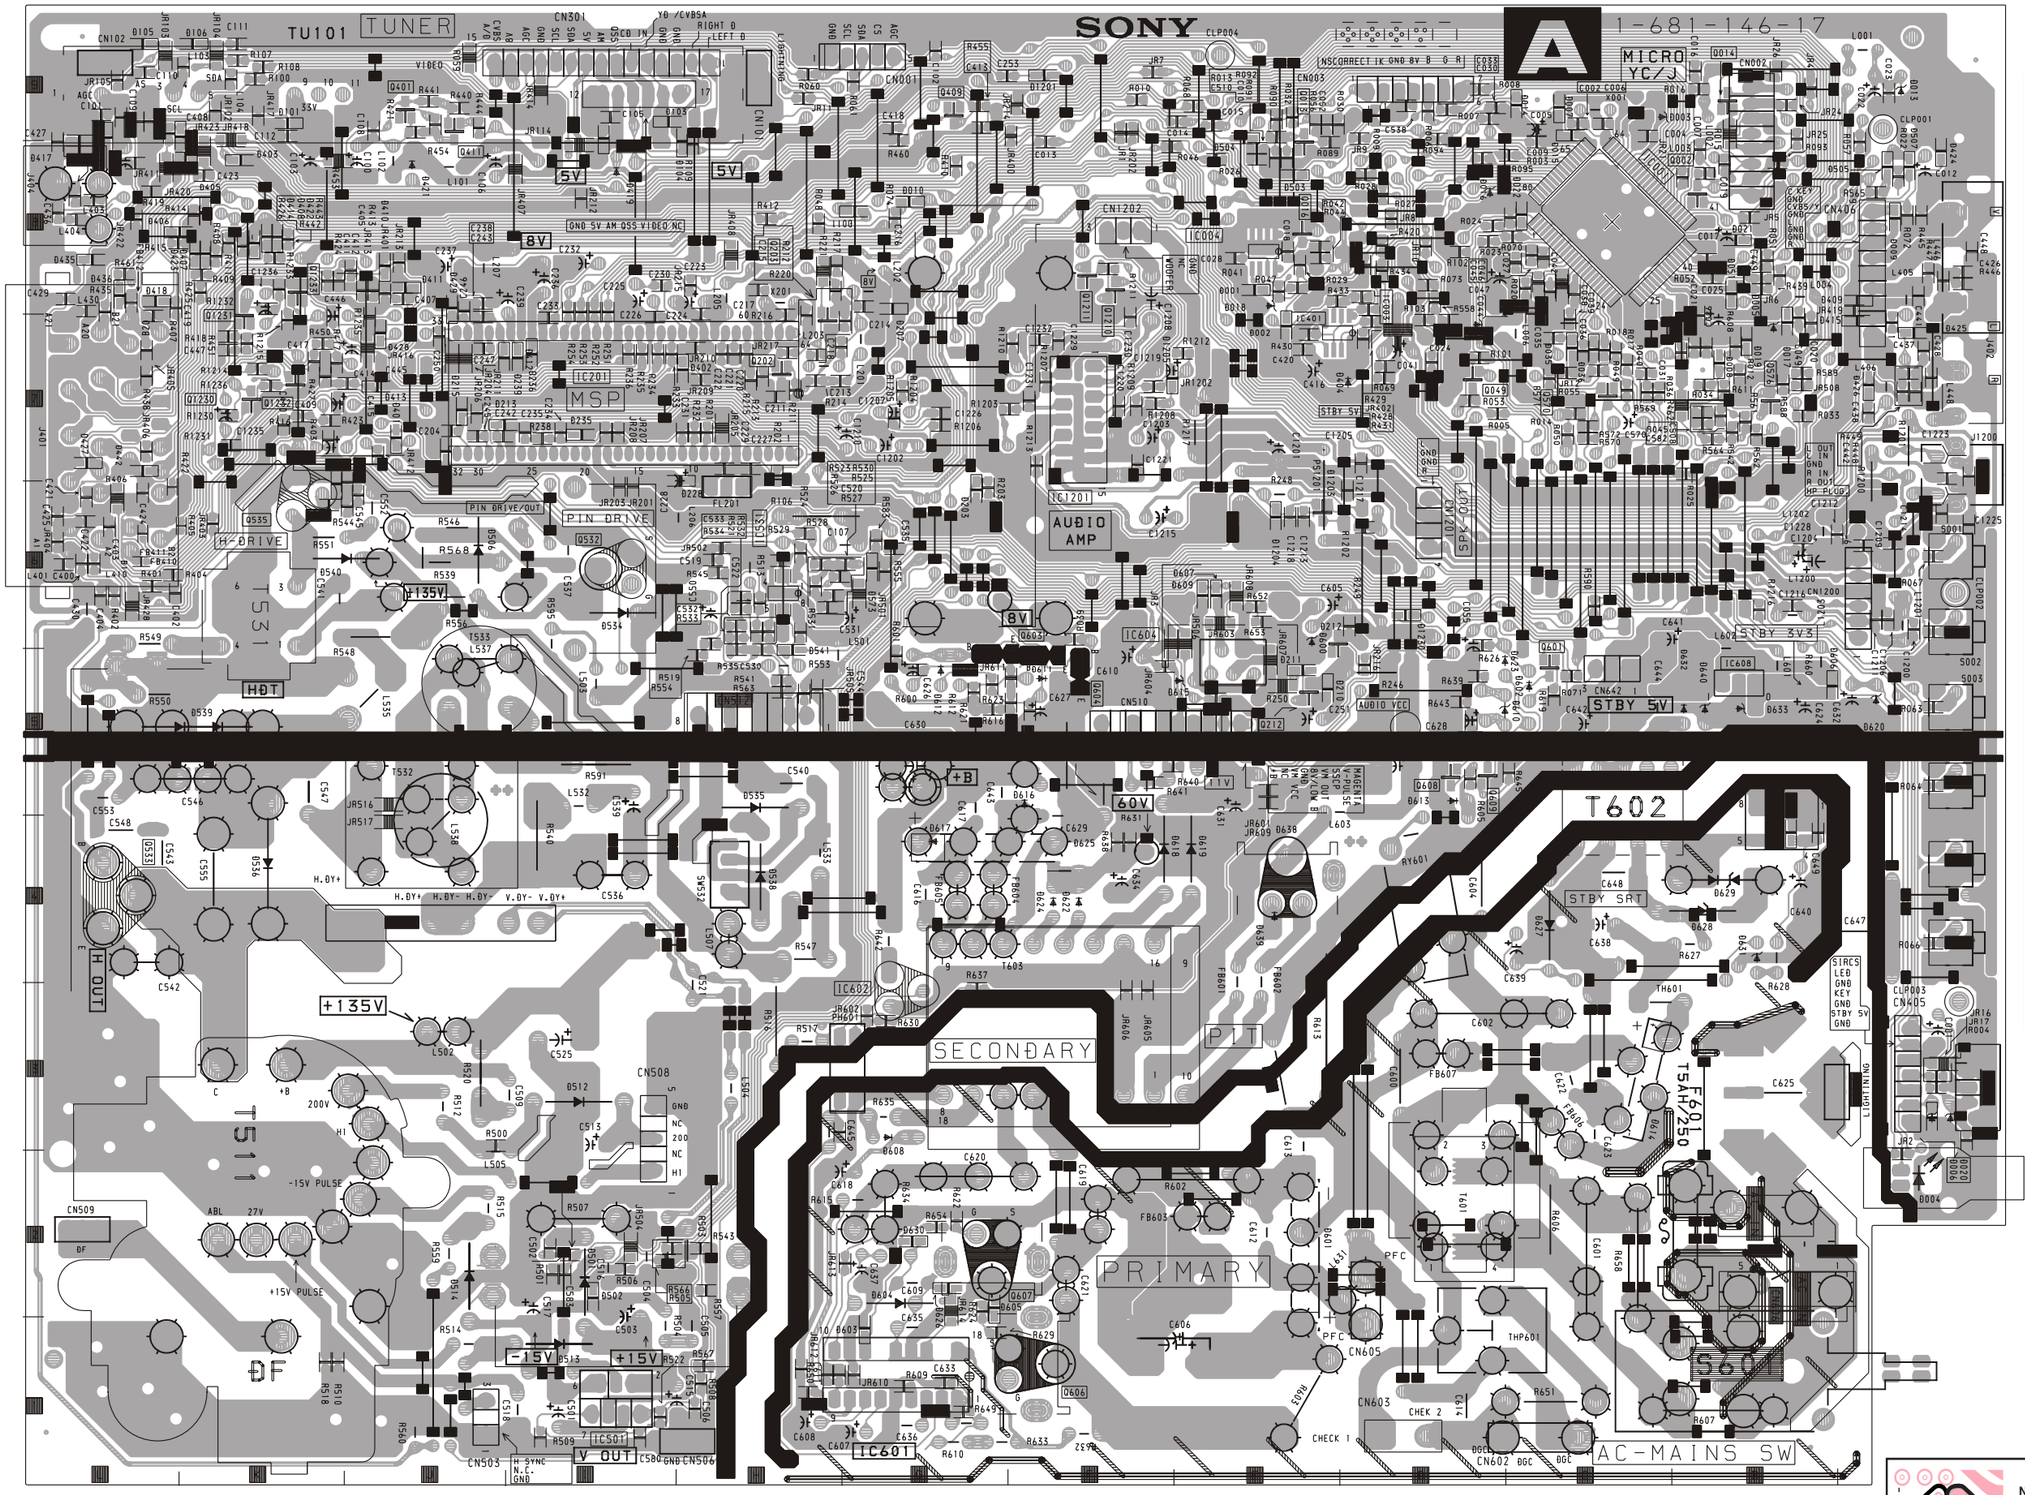

~ A Board Semiconductor Location Table ~

DIODE					
D001	I - 2	D421	C - 2	D631	L - 7
D002	I - 3	D422	C - 2	D632	K - 5
D003	K - 2	D423	C - 2	D633	L - 5
D004	M - 4	D424	M - 2	D638	I - 6
D006	M - 8	D427	A - 4	D640	L - 5
D007	K - 1	D428	C - 3	**TRANSISTOR**	
D008	L - 3	D429	D - 3	Q013	I - 3
D010	G- 2	D435	A - 2	Q014	L - 1
D011	F - 2	D436	A - 2	Q049	J - 3
D013	M - 1	D501	D - 9	Q202	E - 3
D016	J - 2	D502	D - 9	Q203	F - 2
D018	I - 3	D503	I - 2	Q212	I - 5
D020	M - 8	D504	I - 2	Q401	C - 1
D021	L - 2	D505	M - 2	Q409	G - 1
D022	J - 2	D506	D - 4	Q411	D - 2
D035	K - 3	D507	M - 2	Q532	D - 4
D036	K - 3	D512	D - 8	Q533	A - 6
D051	L - 3	D513	D - 9	Q535	B - 4
D101	B - 1	D514	C - 9	Q601	K - 5
D103	E - 1	D534	E - 5	Q602	G - 5
D104	E - 2	D535	E - 6	Q603	G - 5
D105	A - 1	D536	B - 6	Q604	H - 5
D106	B - 1	D537	C - 4	Q606	G-10
D107	B - 2	D538	E - 6	Q607	G - 9
D207	F - 3	D539	B - 5	Q608	J - 6
D210	I - 5	D541	F - 5	Q609	J - 6
D211	I - 5	D573	F - 5	Q1210	H - 3
D212	I - 5	D601	I - 9	Q1211	H - 3
D228	E - 4	D602	J - 5	Q1230	B - 3
D236	D - 3	D604	F - 9	Q1231	B - 3
D239	D - 3	D608	F - 8	Q1232	B - 3
D402	E - 3	D610	J - 5	Q1233	C - 2
D403	B - 2	D611	G - 5	**IC'S**	
D404	I - 3	D612	G - 5	IC001	K - 2
D405	B - 2	D613	J - 6	IC002	M- 8
D406	B - 2	D614	K - 8	IC004	H - 2
D407	B - 2	D615	H - 5	IC401	I - 3
D408	B - 2	D618	H - 6	IC501	E-10
D410	C - 2	D619	H - 6	IC531	F- 4
D411	C - 3	D620	M - 5	IC601	F-10
D412	D - 3	D621	J - 5	IC602	F- 7
D413	C - 3	D622	H - 7	IC604	H- 5
D414	B - 2	D623	J - 5	IC608	L- 5
D418	B - 3	D625	H - 6	IC609	L- 6
D419	E - 2	D627	K - 7	IC1201	H- 4
D420	B - 2	D628	L - 7		
		D629	L - 7		

NOTE:
Portions of the circuit marked as shown are high voltage areas. Use care to prevent electric shock during inspection or repair.

~ A Printed Wiring Board Conductor side ~


~ C Board Semiconductor Voltages ~


Ref	Anode	Cathode	Ref	Anode	Cathode	Ref	Anode	Cathode
D701	0.7	0	D706	131.8	199.4	D710	0	2.6
D702	154.4	199.4	D707	136.7	199.4	D1801	0	8.0
D703	0	0	D708	0	3.1	D1802	0	3.8
D705	0	0.7	D709	0	3.0	D1803	0	4.2

~ C Board IC Voltages ~


Ref No	Pin No	Voltage (V)	Ref No	Pin No	Voltage (V)
IC701	1	3.0	IC1801	1	3.8
	2	2.6		2	3.8
	3	3.1		3	3.8
	4	0.7		4	0
	5	6.3		5	4.0
	6	199		6	4.0
	7	133.5		7	4.2
	8	154.4		8	8.0
	9	136.2			

~ C Board Waveforms ~

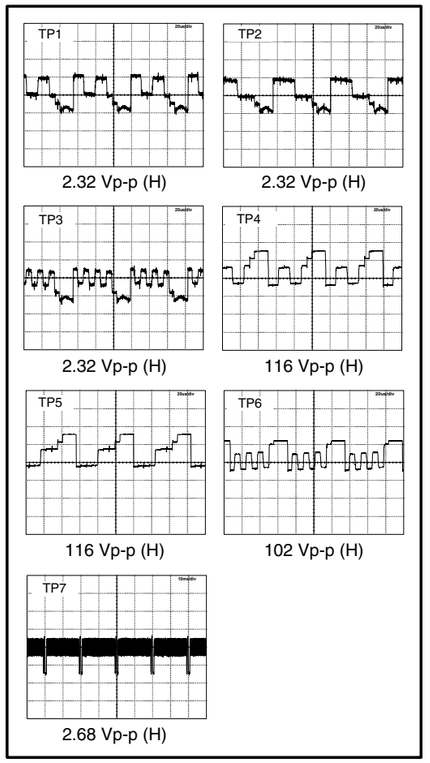

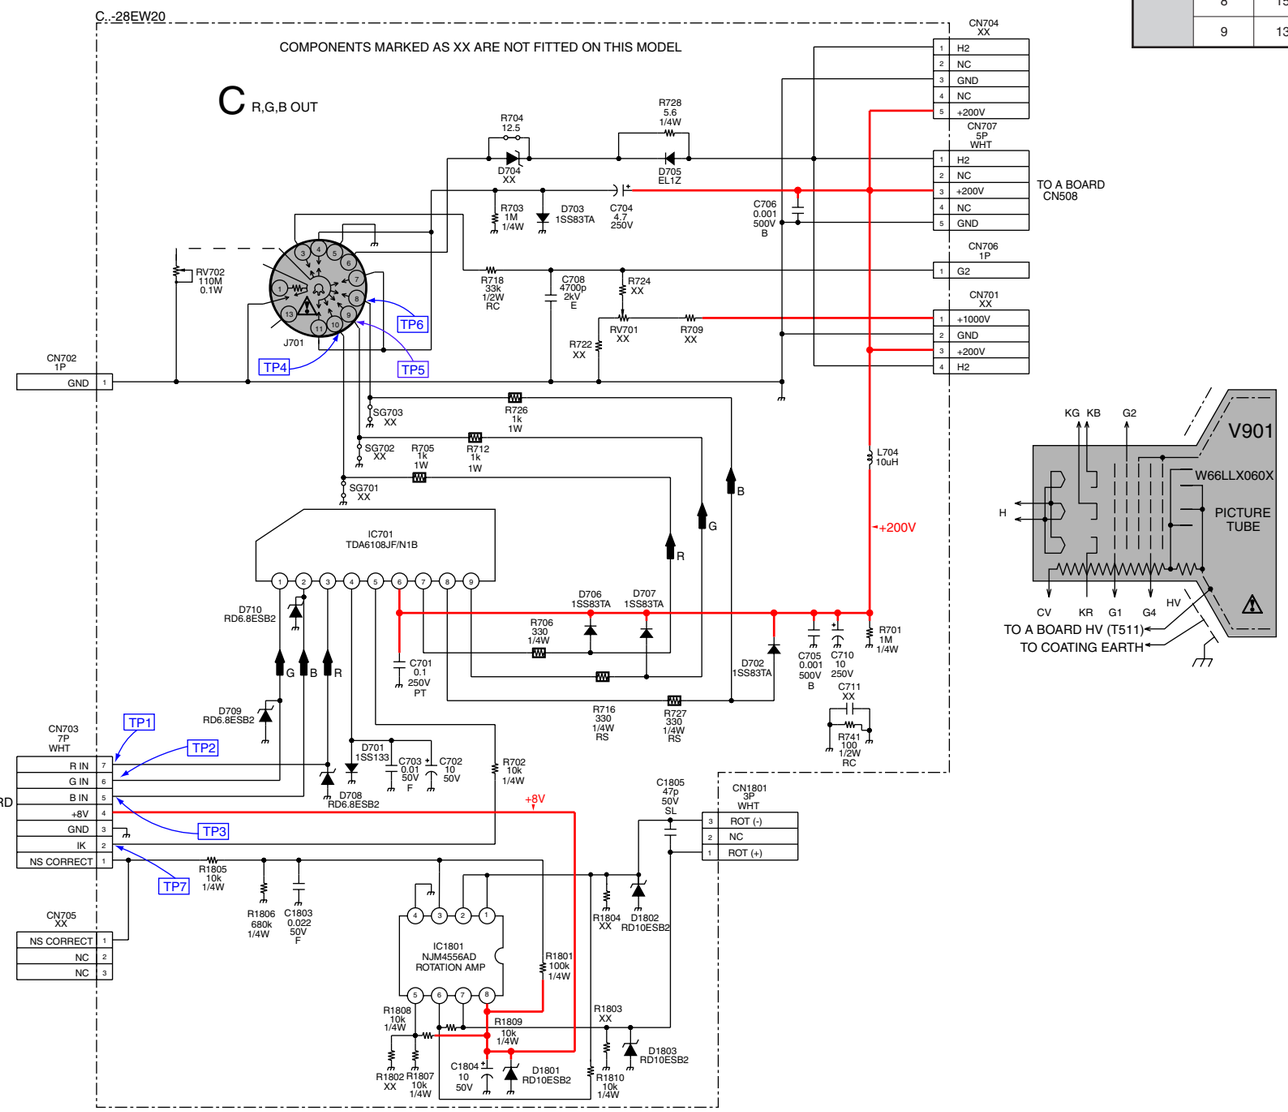


~ C Board Schematic Diagram [R-G-B Out] ~

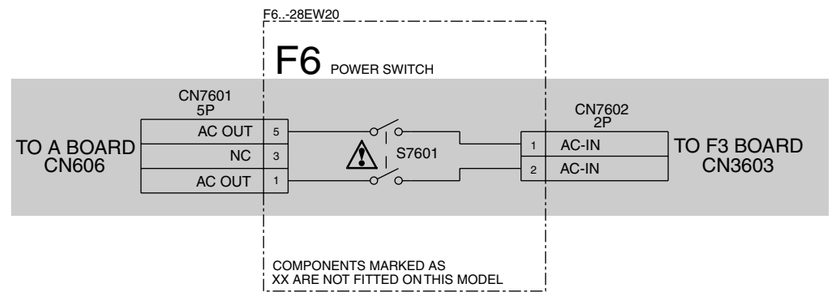


~ F6 Board Schematic Diagram [Power Switch] ~


~ F6 Printed Wiring Board Conductor side ~

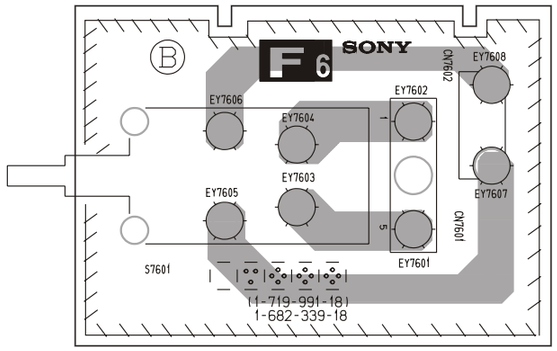


~ D2 Printed Wiring Board Conductor side ~

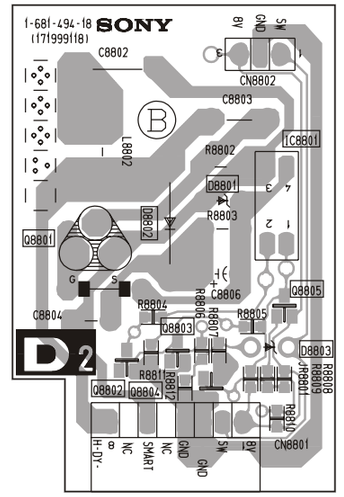

~ C Printed Wiring Board Conductor side ~

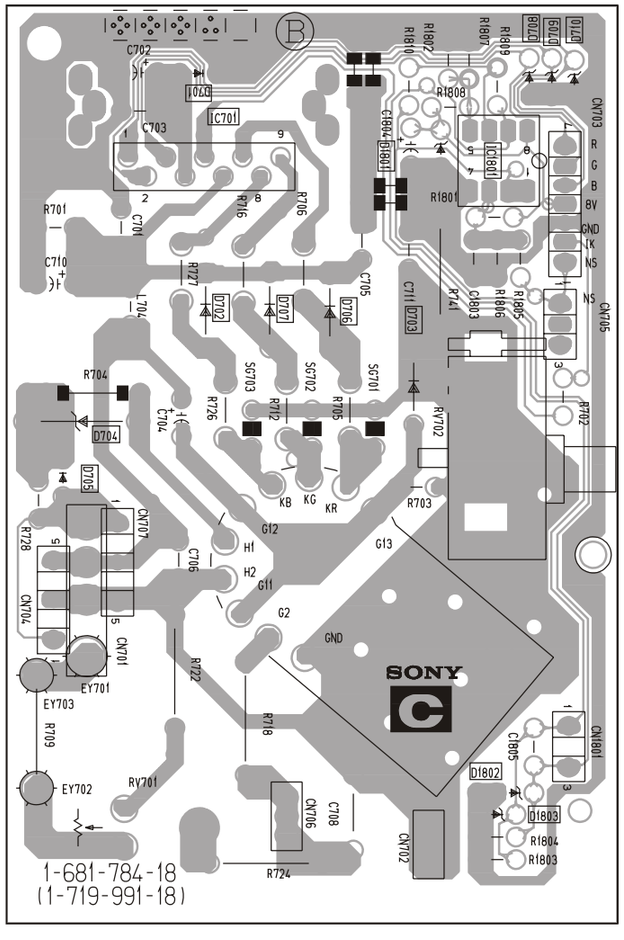

~ VM Printed Wiring Board Conductor side ~

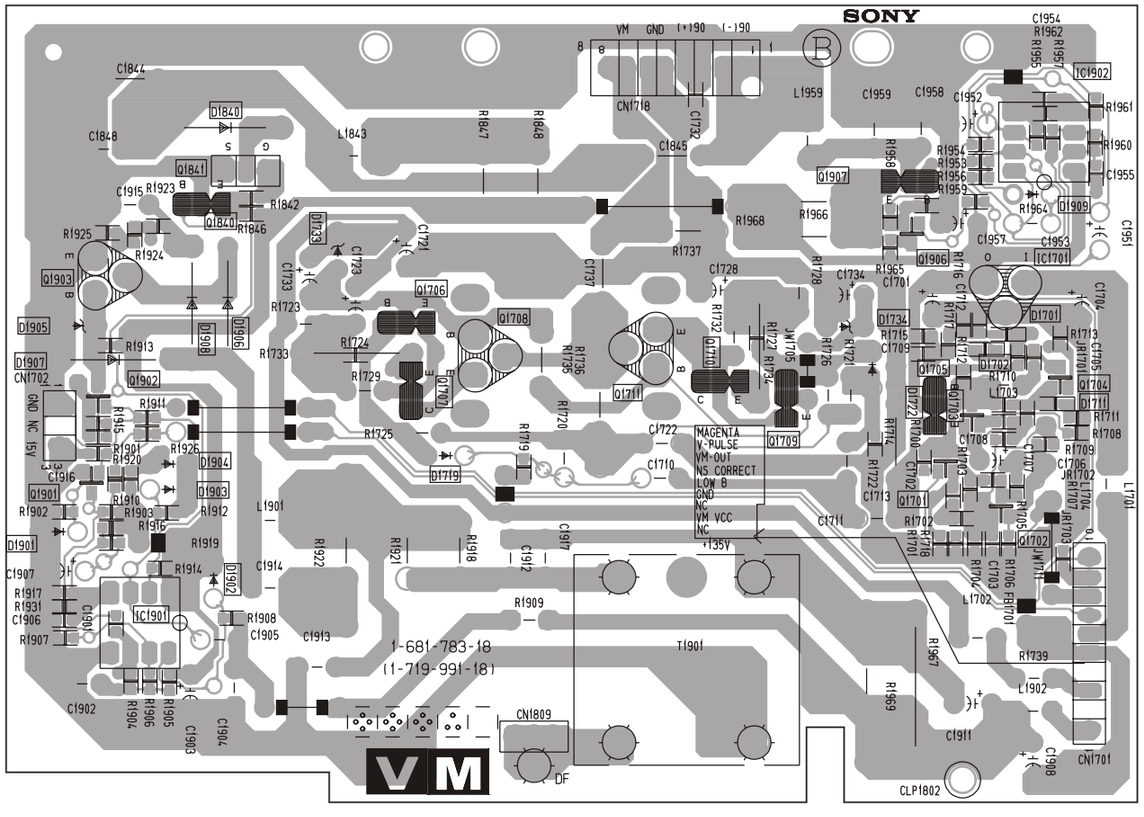

VM..-28EW20

VM DYNAMIC FOCUS AND DQP

TO A BOARD CN510

CN1701 9P WHT
MAGENTA 10
V-PULSE 9
NC 8
NS CORRECT 7
LOW B 6
GND 5
NC 4
VM VCC 3
NC 2
+135V 1

CN1702 XX
+15V PULSE 3
NC 2
GND 1

CN1718 8P
1 Q.P-
2 Q.P-
3 Q.P+
4 Q.P+
5 E
6 E
7 VM
8 VM

TO NECK ASSY

CN1809 1P
1 DF

IC1902 LM358N
IC1701 BA09T
IC1901 LA6393DLL
Q1840 2SA1175-HFE
Q1841 IRF620
Q1906 2SC2412K-R
Q1907 2SB734-34
Q1901 2SC2412K-R
Q1902 2SC2412K-R
Q1903 2SC3840K
D1909 1SS133
D1840 EL1Z
D1901 1SS133
D1902 1SS133
D1903 1SS133
D1904 1SS133
D1905 RD15ESB2
D1906 ERA38-06TP1
D1907 ERA38-06TP1
D1908 RU-3AM
T1901

COMPONENTS MARKED AS XX ARE NOT FITTED ON THIS MODEL

~ VM Board Schematic Diagram [Dynamic Focus and DQP] ~

D2..-28EW20

D2 SMART MODE DEFLECTION

TO A BOARD CN512

CN8801 8P
H DY- 8
NC 7
SMART 6
NC 5
GND 4
GND 3
SW 2
+8V 1


TO D3 BOARD CN2801

CN8802 3P
SW 1
GND 2
+8V 3


Q8801 2SK2518-01MR
IC8801 PC123FY2
Q8802 DTC144EKA
Q8803 DTC144EKA
Q8804 XX
Q8805 XX
D8801 MTZJ-9.1
D8802 EL1Z
D8803 MTZJ-4.7B

COMPONENTS MARKED AS XX ARE NOT FITTED ON THIS MODEL


~ D2 Board Schematic Diagram [Smart Mode Deflection] ~

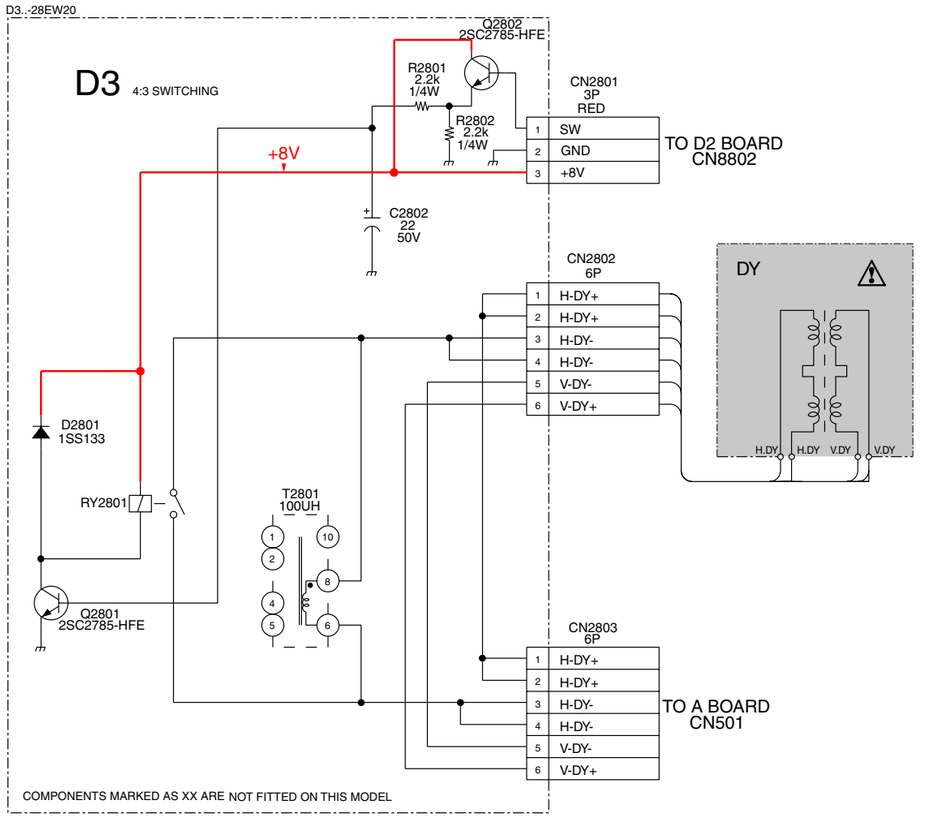


~ D3 Board Schematic Diagram [4:3 Switching] ~

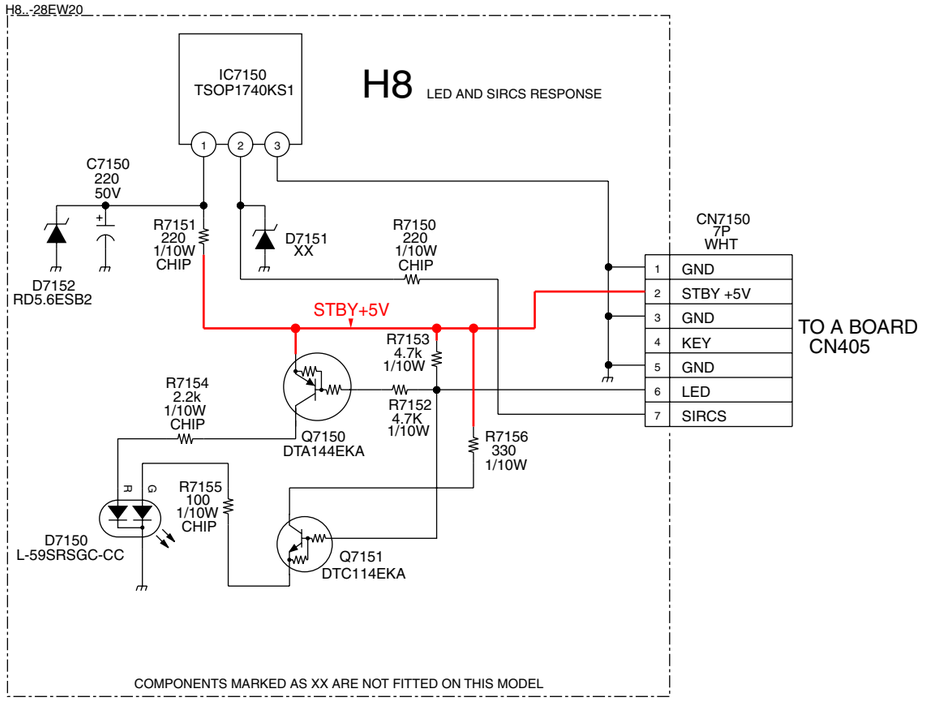

~ H8 Board Schematic Diagram [LED and SIRCS Response] ~

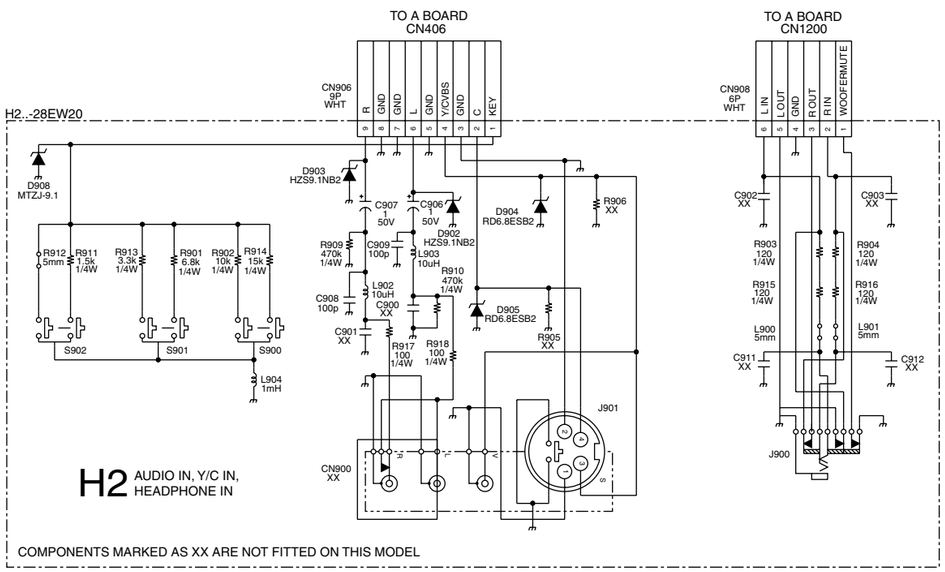


~ H2 Board Schematic Diagram[Audio In, Y/C In, Headphone In] ~

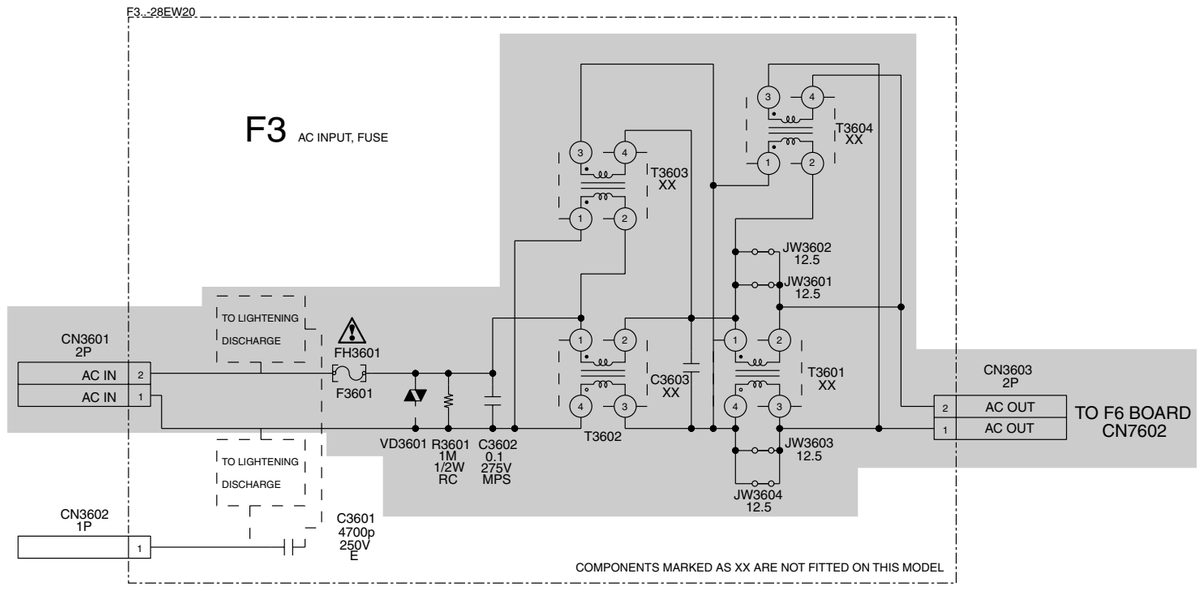


~ F3 Board Schematic Diagram [AC Input, Fuse] ~


~ H2 Printed Wiring Board Conductor side ~

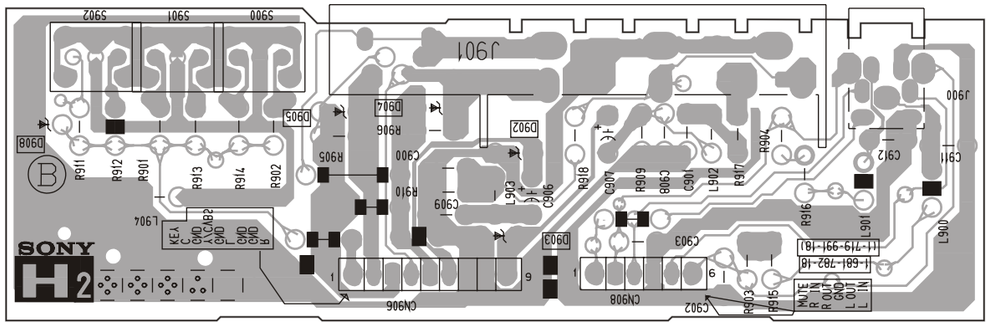


~ F3 Printed Wiring Board Conductor side ~

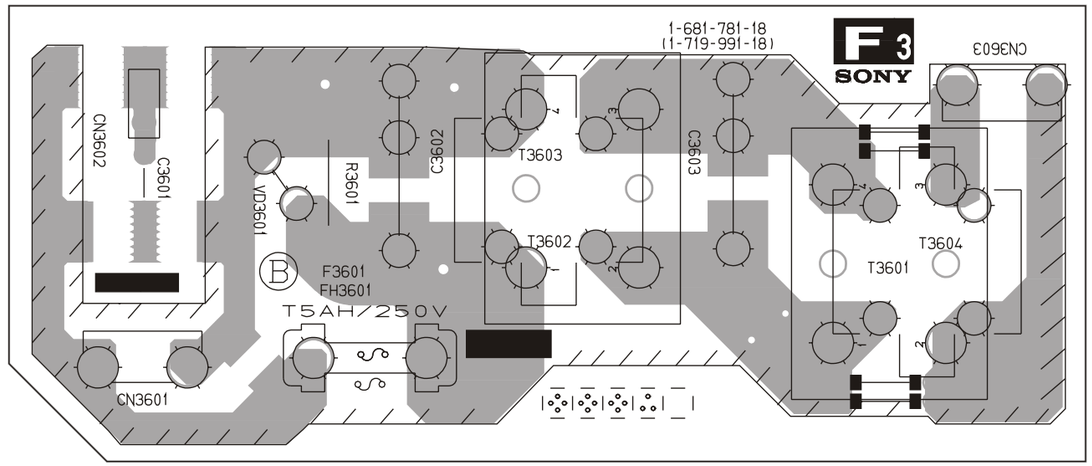

~ D3 Printed Wiring Board Conductor side ~

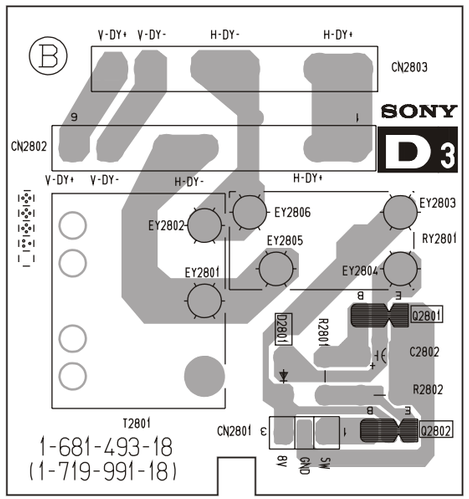


~ H8 Printed Wiring Board Conductor side ~

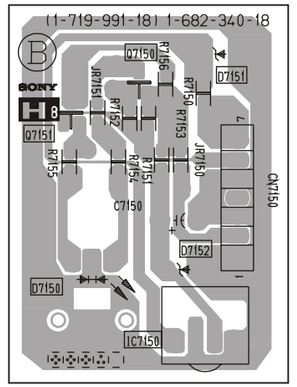


5-4. SEMICONDUCTORS

LM358N
LM393DT
LM393N
M5216P
TDA2822M
TEA2124

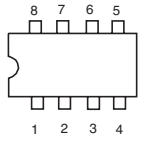


(TOP VIEW)

TDA9394H

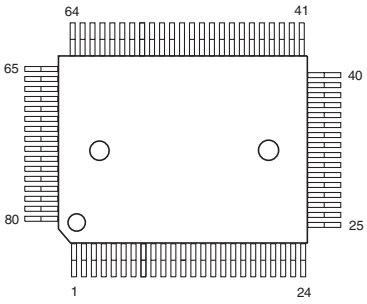


(MARKING SIDE VIEW)


IRF614-005
IRF614-037
IRF620




MSP3411G-PP-B9

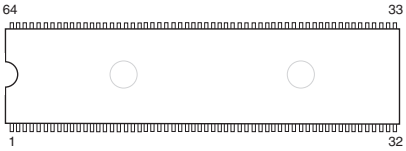


TOP209P


(TOP VIEW)


2SA933AS-QT
2SAG33ASQT
2SA933AS-RT
2SC1740S-RT
2SC2785-HFE




SE-135N
SE135N-LF4

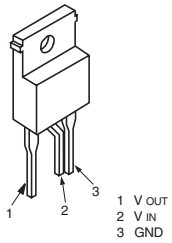


BF421-AMMO
2SA1091-O




2SC2785-HFE




STV9379

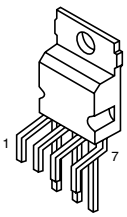


DTA144ESA
DTA144ESA
DTC114ESA
DTC114EKA-T146
DTC143TKA-T146
DTC144EKA-T-146R
R2SA1162-G
2SA1037AK-T146
2SC1623-L5L6
2SD601A-Q-TX
2SC1623-L5-L6
2SC2412K-QR
2SC2412K-T-146-QR




2SK2518-01MR
2SK2251-01-F19
2SK2640-01MR

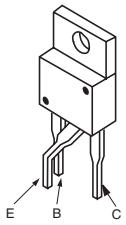


AK04-V1
AU-01Z-V1
BYD33G
BYD33G-AMMO
DINL20-TA
D1NL20U
DINL40-TA2
ERB44-06TP1
EGP20G
EG-1Z-V1
EL1Z
ERD28-06S
ERD28-06S
ERC06-15S
FMN-G12S
GP08D
RGP10GPKG23
RG15GPKG23
RG1CLF-B1
RU-3AM
RU3YX-LF-C4
RU3YX-V1
RU-4AM-T3
1SS292T-77




ERA38-06
ERA81-004TP1
ERA83-006
MTZJ-3.6A
MTZJ-T-77-2.2A
HZS9.1NB2
MTZJ-T-77-3.6B
MTZJ-4.7C
MTZJ-T-77-5.1B
MTZJ-T-77-5.6B
MTZJ-T-77-6.8A
MTZJ-T-77-8.2B
MTZJ-7.5B
MTZJ-T-77-9.1A
MTZJ-T-77-9.1B
MTZJ-T-77-10
MTZJ-T-72-10A
MTZJ-T-72-10B
MTZJ-T-77-15B
MTZJ-T-77-33A
MTZJ-33C
MTZJ-7.5B
P6KE200ASY
RD3.6ES-B2
RD3.9ES-B2
RD5.1ESB2
RD5.6ESB2
RD6.8ES-B2
RD7.5ESB2
RD9.1ES-B3
RD10ESB2
RD15ESB2
1SS119-25
1SS133T-77



SLA-570KT3F

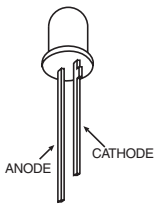



DAN202K
DAN202K-T146
MA8330-TX
DTZ33B




1SS355TE-17
DTZ-TT11-6.8B
RD12SB2
UDZS-TE-17-4.7B
UDZSTE-175.6B
UDZS-TE-17-6.8B
UDZSTE-179.1B
UDZ-TE-17-22B

D4SB60L

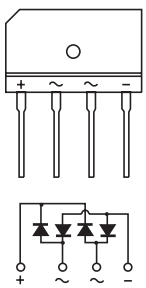

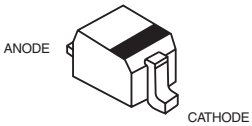


UF4005PKG23

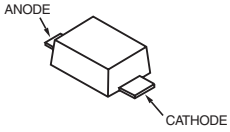


5-5 IC BLOCK DIAGRAMS


A BOARD IC501 STV9379

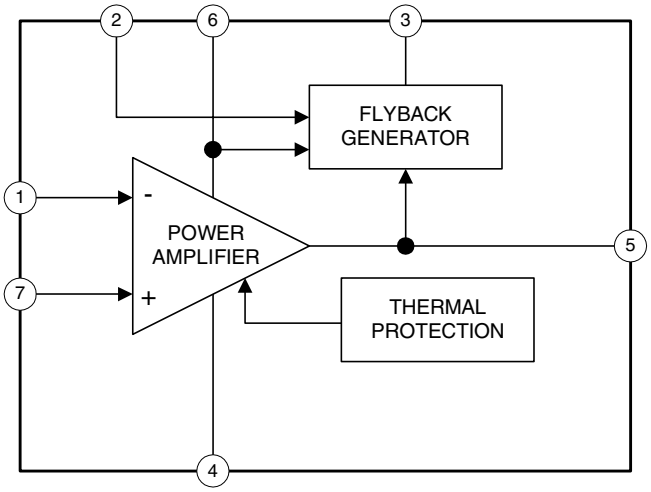


A BOARD IC401/IC531 LM393DT

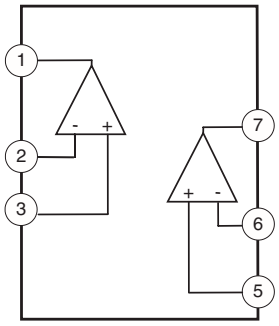

A BOARD IC601 MCZ3001D

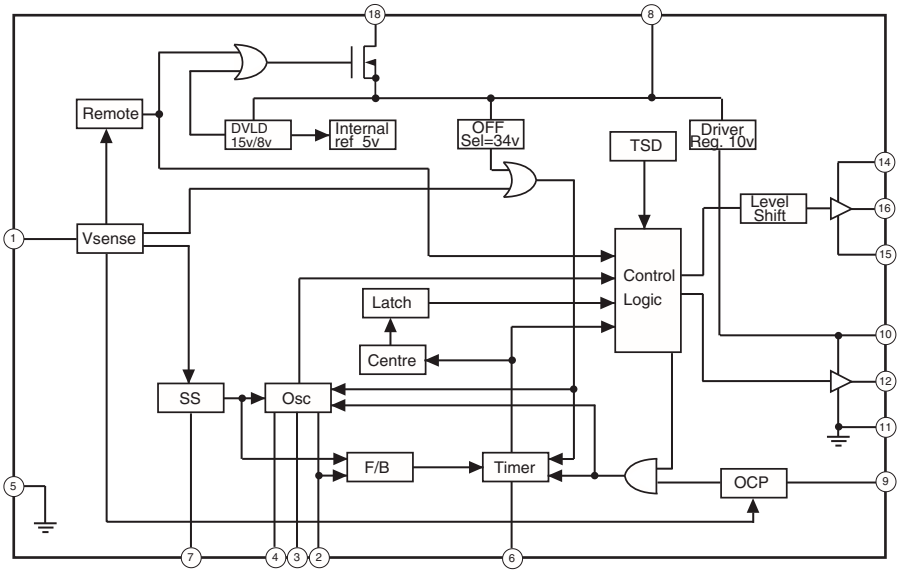

A BOARD IC1201 TDA7495S

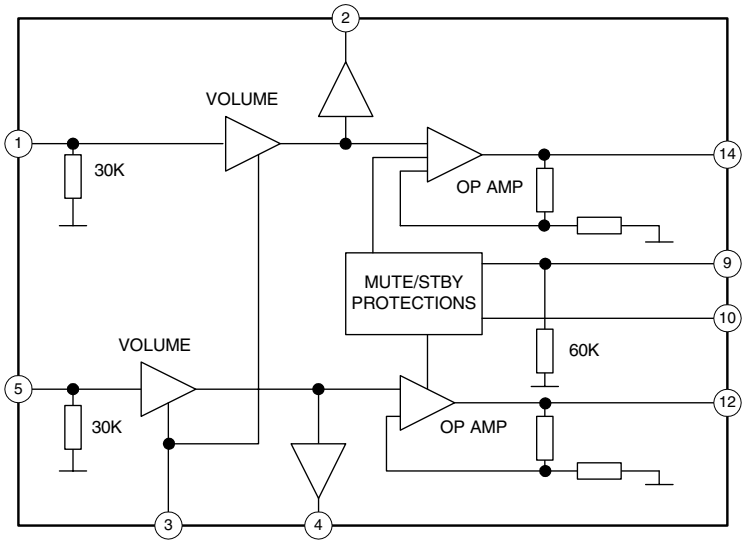

SECTION 6
EXPLODED VIEWS


Note : Les composants indentifies par une trame et par une marque ⚠ sonte d'une importance critique pour la securite. Ne les remplacer que par des pieces du numero specifie.

Note : The components identified by shading and marked ⚠ are critical for safety. Replace only with the part numbers specified in the parts list.

NOTE :

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remarks column.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.


6-1. CHASSIS

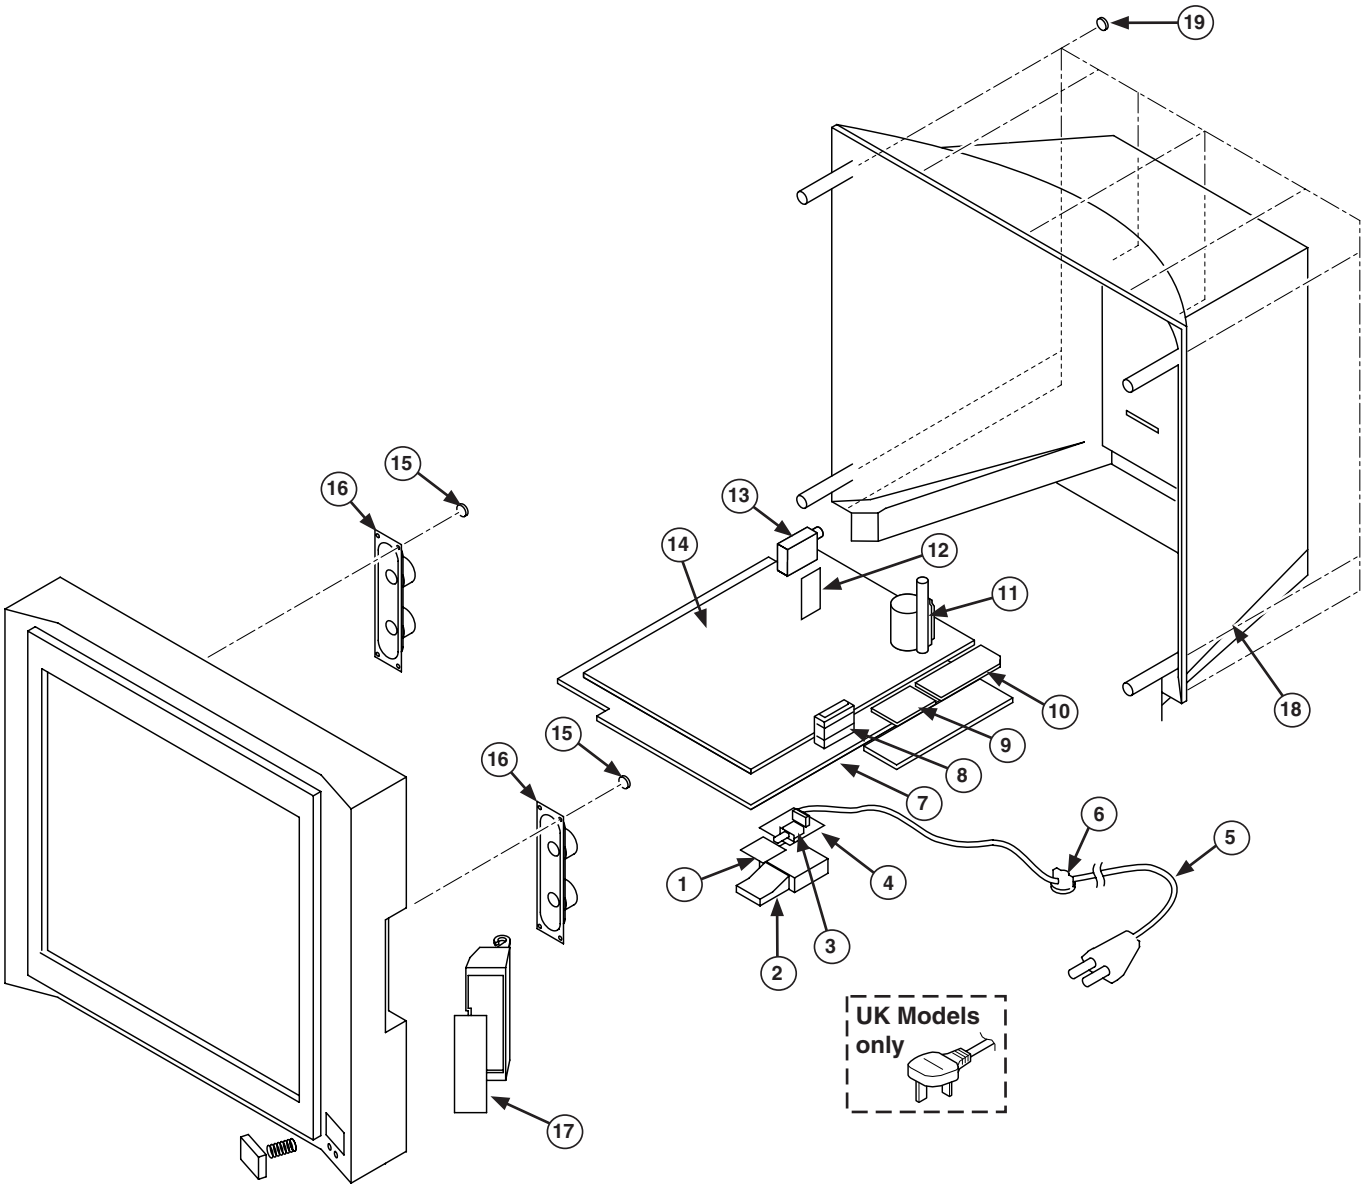

REF.NO.		PART.NO	DESCRIPTION	REMARK
1		*A-1646-245-A	H8 BOARD, COMPLETE	
2		*4-205-697-01	H/F BRACKET	
3	⚠	1-571-433-21	SWITCH, PUSH (AC POWER)	
4		*A-1624-106-A	F6 BOARD, COMPLETE	
5	⚠	1-765-286-11	CORD, POWER (KV-28EW20B/28EW20E)	
	⚠	1-776-204-11	CORD, POWER (FILTER) (KV-28EW20U)	
6		*4-202-531-01	AC CORD LOCK (SC)	
7		*4-206-048-12	BRACKET, MAIN	
8		1-424-733-11	COIL, PFC CHOKE 65MMH	
9		*A-1640-431-A	D3 BOARD, COMPLETE	
10		*A-1624-100-A	F3 BOARD, COMPLETE	
11	⚠	1-453-308-41	TRANSFORMER ASSY, FLYBACK (NX-4521//Z2B4)	

REF.NO.	PART.NO	DESCRIPTION	REMARK
12	*A-1642-285-A	D2 BOARD, COMPLETE	
13	1-693-555-14	FRONTEND (TUNER+IF) (KV-28EW20B)	
	1-693-556-14	FRONTEND (TUNER+IF) (KV-28EW20E)	
	1-693-557-14	FRONTEND (TUNER+IF) (KV-28EW20U)	
14	*A-1300-897-A	A BOARD, COMPLETE (KV-28EW20B)	
	*A-1300-896-A	A BOARD, COMPLETE (KV-28EW20E)	
	*A-1300-952-A	A BOARD, COMPLETE (KV-28EW20U)	
15	4-039-358-01	SCREW (4x16), (+) BV TAPPING	
16	1-529-408-11	SPEAKER (4.2x24CM)	
17	*A-1646-242-A	H2 BOARD, COMPLETE	
18	4-205-700-41	REAR COVER	
19	4-039-358-01	SCREW (4x16), (+) BV TAPPING	

6-2. PICTURE TUBE

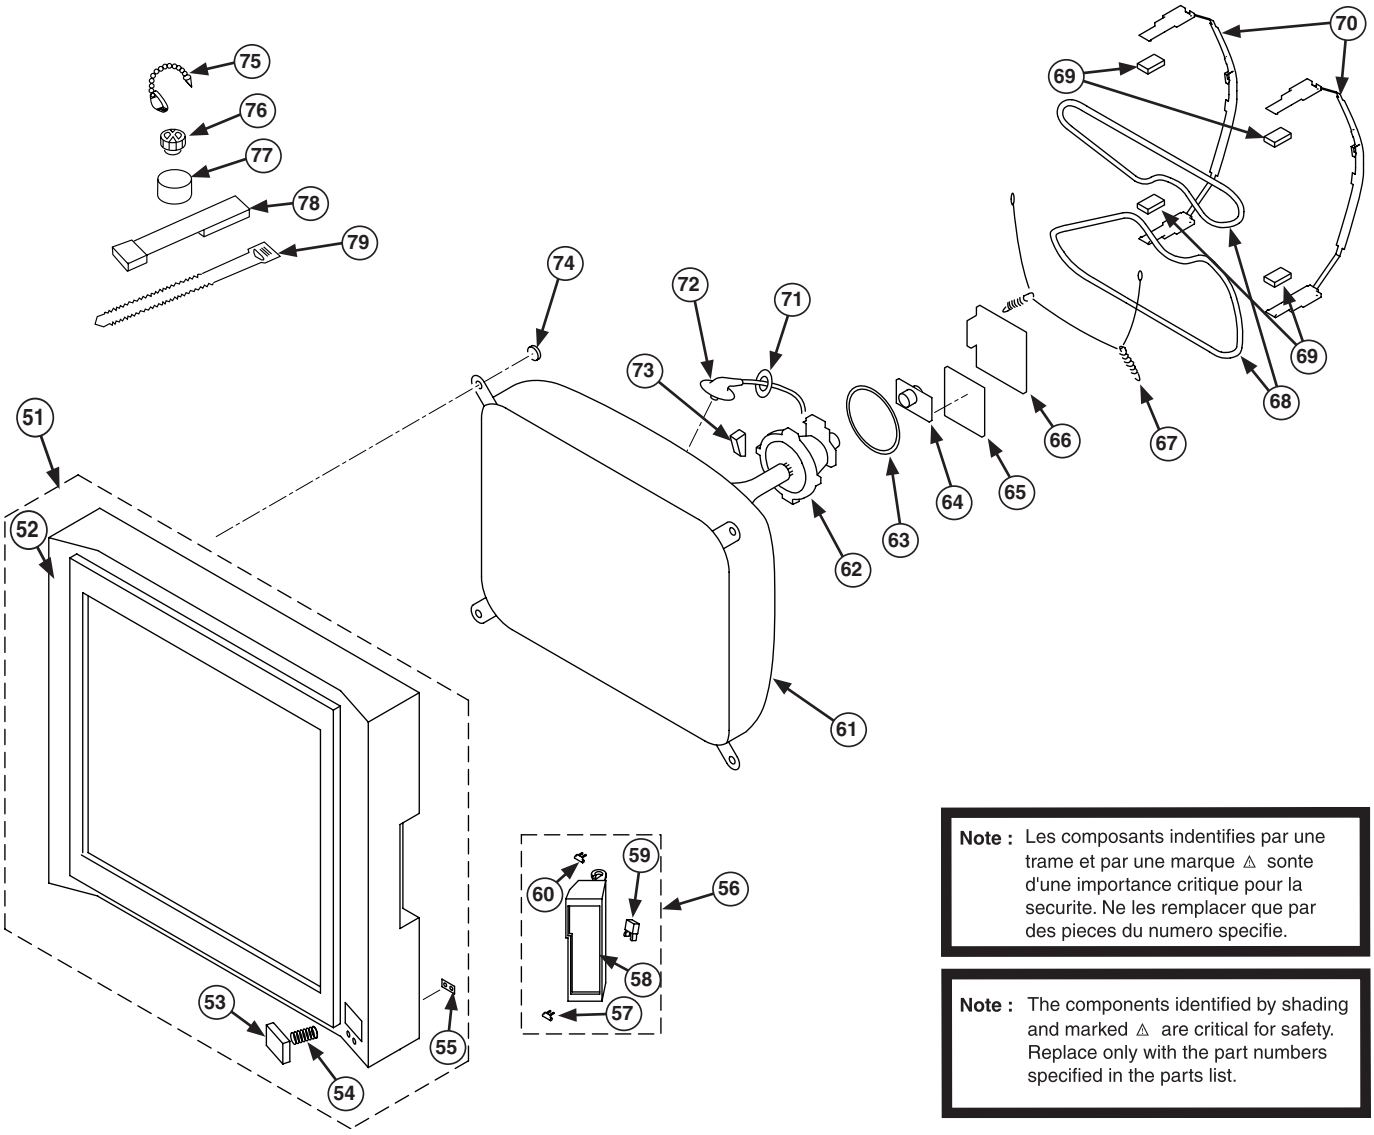

Note : Les composants indentifies par une trame et par une marque ⚠ sonte d'une importance critique pour la securite. Ne les remplacer que par des pieces du numero specifie.

Note : The components identified by shading and marked ⚠ are critical for safety. Replace only with the part numbers specified in the parts list.

REF.NO.		PART.NO	DESCRIPTION	REMARK
51		*X-4040-352-2	BEZNET ASSY	52-55
52		*4-205-701-41	BEZNET	
53		4-205-699-03	POWER BUTTON	
54		4-202-964-11	SPRING	
55		4-205-698-02	GUIDE, LIGHT	
56		*X-4040-409-3	DOOR ASSY	57-60
57		4-047-464-01	CATCHER, PUSH	
58		4-205-696-22	DOOR	
59		4-205-682-01	DAMPER	
60		4-205-743-01	SPRING, TORSION	
61	⚠	8-735-099-05	PICTURE TUBE (W66LLX060X)	
62	⚠	8-451-521-31	DEFLECTION YOKE (Y28RVC3-L2)	
63		1-452-896-11	COIL, NA ROTATION (RT-200)	
64	⚠	8-453-011-11	NECK ASSY, (NA299-M)	
65		*A-1401-952-A	VM BOARD, COMPLETE	
66		*A-1638-156-A	C BOARD, COMPLETE	
67		4-200-433-01	SPRING, EXTENSION	
68	⚠	1-416-466-21	COIL, DEMAGNETIC	
69		*4-203-390-71	CUSHION, DGC	
70		*4-057-303-01	HOLDER, DGC	
71		*4-202-693-01	HOLDER, HV CABLE	
72	⚠	1-251-946-11	CAP ASSY, HIGH VOLTAGE	
73		4-203-658-01	SPACER, DY	
74		4-036-188-01	SCREW, SELF TAPPING	
75		4-308-870-00	CLIP, LEAD WIRE	
76		1-452-094-00	MAGNET, ROTATABLE DISK; 15MM Ø	
77		1-452-032-00	MAGNET, DISK; 10MM Ø	
78		X-4387-214-1	PERMALLOY ASSY, CORRECTION	
79		3-701-007-00	BAND, BINDING	

SECTION 7
ELECTRICAL PARTS LIST

PARTS LISTING TABLE OF CONTENTS

		Page
A BOARD COMMON Parts List :	Parts common to all models listed in this manual	43
A BOARD VARIANT Parts List :	Parts that belong only to the model specified	
Model		
KV-28EW20B	.....	50
KV-28EW20E	.....	50
KV-28EW20U	.....	50
F3 BOARD COMPLETE Parts List :	.....	50
F6 BOARD COMPLETE Parts List :	.....	51
C BOARD COMPLETE Parts List :	.....	51
D3 BOARD COMPLETE Parts List :	.....	51
D2 BOARD COMPLETE Parts List :	.....	52
VM BOARD COMPLETE Parts List :	.....	52
H2 BOARD COMPLETE Parts List :	.....	53
H8 BOARD COMPLETE Parts List :	.....	54
MISCELLANEOUS :	.....	55
ACCESSORIES AND PACKAGING MATERIALS :	.....	55
REMOTE COMMANDER :	.....	55

Note : Refer to the designated variant parts list when seeking a part indicated by an asterisk (*)
Parts indicated (XX) on the Schematic Diagram are not used in this model and therefore do not appear in the Parts List.

REF.NO.	PART.NO	DESCRIPTION	REMARK

*** A-1300-897-A A Board, Complete (KV-28EW20B)**
*** A-1300-896-A A Board, Complete (KV-28EW20E)**
*** A-1300-952-A A Board, Complete (KV-28EW20U)**

A Board Common Parts

	4-382-854-01	SCREW (M3X8), P, SW (+)	
	4-382-854-01	SCREW (M3X8), P, SW (+)	
	4-382-854-01	SCREW (M3X8), P, SW (+)	
		< CAPACITOR >	
C002	1-163-233-91	CERAMIC CHIP 18PF	5.00% 50V
C004	1-163-037-11	CERAMIC CHIP 0.022UF	10.00% 50V
C005	1-126-916-11	ELECT 1000UF	20.00% 6.3V
C006	1-163-233-91	CERAMIC CHIP 18PF	5.00% 50V
C009	1-164-004-11	CERAMIC CHIP 0.1UF	10.00% 25V
C010	1-164-005-11	CERAMIC CHIP 0.47UF	25V
C011	1-163-005-91	CERAMIC CHIP 470PF	10.00% 50V
C012	1-126-963-11	ELECT 4.7UF	20.00% 50V
C013	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C014	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C015	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C016	1-216-295-91	SHORT CHIP 0	
C018	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C020	1-164-004-11	CERAMIC CHIP 0.1UF	10.00% 25V
C021	1-163-037-11	CERAMIC CHIP 0.022UF	10.00% 50V
C022	1-126-935-11	ELECT 470UF	20.00% 16V
C025	1-126-935-11	ELECT 470UF	20.00% 16V
C026	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C027	1-164-004-11	CERAMIC CHIP 0.1UF	10.00% 25V
C028	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C030	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C033	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C035	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C036	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C037	1-136-244-11	FILM 0.1UF	2.00% 50V
C038	1-163-038-91	CERAMIC CHIP 0.1UF	25V
C039	1-164-505-11	CERAMIC CHIP 2.2UF	16V
C040	1-163-017-00	CERAMIC CHIP 0.0047UF	10.00% 50V
C042	1-162-625-11	CERAMIC CHIP 0.0047UF	5.00% 50V
C043	1-163-037-11	CERAMIC CHIP 0.022UF	10.00% 50V
C044	1-164-346-11	CERAMIC CHIP 1UF	16V
C045	1-164-489-11	CERAMIC CHIP 0.22UF	10.00% 16V
C046	1-163-037-11	CERAMIC CHIP 0.022UF	10.00% 50V
C047	1-126-935-11	ELECT 470UF	20.00% 16V
C053	1-164-004-11	CERAMIC CHIP 0.1UF	10.00% 25V
C055	1-126-960-11	ELECT 1UF	20.00% 50V
C100	1-126-933-11	ELECT 100UF	20.00% 16V
C103	1-126-965-91	ELECT 22UF	20.00% 50V
C105	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C106	1-126-933-11	ELECT 100UF	20.00% 16V
C112	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C204	1-115-340-11	CERAMIC CHIP 0.22UF	10.00% 25V
C211	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C213	1-216-295-91	SHORT CHIP 0	
C214	1-163-253-11	CERAMIC CHIP 120PF	5.00% 50V
C215	1-163-084-00	CERAMIC CHIP 1.5PF	0.25PF 50V
C216	1-163-117-00	CERAMIC CHIP 100PF	5.00% 50V
C217	1-163-084-00	CERAMIC CHIP 1.5PF	0.25PF 50V
C218	1-216-295-91	SHORT CHIP 0	
C221	1-163-109-00	CERAMIC CHIP 47PF	5.00% 50V
C222	1-163-117-00	CERAMIC CHIP 100PF	5.00% 50V
C223	1-126-965-91	ELECT 22UF	20.00% 50V
C224	1-163-117-00	CERAMIC CHIP 100PF	5.00% 50V
C225	1-126-157-11	ELECT 10UF	20.00% 16V
C226	1-164-004-11	CERAMIC CHIP 0.1UF	10.00% 25V
C227	1-163-117-00	CERAMIC CHIP 100PF	5.00% 50V
C228	1-126-965-91	ELECT 22UF	20.00% 50V
C229	1-163-017-00	CERAMIC CHIP 0.0047UF	10.00% 50V
C230	1-164-336-11	CERAMIC CHIP 0.33UF	25V
C232	1-126-157-11	ELECT 10UF	20.00% 16V
C233	1-164-004-11	CERAMIC CHIP 0.1UF	10.00% 25V
C234	1-107-823-11	CERAMIC CHIP 0.47UF	10.00% 16V
C235	1-164-005-11	CERAMIC CHIP 0.47UF	25V
C236	1-126-157-11	ELECT 10UF	20.00% 16V
C237	1-126-965-91	ELECT 22UF	20.00% 50V
C238	1-163-117-00	CERAMIC CHIP 100PF	5.00% 50V
C239	1-126-157-11	ELECT 10UF	20.00% 16V
C242	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C245	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C401	1-126-964-11	ELECT 10UF	20.00% 50V
C404	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C405	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C407	1-164-346-11	CERAMIC CHIP 1UF	16V
C408	1-127-715-91	CERAMIC CHIP 0.22UF	10% 16V
C409	1-126-964-11	ELECT 10UF	20.00% 50V
C410	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C411	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C412	1-164-346-11	CERAMIC CHIP 1UF	16V
C414	1-164-346-11	CERAMIC CHIP 1UF	16V
C415	1-164-346-11	CERAMIC CHIP 1UF	16V
C416	1-126-964-11	ELECT 10UF	20.00% 50V
C417	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C418	1-164-346-11	CERAMIC CHIP 1UF	16V
C419	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C423	1-127-715-91	CERAMIC CHIP 0.22UF	10% 16V
C424	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C426	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C427	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C428	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C429	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V

Note : The components identified by shading and marked ⚠ are critical for safety. Replace only with the part numbers specified in the parts list.

A

REF.NO.		PART.NO	DESCRIPTION			REMARK
C430		1-102-114-00	CERAMIC	470PF	10.00%	50V
C435		1-163-017-00	CERAMIC CHIP	0.0047UF	10.00%	50V
C436		1-163-017-00	CERAMIC CHIP	0.0047UF	10.00%	50V
C437		1-164-346-11	CERAMIC CHIP	1UF		16V
C438		1-164-346-11	CERAMIC CHIP	1UF		16V
C445		1-126-964-11	ELECT	10UF	20.00%	50V
C446		1-126-964-11	ELECT	10UF	20.00%	50V
C447		1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C449		1-216-025-11	RES-CHIP	100 5%	1/10W	
C501		1-126-968-11	ELECT	100UF	20.00%	50V
C502		1-163-038-91	CERAMIC CHIP	0.1UF		25V
C503		1-126-968-11	ELECT	100UF	20.00%	50V
C504		1-106-220-00	MYLAR	0.1UF	10.00%	100V
C505		1-137-194-81	FILM	0.47UF	5.00%	50V
C506		1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C509		1-107-364-11	MYLAR	0.01UF	10.00%	200V
C510		1-163-005-91	CERAMIC CHIP	470PF	10.00%	50V
C513		1-107-662-11	ELECT	22UF	20.00%	350V
C515		1-104-666-11	ELECT	220UF	20.00%	25V
C517		1-115-781-11	ELECT	220UF	20.00%	25V
C518		1-106-375-12	MYLAR	0.022UF	5.00%	200V
C519		1-163-275-11	CERAMIC CHIP	0.001UF	5.00%	50V
C520		1-163-038-91	CERAMIC CHIP	0.1UF		25V
C522		1-136-170-00	FILM	0.27UF	5.00%	50V
C524		1-163-037-11	CERAMIC CHIP	0.022UF	10.00%	50V
C525		1-123-024-21	ELECT	33UF		160V
C531		1-126-964-11	ELECT	10UF	20.00%	50V
C532		1-163-037-11	CERAMIC CHIP	0.022UF	10.00%	50V
C536		1-115-521-11	FILM	0.82UF	5.00%	250V
C537		1-102-002-00	CERAMIC	680PF	10.00%	500V
C538		1-165-319-11	CERAMIC CHIP	0.1UF		50V
C539		1-111-230-11	ELECT	1UF	20.00%	160V
C540		1-136-206-11	MYLAR	0.033UF	5.00%	630V
C541		1-106-383-00	MYLAR	0.047UF	10.00%	200V
C542		1-162-115-00	CERAMIC	330PF	10.00%	2KV
C543		1-162-134-11	CERAMIC	470PF	10.00%	2KV
C545		1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C546		1-130-895-00	FILM	0.056UF	5.00%	400V
C547		1-115-521-11	FILM	0.82UF	5.00%	250V
C548		1-162-134-11	CERAMIC	470PF	10.00%	2KV
C550		1-107-638-11	ELECT	33UF	20.00%	160V
C552		1-102-212-00	CERAMIC	820PF	10.00%	500V
C553		1-137-417-11	MYLAR	0.015UF	10.00%	100V
C555		1-117-652-11	FILM	22000PF	3.00%	1.2KV
C570		1-126-961-11	ELECT	2.2UF	20.00%	50V
C580		1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C582		1-163-259-91	CERAMIC CHIP	220PF	5.00%	50V
C583		1-163-009-91	CERAMIC CHIP	0.001UF	10.00%	50V
C600	⚠	1-119-888-51	CERAMIC	2200PF	20.00%	250V
C601	⚠	1-137-999-11	FILM	0.1UF		275V
C603	⚠	1-119-899-51	CERAMIC	1000PF	10.00%	250V
C604	⚠	1-119-899-51	CERAMIC	1000PF	10.00%	250V
C605		1-115-785-11	ELECT	470UF	20.00%	25V
C606		1-117-751-11	ELECT(BLOCK)	220UF	20.00%	450V
C607		1-126-964-11	ELECT	10UF	20.00%	50V
C608		1-126-963-11	ELECT	4.7UF	20.00%	50V
C610		1-126-941-11	ELECT	470UF	20.00%	25V
C611		1-163-009-91	CERAMIC CHIP	0.001UF	10.00%	50V
C612	⚠	1-104-571-91	CERAMIC	0.0015UF	10.00%	2KV
C613	⚠	1-104-571-91	CERAMIC	0.0015UF	10.00%	2KV
C614	⚠	1-161-964-51	CERAMIC	0.0047UF		250V
C615		1-115-339-11	CERAMIC CHIP	0.1UF	10.00%	50V
C616		1-165-127-11	CERAMIC	470PF	10.00%	500V
C617		1-165-127-11	CERAMIC	470PF	10.00%	500V
C618		1-126-949-11	ELECT	220UF	20.00%	35V
C619		1-165-127-51	CERAMIC	470PF	10.00%	500V
C620		1-137-990-21	FILM	33000PF	3%	800V
C621		1-165-127-51	CERAMIC	470PF	10.00%	500V
C622	⚠	1-104-571-91	CERAMIC	0.0015UF	10.00%	2KV
C623	⚠	1-104-571-91	CERAMIC	0.0015UF	10.00%	2KV
C624		1-126-935-11	ELECT	470UF	20.00%	16V
C626		1-126-967-11	ELECT	47UF	20.00%	50V
C627		1-126-964-11	ELECT	10UF	20.00%	50V
C628		1-126-963-11	ELECT	4.7UF	20.00%	50V
C629		1-165-127-11	CERAMIC	470PF	10.00%	500V
C630		1-107-641-11	ELECT	220UF	20.00%	160V
C631		1-126-942-61	ELECT	1000UF	20.00%	25V
C632		1-126-964-11	ELECT	10UF	20.00%	50V
C633		1-163-009-91	CERAMIC CHIP	0.001UF	10.00%	50V
C634		1-128-562-11	ELECT	47UF	20.00%	100V
C635		1-136-165-00	FILM	0.1UF	5.00%	50V
C636		1-136-479-11	FILM	0.001UF	5.00%	100V
C637		1-126-967-11	ELECT	47UF	20.00%	50V
C638		1-107-679-91	ELECT	10UF	20.00%	450V
C639		1-104-665-11	ELECT	100UF	20.00%	25V
C640		1-126-947-11	ELECT	47UF	20.00%	35V
C641		1-115-785-11	ELECT	470UF	20.00%	25V
C642		1-104-665-11	ELECT	100UF	20.00%	25V
C643		1-165-127-11	CERAMIC	470PF	10.00%	500V
C645		1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C648		1-125-782-91	CERAMIC	4700PF	10.00%	1KV
C649		1-163-038-91	CERAMIC CHIP	0.1UF		25V
C657		1-126-952-11	ELECT	1000UF	20.00%	35V
C1201		1-126-952-11	ELECT	1000UF	20.00%	35V
C1202		1-126-959-11	ELECT	0.47UF	20.00%	50V
C1203		1-535-303-00	LEAD,JUMPER (5.0MM)			
C1207		1-126-960-11	ELECT	1UF	20.00%	50V
C1208		1-126-953-11	ELECT	2200UF	20.00%	35V
C1209		1-163-033-91	CERAMIC CHIP	0.022UF		50V
C1210		1-126-960-11	ELECT	1UF	20.00%	50V

Note : The components identified by shading and marked ⚠ are critical for safety. Replace only with the part numbers specified in the parts list.

A

REF.NO.	PART.NO	DESCRIPTION	REMARK
C1211	1-163-033-91	CERAMIC CHIP 0.022UF	50V
C1213	1-164-346-11	CERAMIC CHIP 1UF	16V
C1215	1-126-952-11	ELECT 1000UF	20.00% 35V
C1218	1-109-982-11	CERAMIC CHIP 1UF	10.00% 10V
C1219	1-104-666-11	ELECT 220UF	20.00% 25V
C1221	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V
C1228	1-126-952-11	ELECT 1000UF	20.00% 35V
C1229	1-163-001-11	CERAMIC CHIP 220PF	10.00% 50V
C1230	1-163-001-11	CERAMIC CHIP 220PF	10.00% 50V
C1231	1-163-001-11	CERAMIC CHIP 220PF	10.00% 50V
C1232	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V
C1235	1-126-960-11	ELECT 1UF	20.00% 50V
C1236	1-126-960-11	ELECT 1UF	20.00% 50V
		< CONNECTOR >	
CN001	*1-816-976-51	PLUG, CONNECTOR 5P	
CN003	*1-564-510-11	PLUG, CONNECTOR 7P	
CN405	*1-564-510-11	PLUG, CONNECTOR 7P	
CN406	*1-564-512-11	PLUG, CONNECTOR 9P	
CN501	1-580-798-11	CONNECTOR PIN (DY)	
CN506	1-695-915-11	TAB (CONTACT)	
CN508	*1-564-508-11	PLUG, CONNECTOR 5P	
CN509	1-695-915-11	TAB (CONTACT)	
CN510	1-691-771-11	PLUG (MICRO CONNECTOR) 9P	
CN512	*1-770-723-11	CONNECTOR, BOARD TO BOARD 8P	
CN602 ⚠	1-508-765-00	PIN, CONNECTOR (5MM PITCH) 3P	
CN603 ⚠	*1-508-786-00	PIN, CONNECTOR (5MM PITCH) 2P	
CN605 ⚠	*1-691-960-11	PIN, CONNECTOR (PC BOARD) 3P	
CN606 ⚠	*1-695-292-11	PIN, CONNECTOR (POWER)	
CN1200	*1-564-509-11	PLUG, CONNECTOR 6P	
CN1201	*1-564-507-11	PLUG, CONNECTOR 4P	
CN1202	*1-564-506-11	PLUG, CONNECTOR 3P	
		< DIODE >	
D001	8-719-069-55	DIODE UDZSTE-175.6B	
D002	8-719-069-55	DIODE UDZSTE-175.6B	
D003	8-719-109-69	DIODE RD3.6ESB2	
D005	8-719-929-15	DIODE HZS9.1NB2	
D006	8-719-109-89	DIODE RD5.6ESB2	
D007	8-719-069-55	DIODE UDZSTE-175.6B	
D008	8-719-074-43	DIODE BAS316-115	
D010	8-719-074-43	DIODE BAS316-115	
D011	8-719-074-43	DIODE BAS316-115	
D012	8-719-929-15	DIODE HZS9.1NB2	
D013	8-719-109-69	DIODE RD3.6ESB2	
D014	1-216-295-91	SHORT CHIP 0	
D016	8-719-109-89	DIODE RD5.6ESB2	
D018	8-719-109-69	DIODE RD3.6ESB2	
D019	8-719-978-33	DIODE DTZ-TT11-6.8B	

REF.NO.	PART.NO	DESCRIPTION	REMARK
D021	8-719-978-33	DIODE DTZ-TT11-6.8B	
D022	8-719-069-55	DIODE UDZSTE-175.6B	
D035	8-719-069-55	DIODE UDZSTE-175.6B	
D036	8-719-069-55	DIODE UDZSTE-175.6B	
D051	8-719-081-98	DIODE MM3Z6V8T1	
D101	6-500-159-01	DIODE MA8330-M-TX	
D103	8-719-081-98	DIODE MM3Z6V8T1	
D104	8-719-069-55	DIODE UDZSTE-175.6B	
D105	8-719-069-55	DIODE UDZSTE-175.6B	
D106	8-719-069-55	DIODE UDZSTE-175.6B	
D107	8-719-069-55	DIODE UDZSTE-175.6B	
D203	8-719-069-55	DIODE UDZSTE-175.6B	
D207	8-719-069-60	DIODE UDZSTE-179.1B	
D210	8-719-069-55	DIODE UDZSTE-175.6B	
D211	8-719-069-60	DIODE UDZSTE-179.1B	
D212	8-719-914-43	DIODE DAN202K	
D228	8-719-069-55	DIODE UDZSTE-175.6B	
D235	8-719-069-55	DIODE UDZSTE-175.6B	
D236	8-719-069-60	DIODE UDZSTE-179.1B	
D401	8-719-978-33	DIODE DTZ-TT11-6.8B	
D402	8-719-081-98	DIODE MM3Z6V8T1	
D403	8-719-069-55	DIODE UDZSTE-175.6B	
D404	8-719-109-89	DIODE RD5.6ESB2	
D405	8-719-081-98	DIODE MM3Z6V8T1	
D406	8-719-081-98	DIODE MM3Z6V8T1	
D407	8-719-081-98	DIODE MM3Z6V8T1	
D408	8-719-978-33	DIODE DTZ-TT11-6.8B	
D410	8-719-978-33	DIODE DTZ-TT11-6.8B	
D411	8-719-978-33	DIODE DTZ-TT11-6.8B	
D412	8-719-081-98	DIODE MM3Z6V8T1	
D413	8-719-978-33	DIODE DTZ-TT11-6.8B	
D414	8-719-081-98	DIODE MM3Z6V8T1	
D418	8-719-069-60	DIODE UDZSTE-179.1B	
D420	8-719-069-55	DIODE UDZSTE-175.6B	
D422	8-719-978-33	DIODE DTZ-TT11-6.8B	
D423	8-719-081-98	DIODE MM3Z6V8T1	
D424	8-719-069-60	DIODE UDZSTE-179.1B	
D427	8-719-082-01	DIODE MM3Z12VT1	
D428	8-719-978-33	DIODE DTZ-TT11-6.8B	
D429	8-719-978-33	DIODE DTZ-TT11-6.8B	
D435	8-719-069-60	DIODE UDZSTE-179.1B	
D436	8-719-069-60	DIODE UDZSTE-179.1B	
D501	8-719-979-85	DIODE EGP20G	
D502	8-719-081-90	DIODE PDZ22B-115	
D503	8-719-069-55	DIODE UDZSTE-175.6B	
D504	8-719-074-43	DIODE BAS316-115	
D512	8-719-302-43	DIODE EL1Z	
D513	8-719-979-85	DIODE EGP20G	
D514	8-719-979-85	DIODE EGP20G	
D534	8-719-302-43	DIODE EL1Z	

Note : The components identified by shading and marked ⚠ are critical for safety. Replace only with the part numbers specified in the parts list.

A

REF.NO.	PART.NO	DESCRIPTION	REMARK
D535	8-719-908-03	DIODE GP08D	
D536	8-719-945-80	DIODE ERC06-15S	
D537	8-719-070-62	DIODE PDZ9.1B-115	
D538	8-719-908-03	DIODE GP08D	
D539	8-719-312-10	DIODE RU4AM-T3	
D541	1-216-295-91	SHORT CHIP 0	
D573	8-719-082-00	DIODE MM3Z4V7T1	
D601	8-719-510-53	DIODE D4SB60L	
D602	8-719-911-19	DIODE 1SS119-25	
D604	8-719-083-94	DIODE FUF4005	
D608	6-500-175-01	DIODE 1E3-TB	
D610	8-719-110-41	DIODE RD15ESB2	
D611	8-719-991-33	DIODE 1SS133T-77	
D612	8-719-991-33	DIODE 1SS133T-77	
D613	8-719-911-19	DIODE 1SS119-25	
D614	8-719-077-76	DIODE D2SB60A-F04	
D615	8-719-929-15	DIODE HZS9.1NB2	
D618	8-719-022-97	DIODE D2S4MF	
D619	8-719-022-97	DIODE D2S4MF	
D620	8-719-109-85	DIODE RD5.1ESB2	
D621	8-719-109-89	DIODE RD5.6ESB2	
D623	8-719-911-19	DIODE 1SS119-25	
D624	8-719-052-90	DIODE D1NL40-TA2	
D625	6-500-246-01	DIODE FBIU4D7M1-B-4	
D628	8-719-083-49	DIODE P6KE200ASY	
D629	8-719-083-94	DIODE FUF4005	
D631	8-719-921-63	DIODE MTZJ-7.5B	
D632	8-719-063-70	DIODE D1NL20U	
D633	8-719-109-69	DIODE RD3.6ESB2	
D638	8-500-069-01	DIODE FMW-2109LF654	
D640	8-719-921-63	DIODE MTZJ-7.5B	
D1203	8-719-914-43	DIODE DAN202K	
D1204	8-719-069-55	DIODE UDZSTE-175.6B	
D1230	8-719-074-43	DIODE BAS316-115	
		< FERRITE BEAD >	
FB410	1-414-760-21	FERRITE 0UH	
FB411	1-414-760-21	FERRITE 0UH	
FB412	1-414-760-21	FERRITE 0UH	
FB601	1-469-578-11	FERRITE 1.1UH	
FB602	1-469-578-11	FERRITE 1.1UH	
FB603	1-412-911-11	FERRITE 0UH	
FB604	1-469-578-11	FERRITE 1.1UH	
FB605	1-469-578-11	FERRITE 1.1UH	
FB606 ⚠	1-412-911-11	FERRITE 0UH	
FB607 ⚠	1-412-911-11	FERRITE 0UH	
		< FILTER >	
FL201	1-239-803-11	FILTER, EMI	

REF.NO.	PART.NO	DESCRIPTION	REMARK
		< IC >	
IC001	6-702-097-01	IC TDA9394H/N1/5/0583	
IC004	8-759-575-72	IC M24C08-WMN6T	
IC201	6-700-410-01	IC MSP3410G-PP-B8	
IC401	8-759-665-11	IC LM393DT	
IC501	8-759-696-71	IC STV9379A	
IC531	8-759-665-11	IC LM393DT	
IC601	8-759-670-30	IC MCZ3001D	
IC602	8-749-016-19	IC SE135N-LF4	
IC604	8-759-668-87	IC BA41W12ST-V5	
IC608	8-759-591-02	IC L78L33ABZ-AP	
IC609	8-759-468-89	IC TOP209P	
IC1201	8-759-831-57	IC TDA7495S	
		< SOCKET >	
J401	*1-766-296-21	CONNECTOR, DUAL SCART	
J404	1-793-987-11	JACK, PIN 2P	
		< COIL >	
L001	1-408-611-31	INDUCTOR 47UH	
L004	1-408-611-31	INDUCTOR 47UH	
L006	1-408-611-31	INDUCTOR 47UH	
L027	1-216-295-91	SHORT CHIP 0	
L101	1-412-534-31	INDUCTOR 56UH	
L102	1-408-611-31	INDUCTOR 47UH	
L103	1-412-002-31	INDUCTOR 4.7UH	
L104	1-412-002-31	INDUCTOR 4.7UH	
L201	1-535-303-00	LEAD, JUMPER (5.0MM)	
L203	1-408-602-31	INDUCTOR 8.2UH	
L205	1-408-591-11	INDUCTOR 1UH	
L206	1-535-303-00	LEAD, JUMPER (5.0MM)	
L207	1-408-591-11	INDUCTOR 1UH	
L401	1-410-993-42	INDUCTOR 1UH	
L403	1-410-993-42	INDUCTOR 1UH	
L404	1-410-993-42	INDUCTOR 1UH	
L405	1-535-303-00	LEAD, JUMPER (5.0MM)	
L406	1-535-303-00	LEAD, JUMPER (5.0MM)	
L410	1-216-025-11	RES-CHIP 100 5% 1/10W	
L430	1-412-002-31	INDUCTOR 4.7UH	
L446	1-216-295-91	SHORT CHIP 0	
L448	1-216-295-91	SHORT CHIP 0	
L501	1-414-187-11	INDUCTOR 47UH	
L502	1-412-529-11	INDUCTOR 22UH	
L503	1-412-521-31	INDUCTOR 4.7UH	
L504	1-535-303-00	LEAD, JUMPER (5.0MM)	
L505	1-412-542-41	INDUCTOR 270UH	
L507	1-412-533-21	INDUCTOR 47UH	
L532	1-412-553-11	INDUCTOR 3.3MH	
L533	1-406-989-21	INDUCTOR 10MH	

Note : The components identified by shading and marked ⚠ are critical for safety. Replace only with the part numbers specified in the parts list.

A

REF.NO.	PART.NO	DESCRIPTION	REMARK
L534	1-216-025-11	RES-CHIP 100 5%	1/10W
L535	1-459-111-00	INDUCTOR 10MH	
L601	1-408-603-31	INDUCTOR 10UH	
L602	1-408-611-31	INDUCTOR 47UH	
L603	1-412-523-41	INDUCTOR 6.8UH	
L1201	1-535-303-00	LEAD, JUMPER (5.0MM)	
L1203	1-535-303-00	LEAD, JUMPER (5.0MM)	
		< PHOTOCOUPLER >	
PH601 ⚠	8-749-016-21	IC TCET1103G	
		< PROTECTOR MODULE >	
PS1201 ⚠	1-533-597-31	LINK, IC 5A	
		< TRANSISTOR >	
Q013	8-729-901-81	TRANSISTOR 2SC2412K-T-146-R	
Q014	8-729-901-81	TRANSISTOR 2SC2412K-T-146-R	
Q049	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q202	8-729-901-81	TRANSISTOR 2SC2412K-T-146-R	
Q203	8-729-901-81	TRANSISTOR 2SC2412K-T-146-R	
Q212	8-729-422-33	TRANSISTOR 2SD601A-Q-TX	
Q401	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
Q409	8-729-901-81	TRANSISTOR 2SC2412K-T-146-R	
Q411	8-729-901-81	TRANSISTOR 2SC2412K-T-146-R	
Q532	8-729-053-33	TRANSISTOR IRF614-037	
Q533	8-729-049-08	TRANSISTOR BU2515DX-127	
Q535	8-729-053-33	TRANSISTOR IRF614-037	
Q570	8-729-901-81	TRANSISTOR 2SC2412K-T-146-R	
Q576	8-729-422-33	TRANSISTOR 2SD601A-Q-TX	
Q601	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
Q602	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q603	8-729-037-17	TRANSISTOR KRA104M-AT	
Q604	8-729-036-60	TRANSISTOR KRC104M-AT	
Q606	8-729-053-36	TRANSISTOR 2SK2640-01MR-F122	
Q607	8-729-053-36	TRANSISTOR 2SK2640-01MR-F122	
Q608	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q609	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
Q1230	8-729-027-56	TRANSISTOR DTC143TKA-T146	
Q1231	8-729-027-56	TRANSISTOR DTC143TKA-T146	
Q1232	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
Q1233	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
		< RESISTOR >	
JR3	1-216-296-11	SHORT CHIP 0	
JR4	1-216-295-91	SHORT CHIP 0	
JR7	1-216-295-91	SHORT CHIP 0	
JR9	1-216-295-91	SHORT CHIP 0	
JR10	1-216-295-91	SHORT CHIP 0	

REF.NO.	PART.NO	DESCRIPTION	REMARK
JR16	1-216-296-11	SHORT CHIP 0	
JR17	1-216-295-91	SHORT CHIP 0	
JR21	1-216-818-11	METAL CHIP 560 5%	1/10W
JR24	1-216-295-91	SHORT CHIP 0	
JR25	1-216-295-91	SHORT CHIP 0	
JR26	1-216-295-91	SHORT CHIP 0	
JR101	1-216-295-91	SHORT CHIP 0	
JR105	1-216-295-91	SHORT CHIP 0	
JR204	1-216-296-11	SHORT CHIP 0	
JR206	1-216-295-91	SHORT CHIP 0	
JR208	1-216-295-91	SHORT CHIP 0	
JR209	1-216-295-91	SHORT CHIP 0	
JR210	1-216-295-91	SHORT CHIP 0	
JR211	1-216-296-11	SHORT CHIP 0	
JR213	1-216-295-91	SHORT CHIP 0	
JR401	1-216-295-91	SHORT CHIP 0	
JR418	1-216-296-11	SHORT CHIP 0	
JR423	1-216-296-11	SHORT CHIP 0	
JR505	1-216-295-91	SHORT CHIP 0	
JR506	1-216-296-11	SHORT CHIP 0	
JR601	1-216-295-91	SHORT CHIP 0	
JR609	1-216-295-91	SHORT CHIP 0	
JR610	1-216-295-91	SHORT CHIP 0	
R003	1-216-065-91	RES-CHIP 4.7K 5%	1/10W
R004	1-216-033-00	RES-CHIP 220 5%	1/10W
R005	1-216-041-00	RES-CHIP 470 5%	1/10W
R006	1-216-025-11	RES-CHIP 100 5%	1/10W
R007	1-216-025-11	RES-CHIP 100 5%	1/10W
R008	1-216-025-11	RES-CHIP 100 5%	1/10W
R009	1-216-049-11	RES-CHIP 1K 5%	1/10W
R010	1-216-049-11	RES-CHIP 1K 5%	1/10W
R011	1-216-295-91	SHORT CHIP 0	
R012	1-216-121-11	RES-CHIP 1M 5%	1/10W
R014	1-216-069-00	RES-CHIP 6.8K 5%	1/10W
R015	1-216-198-91	RES-CHIP 1K 5%	1/8W
R017	1-216-025-11	RES-CHIP 100 5%	1/10W
R018	1-208-820-11	METAL CHIP 39K 0.5%	1/10W
R020	1-216-077-91	RES-CHIP 15K 5%	1/10W
R022	1-216-089-91	RES-CHIP 47K 5%	1/10W
R023	1-216-035-00	RES-CHIP 270 5%	1/10W
R024	1-216-025-11	RES-CHIP 100 5%	1/10W
R025	1-216-025-11	RES-CHIP 100 5%	1/10W
R026	1-216-025-11	RES-CHIP 100 5%	1/10W
R027	1-216-025-11	RES-CHIP 100 5%	1/10W
R028	1-216-025-11	RES-CHIP 100 5%	1/10W
R029	1-216-061-91	RES-CHIP 3.3K 5%	1/10W
R030	1-216-821-11	METAL CHIP 1K 5%	1/10W
R031	1-216-061-91	RES-CHIP 3.3K 5%	1/10W
R032	1-216-061-91	RES-CHIP 3.3K 5%	1/10W

REF.NO.	PART.NO	DESCRIPTION			REMARK
R033	1-216-073-91	RES-CHIP	10K	5%	1/10W
R034	1-216-129-00	RES-CHIP	2.2M	5%	1/10W
R035	1-216-101-00	RES-CHIP	150K	5%	1/10W
R036	1-216-083-00	RES-CHIP	27K	5%	1/10W
R039	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R040	1-216-033-00	RES-CHIP	220	5%	1/10W
R041	1-216-025-11	RES-CHIP	100	5%	1/10W
R042	1-216-025-11	RES-CHIP	100	5%	1/10W
R044	1-216-073-91	RES-CHIP	10K	5%	1/10W
R045	1-216-129-00	RES-CHIP	2.2M	5%	1/10W
R046	1-216-025-11	RES-CHIP	100	5%	1/10W
R047	1-216-025-11	RES-CHIP	100	5%	1/10W
R048	1-216-073-91	RES-CHIP	10K	5%	1/10W
R049	1-216-049-11	RES-CHIP	1K	5%	1/10W
R050	1-216-025-11	RES-CHIP	100	5%	1/10W
R051	1-216-295-91	SHORT CHIP	0		
R052	1-216-295-91	SHORT CHIP	0		
R053	1-216-095-00	RES-CHIP	82K	5%	1/10W
R055	1-216-025-11	RES-CHIP	100	5%	1/10W
R056	1-216-081-00	RES-CHIP	22K	5%	1/10W
R060	1-216-025-11	RES-CHIP	100	5%	1/10W
R061	1-216-025-11	RES-CHIP	100	5%	1/10W
R070	1-216-025-11	RES-CHIP	100	5%	1/10W
R071	1-216-049-11	RES-CHIP	1K	5%	1/10W
R072	1-127-715-91	CERAMIC CHIP	0.22UF	10%	16V
R073	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R074	1-216-073-91	RES-CHIP	10K	5%	1/10W
R090	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R091	1-216-081-00	RES-CHIP	22K	5%	1/10W
R092	1-216-073-91	RES-CHIP	10K	5%	1/10W
R094	1-216-025-11	RES-CHIP	100	5%	1/10W
R095	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R096	1-216-073-91	RES-CHIP	10K	5%	1/10W
R101	1-216-093-91	RES-CHIP	68K	5%	1/10W
R102	1-216-097-11	RES-CHIP	100K	5%	1/10W
R103	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R105	1-414-813-11	FERRITE	0UH		
R106	1-215-900-11	METAL OXIDE	22K	5%	2W
R107	1-216-025-11	RES-CHIP	100	5%	1/10W
R108	1-216-025-11	RES-CHIP	100	5%	1/10W
R201	1-216-025-11	RES-CHIP	100	5%	1/10W
R202	1-216-073-91	RES-CHIP	10K	5%	1/10W
R203	1-216-025-11	RES-CHIP	100	5%	1/10W
R211	1-216-081-00	RES-CHIP	22K	5%	1/10W
R212	1-216-069-00	RES-CHIP	6.8K	5%	1/10W
R213	1-216-081-00	RES-CHIP	22K	5%	1/10W
R214	1-216-295-91	SHORT CHIP	0		
R215	1-216-037-00	RES-CHIP	330	5%	1/10W
R216	1-216-097-11	RES-CHIP	100K	5%	1/10W
R217	1-216-073-91	RES-CHIP	10K	5%	1/10W

REF.NO.	PART.NO	DESCRIPTION			REMARK
R220	1-216-017-91	RES-CHIP	47	5%	1/10W
R221	1-216-190-00	RES-CHIP	470	5%	1/8W
R232	1-216-025-11	RES-CHIP	100	5%	1/10W
R233	1-216-069-00	RES-CHIP	6.8K	5%	1/10W
R234	1-216-069-00	RES-CHIP	6.8K	5%	1/10W
R235	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R236	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R238	1-216-025-11	RES-CHIP	100	5%	1/10W
R246	1-260-107-11	CARBON	4.7K	5%	1/2W
R248	1-249-429-11	CARBON	10K	5%	1/4W
R249	1-216-097-11	RES-CHIP	100K	5%	1/10W
R250	1-216-230-00	RES-CHIP	22K	5%	1/8W
R251	1-216-069-00	RES-CHIP	6.8K	5%	1/10W
R252	1-216-069-00	RES-CHIP	6.8K	5%	1/10W
R253	1-216-025-11	RES-CHIP	100	5%	1/10W
R254	1-216-025-11	RES-CHIP	100	5%	1/10W
R401	1-410-993-42	INDUCTOR	1UH		
R402	1-216-041-00	RES-CHIP	470	5%	1/10W
R403	1-216-113-00	RES-CHIP	470K	5%	1/10W
R404	1-216-113-00	RES-CHIP	470K	5%	1/10W
R405	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R406	1-216-296-11	SHORT CHIP	0		
R407	1-216-022-00	RES-CHIP	75	5%	1/10W
R408	1-216-022-00	RES-CHIP	75	5%	1/10W
R409	1-216-025-11	RES-CHIP	100	5%	1/10W
R410	1-216-025-11	RES-CHIP	100	5%	1/10W
R411	1-216-022-00	RES-CHIP	75	5%	1/10W
R412	1-216-025-11	RES-CHIP	100	5%	1/10W
R413	1-216-113-00	RES-CHIP	470K	5%	1/10W
R414	1-216-022-00	RES-CHIP	75	5%	1/10W
R415	1-216-022-00	RES-CHIP	75	5%	1/10W
R416	1-216-027-00	RES-CHIP	120	5%	1/10W
R417	1-216-113-00	RES-CHIP	470K	5%	1/10W
R418	1-216-113-00	RES-CHIP	470K	5%	1/10W
R419	1-216-022-00	RES-CHIP	75	5%	1/10W
R420	1-216-073-91	RES-CHIP	10K	5%	1/10W
R421	1-216-049-11	RES-CHIP	1K	5%	1/10W
R422	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R423	1-216-113-00	RES-CHIP	470K	5%	1/10W
R424	1-216-113-00	RES-CHIP	470K	5%	1/10W
R425	1-216-085-91	RES-CHIP	33K	5%	1/10W
R426	1-216-073-91	RES-CHIP	10K	5%	1/10W
R427	1-216-113-00	RES-CHIP	470K	5%	1/10W
R428	1-216-073-91	RES-CHIP	10K	5%	1/10W
R429	1-216-089-91	RES-CHIP	47K	5%	1/10W
R430	1-216-073-91	RES-CHIP	10K	5%	1/10W
R431	1-216-073-91	RES-CHIP	10K	5%	1/10W
R433	1-216-073-91	RES-CHIP	10K	5%	1/10W
R434	1-216-073-91	RES-CHIP	10K	5%	1/10W
R435	1-216-295-91	SHORT CHIP	0		

Note : The components identified by shading and marked ⚠ are critical for safety. Replace only with the part numbers specified in the parts list.

A

REF.NO.	PART.NO	DESCRIPTION			REMARK
R438	1-216-022-00	RES-CHIP	75	5%	1/10W
R440	1-216-049-11	RES-CHIP	1K	5%	1/10W
R441	1-216-051-00	RES-CHIP	1.2K	5%	1/10W
R442	1-216-085-91	RES-CHIP	33K	5%	1/10W
R443	1-216-073-91	RES-CHIP	10K	5%	1/10W
R444	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R445	1-216-022-00	RES-CHIP	75	5%	1/10W
R446	1-216-113-00	RES-CHIP	470K	5%	1/10W
R447	1-216-295-91	SHORT CHIP	0		
R448	1-216-113-00	RES-CHIP	470K	5%	1/10W
R449	1-216-295-91	SHORT CHIP	0		
R450	1-216-041-00	RES-CHIP	470	5%	1/10W
R451	1-216-041-00	RES-CHIP	470	5%	1/10W
R453	1-216-171-00	RES-CHIP	75	5%	1/8W
R454	1-216-001-00	RES-CHIP	10	5%	1/10W
R455	1-216-295-91	SHORT CHIP	0		
R460	1-216-049-11	RES-CHIP	1K	5%	1/10W
R461	1-216-022-00	RES-CHIP	75	5%	1/10W
R462	1-216-178-00	RES-CHIP	150	5%	1/8W
R500	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R501	1-216-091-00	RES-CHIP	56K	5%	1/10W
R502	1-216-073-91	RES-CHIP	10K	5%	1/10W
R503	1-215-888-00	METAL OXIDE	220	5%	2W
R504	1-249-385-11	CARBON	2.2	5%	1/4W
R505	1-216-671-11	METAL CHIP	6.8K	0.5%	1/10W
R506	1-216-665-11	METAL CHIP	3.9K	0.5%	1/10W
R507	1-216-349-00	METAL OXIDE	1	5%	1W
R508	1-216-673-11	METAL CHIP	8.2K	0.5%	1/10W
R509	1-216-665-11	METAL CHIP	3.9K	0.5%	1/10W
R510	1-216-113-00	RES-CHIP	470K	5%	1/10W
R512	1-249-382-11	CARBON	1.2	5%	1/4W
R513	1-216-105-91	RES-CHIP	220K	5%	1/10W
R514	1-249-377-11	CARBON	0.47	5%	1/4W
R515	1-249-377-11	CARBON	0.47	5%	1/4W
R516	1-214-907-00	METAL	56K	1%	1/2W
R517	1-215-451-00	METAL	18K	1%	1/4W
R518	1-216-059-00	RES-CHIP	2.7K	5%	1/10W
R520	1-215-884-11	METAL OXIDE	47	5%	2W
R521	1-216-105-91	RES-CHIP	220K	5%	1/10W
R522	1-216-097-11	RES-CHIP	100K	5%	1/10W
R523	1-216-121-11	RES-CHIP	1M	5%	1/10W
R524	1-216-075-00	RES-CHIP	12K	5%	1/10W
R525	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R526	1-216-089-91	RES-CHIP	47K	5%	1/10W
R527	1-216-077-91	RES-CHIP	15K	5%	1/10W
R528	1-216-097-11	RES-CHIP	100K	5%	1/10W
R529	1-216-073-91	RES-CHIP	10K	5%	1/10W
R530	1-216-085-91	RES-CHIP	33K	5%	1/10W
R531	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R532	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R533	1-216-077-91	RES-CHIP	15K	5%	1/10W
R534	1-216-097-11	RES-CHIP	100K	5%	1/10W
R535	1-216-099-00	RES-CHIP	120K	5%	1/10W
R538	1-535-143-71	LEAD, JUMPER (7.5MM)			
R539	1-535-143-41	LEAD, JUMPER (17.5MM)			
R540	1-212-970-00	FUSIBLE	33	5%	1/2W
R543	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R544	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R546	1-216-480-11	METAL OXIDE	820	5%	3W
R547	1-535-143-71	LEAD, JUMPER (7.5MM)			
R548	1-249-387-11	CARBON	3.3	5%	1/4W
R549	1-216-361-21	METAL OXIDE	0.22	5%	2W
R550	1-215-880-00	METAL OXIDE	10	5%	2W
R551	1-215-871-11	METAL OXIDE	2.2K	5%	1W
R552	1-216-848-11	METAL CHIP	180K	5%	1/10W
R553	1-249-381-11	CARBON	1	5%	1/4W
R555	1-216-059-00	RES-CHIP	2.7K	5%	1/10W
R556	1-215-916-00	METAL OXIDE	680	5%	3W
R557	1-216-067-00	RES-CHIP	5.6K	5%	1/10W
R558	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R568	1-215-916-00	METAL OXIDE	680	5%	3W
R569	1-216-073-91	RES-CHIP	10K	5%	1/10W
R570	1-216-049-11	RES-CHIP	1K	5%	1/10W
R571	1-216-035-00	RES-CHIP	270	5%	1/10W
R572	1-216-039-00	RES-CHIP	390	5%	1/10W
R583	1-216-073-91	RES-CHIP	10K	5%	1/10W
R589	1-216-097-11	RES-CHIP	100K	5%	1/10W
R590	1-216-081-00	RES-CHIP	22K	5%	1/10W
R591	1-215-892-11	METAL OXIDE	1K	5%	2W
R595	1-249-377-11	CARBON	0.47	5%	1/4W
R600	1-216-641-11	METAL CHIP	390	0.5%	1/10W
R601	1-216-643-11	METAL CHIP	470	0.5%	1/10W
R603 ⚠	1-202-933-61	FUSIBLE	0.1	10%	1/2W
R605	1-216-049-11	RES-CHIP	1K	5%	1/10W
R608	1-216-073-91	RES-CHIP	10K	5%	1/10W
R609	1-216-677-11	METAL CHIP	12K	0.5%	1/10W
R610	1-215-481-00	METAL	330K	1%	1/4W
R611	1-216-059-00	RES-CHIP	2.7K	5%	1/10W
R612	1-249-429-11	CARBON	10K	5%	1/4W
R613 ⚠	1-219-720-91	METAL	10M	5%	1W
R615	1-215-385-00	METAL	33	1%	1/4W
R616	1-216-101-00	RES-CHIP	150K	5%	1/10W
R617	1-216-099-00	RES-CHIP	120K	5%	1/10W
R619	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R621	1-216-113-00	RES-CHIP	470K	5%	1/10W
R622	1-216-073-91	RES-CHIP	10K	5%	1/10W
R623	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R624	1-216-001-00	RES-CHIP	10	5%	1/10W
R625	1-216-073-91	RES-CHIP	10K	5%	1/10W
R627	1-249-389-11	CARBON	4.7	5%	1/4W

Note : The components identified by shading and marked ⚠ are critical for safety. Replace only with the part numbers specified in the parts list.

REF.NO.		PART.NO	DESCRIPTION			REMARK
R628		1-247-791-91	CARBON	22	5%	1/4W
R629		1-216-073-91	RES-CHIP	10K	5%	1/10W
R631		1-216-101-00	RES-CHIP	150K	5%	1/10W
R632		1-249-417-11	CARBON	1K	5%	1/4W
R633		1-215-481-00	METAL	330K	1%	1/4W
R634		1-217-625-00	METAL	0.05	10%	2W
R635		1-260-300-11	CARBON	4.7	5%	1/2W
R636		1-249-413-11	CARBON	470	5%	1/4W
R637		1-216-041-00	RES-CHIP	470	5%	1/10W
R639		1-208-814-91	METAL CHIP	22K	0.5%	1/10W
R640		1-208-830-11	METAL CHIP	100K	0.5%	1/10W
R641		1-216-097-11	RES-CHIP	100K	5%	1/10W
R642		1-249-405-11	CARBON	100	5%	1/4W
R643		1-216-089-91	RES-CHIP	47K	5%	1/10W
R645		1-216-073-91	RES-CHIP	10K	5%	1/10W
R647		1-216-049-11	RES-CHIP	1K	5%	1/10W
R648		1-215-481-00	METAL	330K	1%	1/4W
R649		1-208-805-11	METAL CHIP	9.1K	0.5%	1/10W
R650		1-208-758-11	METAL CHIP	100	0.5%	1/10W
R651	⚠	1-220-926-11	FUSIBLE	0.47	10%	1/2W
R652		1-216-081-00	RES-CHIP	22K	5%	1/10W
R653		1-216-073-91	RES-CHIP	10K	5%	1/10W
R654		1-216-001-00	RES-CHIP	10	5%	1/10W
R656		1-216-365-00	METAL OXIDE	0.47	5%	2W
R660		1-247-807-31	CARBON	100	5%	1/4W
R1202		1-216-073-91	RES-CHIP	10K	5%	1/10W
R1203		1-216-049-11	RES-CHIP	1K	5%	1/10W
R1207		1-216-077-91	RES-CHIP	15K	5%	1/10W
R1210		1-216-077-91	RES-CHIP	15K	5%	1/10W
R1213		1-216-049-11	RES-CHIP	1K	5%	1/10W
R1214		1-216-049-11	RES-CHIP	1K	5%	1/10W
R1215		1-216-049-11	RES-CHIP	1K	5%	1/10W
R1216		1-216-025-11	RES-CHIP	100	5%	1/10W
R1217		1-216-341-11	METAL OXIDE	0.22	5%	1W
R1230		1-216-041-00	RES-CHIP	470	5%	1/10W
R1231		1-216-113-00	RES-CHIP	470K	5%	1/10W
R1232		1-216-041-00	RES-CHIP	470	5%	1/10W
R1233		1-216-113-00	RES-CHIP	470K	5%	1/10W
R1235		1-216-073-91	RES-CHIP	10K	5%	1/10W
R1236		1-216-073-91	RES-CHIP	10K	5%	1/10W
			< RELAY >			
RY601	⚠	1-755-388-11	RELAY (AC POWER)			
			< SWITCH >			
SW532		1-572-707-11	SWITCH, LEVER			

REF.NO.		PART.NO	DESCRIPTION	REMARK
			< TRANSFORMER >	
T511	⚠	1-453-308-41	TRANSFORMER ASSY, FLYBACK (NX-4521//Z2B4)	
T531		1-437-210-11	TRANSFORMER, HORIZONTAL DRIVE	
T532		1-426-981-91	TRANSFORMER, FERRITE (PMT)	
T533		1-433-980-12	TRANSFORMER, HORIZONTAL LINEAR	
T602	⚠	1-431-732-31	TRANSFORMER, CONVERTER (SRT)	
T603	⚠	1-435-976-11	TRANSFORMER, CONVERTER (PIT)	
			< THERMISTOR >	
TH601		1-803-586-41	THERMISTOR	
THP601	⚠	1-803-951-11	THERMISTOR, PTC	
			< CRYSTAL >	
X001		1-578-774-71	VIBRATOR, CRYSTAL	
X201		1-760-628-11	VIBRATOR, CRYSTAL	

A Board Variant Parts KV-28EW20B

			< TUNER >	
TU101		1-693-555-14	FRONTEND (TUNER+IF)	

A Board Variant Parts KV-28EW20E

			< TUNER >	
TU101		1-693-556-14	FRONTEND (TUNER+IF)	

A Board Variant Parts KV-28EW20U

			< TUNER >	
TU101		1-693-557-14	FRONTEND (TUNER+IF)	

* A-1624-100-A F3 Board, Complete

		*4-374-846-01	COVER, CAPACITOR, CAP TYPE	
			< CAPACITOR >	
C3601		1-113-924-11	CERAMIC 0.0047UF 20.00% 250V	
C3602	⚠	1-137-999-11	FILM 0.1UF 275V	
			< CONNECTOR >	
CN3601	⚠	*1-580-843-11	PIN, CONNECTOR (POWER)	
CN3602		1-695-915-11	TAB (CONTACT)	
CN3603	⚠	*1-580-843-11	PIN, CONNECTOR (POWER)	
			< FUSE >	
F3601	⚠	1-576-232-21	FUSE (H.B.C.) 5A/250V	
	⚠	1-533-725-11	HOLDER, FUSE (F3601)	

Note : The components identified by shading and marked ⚠ are critical for safety. Replace only with the part numbers specified in the parts list.

REF.NO.		PART.NO	DESCRIPTION	REMARK
			< RESISTOR >	
R3601	⚠	1-202-719-00	SOLID 1M 10% 1/2W	
			< TRANSFORMER >	
T3602	⚠	1-433-488-11	TRANSFORMER, LINE FILTER	
			< VARISTOR >	
VD3601	⚠	1-803-830-31	VARISTOR (ERZV14D621)	

*** A-1624-106-A F6 Board, Complete**

			< CONNECTOR >	
CN7601	⚠	*1-691-291-11	PIN, CONNECTOR (PC BOARD) 5P	
CN7602	⚠	*1-580-843-11	PIN, CONNECTOR (POWER)	
			< SWITCH >	
S7601	⚠	1-571-433-21	SWITCH, PUSH (AC POWER)	

*** A-1638-156-A C Board, Complete**

		4-382-854-01	SCREW (M3X8), P, SW (+)	
			< CAPACITOR >	
C701		1-136-189-00	MYLAR 0.1UF 10.00% 250V	
C702		1-126-964-11	ELECT 10UF 20.00% 50V	
C703		1-101-004-00	CERAMIC 0.01UF 50V	
C704		1-107-651-11	ELECT 4.7UF 20.00% 250V	
C705		1-162-318-11	CERAMIC 0.001UF 10.00% 500V	
C706		1-162-318-11	CERAMIC 0.001UF 10.00% 500V	
C708		1-115-350-51	CERAMIC 0.0047UF 2KV	
C710		1-107-652-11	ELECT 10UF 20.00% 250V	
C1803		1-101-005-00	CERAMIC 0.022UF 50V	
C1804		1-126-964-11	ELECT 10UF 20.00% 50V	
C1805		1-101-880-00	CERAMIC 47PF 5.00% 50V	
			< CONNECTOR >	
CN702		1-695-915-11	TAB (CONTACT)	
CN703		*1-564-510-11	PLUG, CONNECTOR 7P	
CN706		1-695-915-11	TAB (CONTACT)	
CN707		*1-564-508-11	PLUG, CONNECTOR 5P	
CN1801		*1-564-506-11	PLUG, CONNECTOR 3P	
			< DIODE >	
D701		8-719-991-33	DIODE 1SS133T-77	
D702		8-719-901-83	DIODE 1SS83	
D703		8-719-901-83	DIODE 1SS83	
D705		8-719-302-43	DIODE EL1Z	
D706		8-719-901-83	DIODE 1SS83	
D707		8-719-901-83	DIODE 1SS83	
D708		8-719-109-97	DIODE RD6.8ESB2	
D709		8-719-109-97	DIODE RD6.8ESB2	
D710		8-719-109-97	DIODE RD6.8ESB2	
D1801		8-719-110-17	DIODE RD10ESB2	
D1802		8-719-110-17	DIODE RD10ESB2	
D1803		8-719-110-17	DIODE RD10ESB2	
			< IC >	
IC701		8-759-562-43	IC TDA6108JF/N1B	
IC1801		8-759-356-16	IC NJM4556AD	
			< SOCKET >	
J701	⚠	1-251-732-11	SOCKET, CRT	
			< COIL >	
L704		1-414-183-41	INDUCTOR 10UH	
			< RESISTOR >	
R701		1-247-903-00	CARBON 1M 5% 1/4W	
R702		1-249-429-11	CARBON 10K 5% 1/4W	
R703		1-247-903-00	CARBON 1M 5% 1/4W	
R704		1-535-143-21	LEAD, JUMPER (12.5MM)	
R705		1-215-869-11	METAL OXIDE 1K 5% 1W	
R706		1-249-411-11	CARBON 330 5% 1/4W	
R712		1-215-869-11	METAL OXIDE 1K 5% 1W	
R716		1-249-411-11	CARBON 330 5% 1/4W	
R718		1-202-814-11	SOLID 33K 10% 1/2W	
R726		1-215-869-11	METAL OXIDE 1K 5% 1W	
R727		1-249-411-11	CARBON 330 5% 1/4W	
R728		1-249-390-11	CARBON 5.6 5% 1/4W	
R741		1-202-549-00	SOLID 100 20% 1/2W	
R1801		1-249-441-11	CARBON 100K 5% 1/4W	
R1805		1-249-429-11	CARBON 10K 5% 1/4W	
R1806		1-247-899-11	CARBON 680K 5% 1/4W	
R1807		1-249-429-11	CARBON 10K 5% 1/4W	
R1808		1-249-429-11	CARBON 10K 5% 1/4W	
R1809		1-249-429-11	CARBON 10K 5% 1/4W	
R1810		1-249-429-11	CARBON 10K 5% 1/4W	
			< RESISTOR VARIABLE >	
RV702		1-241-656-11	RES, ADJ, METAL FILM 110M	

*** A-1640-431-A D3 Board, Complete**

			< CAPACITOR >	
C2802		1-126-965-91	ELECT 22UF 20.00% 50V	

REF.NO.	PART.NO	DESCRIPTION			REMARK
		< CONNECTOR >			
CN2801	*1-564-506-11	PLUG, CONNECTOR 3P			
CN2802	*1-785-270-12	PIN, DY CONNECTOR (PC BOARD)			
CN2803	*1-580-798-11	CONNECTOR PIN (DY) 6P			
		< DIODE >			
D2801	8-719-991-33	DIODE 1SS133T-77			
		< TRANSISTOR >			
Q2801	8-729-119-78	TRANSISTOR 2SC2785-HFE			
Q2802	8-729-119-78	TRANSISTOR 2SC2785-HFE			
		< RESISTOR >			
R2801	1-249-421-11	CARBON	2.2K	5%	1/4W
R2802	1-249-421-11	CARBON	2.2K	5%	1/4W
		< RELAY >			
RY2801	1-755-172-11	RELAY			
		< TRANSFORMER >			
T2801	1-419-090-11	COIL, CHOKE (100UH)			

*** A-1642-285-A D2 Board, Complete**

		< CONNECTOR >			
C8802	1-136-104-00	FILM	0.16UF	5.00%	200V
C8803	1-115-521-11	FILM	0.82UF	5.00%	250V
C8804	1-136-207-11	MYLAR	0.047UF	5.00%	630V
		< CONNECTOR >			
CN8801	*1-778-770-11	CONNECTOR,BOARD TO BOARD(PLUG)			
CN8802	*1-564-506-11	PLUG, CONNECTOR 3P			
		< DIODE >			
D8801	8-719-923-60	DIODE MTZJ-T-77-9.1A			
D8802	8-719-302-43	DIODE EL1Z			
D8803	8-719-921-40	DIODE MTZJ-4.7C			
		< IC >			
IC8801	8-749-010-64	PHOTO COUPLER PC123F2			
		< JUMPER RESISTOR >			
JR8801	1-216-864-11	SHORT CHIP	0		
		< COIL >			
L8802	1-406-978-11	INDUCTOR	150UH		
		< TRANSISTOR >			
Q8801	8-729-034-09	TRANSISTOR 2SK2518-01MR			
Q8802	1-801-806-11	TR DTC144EKA			
Q8803	1-801-806-11	TR DTC144EKA			
		< RESISTOR >			
R8803	1-249-441-11	CARBON	100K	5%	1/4W
R8804	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R8805	1-216-833-11	METAL CHIP	10K	5%	1/10W
R8806	1-216-809-11	METAL CHIP	100	5%	1/10W
R8812	1-218-879-11	METAL CHIP	22K	0.5%	1/10W

*** A-1401-952-A VM Board, Complete**

		< CAPACITOR >			
C1701	1-104-665-11	ELECT	100UF	20.00%	25V
C1704	1-104-665-11	ELECT	100UF	20.00%	25V
C1732	1-216-295-91	CONDUCTOR CHIP		0	
C1844	1-129-716-00	FILM	0.015UF	5.00%	630V
C1845	1-129-725-00	FILM	0.082UF	5.00%	400V
C1848	1-136-347-11	FILM	0.0047UF	5.00%	630V
C1901	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C1902	1-137-374-11	MYLAR	0.047UF	5.00%	50V
C1903	1-126-964-11	ELECT	10UF	20.00%	50V
C1904	1-130-475-00	MYLAR	0.0022UF	5.00%	50V
C1905	1-137-374-11	MYLAR	0.047UF	5.00%	50V
C1906	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C1908	1-109-954-11	ELECT	0.47UF	20.00%	160V
C1912	1-162-117-00	CERAMIC	100PF	10.00%	500V
C1913	1-129-898-00	FILM	0.0022UF	5.00%	630V
C1914	1-102-030-00	CERAMIC	330PF	10.00%	500V
C1915	1-136-205-11	MYLAR	0.022UF	5.00%	630V
C1916	1-127-573-11	CERAMIC CHIP	1UF	10%	16V
C1917	1-102-228-00	CERAMIC	470PF	10.00%	500V
C1951	1-126-964-11	ELECT	10UF	20.00%	50V
C1952	1-126-964-11	ELECT	10UF	20.00%	50V
C1953	1-137-367-11	MYLAR	0.0033UF	5.00%	50V
C1954	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C1957	1-126-964-11	ELECT	10UF	20.00%	50V
C1958	1-136-169-00	FILM	0.22UF	5.00%	50V
C1959	1-136-169-00	FILM	0.22UF	5.00%	50V
		< CONNECTOR >			
CN1701	1-691-771-11	PLUG (MICRO CONNECTOR) 9P			
CN1718	*1-770-723-11	CONNECTOR, BOARD TO BOARD 8P			
CN1809	1-695-915-11	TAB (CONTACT)			
		< DIODE >			
D1840	8-719-302-43	DIODE EL1Z			

REF.NO.	PART.NO	DESCRIPTION	REMARK
D1901	8-719-991-33	DIODE 1SS133T-77	
D1902	8-719-991-33	DIODE 1SS133T-77	
D1903	8-719-991-33	DIODE 1SS133T-77	
D1904	8-719-991-33	DIODE 1SS133T-77	
D1905	8-719-110-41	DIODE RD15ESB2	
D1906	8-719-970-87	DIODE ERA38-06	
D1907	8-719-970-87	DIODE ERA38-06	
D1908	8-719-300-33	DIODE RU-3AM	
D1909	8-719-991-33	DIODE 1SS133T-77	
		< FERRITE BEAD >	
FB1701	1-535-303-00	LEAD, JUMPER (5.0MM)	
		< IC >	
IC1701	8-759-394-36	IC BA09T	
IC1901	8-759-659-67	IC LA6393DLL	
IC1902	8-759-008-70	IC LM358N	
		< COIL >	
L1701	1-414-183-41	INDUCTOR 10UH	
L1702	1-412-525-31	INDUCTOR 10UH	
L1843	1-406-989-21	INDUCTOR 10MH	
L1901	1-406-677-11	INDUCTOR 10MH	
L1902	1-414-177-11	INDUCTOR 1UH	
L1959	1-406-679-11	INDUCTOR 22MH	
		< TRANSISTOR >	
Q1840	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q1841	8-729-926-76	TRANSISTOR IRF620	
Q1901	8-729-901-81	TRANSISTOR 2SC2412K-T-146-R	
Q1902	8-729-901-81	TRANSISTOR 2SC2412K-T-146-R	
Q1903	8-729-043-95	TRANSISTOR 2SC3840(3)	
Q1906	8-729-901-81	TRANSISTOR 2SC2412K-T-146-R	
Q1907	8-729-140-97	TRANSISTOR 2SB734-34	
		< RESISTOR >	
R1739	1-535-303-00	LEAD, JUMPER (5.0MM)	
R1842	1-216-809-11	METAL CHIP 100 5%	1/10W
R1846	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
R1848	1-215-911-11	METAL OXIDE 100 5%	3W
R1903	1-216-833-11	METAL CHIP 10K 5%	1/10W
R1904	1-216-833-11	METAL CHIP 10K 5%	1/10W
R1905	1-216-845-11	METAL CHIP 100K 5%	1/10W
R1906	1-216-833-11	METAL CHIP 10K 5%	1/10W
R1907	1-216-845-11	METAL CHIP 100K 5%	1/10W
R1908	1-216-813-11	METAL CHIP 220 5%	1/10W
R1909	1-215-489-00	METAL 680K 1%	1/4W
R1910	1-216-864-11	SHORT CHIP 0	
R1911	1-216-833-11	METAL CHIP 10K 5%	1/10W
R1912	1-216-857-11	METAL CHIP 1M 5%	1/10W
R1913	1-216-821-11	METAL CHIP 1K 5%	1/10W
R1914	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
R1915	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
R1916	1-216-667-11	METAL CHIP 4.7K 0.5%	1/10W
R1917	1-216-842-11	METAL CHIP 56K 5%	1/10W
R1918	1-215-921-11	METAL OXIDE 4.7K 5%	3W
R1919	1-218-871-11	METAL CHIP 10K 0.5%	1/10W
R1920	1-216-864-11	SHORT CHIP 0	
R1921	1-215-922-11	METAL OXIDE 6.8K 5%	3W
R1922	1-215-919-11	METAL OXIDE 2.2K 5%	3W
R1923	1-216-845-11	METAL CHIP 100K 5%	1/10W
R1924	1-216-845-11	METAL CHIP 100K 5%	1/10W
R1925	1-216-845-11	METAL CHIP 100K 5%	1/10W
R1926	1-216-295-91	SHORT CHIP 0	
R1931	1-216-841-11	METAL CHIP 47K 5%	1/10W
R1953	1-216-850-11	METAL CHIP 270K 5%	1/10W
R1954	1-216-851-11	METAL CHIP 330K 5%	1/10W
R1955	1-216-849-11	METAL CHIP 220K 5%	1/10W
R1956	1-218-463-11	RES-CHIP 8.2M 5%	1/10W
R1957	1-216-833-11	METAL CHIP 10K 5%	1/10W
R1958	1-216-809-11	METAL CHIP 100 5%	1/10W
R1959	1-216-828-11	METAL CHIP 3.9K 5%	1/10W
R1960	1-216-833-11	METAL CHIP 10K 5%	1/10W
R1961	1-216-839-11	METAL CHIP 33K 5%	1/10W
R1962	1-216-839-11	METAL CHIP 33K 5%	1/10W
R1964	1-216-809-11	METAL CHIP 100 5%	1/10W
R1965	1-216-817-11	METAL CHIP 470 5%	1/10W
R1967	1-216-483-11	METAL OXIDE 2.7K 5%	3W
R1968	1-215-886-11	METAL OXIDE 100 5%	2W
R1969	1-216-483-11	METAL OXIDE 2.7K 5%	3W
		< TRANSFORMER >	
T1901	1-433-849-11	TRANSFORMER, FERRITE (DFT)	

*** A-1646-242-A H2 Board, Complete**

		< CAPACITOR >	
C906	1-126-960-11	ELECT 1UF	20.00% 50V
C907	1-126-960-11	ELECT 1UF	20.00% 50V
C908	1-102-106-00	CERAMIC 100PF	10.00% 50V
C909	1-102-106-00	CERAMIC 100PF	10.00% 50V
		< CONNECTOR >	
CN906	*1-564-524-11	PLUG, CONNECTOR 9P	
CN908	*1-564-521-11	PLUG, CONNECTOR 6P	
		< DIODE >	
D902	8-719-929-15	DIODE HZS9.1NB2	

REF.NO.	PART.NO	DESCRIPTION	REMARK
D903	8-719-929-15	DIODE HZS9.1NB2	
D904	8-719-109-97	DIODE RD6.8ESB2	
D905	8-719-109-97	DIODE RD6.8ESB2	
D908	8-719-923-60	DIODE MTZJ-T-77-9.1A	
		< SOCKET >	
J900	1-750-264-11	JACK	
J901	1-779-947-11	TERMINAL BLOCK, S	
		< COIL >	
L900	1-535-303-00	LEAD, JUMPER (5.0MM)	
L901	1-535-303-00	LEAD, JUMPER (5.0MM)	
L902	1-408-603-31	INDUCTOR 10UH	
L903	1-408-603-31	INDUCTOR 10UH	
L904	1-410-119-11	INDUCTOR 1MH	
		< RESISTOR >	
R901	1-249-427-11	CARBON 6.8K 5%	1/4W
R902	1-249-429-11	CARBON 10K 5%	1/4W
R903	1-249-406-11	CARBON 120 5%	1/4W
R904	1-249-406-11	CARBON 120 5%	1/4W
R909	1-247-895-91	CARBON 470K 5%	1/4W
R910	1-247-895-91	CARBON 470K 5%	1/4W
R911	1-249-419-11	CARBON 1.5K 5%	1/4W
R912	1-535-303-00	LEAD, JUMPER (5.0MM)	
R913	1-247-843-11	CARBON 3.3K 5%	1/4W
R914	1-249-431-11	CARBON 15K 5%	1/4W
R915	1-249-406-11	CARBON 120 5%	1/4W
R916	1-249-406-11	CARBON 120 5%	1/4W
R917	1-247-807-31	CARBON 100 5%	1/4W
R918	1-247-807-31	CARBON 100 5%	1/4W
		< SWITCH >	
S900	1-692-979-11	SWITCH, TACTILE	
S901	1-692-979-11	SWITCH, TACTILE	
S902	1-692-979-11	SWITCH, TACTILE	

*** A-1646-245-A H8 Board, Complete**

	4-205-711-01	HOLDER, LED	
		< CAPACITOR >	
C7150	1-126-969-11	ELECT 220UF	20.00% 50V
		< CONNECTOR >	
CN7150	*1-564-510-11	PLUG, CONNECTOR 7P	
		< DIODE >	
D7150	8-719-081-56	DIODE L-59SRSGC-CC	
D7152	8-719-109-89	DIODE RD5.6ESB2	

REF.NO.	PART.NO	DESCRIPTION	REMARK
		< IC >	
IC7150	8-749-014-59	IC TSOP1740KS1	
		< TRANSISTOR >	
Q7150	8-729-027-38	TRANSISTOR DTA144EKA-T146	
Q7151	8-729-900-53	TRANSISTOR DTC114EK	
		< RESISTOR >	
R7150	1-216-813-11	METAL CHIP 220 5%	1/10W
R7151	1-216-813-11	METAL CHIP 220 5%	1/10W
R7152	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
R7153	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
R7154	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
R7155	1-216-809-11	METAL CHIP 100 5%	1/10W
R7156	1-216-815-11	METAL CHIP 330 5%	1/10W

Note : The components identified by shading and marked ⚠ are critical for safety. Replace only with the part numbers specified in the parts list.

REF.NO.	PART.NO	DESCRIPTION	REMARK

MISCELLANEOUS

⚠	1-571-433-21	SWITCH, PUSH (AC POWER)	
⚠	1-765-286-11	CORD, POWER (KV-28EW20B/28EW20E)	
⚠	1-776-204-11	CORD, POWER (KV-28EW20U)	
	1-424-733-11	COIL, PFC CHOKE 65MMH	
⚠	1-453-308-21	TRANSFORMER ASSY, FLYBACK (NX-4521//Z2B4)	
	1-693-555-14	FRONTEND (TUNER+IF) (KV-28EW20B)	
	1-693-556-14	FRONTEND (TUNER+IF) (KV-28EW20E)	
	1-693-557-14	FRONTEND (TUNER+IF) (KV-28EW20U)	
	1-529-408-11	SPEAKER (4.2x24CM)	
⚠	8-735-099-05	PICTURE TUBE (W66LLX060X)	
⚠	8-451-521-31	DEFLECTION YOKE (Y28RVC3-L2)	
	1-452-896-11	COIL, NA ROTATION (RT200)	
⚠	8-453-011-11	NECK ASSY, (NA299-M)	
⚠	1-416-466-21	COIL, DEMAGNETIC	
⚠	1-251-946-11	CAP ASSY, HIGH-VOLTAGE	
	1-452-094-00	MAGNET, ROTATABLE DISK; 15MM	
	1-452-032-00	MAGNET, DISK; 10MM	

ACCESSORIES AND PACKAGING MATERIALS

	*4-205-503-02	INDIVIDUAL CARTON
	*4-205-505-03	CUSHION (LOWER) (ASSY)
	*4-395-957-01	BAG, PROTECTION
	4-091-583-31	INSTRUCTION MANUAL (KV-28EW20B) (FRENCH/DUTCH)
	4-091-583-41	INSTRUCTION MANUAL (KV-28EW20E) (DANISH/SPANISH/NORWEGIAN/PORTUGUESE SWEDISH/FINNISH)
	4-091-583-11	INSTRUCTION MANUAL (KV-28EW20U) (ENGLISH)

REMOTE COMMANDER

	1-418-476-23	REMOTE COMMANDER (RM-887)

TRACE

A new TV Repair Assistance Tool that combines ease of use and powerful PC software tools to allow you to save valuable time during many TV repairs.



The TRACE interface connects to the PC's serial port. It provides connection to the TV's I^2C bus and can be provided with an InfraRed transmitter (optional).

The interface is powered by a standard 9 V PP3 battery for portable use, and can also be powered by an external 9V/25mA DC power supply.


The TRACE software that is supplied with the interface allows you to:

- Read, restore and compare NVM contents via the I^2C bus
- Acknowledge check of all I^2C devices in the TV set
- Read Error Codes (emulation of the Error Reader tool)

With the optional IR Add-on kit, the following features can be added:

- Remote Commander emulation
- User programmable Functional Check through Infrared
- Fast and documented Test Mode setting of all Sony TV chassis

Additional features such as Adjustments and Troubleshooting are available in chassis-dependent software modules. Please contact your local Sony Service organisation for the latest information.

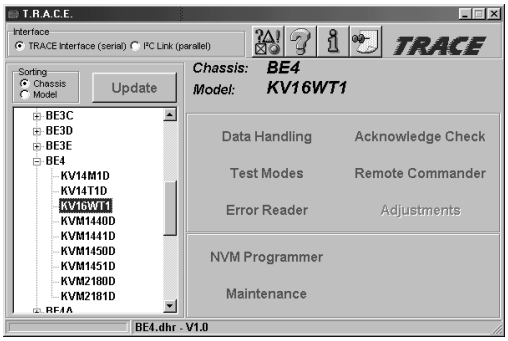

Note: For workshops already using the existing I^2C Link parallel port interface (9-948-320-30), this software can be used as well, replacing the TV Data Handling software (9-948-340-50), but Error Reader and IR functions can only be accessed with the TRACE interface.

Partnumbers:

TRACE Starter Kit (TRACE interface + software):	9-948-320-70
TRACE Software (for users of the I^2C Link interface):	9-948-340-80
TRACE IR Add-on (IR interface + Remote Commander software):	9-948-320-80

PC requirements: IBM-compatible PC with operating system Windows95, Windows98, or WindowsNT*.

* WindowsNT only supported with TRACE interface

Sony Corporation
Sony UK
Service Promotions Dept.

9-927-431-01

English
02JP7100-1
Printed in U.K.

© 2002.10

NOTES



This Service Manual are the Manufacturer's intellectual property
The design and the way the documents are selected, placed and related in this data base are the author's intellectual property
eturuta@gmail.com